
SGP30 Perfume Absorption Test

Moss vs No-Moss — TVOC & eCO2 Decay Readings

Test 1: Perfume Spray on Moss

Sensor: SGP30 (TVOC & eCO2). Baseline TVOC = 0 ppb, eCO2 = 400 ppm. Perfume sprayed at 1:05 PM, peak TVOC = 5409 ppb, peak eCO2 = 9900 ppm. Time required for absorption: **10 minutes** (readings returned to baseline by 1:15 PM).


Time	TVOC (ppb)	eCO2 (ppm)	Event
1:04 PM	0	400	Baseline
1:05 PM	5409	9900	Spray
1:06 PM	3431	7183	
1:07 PM	2176	5211	
1:08 PM	1380	3781	
1:09 PM	875	2743	
1:10 PM	555	1990	
1:11 PM	352	1444	
1:12 PM	223	1047	
1:13 PM	142	760	
1:14 PM	90	551	
1:15 PM	57	400	Absorption complete

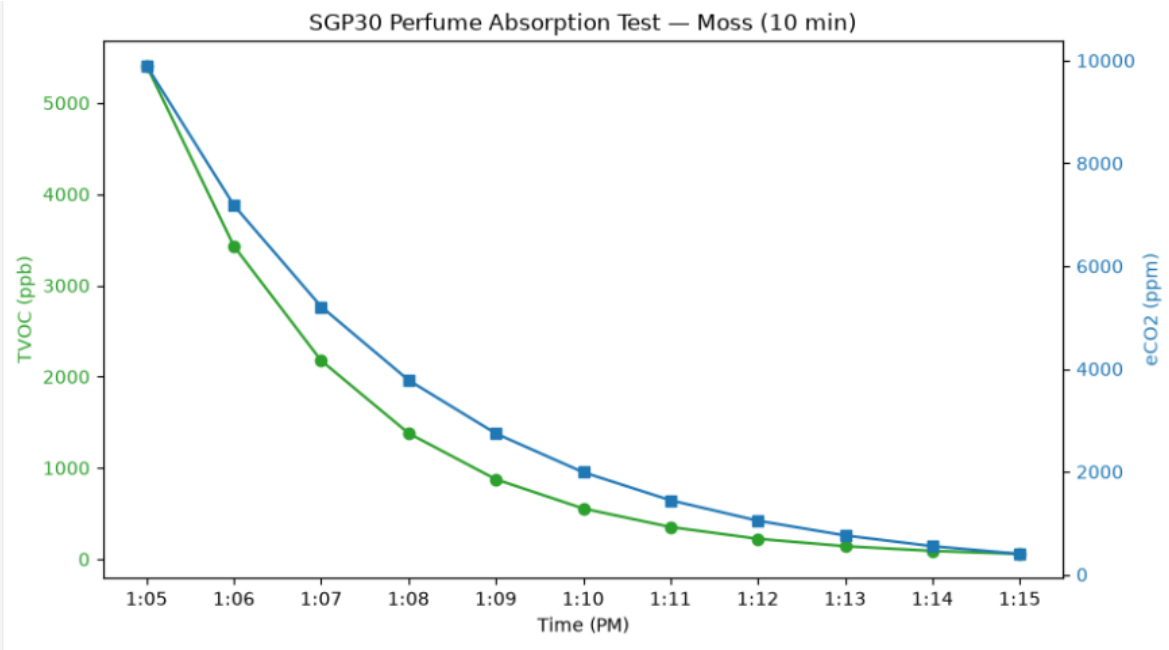

Test 2: Perfume Spray without Moss

Sensor: SGP30 (TVOC & eCO2). Baseline TVOC = 0 ppb, eCO2 = 400 ppm. Perfume sprayed at 1:21 PM, peak TVOC = 6077 ppb, peak eCO2 = 9576 ppm. Time required for absorption: **25 minutes** (readings returned to baseline by 1:46 PM).

Time	TVOC (ppb)	eCO2 (ppm)	Event
1:20 PM	0	400	Baseline
1:21 PM	6077	9576	Spray
1:22 PM	5303	8440	
1:23 PM	4628	7438	
1:24 PM	4039	6555	
1:25 PM	3525	5777	
1:26 PM	3076	5092	
1:27 PM	2685	4487	
1:28 PM	2343	3955	
1:29 PM	2045	3486	
1:30 PM	1784	3072	
1:31 PM	1557	2707	
1:32 PM	1359	2386	
1:33 PM	1186	2103	
1:34 PM	1035	1853	
1:35 PM	903	1633	
1:36 PM	788	1440	
1:37 PM	688	1269	
1:38 PM	600	1118	
1:39 PM	524	985	
1:40 PM	457	869	
1:41 PM	399	765	
1:42 PM	348	675	
1:43 PM	304	595	
1:44 PM	265	524	
1:45 PM	231	462	
1:46 PM	202	407	Absorption complete

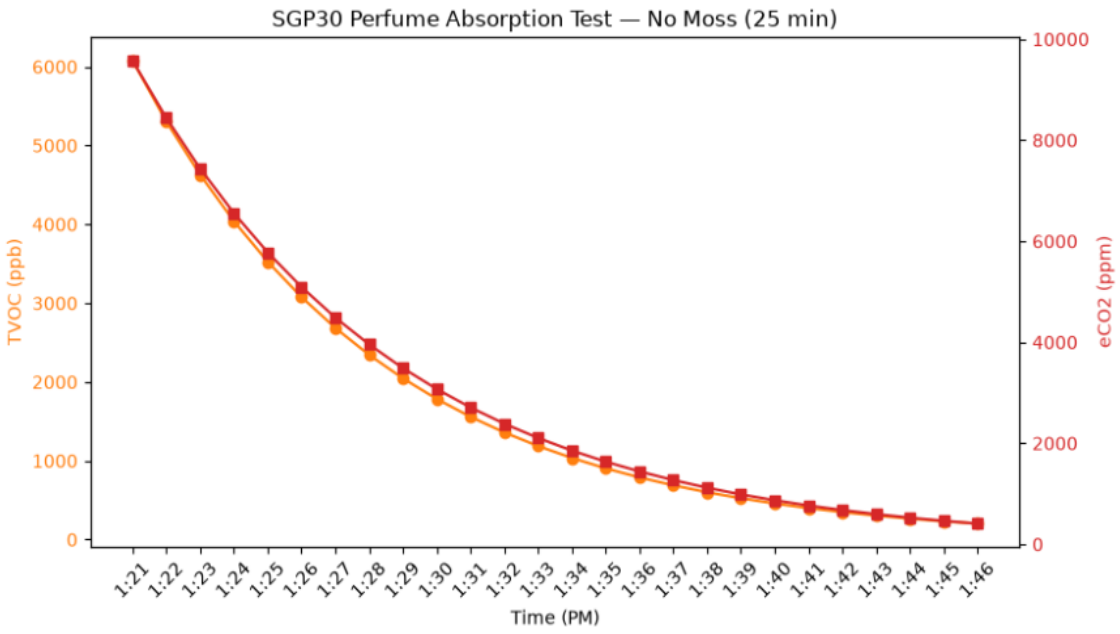
SGP30 Perfume Absorption Test — No Moss (25 min)
TVOC (ppb)
eCO2 (ppm)
Time (PM)
0
1000
2000
3000
4000
5000
6000
0
2000
4000
6000
8000
10000
1:21
1:22
1:23
1:24
1:25
1:26
1:27
1:28
1:29
1:30
1:31
1:32
1:33
1:34
1:35
1:36
1:37
1:38
1:39
1:40
1:41
1:42
1:43
1:44
1:45
1:46