



CDAC SAMPLING SWITCHES

(all nmos bulks tied to VSS and all pmos bulks tied to VDD)


Common mode voltage switch

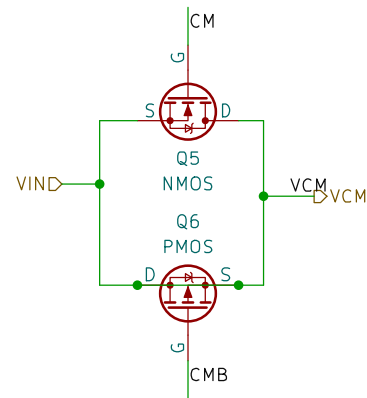

VREF- SWITCH

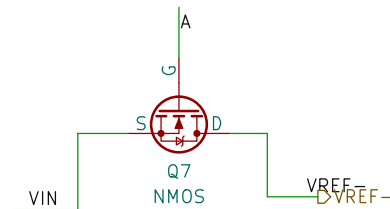

VREF+ SWITCH

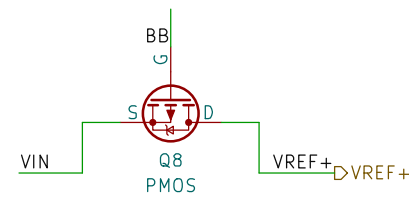

Pos and Neg differentials have opposite switch drivers

(If the NMOS of the positive CDAC was connected to A, the nmos of the negative CDAC would be connected to AB which was A inverted)