


CDAC top view

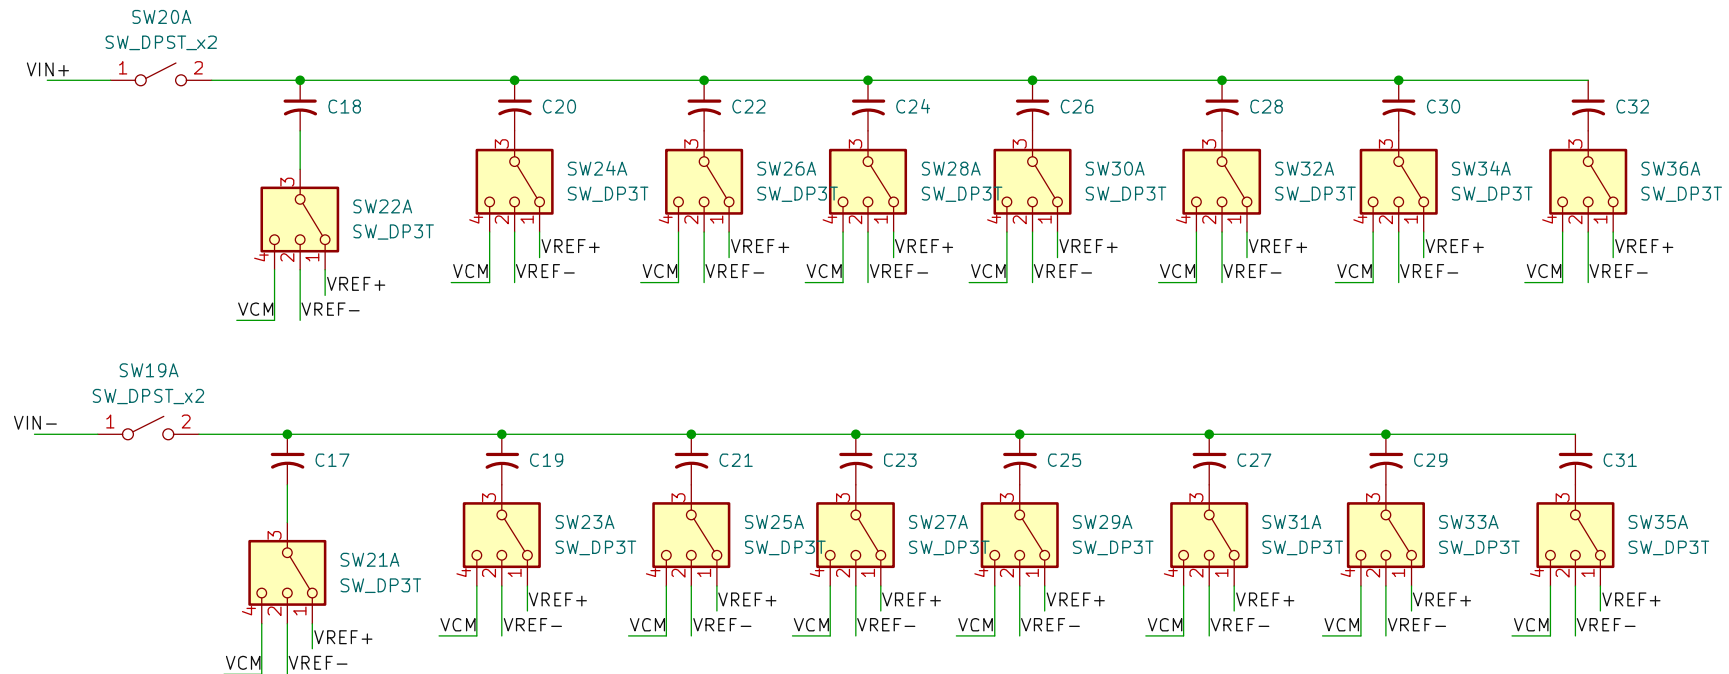

Each switch is connected to VCM (0.9V) until the switch driver for that cap is turned on

once that happens, it either connects to VREF+ or VREF- (1.8V or 0V).

Positive DAC and negative DAC nodes connect to opposites so if the positive DAC connects to 1.8V then the negative DAC should connect to 0V