


## **How to update the Windows OS image on a WYSE thin client by USB key:**

1. Verify the Wyse unit is powered off.
2. Insert USB stick with Wyse USB firmware tool installed and configured.
3. Power on the Wyse thin client.
4. At the Dell splash screen, press the key "DEL" Enter Bios Password (Fireport)
5. In Bios enable: "advanced = Boot from USB"
6. Reboot, at the Dell splash screen, press the key "P" to bring up the boot manager.
7. At the boot manager, select the USB device from the list to force the unit to boot to USB.
8. The unit should boot to the Wyse USB firmware tool.
9. Follow the installation/upgrade wizard to upgrade the OS image.
10. After completion, remove the USB stick and reboot the unit.

**NOTE: Wyse thin clients are locked to use only the OS version they were originally with. It is not possible to "cross-flash" a WES9 Thin Client to WES7 or ThinOS. Please be aware of this in the USB key creation process**


## **To Use the Dell Wyse USB Imaging Tool**

1. Plug the USB storage device into a computer running Windows.
2. Download the Dell Wyse USB Imaging Tool.
3. Install the Dell Wyse USB Imaging Tool.
4. Download Windows 10 IoT
5. Use a file archive program to extract the operating system image to C:\Wyse Firmware
6. Then Right-click the USB storage device and then select Format.
7. Set the File system to NTFS and then click Start.

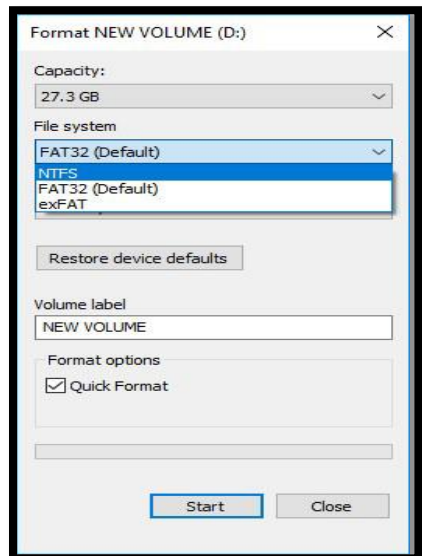

8. In Windows Explorer, go to C:\Program Files (x86)\Wyse\USB Firmware Tool\.

9. Right-click USBImagingTool.exe and then select Run as administrator

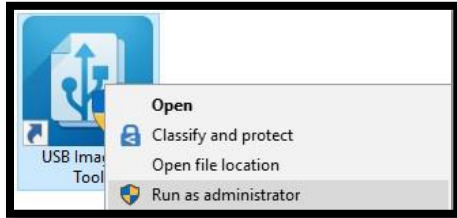

10. Confirm that the formatted USB drive is selected as the Available drive.




11. Click Image Push.




12. Then Select 64 bit for the OS architecture.


13. If prompted, click OK.

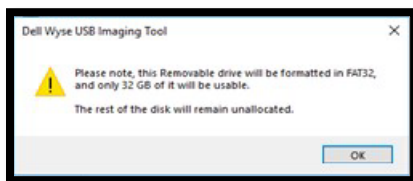

14. Click the '+' at the bottom of the pane.

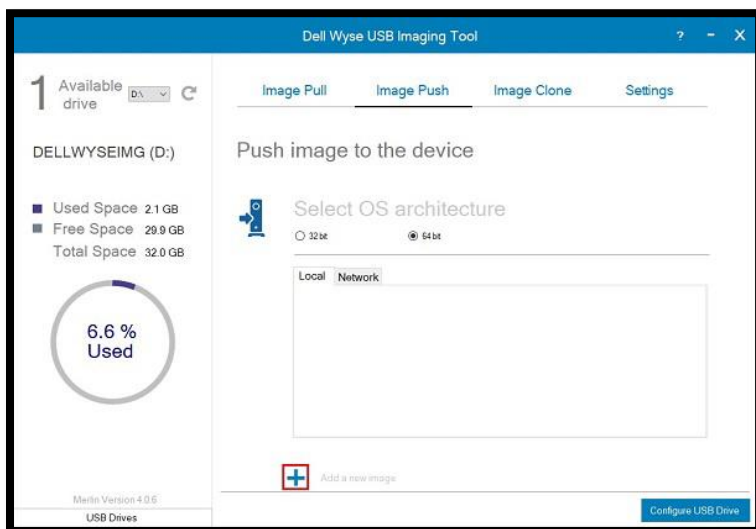


15. Change the file type from .rsp to .xml.

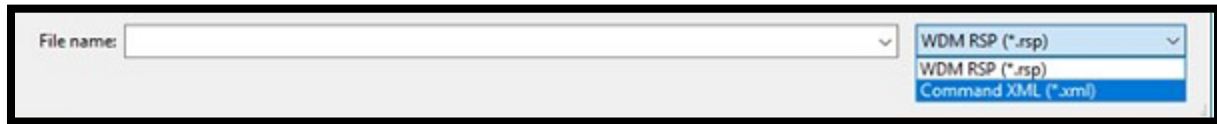

16. Go to C:\Wyse Firmware, locate the .xml image, and then click Open.

17. Click Configure USB Drive.

18. Once configured, remove the USB storage device.

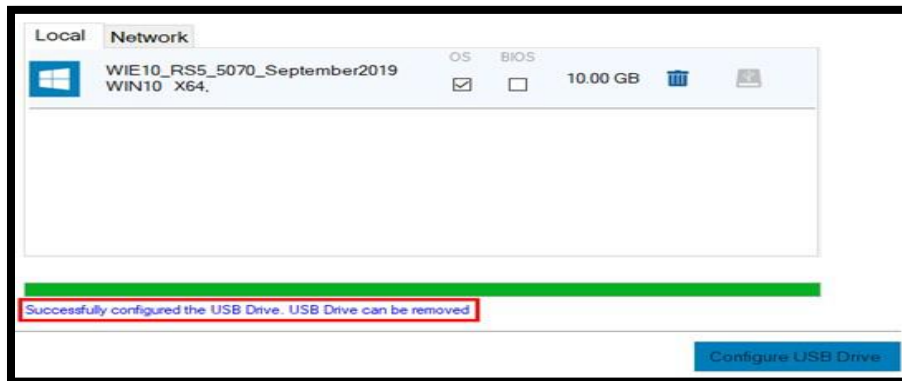


19. From the thin client, turn off the device and then plug in the USB storage device.

20. Power on the thin client and then press F12 when prompted to access the boot menu.

21. Select the USB storage device from the list and then press Enter.

22. The Dell Wyse USB Imaging Tool will load. Select the image to push.

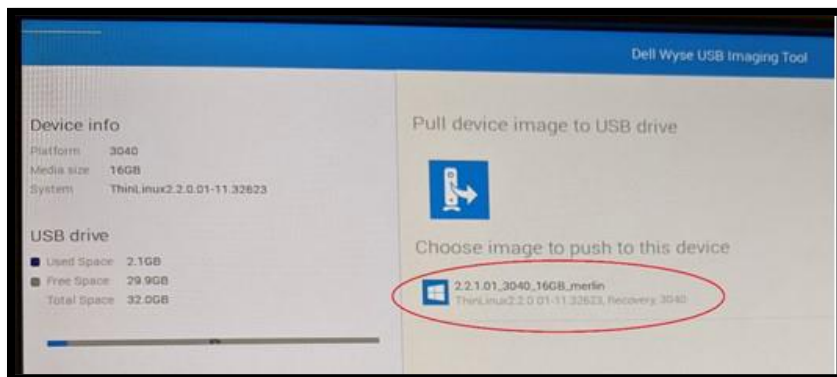

23. The firmware will update. Once finished, click **OK**.