-
X
S-MAT
Sonim Moblie-App Automation Tool
Username
Password
Login
Remember Me
S-MAT Support
sonim
WE SERVE THE PEOPLE
WHO SERVE US
Enter Username & Password
Click on Login Button
Select Remember me checkbox (If Required)

Connect the Devices and Click on' Detect Device'
Note : Accept 'Allow USB debugging' Popup before you click on 'Detect Device'
S-MAT
User-Guide
Detect Device
Swap Device
Select Application Module
Applications List :
Start
Reset
Stop
Reports and Logs
DUT
REF
Product :
Operator :
IMEI :
Build No. :
MDN :
Serial No. :
Current Test Case :
PASS Test Case(s) :
FAIL Test Case(s) :
Test Execution Progress Indicator
0%
Allow USB debugging?
The computer's RSA key fingerprint is:
C9:B1:17:1F:24:C0:9A:
36:46:B0:98:99:40:A1:C0:88
Always allow from this computer
CANCEL
OK
Google
Nova Talk
MyRogers
Play Store

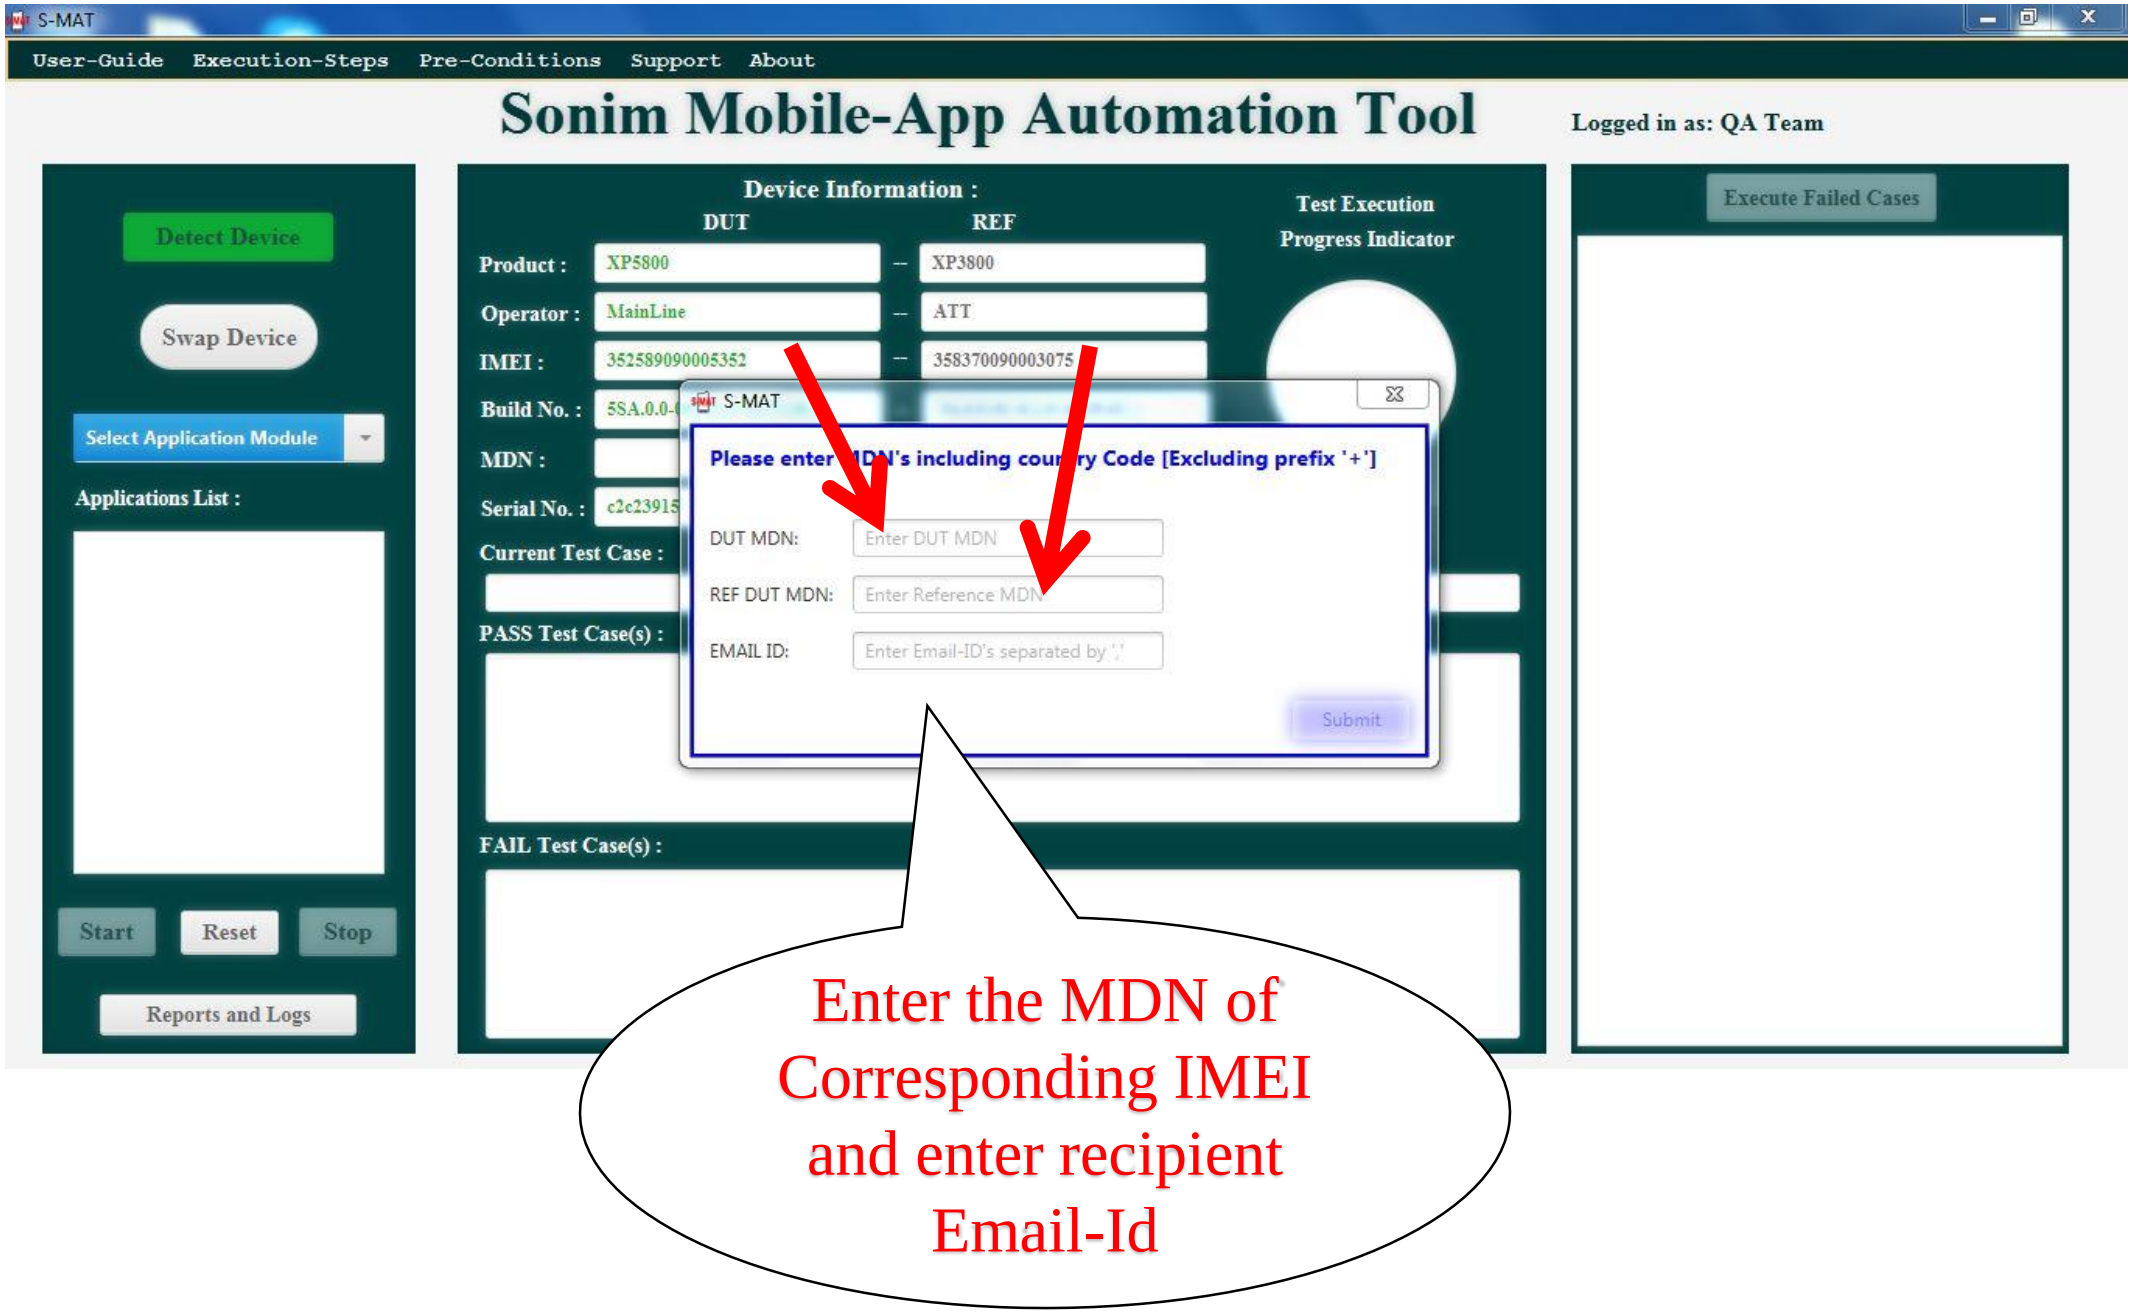
S-MAT
User-Guide
Execution-Steps
Pre-Conditions
Support
About
Sonim Mobile-App Automation Tool
Logged in as: QA Team
Detect Device
Swap Device
Select Application Module
Applications List :
Start
Reset
Stop
Reports and Logs
Device Information :
DUT
REF
Product :
XP5800
XP3800
Operator :
MainLine
ATT
IMEI :
352589090005352
358370090003075
Build No. :
MDN :
Serial No. :
Current Test Case :
PASS Test Case(s) :
FAIL Test Case(s) :
Test Execution
Progress Indicator
Execute Failed Cases
S-MAT
Please enter MDN's including country Code [Excluding prefix '+']
DUT MDN:
Enter DUT MDN
REF DUT MDN:
Enter Reference MDN
EMAIL ID:
Enter Email-ID's separated by ','
Submit
Enter the MDN of Corresponding IMEI and enter recipient Email-Id

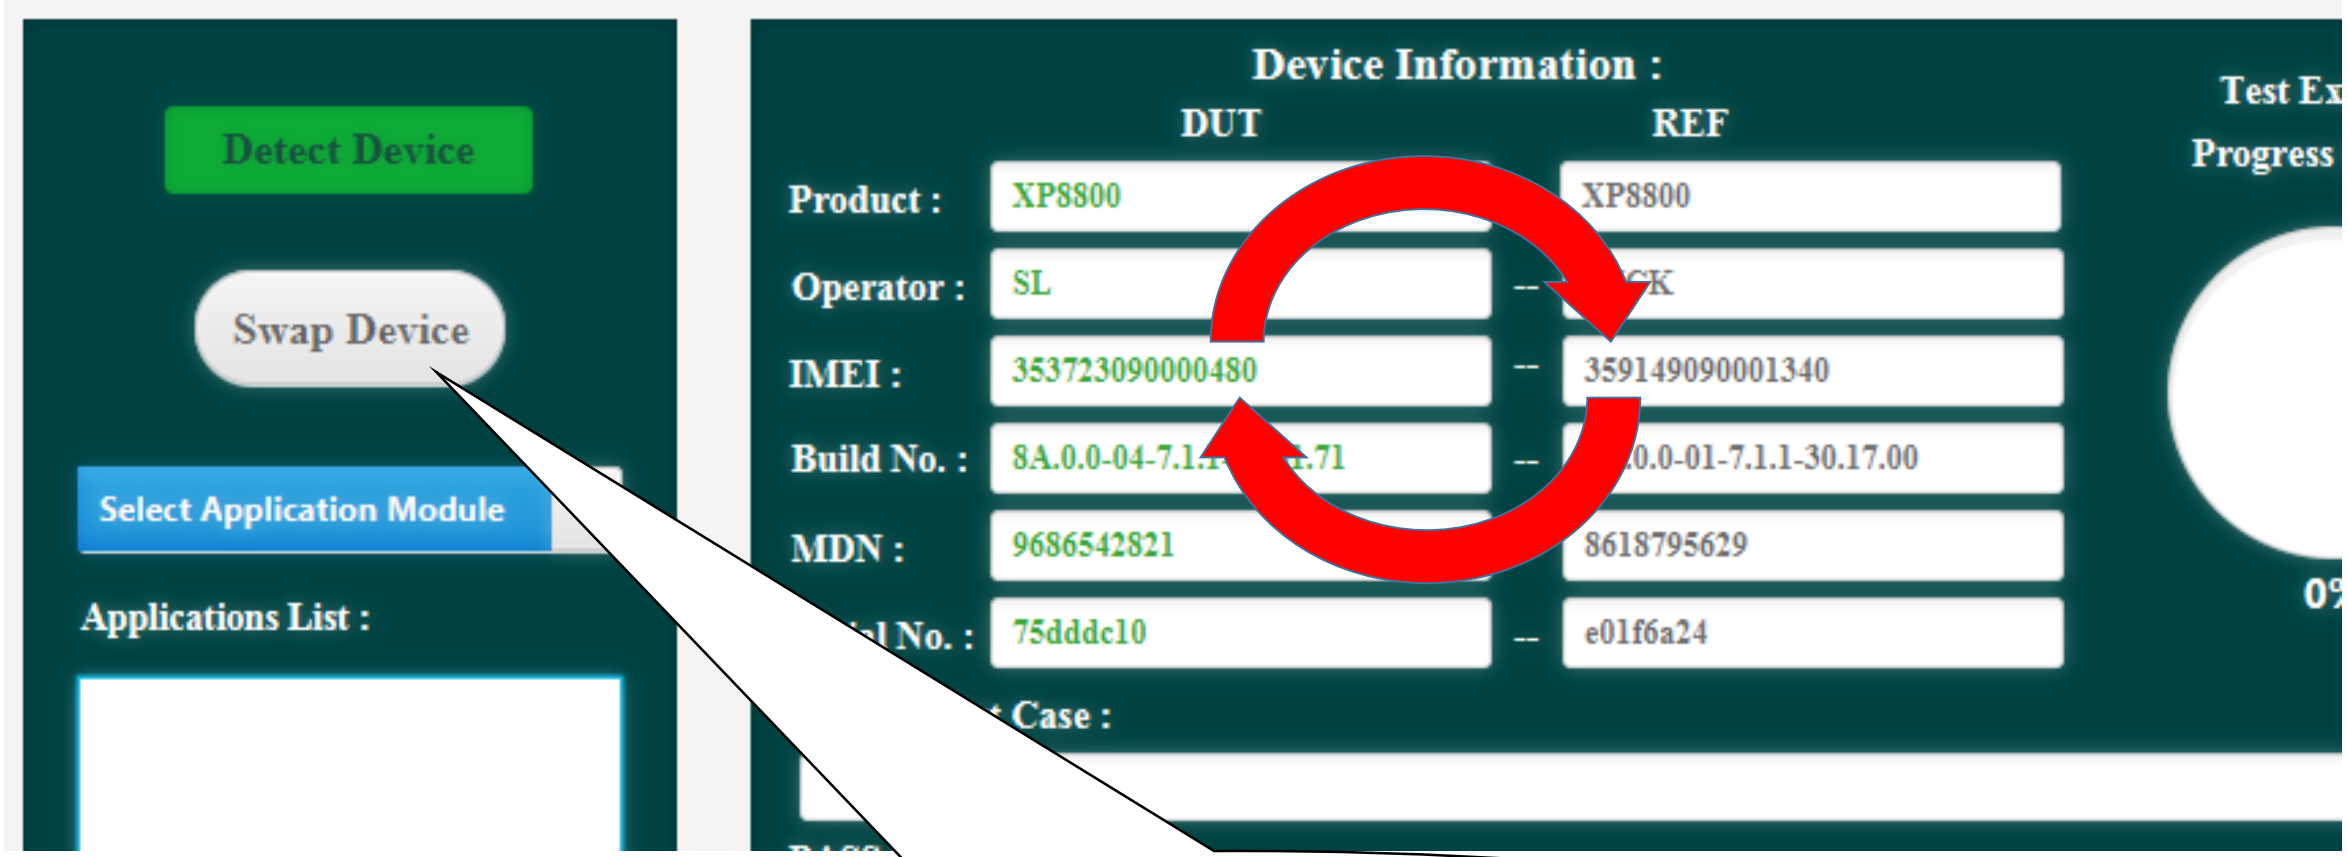

Click on 'Swap Device' if Device Under Test (DUT) detected under Reference(REF) else Donot click.

1

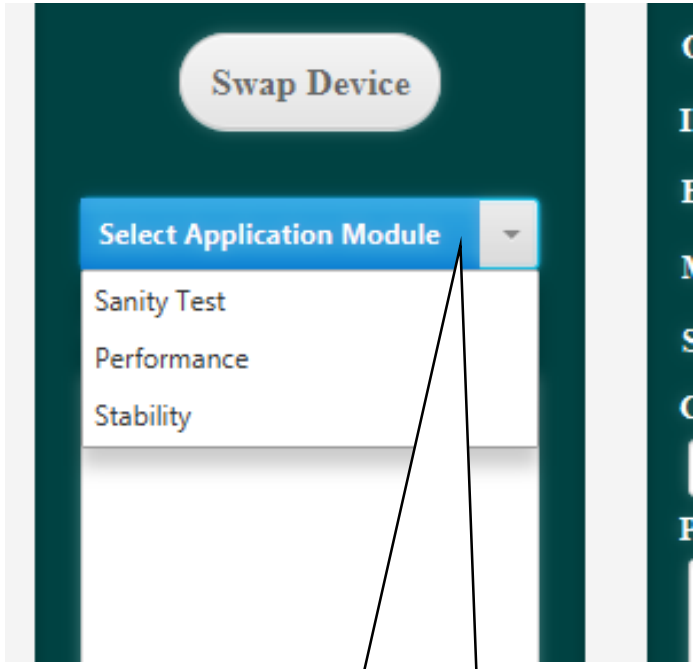

Click on Application Module and Select the Module

2

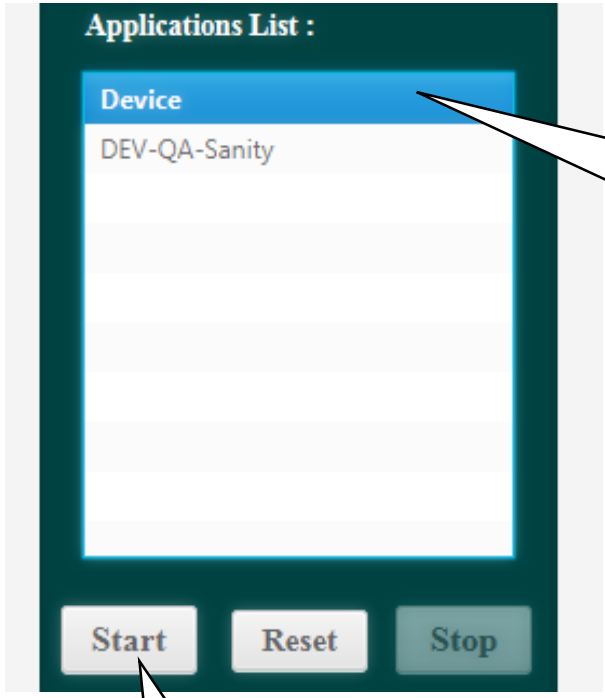

Select the Application to be Executed

Click on Start and Accept 'Google Security' Popup in DUT

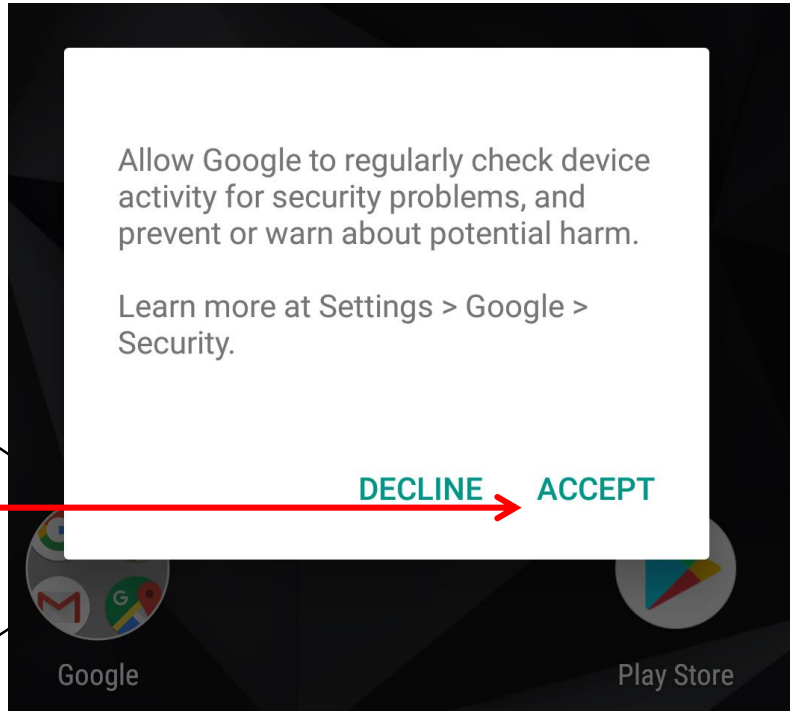

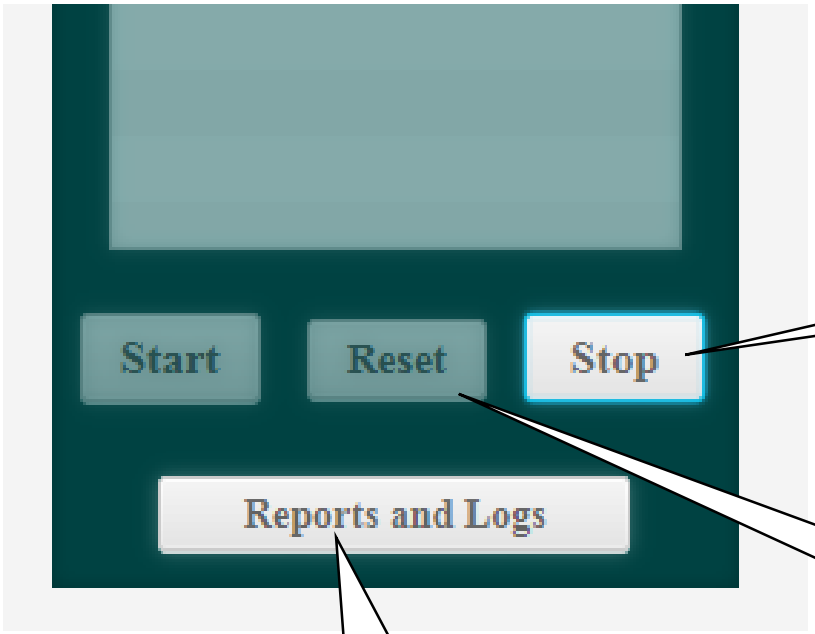

To Stop the Test Execution.

To Reset the Tool after Execution.

To get Reports and Logs