

INSTRUMENT APPROACH CHART - ICAO	AD ELEVATION: 36 TRANS LEVEL: FL 040 TRANS ALT: 2500 (2464)	CURAÇAO CONTROL 124.1/127.1 CURAÇAO TERMINAL 119.8 HATO TOWER 118.3 HATO ATIS 132.6	ILS or LOC RWY 11 AEROPUERTO HATO (TNCC) WILLEMSTAD, CURAÇAO

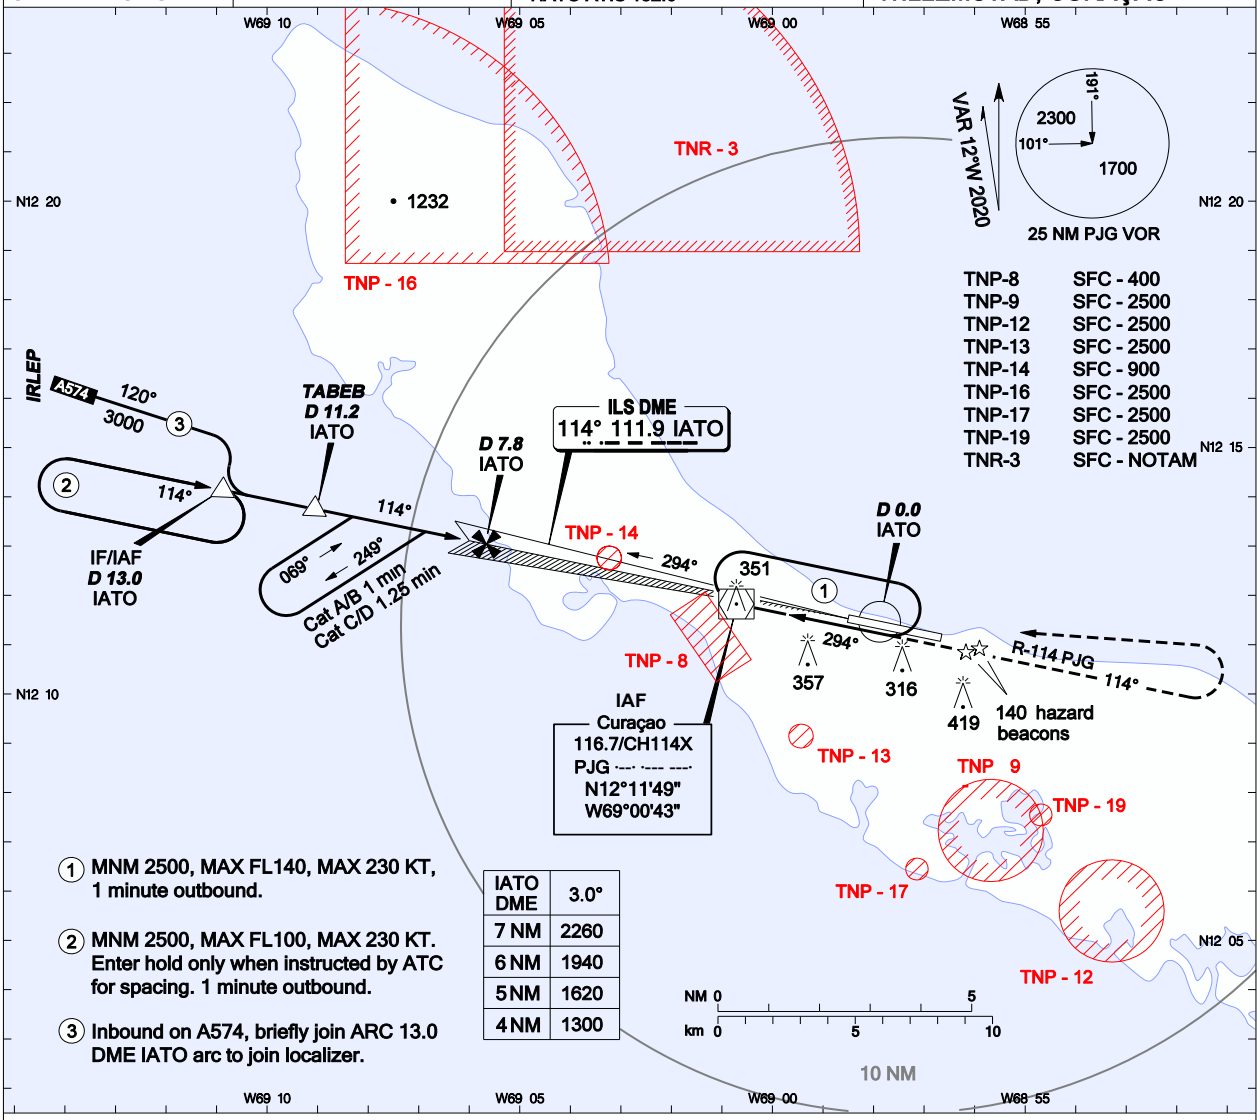

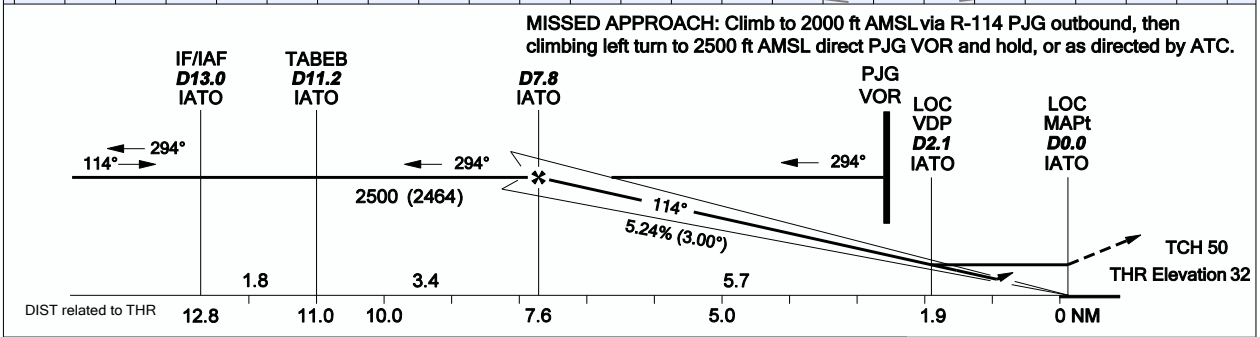

OCA(H)	A	B	C	D
ILS CAT I	232 (200)	232 (200)	232 (200)	232 (200)
LOC (GS out)	690 (654)	690 (654)	690 (654)	690 (654)
CIRCLING north side only	690 (654)	690 (654)	890 (854)	890 (854)

GROUNDSPEED - DESCENT RATE						
KT	70	90	100	120	140	160
ft/min	372	478	531	637	743	849

Changes: Curaçao Terminal.

1. DME required. VOR required.
2. Visual descent point (VDP) is where LOC OCA intersects 3° descent slope.
3. Aircraft on a visual approach RH downwind RWY 11 shall proceed west of Bullenbaai before turning base at minimum circuit altitude.
4. Aircraft on an instrument approach shall maintain the published glide path.
5. Aircraft on a visual approach shall maintain the PAPI glide path.
6. Heights are relative to AD elevation.
7. Altitudes, elevations and heights in feet, distances in nautical miles, bearings are magnetic.

AERO INFO DATE 23 FEB 23