

INSTRUMENT APPROACH CHART - ICAO	AD ELEVATION: 36 TRANS LEVEL: FL 040 TRANS ALT: 2500 (2464)	CURAÇAO CONTROL 124.1/127.1 CURAÇAO TERMINAL 119.8 HATO TOWER 118.3 HATO ATIS 132.6	VOR RWY 29 AEROPUERTO HATO (TNCC) WILLEMSTAD, CURAÇAO

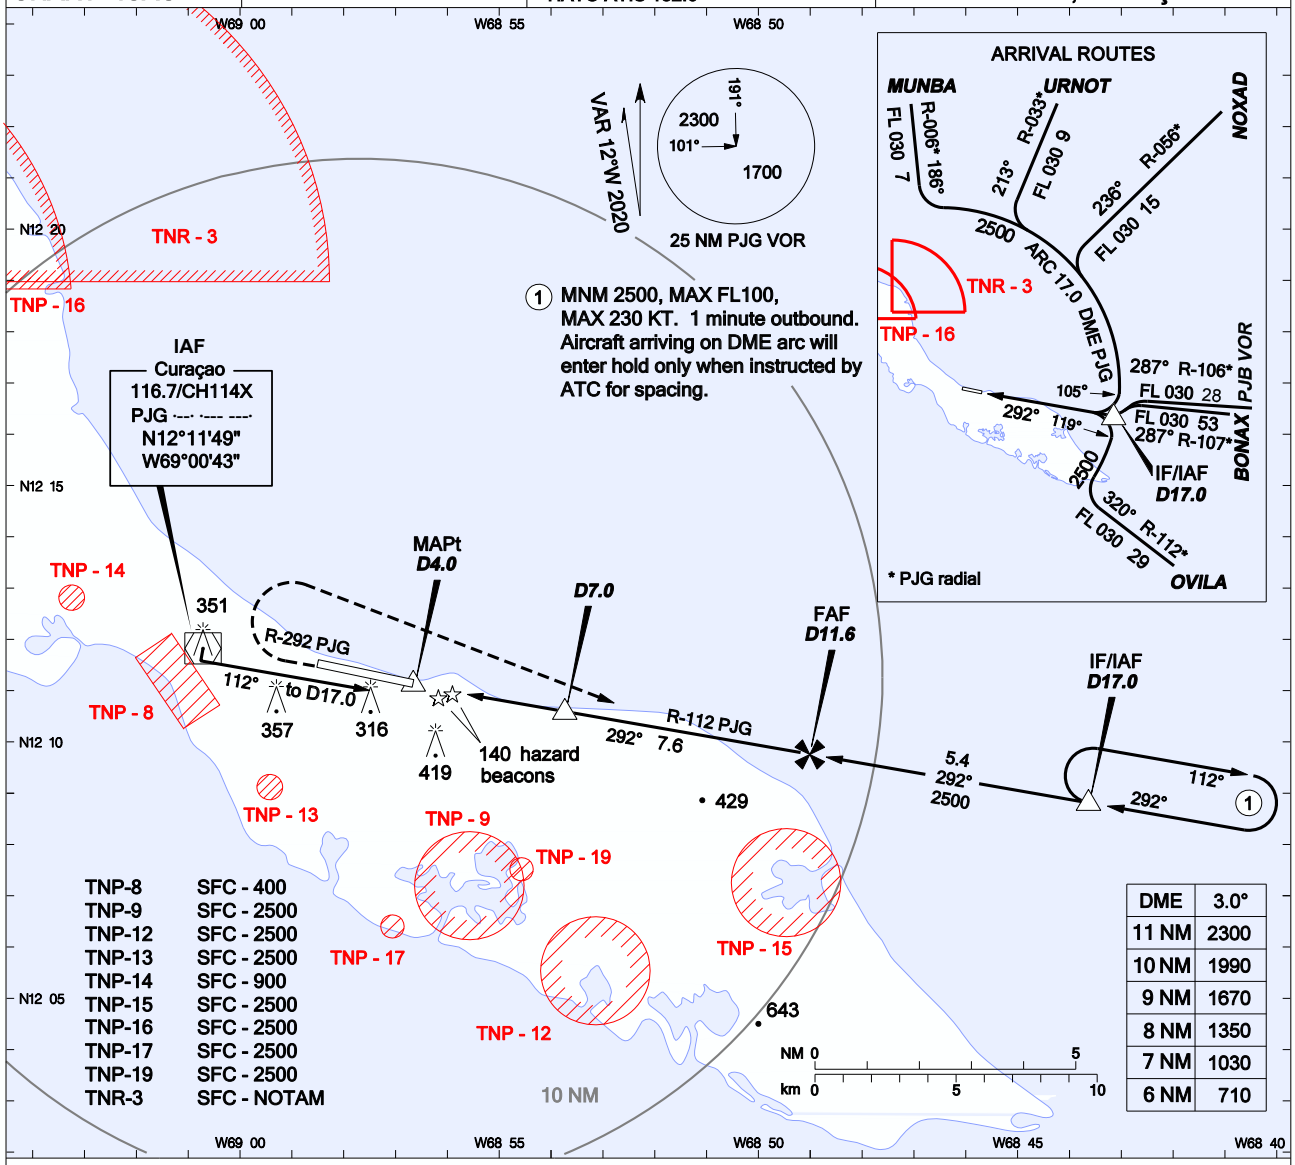

TNP-8	SFC - 400
TNP-9	SFC - 2500
TNP-12	SFC - 2500
TNP-13	SFC - 2500
TNP-14	SFC - 900
TNP-15	SFC - 2500
TNP-16	SFC - 2500
TNP-17	SFC - 2500
TNP-19	SFC - 2500
TNR-3	SFC - NOTAM

DME	3.0°
11 NM	2300
10 NM	1990
9 NM	1670
8 NM	1350
7 NM	1030
6 NM	710

MISSED APPROACH: Climb to 2000 ft AMSL via R-112 PJG inbound (and R-292 PJG outbound as needed), then climbing right turn to 2500 ft AMSL joining R-112 PJG outbound to 17.0 DME PJG and hold, or as directed by ATC.

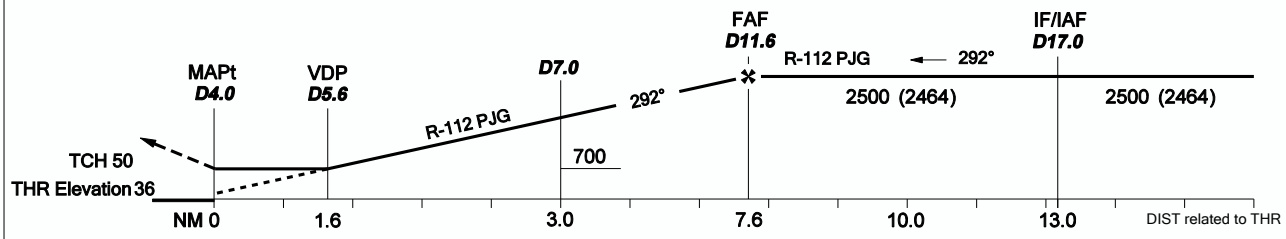

OCA(H)	A	B	C	D
STRAIGHT-IN	580 (544)	580 (544)	580 (544)	580 (544)
CIRCLING north side only	650 (614)	650 (614)	890 (854)	890 (854)

GROUNDSPEED - DESCENT RATE						
KT	70	90	100	120	140	160
ft/min	372	478	531	637	743	849

1. DME required.
2. Visual descent point (VDP) is where OCA intersects 3° descent slope.
3. Aircraft on an instrument approach shall maintain the published glide path.
4. Aircraft on a visual approach shall maintain the PAPI glide path.
5. Heights are relative to AD elevation.
6. Altitudes, elevations and heights in feet, distances in nautical miles, bearings are magnetic.

Changes: Curaçao Terminal.

AERO INFO DATE 23 FEB 23