


Reference	Item number	Qty	Description
1	4134 020 2600	1	Crankcase
			□ 2, 3
2	0000 988 8600	4	Sleeve
3	9503 003 0242	2	Grooved ball bearing 6201
4	4134 020 2900	1	Crankcase
			$\square$ 3
5	9640 003 1195	2	Oil seal 12x22x5
6	4134 030 0403	1	Crankshaft (25.2005)
			□ 7
7	4140 036 0300	2	Washer
8	9075 478 4159	7	Pan head self-tapping screw IS-D5x24
9	4134 029 2300	1	Cylinder gasket
10	9512 003 2250	1	Needle cage 10x13x12.5
11	4134 020 1213	1	Cylinder with piston Ø 35 mm
			□ 12 - 16
12	4134 030 2011	1	Piston Ø 35 mm
			□ 13 - 15
13	4119 034 3001	2	Piston ring Ø 35x1.5 mm
14	4119 034 1500	1	Piston pin 10x6.5x28
15	9463 650 1000	2	Snap ring 10
16	9075 478 4175	4	Pan head self-tapping screw IS-D5x28
17	0000 400 7000	1	Spark plug NGK BPMR7A
17	1110 400 7005	1	Spark plug Bosch WSR 6 F
18	4134 149 0600	1	Muffler gasket
19	4134 140 0603	1	Muffler (1)
20	4134 140 0607	1	Muffler (2)
			□ 21
21	4128 140 6900	1	Stub with screen
22	4134 084 0912	1	Shroud
23	9022 341 1019	2	Spline screw IS-M5x20
24 *	0000 951 1100	2	Screw IS-D5x20
25	0783 830 2000 4134 007 1050	1 1	Tube of sealant Dirko HT red (B) Set of gaskets □ 5, 9, 18

<sup>(1)</sup> BT 121, (2) BT 121-Z


В

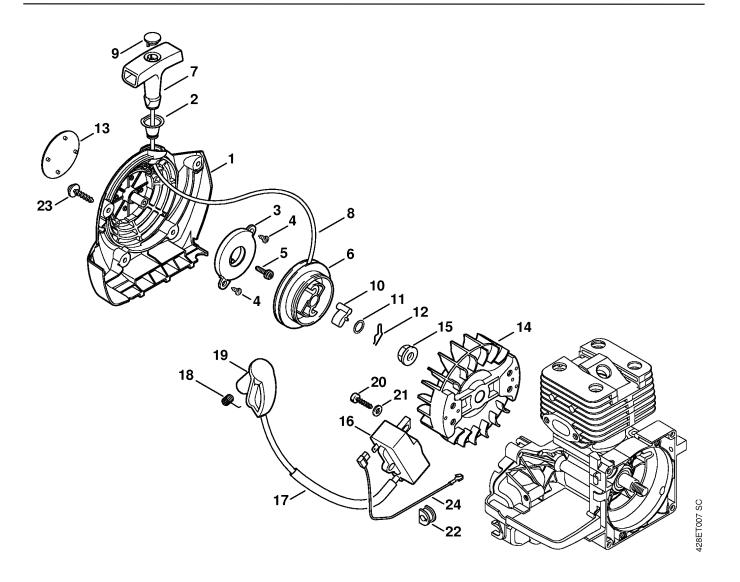

Reference	Item number	Qty	Description
	4134 080 2101	1	Fan housing with rewind starter
			□ 1 - 11
1	4134 080 1801	1	Fan housing
			□ 2
2	1110 084 9102	1	Bushing
3	4134 190 0601	1	Rewind spring
4	9104 003 0410	2	Self-tapping screw P3x6
5	4223 084 5600	1	Screw
6	4128 195 0400	1	Rope rotor
7	0000 190 3405	1	Starter grip ElastoStart Ø 3 mm
			□ 8, 9
8	0000 195 8203	1	Starter rope Ø 3x850 mm
9	0000 195 7000	1	Сар
10	0000 195 7200	1	Pawl
11	0000 958 0923	1	Washer
12	1118 195 3500	1	Spring
13	4313 967 1503	1	Model plate BT 121
14	4134 400 1200	1	Flywheel (25.2005)
15	9220 260 1100	1	Hexagon nut M8
16	4134 400 1301	1	Ignition module
			□ 17 - 19
17	4137 442 0400	1	Insulating hose
18	0000 998 0604	1	Torsion spring
19	4128 405 1000	1	Spark plug boot
20	9075 478 3022	2	Pan head self-tapping screw IS-D4x20
21	9291 021 0121	2	Washer 5.3
22	4134 432 9300	1	Grommet
23	0000 951 1100	4	Screw IS-D5x20
24	4134 440 1101	1	Short circuit wire

<sup>(1)</sup> BT 121, (2) BT 121-Z


С

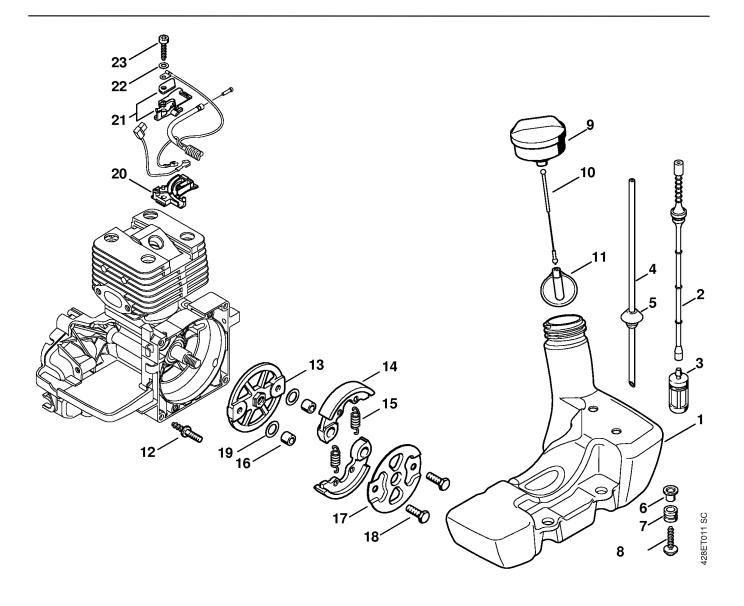

Reference	Item number	Qty	Description
1	4134 350 0400	1	Fuel tank
			□ 2 - 7
2	4128 358 0800	1	Hose
3	0000 350 3506	1	Pickup body
4		1	Hose 2.2x5.4x205 mm (D)
	0000 930 2802	1	Hose 2.2x5.4 mm x 1 m (A,B)
5	0000 989 0516	1	Grommet
6	0000 351 3200	4	Sleeve
7	1125 084 8900	4	Grommet
8	0000 951 1102	4	Screw IS-D5x26
9	4128 350 0505	1	Filler cap
			□ 10, 11
10	0000 350 0900	1	Rope
11	0000 353 0800	1	Filler cap retainer
12	0000 711 8700	4	Collar screw
13	4128 160 2001	1	Clutch
			□ 14 - 19
14		2	Clutch shoe (D)
15	0000 997 5519	2	Tension spring
16	0000 961 0608	2	Ring
17	4128 162 1000	1	Cover washer
18	0000 951 0606	2	Hexagon head screw
19	0000 958 1000	2	Washer 16x10x0.5
20	4134 182 2104	1	Support, bottom
21	4134 180 6702	1	Support
22	9291 021 0120	1	Washer 5.3
23	9075 478 4159	1	Pan head self-tapping screw IS-D5x24

<sup>(1)</sup> BT 121, (2) BT 121-Z

D

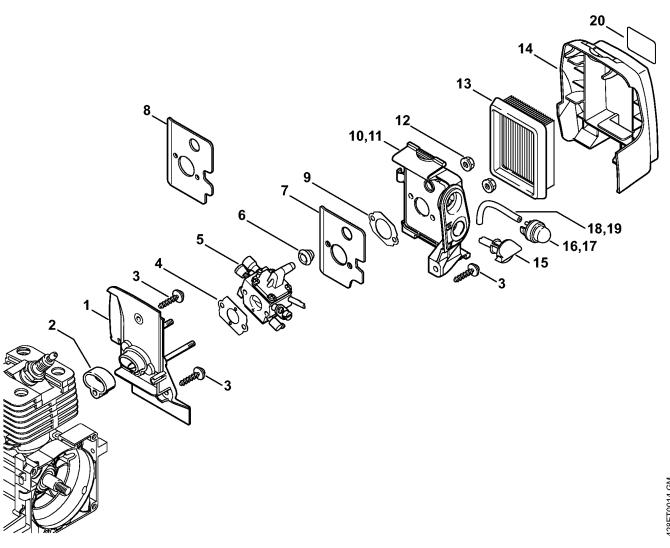


Reference	Item number	Qty	Description
1	4134 120 0102	1	Carburetor housing
2	4134 129 3000	1	Sealing ring
3	0000 951 1100	4	Screw IS-D5x20
4	4128 129 0900	1	Gasket
5	4134 120 0652	1	Carburetor C1Q-S161
6	4134 123 7500	1	□ 7 Grommet
7	4134 122 1801	1	Heat shield
8 *	4134 122 1800	1	Heat shield (16.2009)
9	4134 129 0900	1	Gasket
10	4134 140 2801	1	Filter housing
			□ 9
11 *	4134 140 2850	1	Filter housing (16.2009)
			□ 9, 10, 16, 18, 19
12	9220 260 0700	2	Hexagon nut M5
13	4134 141 0300	1	Air filter
14	4134 141 0500	1	Filter cover
15	4128 182 9500	1	Choke knob
16	0000 350 6201	1	Fuel pump
17 *	4130 350 6200	1	Fuel pump (16.2009)
18		1	Hose 2.2x5.4x65 mm (D)
19 *		1	Hose 2.2x5.4x67 mm (D) (16.2009)
	0000 930 2802	1	Hose 2.2x5.4 mm x 1 m (A,B)
20	0000 967 3693	1	Warning pictogram Filler cap (2) USA
	4134 007 1050	1	Set of gaskets
			□ 4

(1) BT 121, (2) BT 121-Z

Ε



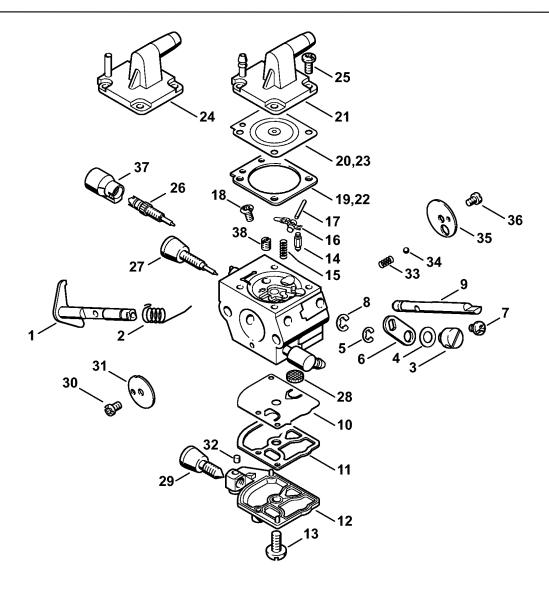


Reference	Item number	Qty	Description
	4134 120 0652	1	Carburetor C1Q-S161
			□ 1 - 21, 25 - 38
*	4134 120 0603	1	Carburetor C1Q-S82 (C) (16.2009)
			□ 1 - 18, 22 - 38
4	4424 420 7404	4	Threathle shaft with layer
1 2	4134 120 7101 1123 122 3000	1	Throttle shaft with lever
3	4128 121 8901	1	Spring Pin
		1	Washer
4	4137 121 8600	1	
5	1120 122 9000	1	E-clip
6	4134 123 7300	1	Lever
7	9079 319 0280	1	Flat head screw M3x3.5
8	1120 122 9000	1	E-clip
9	4134 121 3000	1	Choke shaft
10	1129 121 4800	1	Pump diaphragm
11	1123 129 0905	1	Gasket
12	4134 121 0802	1	End cover
13	1120 122 7800	1	Oval head screw
14	4116 121 5100	1	Inlet needle
15	1123 122 3001	1	Spring
16	1125 121 5000	1	Inlet control lever
17	1120 121 9200	1	Spindle
18	1120 122 6600	1	Collar screw
19	4134 129 0901	1	Gasket
20	4134 121 4700	1	Metering diaphragm
21	4134 121 0803	1	End cover
22 *	1129 129 0900	1	Gasket (16.2009)
23 *	4129 121 4700	1	Metering diaphragm (16.2009)
24 *	4134 121 0801	1	End cover (16.2009)
25	1120 122 6601	4	Collar screw
26	4134 122 6701	1	High speed adjustment screw
27	4134 122 6801	1	Low speed adjustment screw
28	1123 121 7800	1	Strainer
29	4180 122 6200	1	Idle speed adjustment screw
30	1120 122 7400	1	Round head screw
31	4134 121 3302	1	Throttle shutter
32	1125 122 4200	1	Ball
33	4119 122 3002	1	Spring
34	4119 122 3002	1	Ball
3 <del>4</del> 35	4119 122 4200	1	Choke shutter
36	1125 121 2900	1	Round head screw
30 37	4229 121 2701	1	Cap
31	7223 121 2101	1	Cap

(1) BT 121, (2) BT 121-Z

Ε




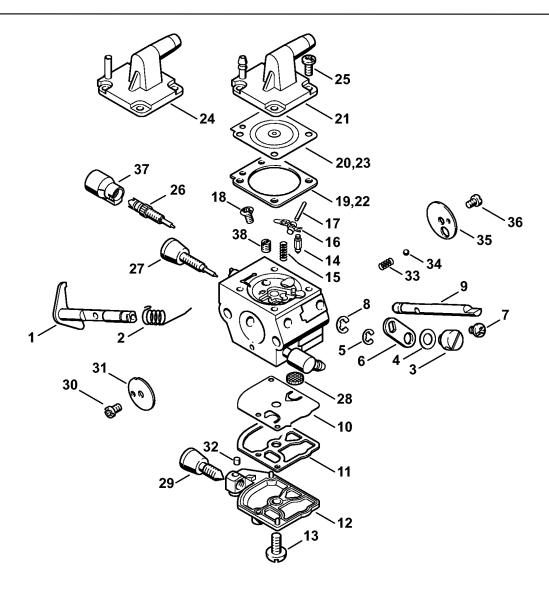

$\overline{}$		
ı١	rawina	
ப	rawing	
_		

Reference	Item number	Qty	Description
38	1132 121 5640 4128 007 1060	1	Fixed jet 0.40 Set of carburetor parts □ 10, 11, 19, 20
*	1129 007 1062	1	Set of carburetor parts (16.2009)  □ 10, 11, 22, 23


(1) BT 121, (2) BT 121-Z

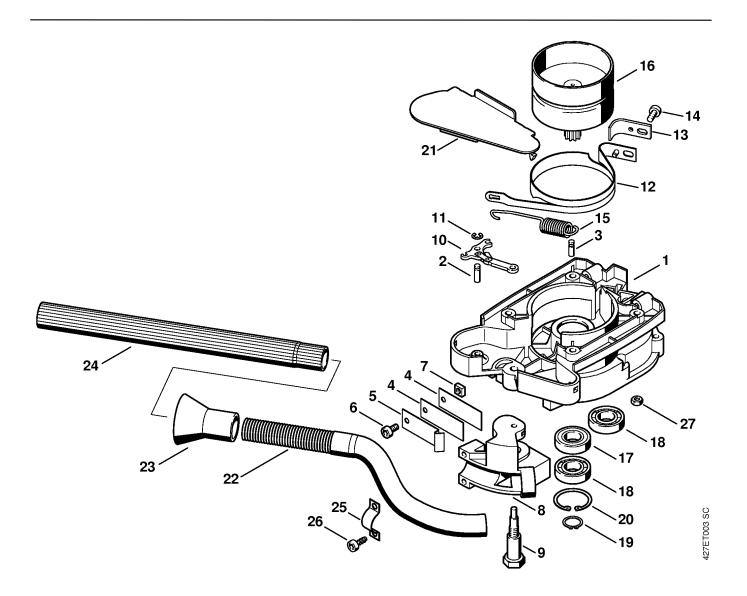

Reference	Item number	Qty	Description
1	4313 160 0650	1	Clutch housing
			□ 2, 3
2	1121 162 5200	1	Pin
3	1120 162 5200	1	Pin
4	4311 162 7805	2	Flat spring
5	4311 162 7800	1	Flat spring
6	9022 341 0950	1	Spline screw IS-M5x10
7	9222 068 0700	1	Square nut M5
8	4311 162 3000	1	Retainer
9	4311 162 2200	1	Bearing pin
10	1121 160 5000	1	Lever
11	9460 624 0400	1	E-clip 4
12	4313 160 5401	1	Brake band
13	4313 161 9500	1	Insert
14	9022 341 0960	1	Spline screw IS-M5x12
15	4311 162 7900	1	Tension spring
16	4313 160 2900	1	Clutch drum
17	9503 003 5260	1	Grooved ball bearing 6002-2Z
18	9503 003 0310	2	Grooved ball bearing 6002
19	9455 621 1300	1	Circlip 13x1
20	9456 621 3600	1	Circlip 32x1.2
21	4313 161 1100	1	Cover
	4311 160 4800	1	Auger brake lever
			□ 22 - 24
22		1	Tube (D)
23		1	Sleeve (D)
24		1	Tube with hose (D)
25	4311 162 2300	1	Clamp
26	9074 477 4130	2	Pan head self-tapping screw IS-P5x16
27	9216 263 0700	4	Hexagon nut M5

<sup>(1)</sup> BT 121, (2) BT 121-Z



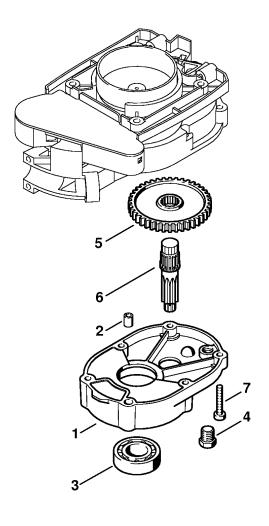


427ET004 S

## Drawing G Gear head


Reference	Item number	Qty	Description
1	4313 641 0300	1	Gear housing
2	4600 641 4900	2	Sleeve
3	9503 003 0510	2	Grooved ball bearing 6004
4	4119 713 6500	1	Screw plug
5	4313 642 0100	1	Spur gear
6	4313 642 2500	1	Drive pinion shaft
7	9022 341 1070	3	Spline screw IS-M5x30
8	4313 642 0105	1	Spur gear
9	4313 642 0600	1	Drive shaft
10	9630 003 3616	1	Oil seal 35x20x7
11	9503 003 6320	1	Grooved ball bearing 6200
12	4311 641 0400	1	Cover
13	9022 341 1110	4	Spline screw IS-M5x52

<sup>(1)</sup> BT 121, (2) BT 121-Z

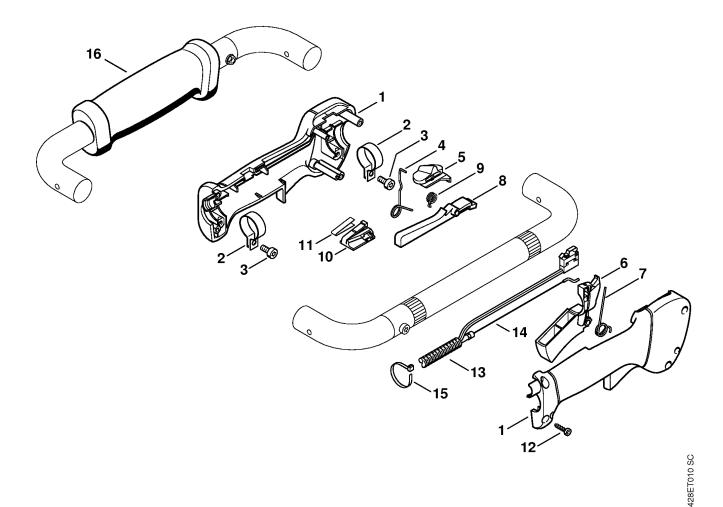


Reference	Item number	Qty	Description
	4137 790 1307	1	Control handle
			□ 1 - 12
1	4137 790 0300	1	Handle
2	4137 791 9400	2	Hose clamp
3	9022 341 0960	2	Spline screw IS-M5x12
4	4137 182 4505	1	Torsion spring
5	4137 182 1701	1	Slide control
6	4137 182 1001	1	Throttle trigger
7	4137 182 4504	1	Torsion spring
8	4137 182 0802	1	Trigger interlock
9	4128 182 4501	1	Torsion spring
10	4128 793 3000	1	Slide
11	4128 791 3100	1	Spring
12	9074 478 3025	4	Pan head self-tapping screw IS-P4x16
13	4313 180 1102	1	Throttle cable
			□ 14
14	4313 182 3200	1	Throttle cable
15	0751 010 7056	2	Cable tie
16	4313 791 0300	1	Handle, left

<sup>(1)</sup> BT 121, (2) BT 121-Z

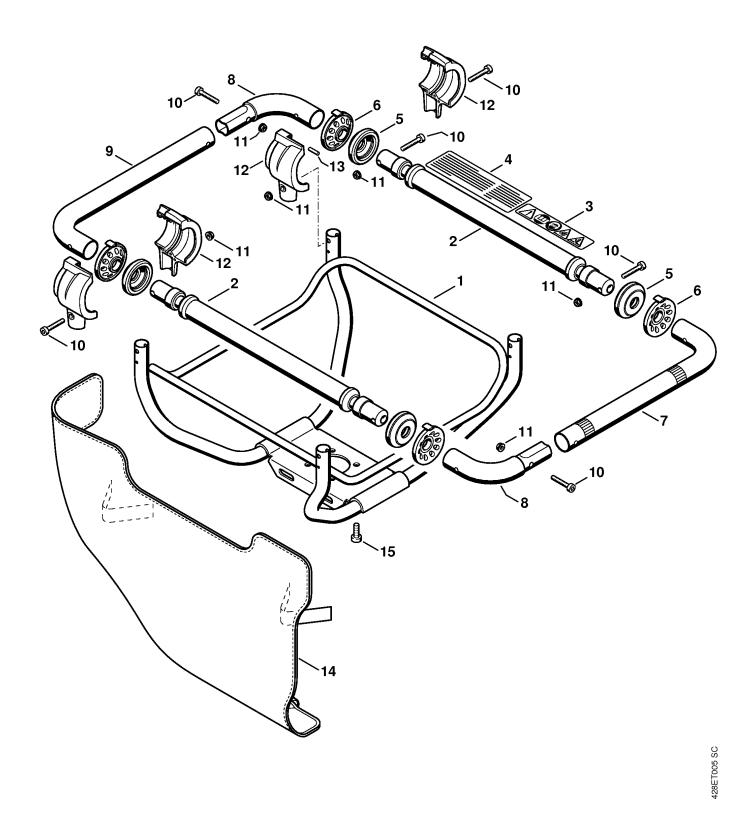


_				
	Reference	Item number	Qty	Description
	1	4313 790 5600	1	Handle frame
	2	4313 790 2901	2	Tube
				$\square$ 3
	3	0000 967 3703	1	Warning pictogram BT
	4	4311 967 3500	1	Instruction label (2) USA
	5	4313 792 9400	4	Limit stop
	6	4313 792 9300	4	Rubber buffer
	7	4313 791 1703	1	Handlebar
	8	4313 791 5500	2	Elbow connector
	9	4313 791 1702	1	Handlebar
	10	9022 341 1070	10	Spline screw IS-M5x30
	11	9216 263 0700	10	Hexagon nut M5
	12	4313 790 0901	4	AV housing
				□ 13
	13	9371 470 2168	1	Cylindrical pin 4h8x25
	14	4313 748 2500	1	Hip pad
	15	9022 341 1310	4	Spline screw IS-M6x18


<sup>(1)</sup> BT 121, (2) BT 121-Z

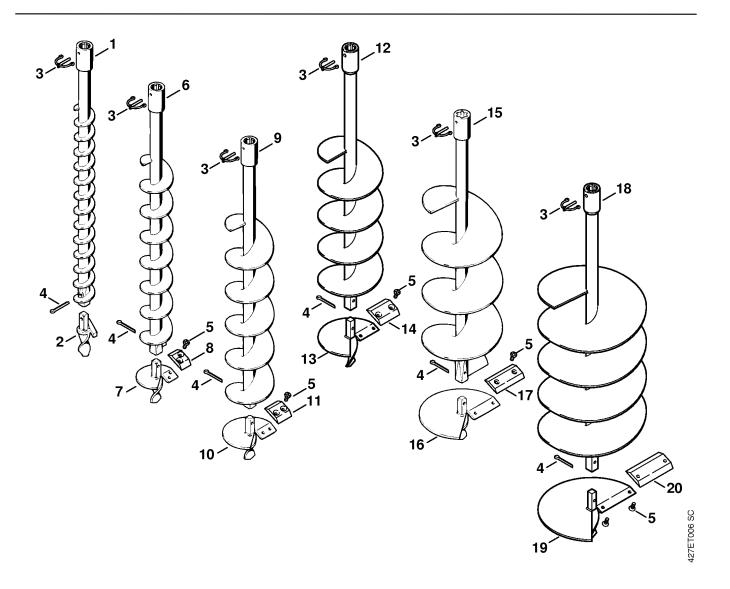

_				
	Reference	Item number	Qty	Description
	1	4404 680 2004	1	Earth auger Ø 40 mm / 1 5/8"
				□ 2 - 4
	2	4404 680 3050	1	Drill head
	3	4311 682 3500	1	Retaining pin
	4	9395 021 2360	1	Split pin 4.5x40
	5	9062 319 1260	2	Countersunk screw M6x12
	6	4404 680 2006	1	Earth auger Ø 60 mm / 2 3/8"
				□ 3 - 5, 7, 8
	7	4404 680 3051	1	Drill head
				□ 5, 8
	8	4404 682 3101	1	Blade
	9	4404 680 2009	1	Earth auger Ø 90 mm / 3 1/2"
				□ 3 - 5, 10, 11
	10	4404 680 3052	1	Drill head
				□ 5, 11
	11	4404 682 3102	1	Blade
	12	4404 680 2012	1	Earth auger Ø 120 mm / 4 3/4"
				□ 3 - 5, 13, 14
	13	4404 680 3053	1	Drill head
				□ 5, 14
	14	4404 682 3103	1	Blade
	15	4404 680 2015	1	Earth auger Ø 150 mm / 5 15/16"
				□ 3 - 5, 16, 17
	16	4404 680 3054	1	Drill head
				□ 5, 17
	17	4404 682 3104	1	Blade
	18	4404 680 2020	1	Earth auger Ø 200 mm / 7 13/16"
				□ 3 - 5, 19, 20
	19	4404 680 3055	1	Drill head
				□ 5, 20
	20	4404 682 3105	1	Blade

<sup>(1)</sup> BT 121, (2) BT 121-Z

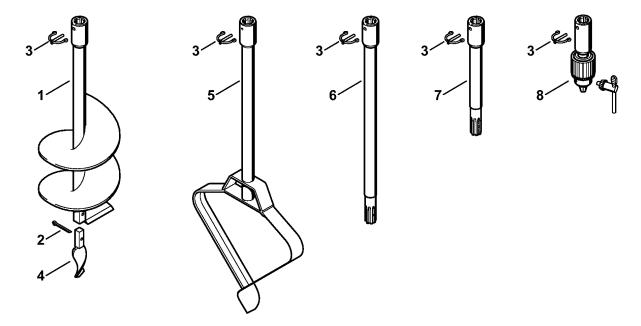

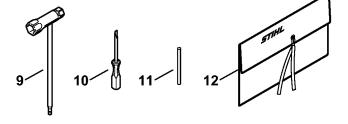

ET015 SC

## Drawing L Augers, Tools, Extras

Reference	Item number	Qty	Description
1	4311 680 2515	1	Planting auger Ø 150 mm / 5.9"
			□ 2 - 4
2	9395 021 2360	1	Split pin 4.5x40
3	4311 682 3500	1	Retaining pin
4	4311 680 3305	1	Pilot bit
5	4404 680 1900	1	Planting hole drill Ø 260 mm / 10.2"
			□ 3
6	4311 680 2350	1	Shank extension 450 mm / 18"
			□ 3
7	4313 680 2300	1	Shank extension 250 mm / 10"
			□ 3
_			
8	4311 680 4010	1	Chuck
_			□ 3
9	4128 890 3400	1	Combination wrench
10	0000 890 2300	1	Screwdriver
10	0000 000 0005	4	
10	0000 890 2305	1	Screwdriver available in Brazil only
11	4130 893 7800	4	Locking nin
11		1	Locking pin
12	0000 891 0801	1	Tool roll (B)

<sup>(1)</sup> BT 121, (2) BT 121-Z