5 Installation and Dismantling

DANGER

Risk of injury

Improper handling of the packaged door can lead to injury.

⇨ Place palette on an even surface.

⇨ Do not remove palette before starting assembly.

5.1 Inspection of the delivery

The door is mainly delivered pre-assembled. The door is delivered on 2 wooden pallets. The side frames, top rolls, door curtain and the top roll covers (if part of the delivery) are placed on one wooden pallet. The drive unit, control system, motor cover (if part of the delivery) and the fastening material are delivered in a cartridge box on a wooden pallet.

- Check door for transport damage.
- Check that the delivery is complete by comparing it with the order documentation.

5.2 Installation preparation

DANGER

Risk of injury

Incorrect assembly of the door can lead to injury.

⇨ The door may only be assembled by trained staff.

⇨ The door may only be assembled by the manufacturer or an installation firm that is approved by the manufacturer.

Make the following preparations before assembling the door:

- Inspect the installation site regarding the required fixing points: Assemble a substructure or other suitable fixing options if necessary. Screw the upper fixing points to a steel substructure or to a concrete element. The fixing plan is in the test book.
- Measure clearance dimensions (width and height) of the door opening and compare with the order.
- Block the installation site for people and vehicle traffic.
- Remove shrink-wrap from the packed door.

5.3 Installation








1. The delivery consists of 2 packages.1/2 mechanical parts. The side frames, the top rolls with the door curtain and the top roll cover (if part of the delivery) are delivered on a wooden pallet. 2/2 Drive unit and control system. The drive unit, control system, motor cover (if part of the delivery) and the fastening material are delivered in a cartridge box.




2. Parts of a door without top roll cover and without motor cover.

Check door for transport damage. Check that the delivery is complete by comparing it with the order documentation.

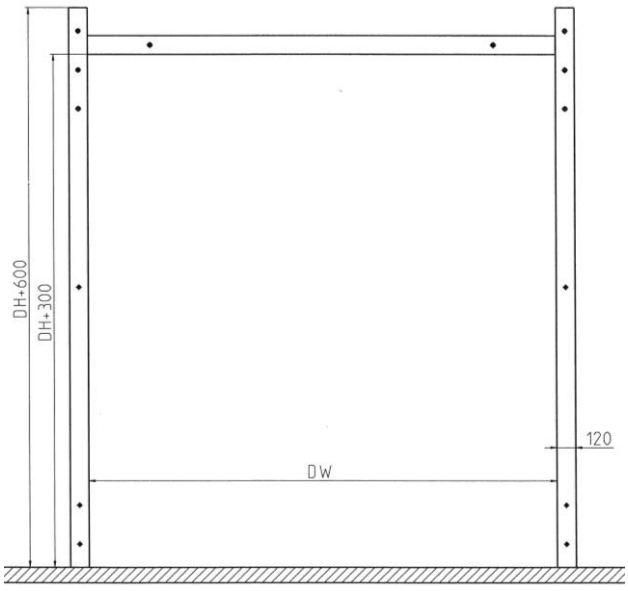

The wall of the building must be stable enough to carry the load that is caused by the door.

Installation preparation ground assembly. Transport and lift the door only with proper lifting devices. Assemble the door only directly in front of the opening, were the door shall be installed. Do not transport the assembled door over long distances.

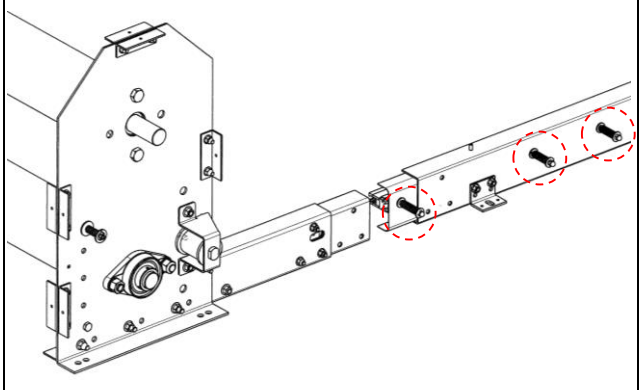


Protect particular the top roll and the door curtain against damages


3. Assembly frame shown

Optional an assembly frame is delivered.

4. Screw the side frames to the headers. Remove the top 4-5 bolts with springs in the side frame.

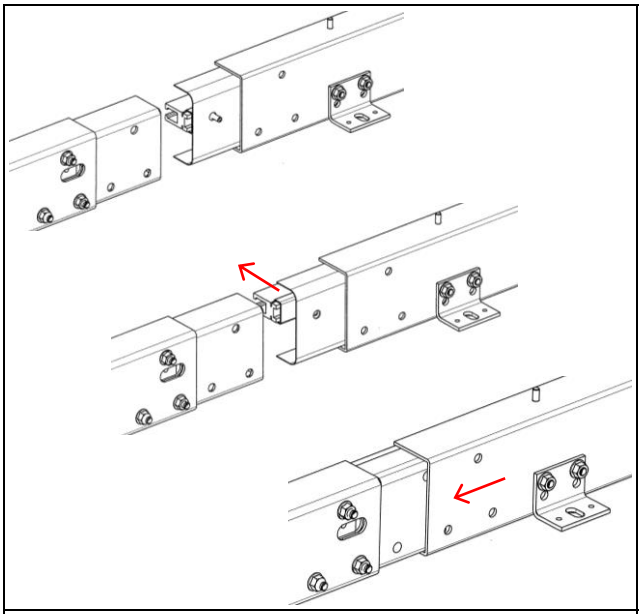

5. Pull the steel C-profile and the plastic guide rail approx. 30mm towards the center of the door (illustration middle). Then move the side frame across the profile of the head plate, carry on pulling the C-profile and the plastic guide rail towards the center of the door (illustration bottom right).

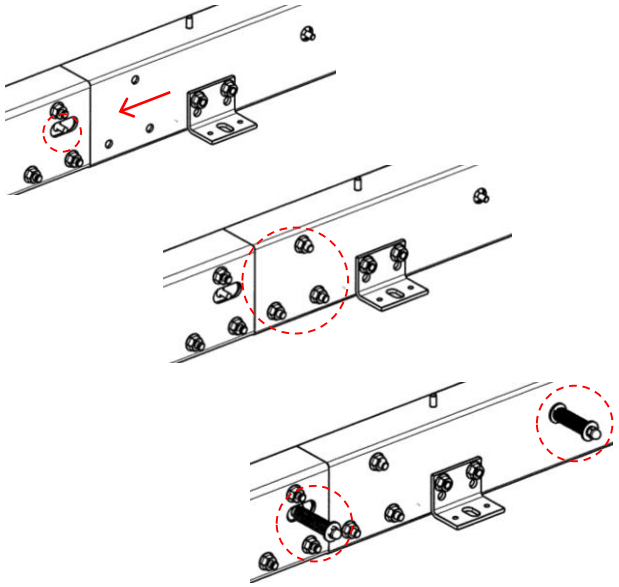


6. Telescope side frame and head plate complete (illustration top left). Marked screw must be visible.

Bolt together (illustration middle).


Reassemble bolts with the springs.

Door width max. 6 m

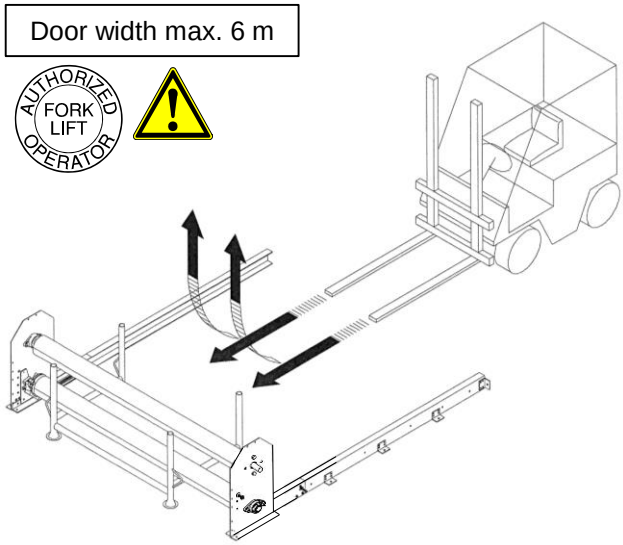

Protect particular the top roll and door curtain against damages

Door width above 6 m

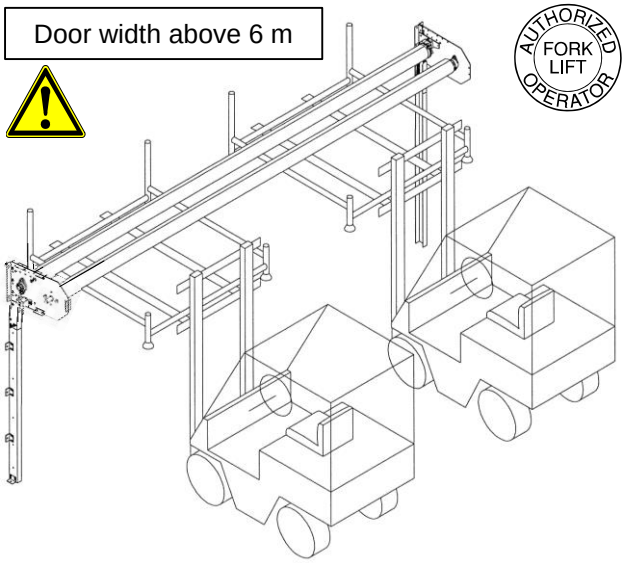

Protect particular the top roll and door curtain against damages


7. Lifting of the door with assembled side frames, if door width is max. 6 m.

Lift and transport the door with proper lifting devices. Watch the center of mass.


8. Lifting of the door with assembled side frames, if door width is above 6 m.

Lift and transport the door with 2 fork lift trucks. Watch the center of mass.

Mounting of the door:
The floor must be flat.

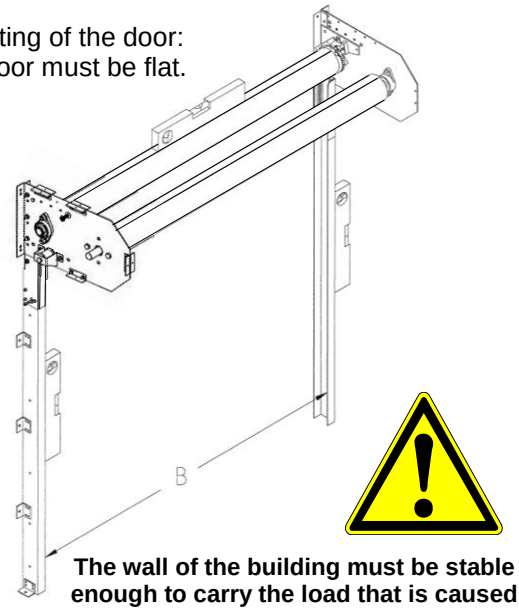


The wall of the building must be stable enough to carry the load that is caused by the door. Consider fixing plan.

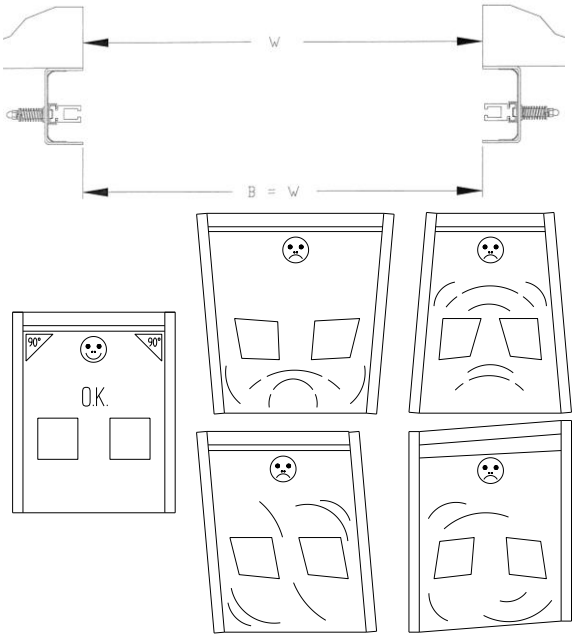


9. Place the whole door at the opening of the building. The top rolls (drums) must be built-in horizontal, the side frames must be mounted vertical. Fix side frames and head plates to the wall, use suitable screws. Use all screw-on brackets that are at the side frames.

10. Measure the dimension DW and diagonals of the door. Only if the door is installed rectangular, the curtain is without wrinkles.

Do not release the curtain safeguard!

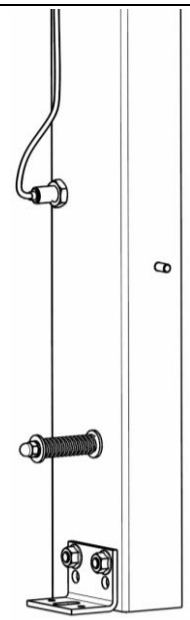


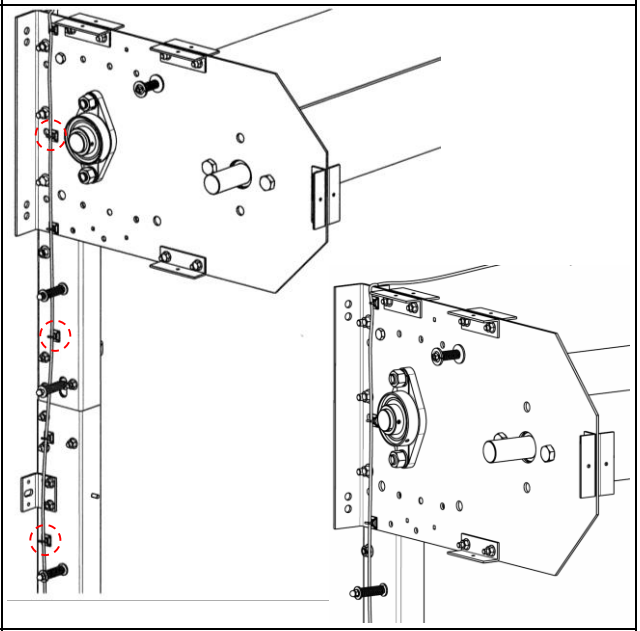


11. Install stationary photocell at 300mm height in side frames. Use 2 nuts.

Install receiver on control side.

12. Laying cable of the stationary photocell. Illustration left: Fix cables of stat. photocell with stick clips and cable straps. Illustration right: Lay the cable of the stat. photocell from the head plate non-drive side to the head plate of the drive side; for that purpose fix the cable to the wall. Connect stat. photocell electrically.

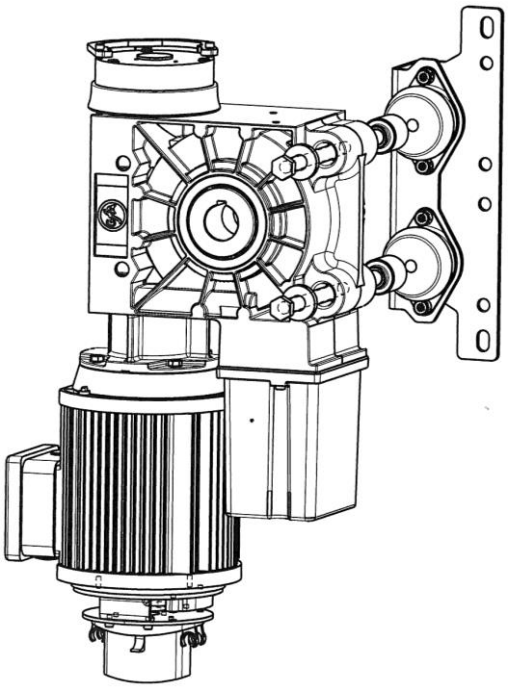

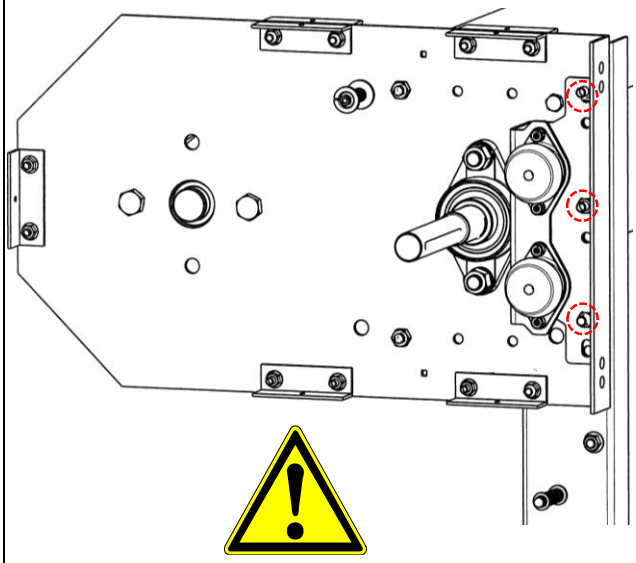



Before you release the nuts: Make sure that header and side frame are fixed to the wall.

13. Remove the screws of the torque arm from the rubber dampers.

14. Screw the torque arm to the head plate.

Remove the 3 nuts that are marked. Slide on the torque arm and screw on the nuts, again. Do not tighten nuts, now.

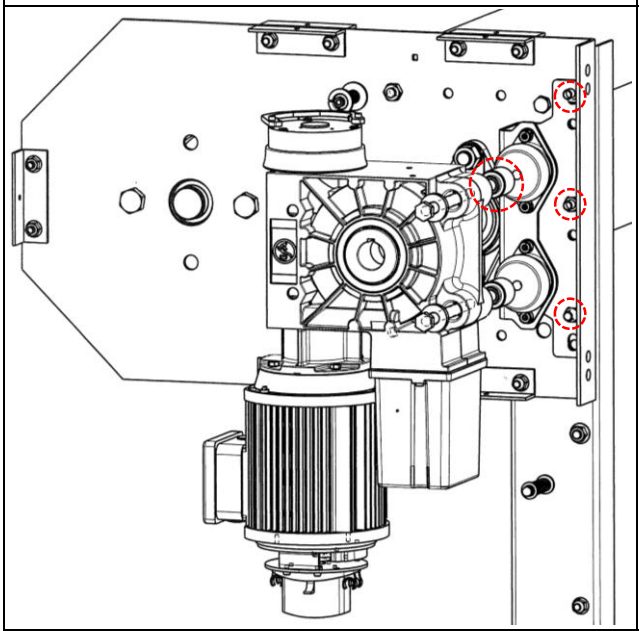


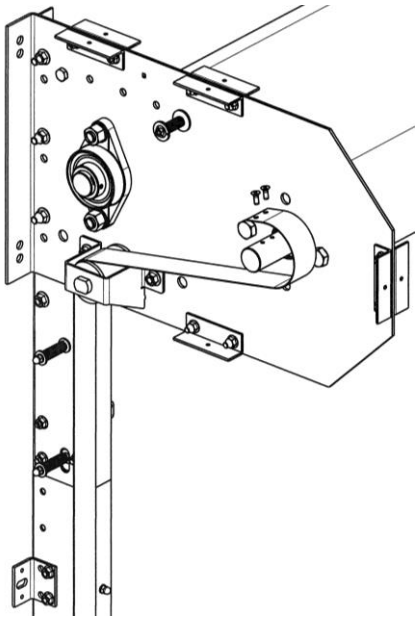

15. Grease the shaft and slip on the drive unit, pay attention to the feather key. Position sleeve between rubber damper and drive unit; position washer between drive unit and screw. Tighten screws. Tighten the 3 nuts that fix the torque arm.

16. Assemble the counter weight DW ≤ 6m.

Assemble the belt with 2 countersunk screws M6x12 on the top roll (drum). Make 4 dead-windings.

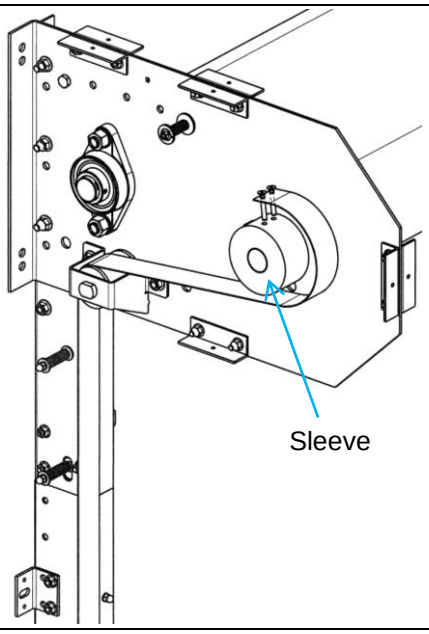




Secure the curtain against accidentally unwind.


17. Assemble the counter weight DW > 6m.

Slide the sleeve for belt on the shaft of the top roll (drum). Assemble the belt and the sleeve for counterweight with 2 countersunk screws M6x35 on the top roll (drum). Make 2 dead-windings.

18. **Fix the belt for counter weight at the side frame.** => Pull down the belt, give way 100mm. => fix belt.

Release curtain safeguard. Hold the curtain with hands to avoid accidentally turning of the curtain. Do not damage curtain.

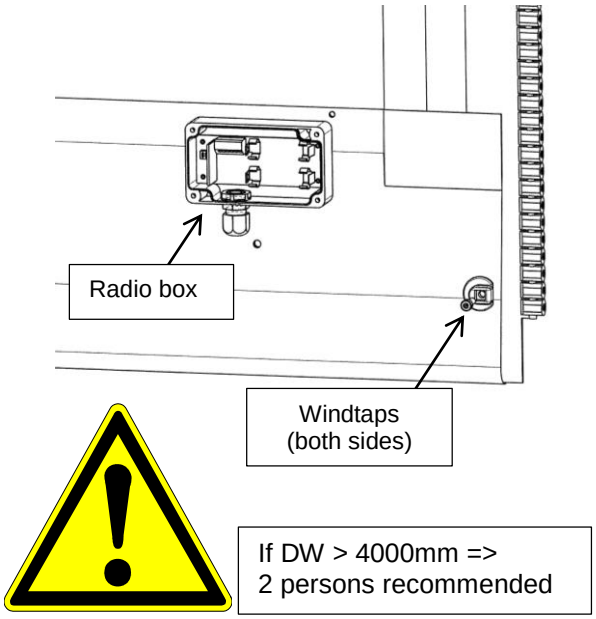


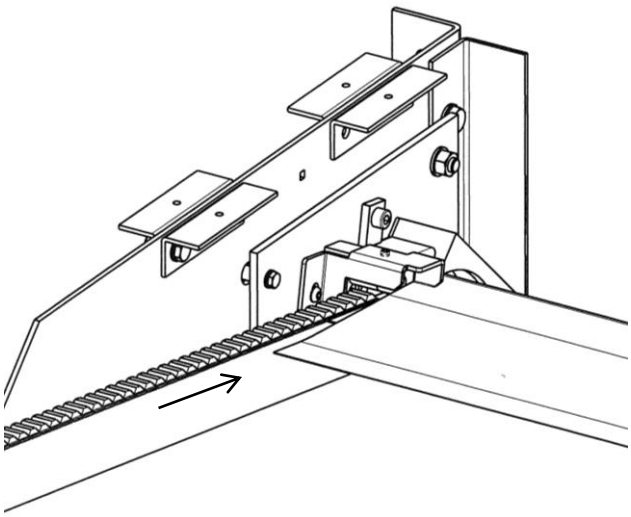


19. Windtaps and radio box **mustn´t** be on the curtain, dismantle if necessary.

20. Insert the driving belt (Zipper).


The tooth must be inserted into the guiding on both sides. To realize this: Turn the top roll (drum) with the curtain and pull the curtain towards the wall.

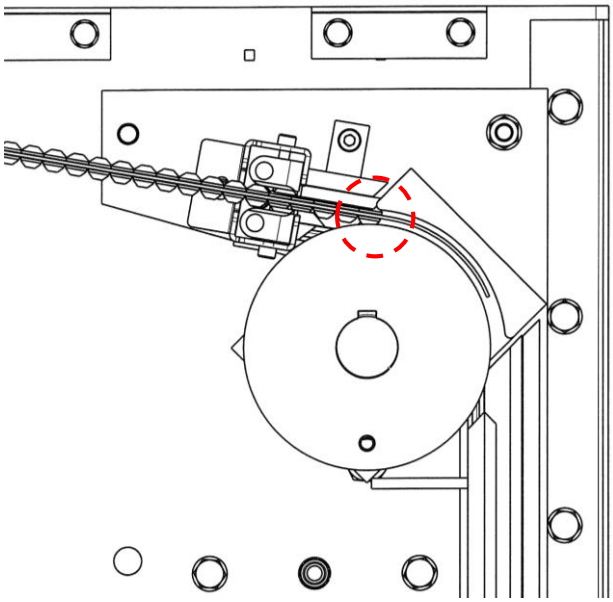


21. Push the driving belt (Zipper) between the drive wheel and the opposite support. If the driving belt cannot be pushed any more, the top roll (drum) must be turned.

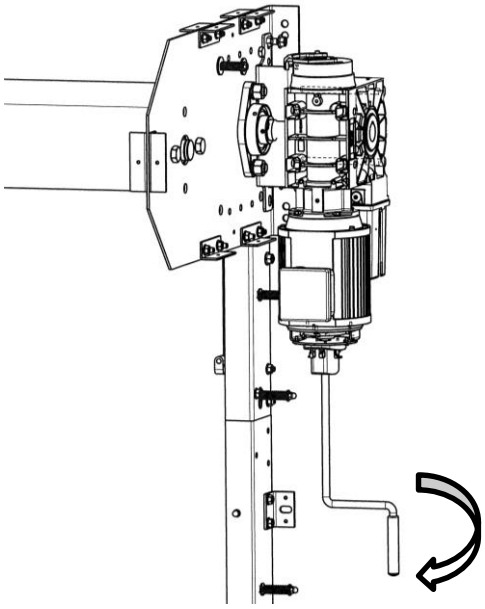

22. The top roll must be moved by turning the hand crank.

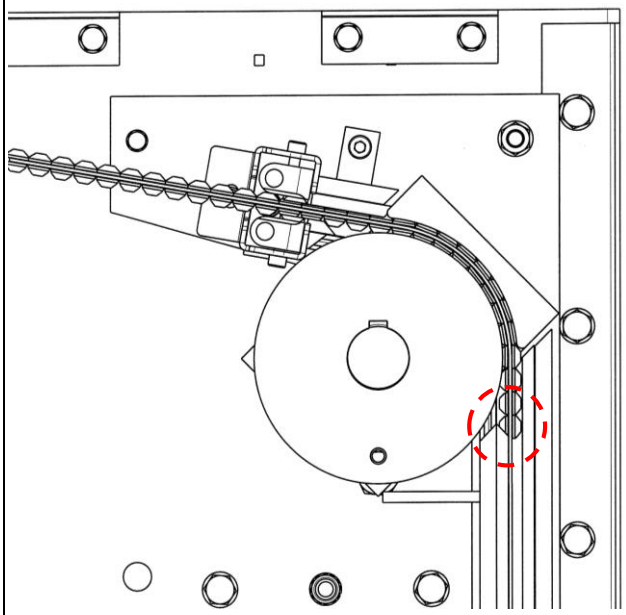


23. If the top roll (drum) is turned approx. ¼ turn, the tooth are visible in the vertical sliding rails. => Check, if the driving belts (Zippers) are on the same level (height).

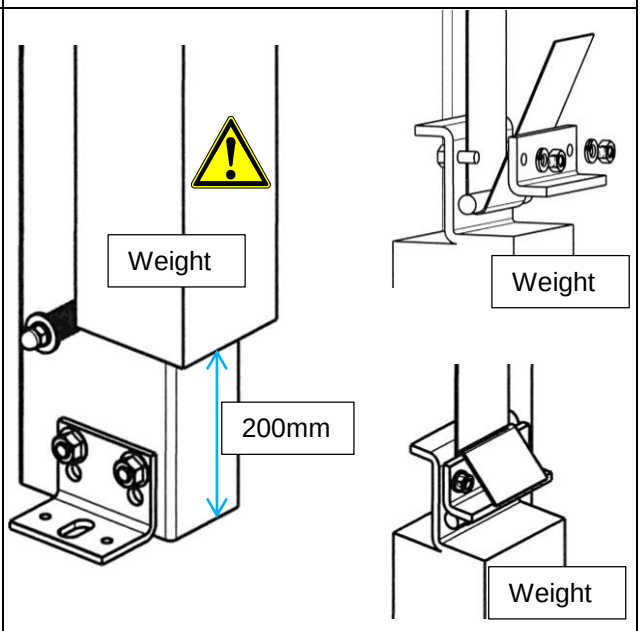


24. Assemble counterweight.

Rest the counterweight on a part that is approx. 200mm high. Secure against tilting over. Lay the belt as shown on the top right sketch and tension the belt a bit. Fasten the bracket (right sketches).

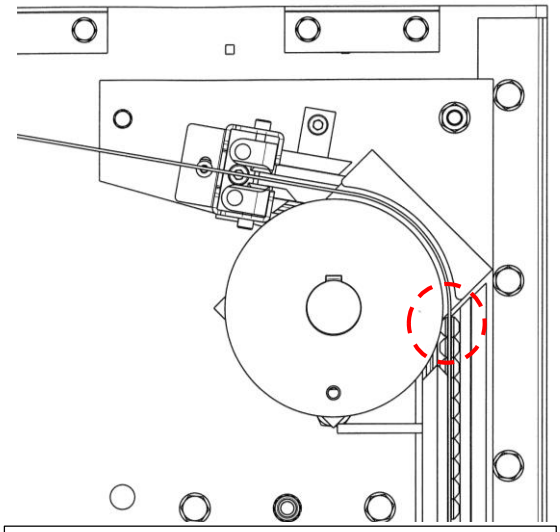


To close the door completely => connect electrical (see points 27 to 30).

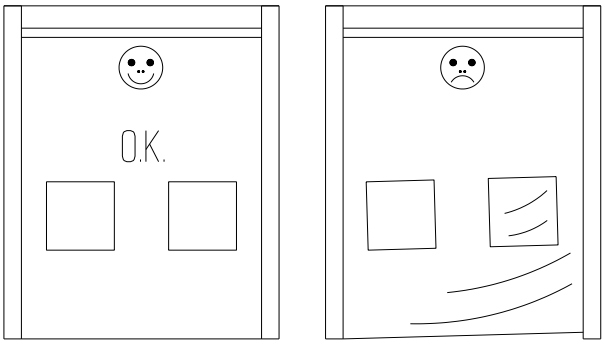

25. If driving belts (Zippers) are not on the same level (height): Close door to approx. DH/2 and crash the curtain at the bottom area. Close the door until the tooth are completely off the gear-wheel (downward). **=> Do not close further.**
=> Open door again.
=> Check, if the tooth of the driving belts (zippers) are inserted equal.


26. If the driving belts (Zippers) are not on the same level (height), the curtain has wrinkles.

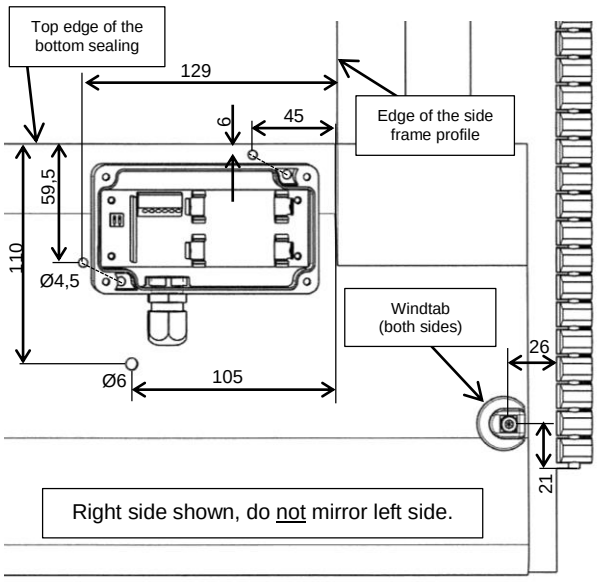

Picture shows the fixing on the opposite side of the radio box




Fillester head screw with hexagon socket M4 x 10

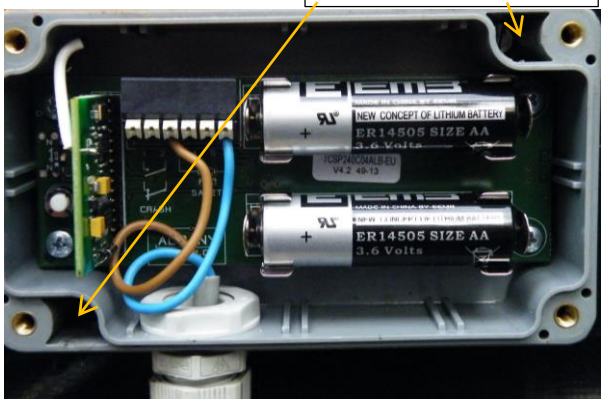


27. Assemble the radio system at the curtain.

Drill 2 holes Ø 4,5 for the radio system into the curtain (as shown in sketch) and fix with 2 screws M4. Cut a hole Ø 6 in the inner side of the bottom seal (as shown in sketch). Mount windtabs with hexagon head screw M5x16 and square nut.

28. Connect the radio system electrically.
Lay the cable of the safety edge through the bottom sealing (Ø 6) into the radio system. Connect both wires of the safety edge as shown. Insert 3,6V batteries, consider + / -. Initial operation of the radio system is described in the user manual of the radio system.

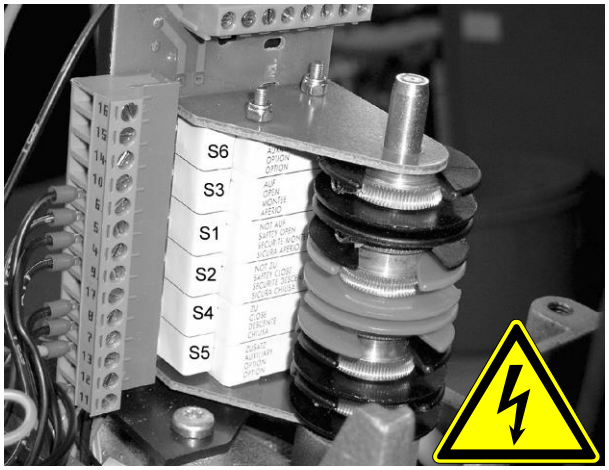

S1 Emergency UP
S2 Emergency CLOSED
S3 UP
S4 CLOSED
S5 CUTOFF STAT. PHOTOCELL
S6 ADDITIONAL

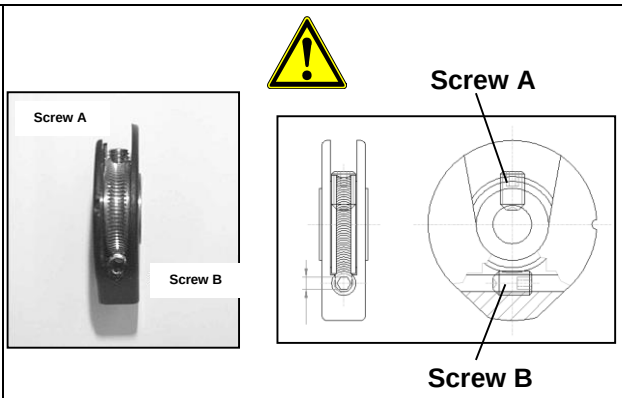


Adjustment limit switch:
Adjust cam roughly and tighten **screw A** (Secure with paint).
Do the fine adjustment with **screw B**.


29. Connect electrical power to drive.

Set the cam limit switch in accordance with end positions. Wrong settings may lead to door damages. Use cam **S3** to set the top limit! Set emergency cam **S1**: Cam S1 must operate at 20mm above the top limit.

30. Setting the bottom limit and cut-off of the stationary photocell are described in the MCC user manual. Set the emergency limit switch **S2**, that it is switched 20mm below the bottom limit.

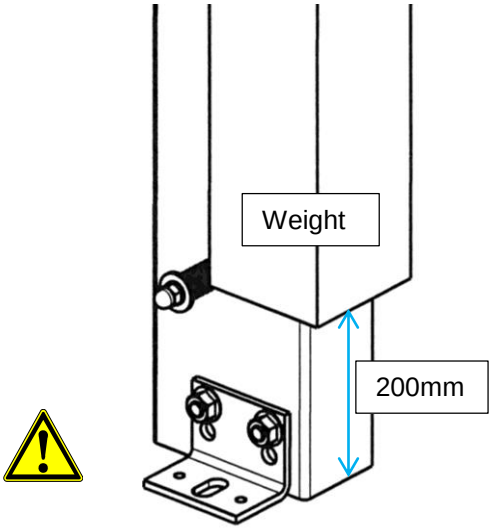

Counterweight can get caught by other parts

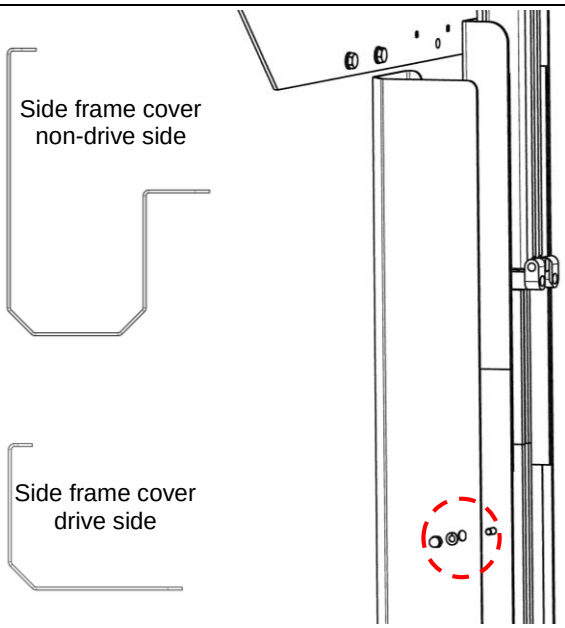


31. Check end-positions of the counterweight.

If the door is opened complete, the bottom of the counterweight shall be 200mm above the floor. If necessary: correct. Check position of the counterweight at complete closed door.


32. Assemble the side frame cover.

Use washers and cap nuts M6 to mount the side frame covers.

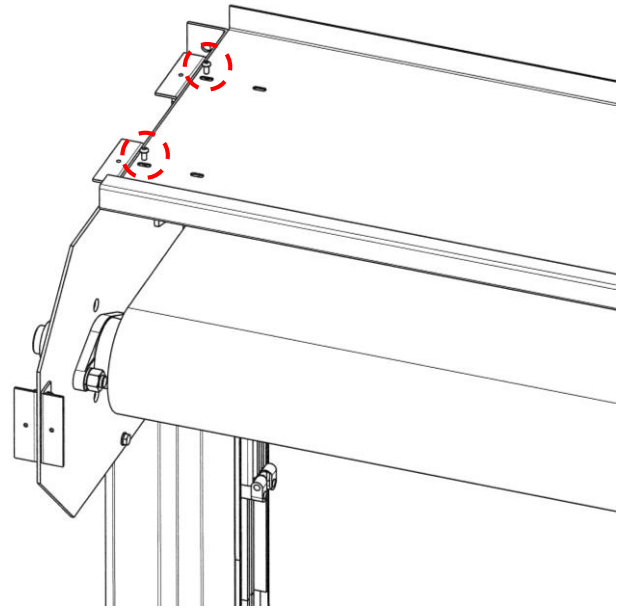


33. With option top roll cover:

Assemble the top roll cover (top) on the non-drive side with 2 fillister head screws M6x12.

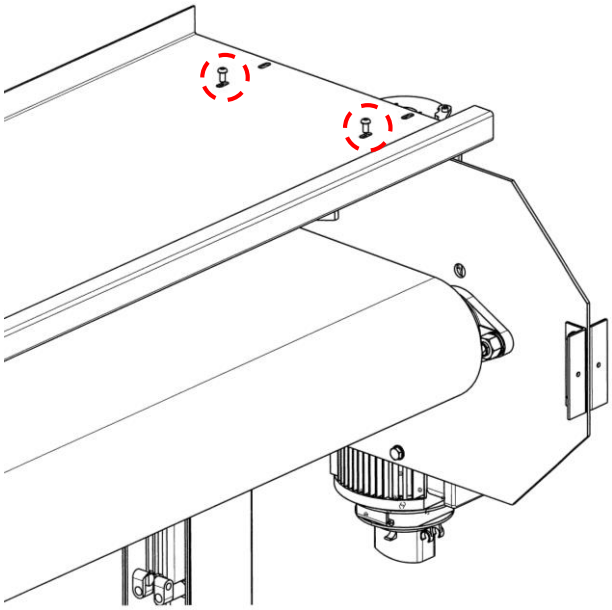


34. With option top roll cover:

Fix top roll cover (top) on the drive side with 2 fillister head screws M6x12.
Fix the top roll cover to the wall, use the hole in the middle of the top roll cover.

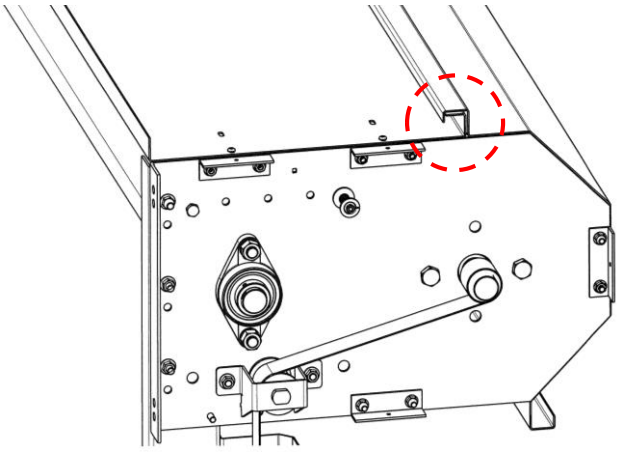


35. With option top roll cover:

Mount (hook in) the top roll cover (front) to the top roll cover (top).

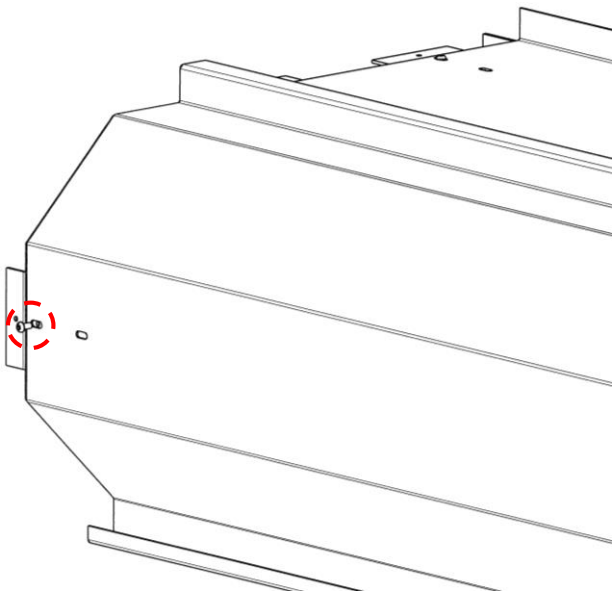


36. With option top roll cover:

Fix top roll cover (front) with 1 fillister head screw M6x12 on the non-drive side and on the drive side.

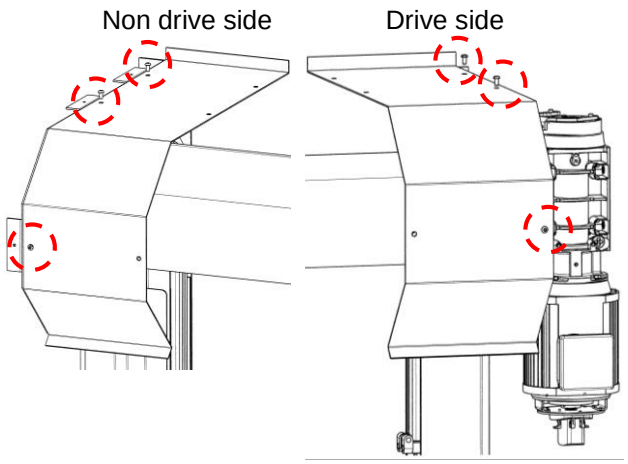


37. Without option top roll cover:

Fix the drum cover on the non-drive side and on the drive side with 3 fillister head screws M6x12 on each side.

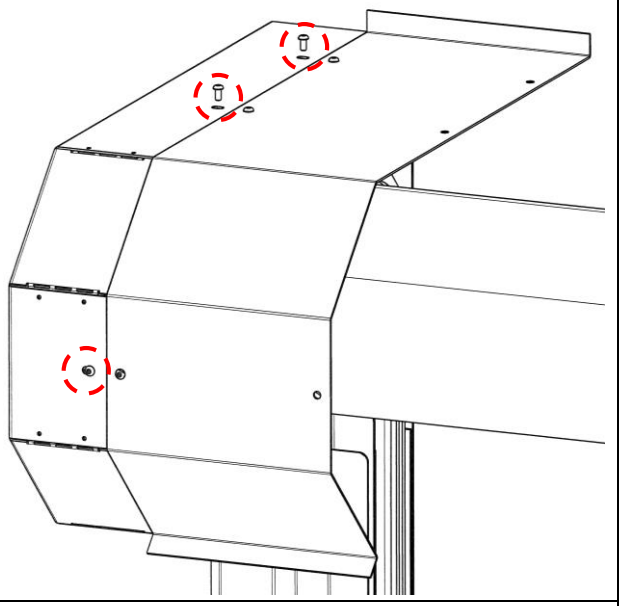


38. Fix the belt cover (non-drive side) with 3 fillister head screws M6x12.

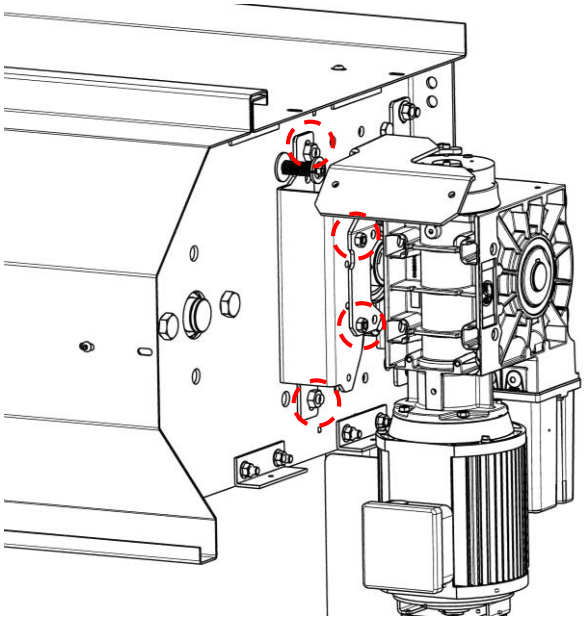

39. With option motorcover:


Screw the bracket torque arm to the head plate, use 2 hex head screws M10x20 and nuts. Screw the bracket for motor cover to the bracket torque arm, use 2 hex head screws M8x20 and nuts.

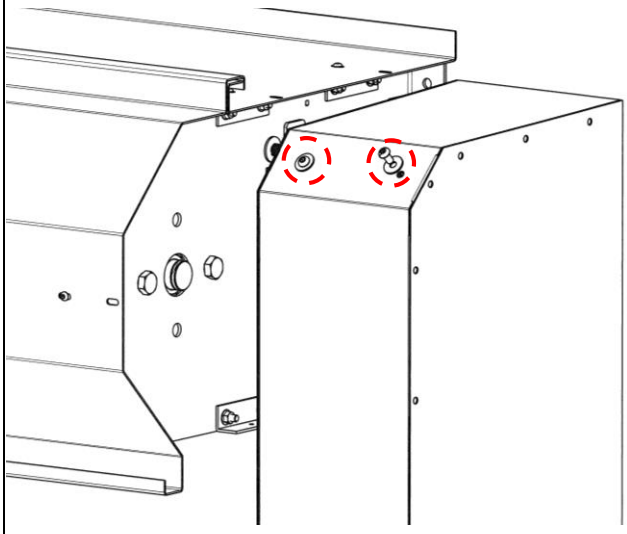

40. With option motorcover:

Screw the motor cover to the bracket for motor cover. Use 2 fillister head screws M8x16 and washers.


Doors with MCC
and power cable length > 2 m

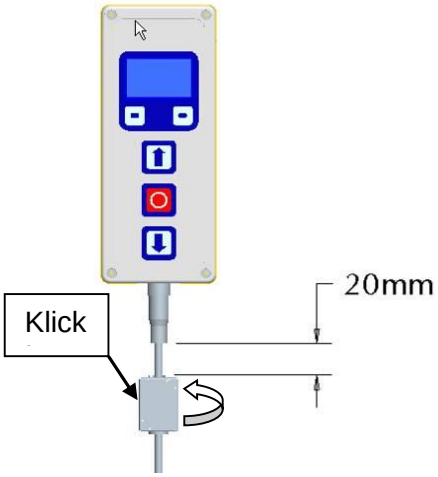




41. Test the safety features.

42. Grease the plastic rails of the side frames. **Use only grease from the manufacturer of the door.** Open and close the door about 10-times, remove unnecessary grease.

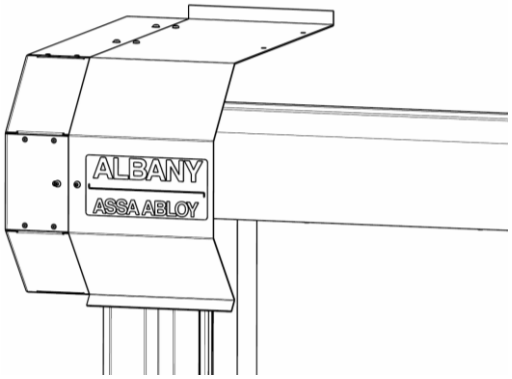

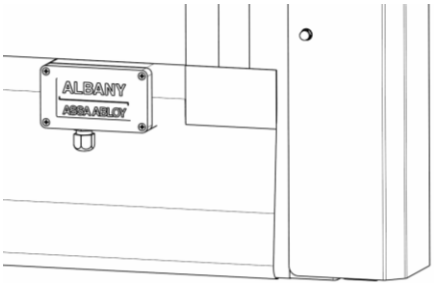

The door is dismantled in the reverse sequence of the installation procedure.

The door´s packaging can be returned to the manufacturer. Dispose of defective door components in an environmentally responsible manner.

Defective electronic components must be disposed of as special waste.

43. Stick label Albany ASSA ABLOY 210x100 to the drum cover or to the top roll cover at top left. Stick label 80x40 to the radio box on the curtain. After executing a trail run, the installation procedure is concluded.