MCS-R

BA3-kit
BA2-kit
BA4-kit

MCS
DOOR CONTROL

Display
Red

KL23 KL22 KL21 (not in use) KL20 KL19 KL18 KL17 KL1 KL2 KL3 KL4 KL5 KL6 KL7 KL8 KL9 KL16 KL15 KL14 KL13 KL10 KL11 KL12

Loop det. 24V- 24V+
Traffic light
impulse close stop open
Push B
LS half LS C LS O
Motor unit limit sw.
12V+ GND A B
Encoder
Brown White Yellow Green

Radio
GND
24V+
Alternating up-stop-down impulse
open
close
stop

PNE Safety 1 8k2
Safety edge Air switch
Safety 2

OSE 1 white GND
optoel safety edge Green signal
Brown 12V+

OSE 2 GND
optoel safety edge signal 12V+ test

4-wire photocell 24V+
3-wire photocell test
Light-curtain signal GND

Not in use

Door safety 24V+
Additional Stop signal

Pink
Grey
Motor safety 24V+
Chain/thermo sw signal

24VDC out
Max. 300mA

NOTE!
Terminals KL17 – 23 are numbered from right to left!

Potential free Relay 3 com nc no
Potential free Relay 2 com nc no
Potential free Relay 1 com nc no
400V

U V W
PE
L1 L2 L3 N N
Yellow/green
Yellow/green
Yellow/green
Black Brown Grey Blue

Motor

Mains supply 400V AC

Main power
3 x 400V N PE, 50Hz, 10A-16A
C Tripping Characteristic

Drive unit

X3 MC A/D RS 485
F10 S10
Thermo sw. in motor
Manual lever
Y1 X2
M1 X1
U V PE W N

Color code:
PK = pink
GY = grey
GN = green
YE = yellow
WH = white
BN = brown
GNYE = yellow/green

Backview Rückansicht
6/BN 5/PK 4/YE 3/WH 2/GN 1/GY

X2 120 mm
RL1=wire/Ader 4
RL2=wire/Ader 5
1=wire/Ader 1
2=wire/Ader 2
3=PE(GNYE)
4=wire/Ader 3
5=N
V1 X1

Door Control

1(10)

ASSA ABLOY

Basic Wiring Diagram MCS Albany

Doc.no / Dok.nr

Rev. A7 6411R0001

1510XXXX rX

2014-12-17

MCS-FC

BA3-kit

BA2-kit

BA4-kit

Brown White Yellow Green

Loop det. 24V- 24V+ | Traffic light | impulse | Push B: close stop open | Motor unit limit sw.: LS half LS C LS O | Encoder: 12V+ GND A B

Display (Red)

KL23 (5 4 3 2 1) | KL22 (5 4 3 2 1) | KL21 (not in use) | KL20 (8 7 6 5 4 3 2 1) | KL19 (6 5 4 3 2 1) | KL18 (4 3 2 1) | KL17

NOTE!
Terminals KL17 – 23 are numbered from right to left!

KL1 Radio: GND, 24V+, Alternating up-stop-down impulse, open, close, stop

KL2: PNE, Safety edge Air switch, Bk2, Safety 1, Safety 2, 8k2

KL3: OSE 1 white, optoel safety edge Green, Brown, signal, GND, 12V+

KL4: OSE 2, optoel safety edge, signal, GND, 12V+, test

KL5: 4-wire photocell, 3-wire photocell, Light-curtain, 24V+, test, signal, GND

KL6: Not in use

KL7: Door safety, Additional Stop, 24V+, signal

KL8: Pink, Grey, Motor safety, Chain/thermo sw, 24V+, signal

KL9: 24VDC out, Max. 300mA

Potential free Relay 3 — KL16 — com nc no

Potential free Relay 2 — KL15 — com nc no

Potential free Relay 1 — KL14 — com nc no

KL13 — 230V

KL10 (U V W) | KL11 (PE) | KL12 (L1 N / L1 L2 L3 N N)

Yellow/green, Yellow/green, Yellow/green, Brown, Blue

MCS
DOOR CONTROL

Frequency Converter: KL1, ST1 ST2, KL2, KL3

Motor

Main power
1 x 230V N PE, 50Hz, 16A
C Tripping Characteristic

Mains Supply 230V

Drive Unit

M1, X1, F10, S10, Thermo switch, Manual lever, X3, MC, A/D, B, A, RS 485, Y1, X2

1=wire 1
2=wire 2
3=PE (GNYE)
4=wire 3
5=not used

Frequency Converter

KL1

4=wire 3
3=wire 2
2=wire 1
1= PE (GNYE)

Backview/Rückansicht

6/BN, 5/PK, 4/YE, 3/WH, 2/GN, 1/GY

X3, X2

2=wire 2
1=wire 1

200V power-off brake	100V power-on brake
KL2:1=wire 1	KL2:1=not used
KL2:2=not used	KL2:2=wire 1
KL2:3=wire 2	KL2:3=not used
KL2:4=not used	KL2:4=wire 2

ST1, ST2

KL3:L1=wire 1
KL3:PE=PE (GNYE)
KL3:PE=PE (GNYE)
KL3:N=wire 2

Door Control

Color code:
PK = pink
GY = grey
GN = green
YE = yellow
WH = white
BN = brown
GNYE = yellow/green

2(10)

ASSA ABLOY

Basic Wiring Diagram MCS Albany


Doc.no / Dok.nr

Rev. A7 6411R0001

1510XXXX rX


2014-12-17

Control Unit MCS

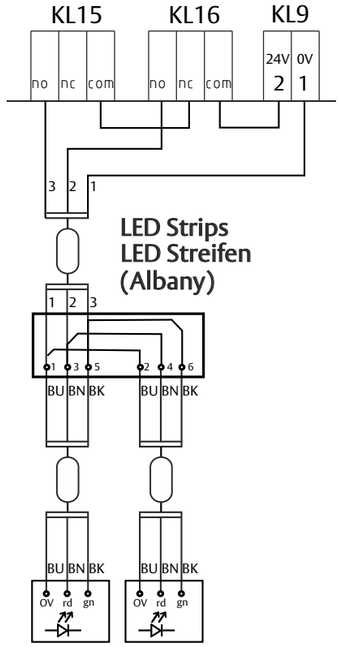


Red/Green LED Strips

Control Unit MCS

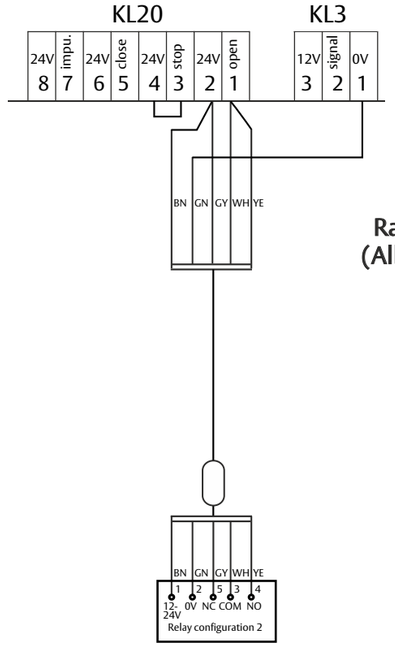


Radar open with closing after time

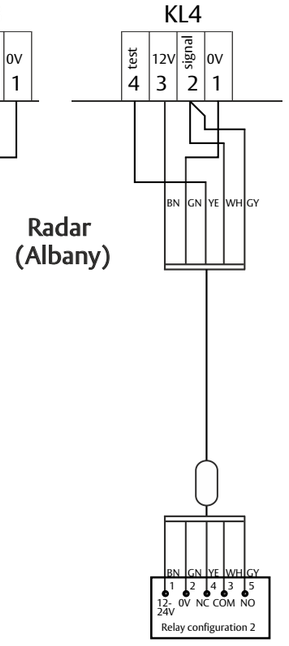


Radar as additional safety

Control Unit MCS

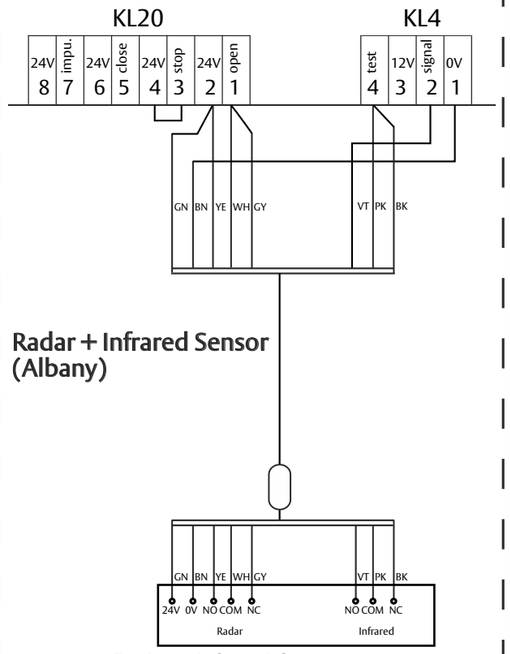


Radar + Infrared Sensor

Control Unit MCS

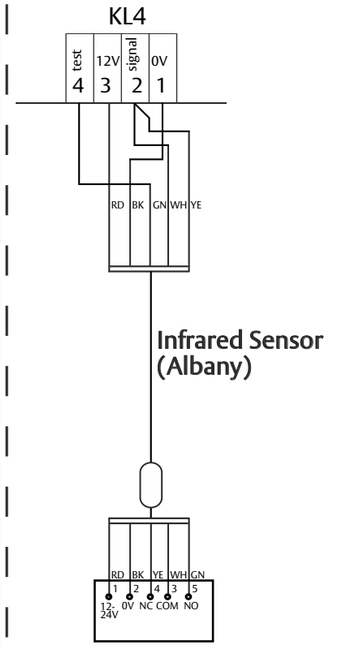


Infrared sensor as additional safety

Control Unit MCS

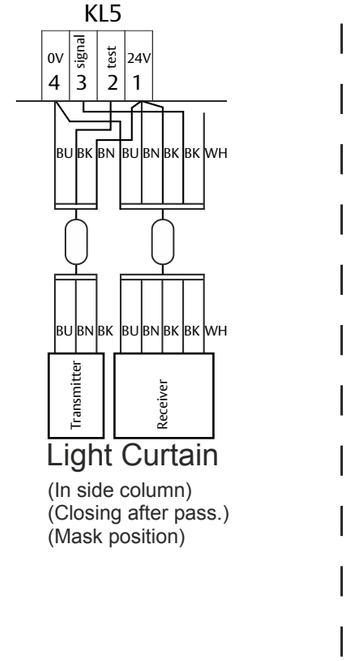


Light Curtain
(In side column)
(Closing after pass.)
(Mask position)

Control Unit MCS

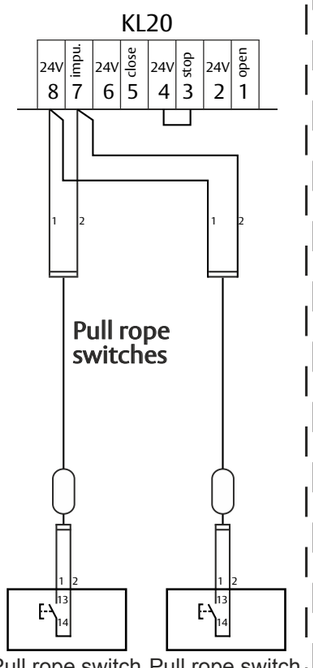


Pull rope switch Pull rope switch

Control Unit MCS

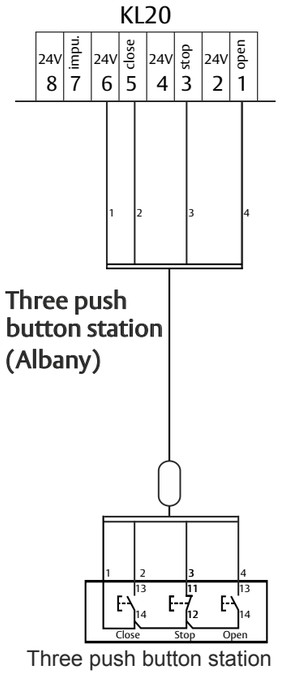


Three push button station

Control Unit MCS

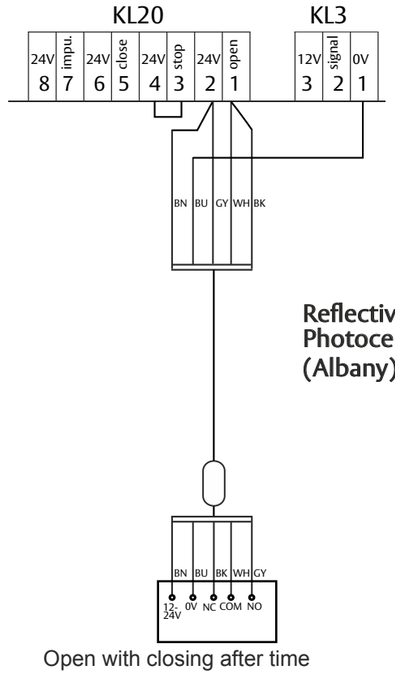


Open with closing after time

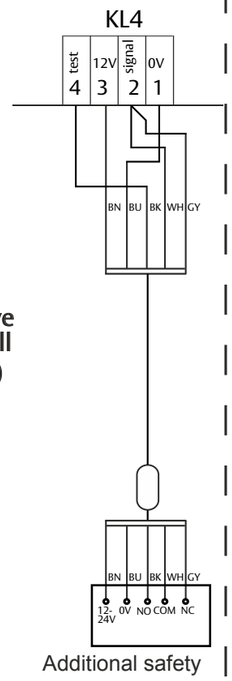


Additional safety

Control Unit MCS

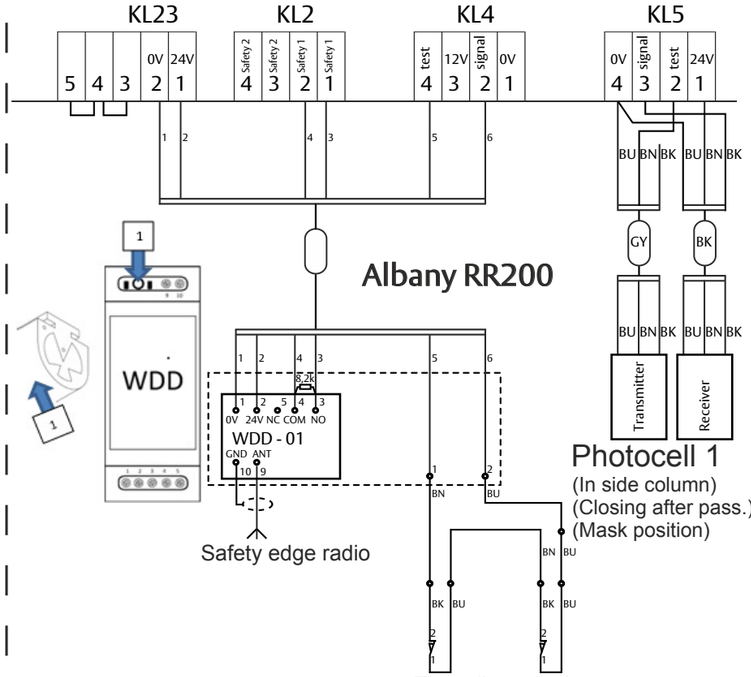

Control Unit MCS

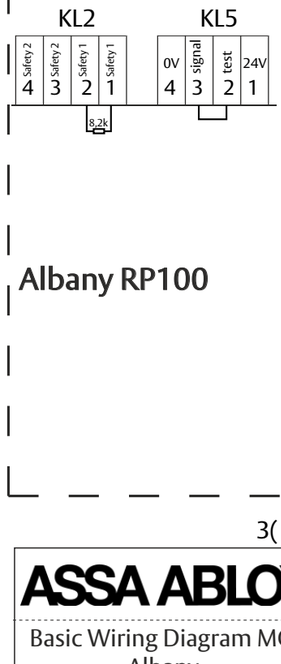

ASSA ABLOY

Basic Wiring Diagram MCS Albany


Doc.no / Dok.nr


Rev. A7 6411R0001

1510XXXX rX


2014-12-17

Control Unit MCS

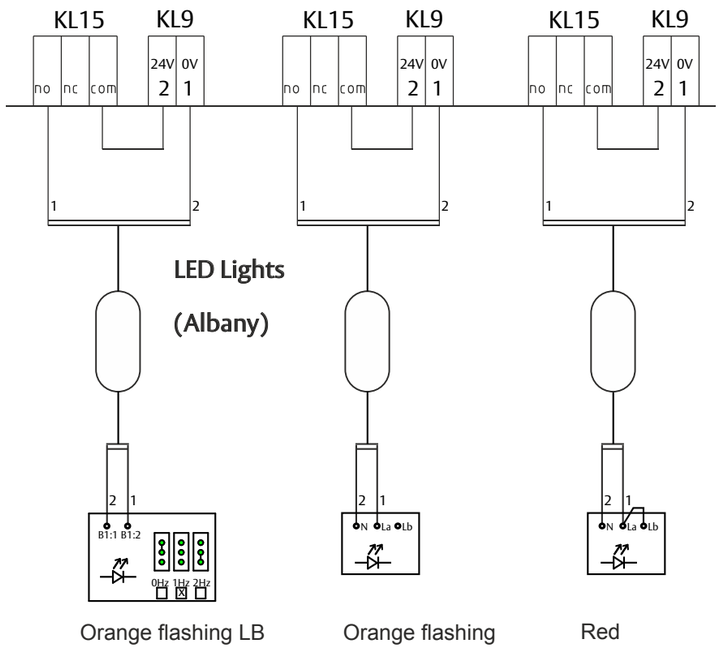

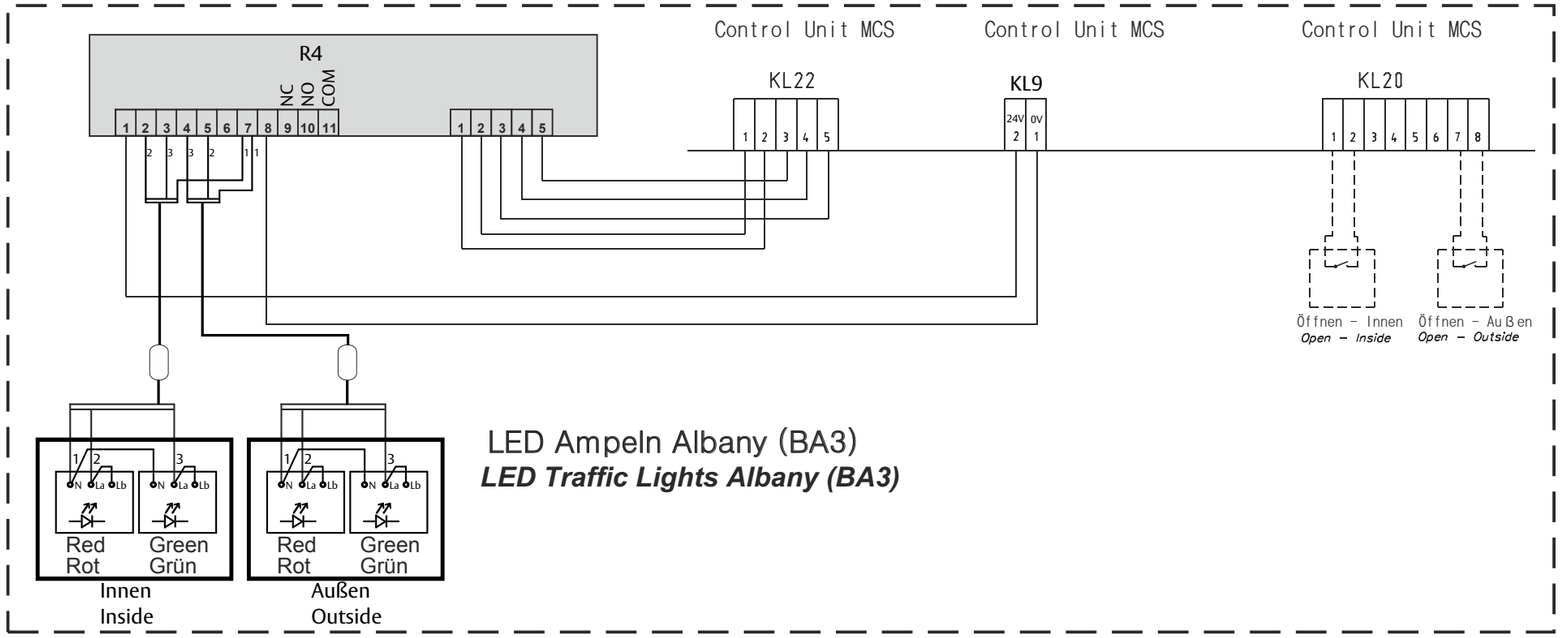


LED Ampeln Albany (BA3)
LED Traffic Lights Albany (BA3)

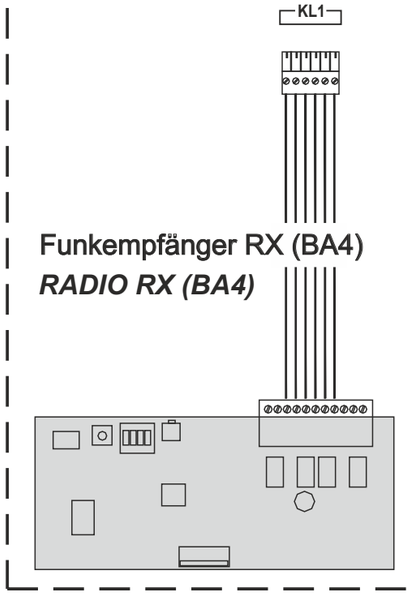


Funkempfänger RX (BA4)
RADIO RX (BA4)

Schleifendetektor (BA2)
Loop Detector (BA2)

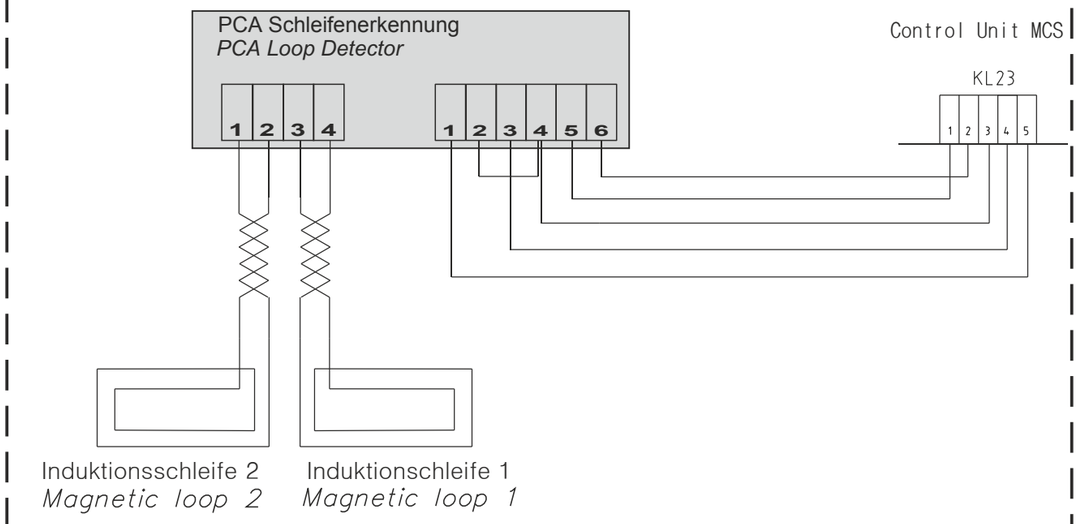

Photocells (Albany)

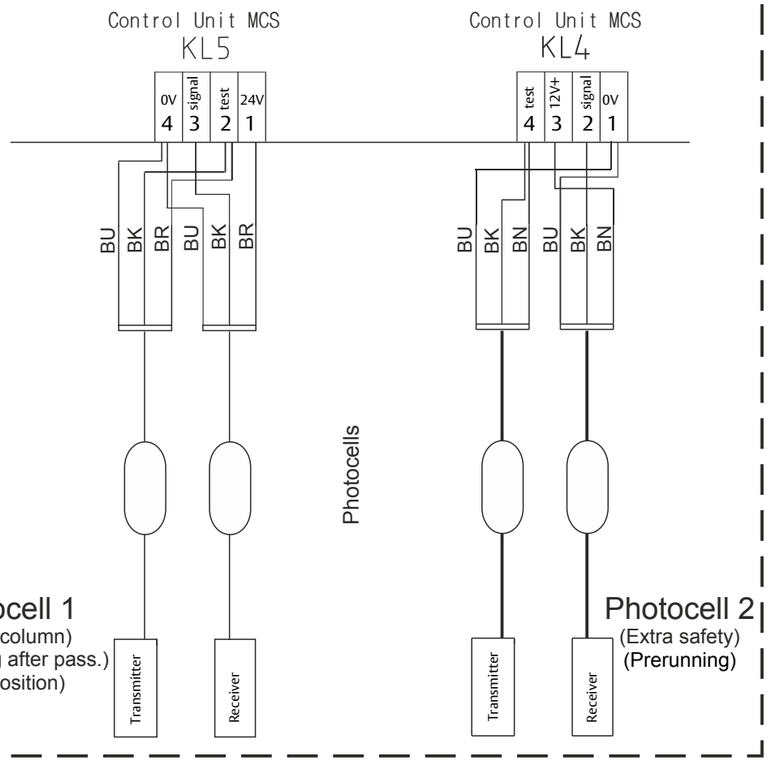



Photocell 1
(In side column)
(Closing after pass.)
(Mask position)

Photocell 2
(Extra safety)
(Prerunning)

Zusätzl. STOP Schalter Kit M/ML

ADD. EMERGENCY STOP BUTTON KIT M /ML

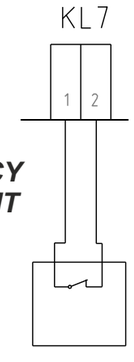

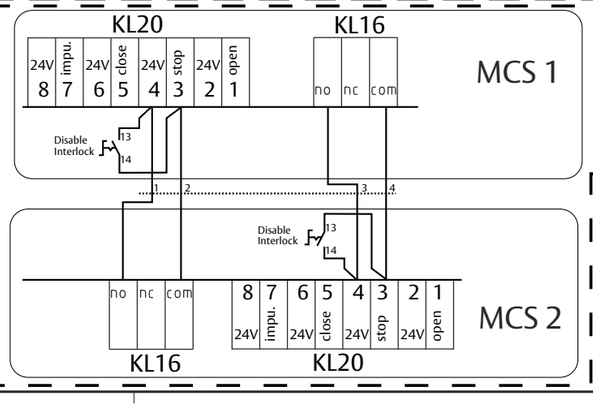

Interlock Verriegelung

1510XXXX rX

2014-12-17

4(10)

ASSA ABLOY


Basic Wiring Diagram MCS Albany

Doc.no / Dok.nr


Rev. A7

6411R0001


Control Unit MCS

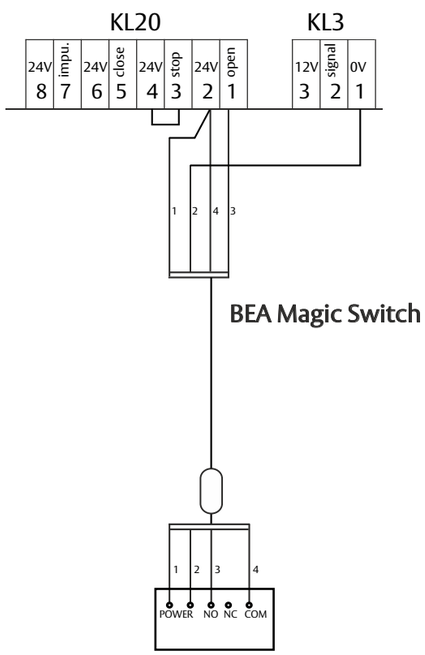


Control Unit MCS

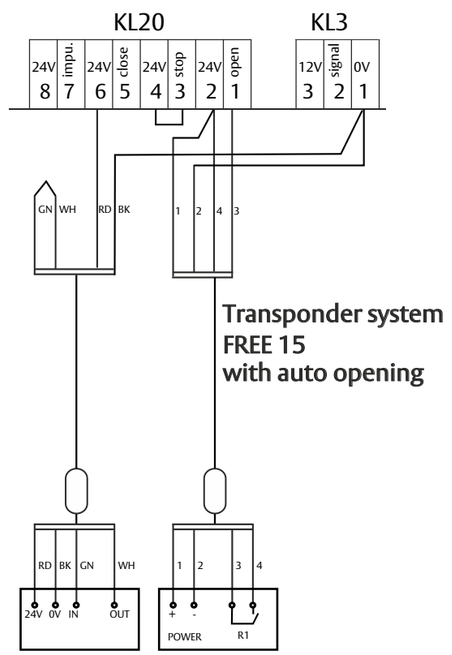


Control Unit MCS

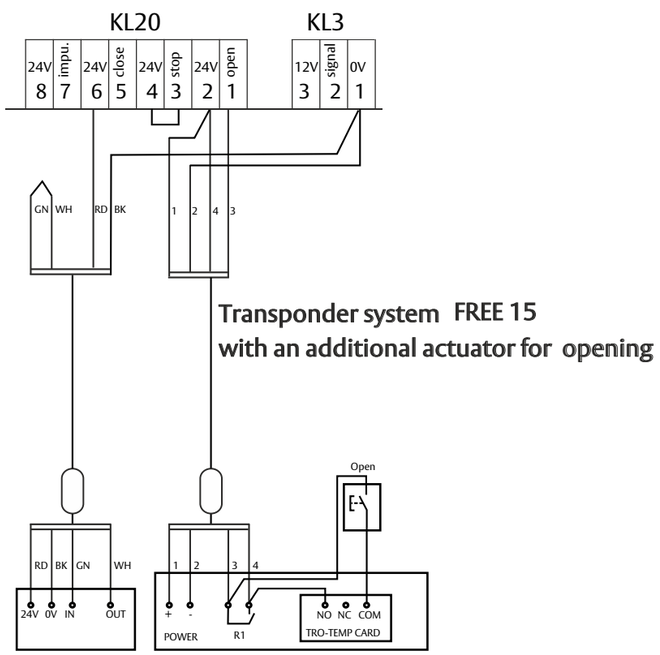


Control Unit MCS

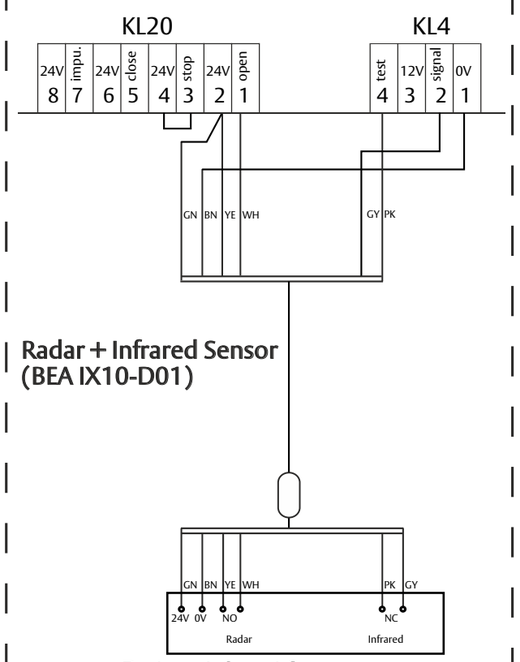


Control Unit MCS

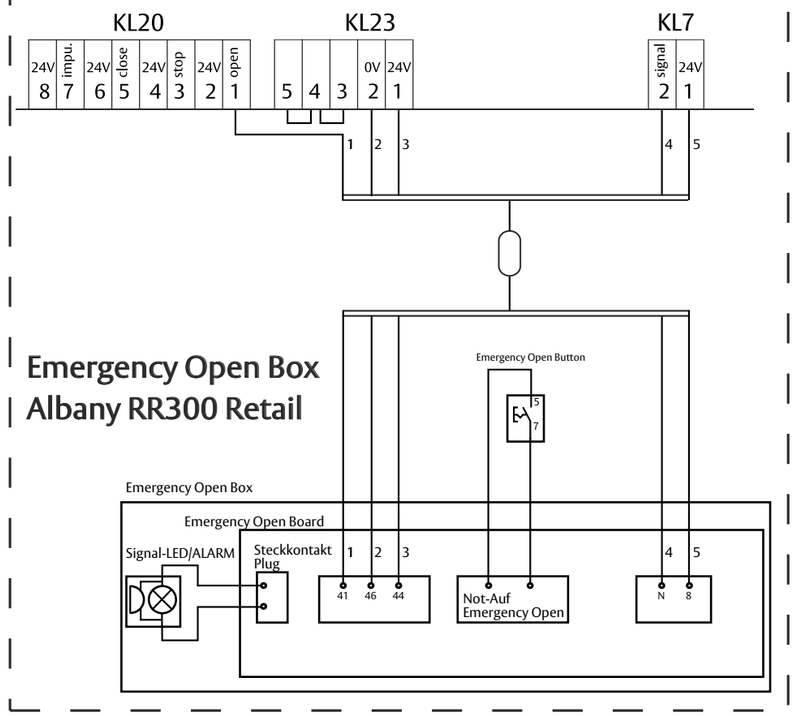


Control Unit MCS

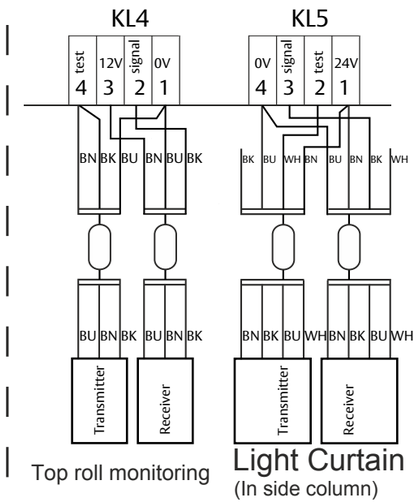

Control Unit MCS

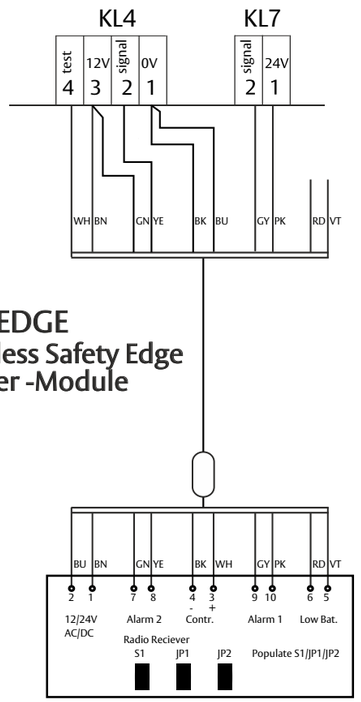

FLEXEDGE
Wireless Safety Edge
Slave - Module

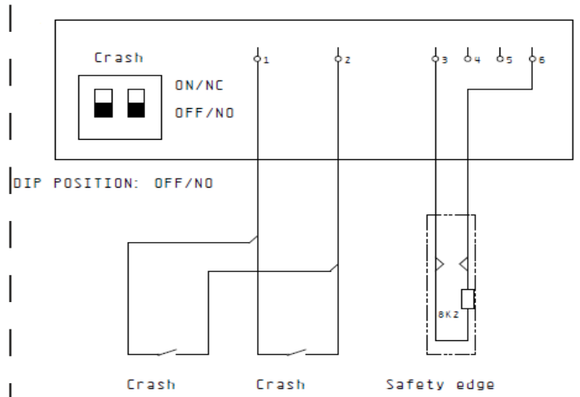

ASSA ABLOY

Basic Wiring Diagram MCS Albany

Doc.no / Dok.nr

Rev. A7 6411R0001

1510XXXX rX

2014-12-17

EN	DE	FR	NL	ES	SE	IT	PL
additional safety	zusätzliche Sicherheit	une sécurité supplémentaire	extra veiligheid	de seguridad adicional	extra säkerhet	maggiore sicurezza	dodatkowe bezpieczeństwo
Back view	Rückansicht	vue de l'arrière	terug bekijken	Volver la vista	sedd bakifrån	vista posteriore	widok z tyłu
Black	Schwarz	noir	zwart	negro	Svart	nero	czarny
Blue	Blau	Bleu	Blau	azul	Blå	blu	niebieski
Brown/white	Braun / Weiß	Marron/blanc	Bruin/wit	Marrón / blanco	Brun / vit	Marrone / bianco	Brązowy / biały
Chain switch motor	Kettenschalter motor	Chaine moteur de switch	Keten schakelaar motor	Motor del interruptor de la cadena	Kedjeswitch motor	Motore interruttore a catena	Przełącznik łańcuch silnika
Close	schließen	proche	sluiten	cerca	Stäng	vicino	blisko
CLOSE DELAY	VERZÖ.SCHLIESSEN	RETARD FERMETURE	SLUIT VERTRAGING	RETARDO CIERRE	STÄNGNINGSTIMER	RITARDO CHIUSURA	OPÓZN.ZAMKN.
Control system	Steuersystem	Système de commande	controlesysteem	sistema de control	styrsystem	sistema di controllo	System kontroli
DISABLE PHOTOC.	AUSBLENDEN LS	CELLULE DÉSACT.	fotocel deactiv	FOTOC. DESACT.	FOTOCELL AV	F.RELE DISABIL.	FOTO NIEAKT.
Display	Anzeige	afficher	tonen	visualización	Display	Visualizza	wystawa
Drive unit	Antriebseinheit	Unité d'entraînement	aandrijfeenheid	unidad de accionamiento	Drivenhet	unità di azionamento	jednostka napędowa
Emergency stop	Not-Aus-	Arrêt d'urgence	noodstop	parada de emergencia	nödstopp	arresto di emergenza	zatrzymanie awaryjne
Encoder	Encoder	Encoder	Encoder	Encoder	Encoder	Encoder	enkoder
END POS. BOTTOM	ENDLAGE UNTEN	POS. FERMEE	eindstand neer	FIN CARRERA BAJ.	ÄNDLÄGE STÄNGD	POS.FINALE INF.	POZ.KONC.DÓL
END POSITION TOP	ENDLAGE OBEN	POS. OUVERT	eindstand open	FIN CARRERA SUB.	ÄNDLÄGE ÖPPEN	POS.FINALE SUP.	POZ.KONC.GÓRA
Frequency converter	Frequenzumrichter	Convertisseur de fréquence	frequentieomvormer	convertidor de frecuencia	Frekvensomvandlare	Convertitore di frequenza	przetwornica częstotliwości
Grey	Grau	Gris	Grijs	Gris	Grå	Grigio	Szary
Impulse	Impuls	Impulse	impuls	impulso	Impuls	impulso	impuls
Interlock	Verriegelung	Verrouillage	Veiligheidsvergrendeling	Bloqueo de puerta	Förregling	Interblocco	Blokowanie
Internal connection to terminal 1 of AMP connector	Interne Verbindung zum Terminal 1 des AMP-Stecker	Connexion interne à la borne 1 du connecteur AMP	Interne verbinding naar terminal 1 van AMP connector	Conexión interna hacia el terminal 1 del conector AMP	Intern anslutning till terminal 1 av AMP-kontakt	Connessione interna al morsetto 1 del connettore AMP	Połączenie wewnętrzne do zacisku 1 złącza AMP
Light curtain	Lichtgitter	Rideau de lumière	lichtscherm	cortina de luz	ljusridå	Barriera fotoelettrica	kurtyna
Limit switch half	Endschalter Halb	Limitez de moitié de commutation	Eindschakelaar helft	Final de carrera media	Gränsbrytare halv	Finecorsa metà	Wyłącznik krańcowy połowa
Loop detector	Schleifendetektor	Détecteur de boucle	Lusdetector	detector de lazo	Slingdetektor	rilevatore di loop	detektor pętli
Ls closed	ls geschlossen	Ls fermé	Ls gesloten	ls cerrados	ls stängd	Ls chiusi	ls zamknięte
Ls open	ls offen	Ls ouvert	Ls geopened	ls abiertas	ls öppna	Ls aperte	Czy otwarte
Magnetic loop	Magnetschleife	boucle magnétique	Magnetische lus	bucle magnético	Magnetslinga	Spira magnetica	pętla magnetyczna
Main power	Netzspannung	L'alimentation principale	hoofdschakelaar	Alimentación principal	Huvudström	alimentazione principale	główne zasilanie
MAX EMERGN.-REV.	MAX. NOT-REVERS.	NB INVERS. MAXI	MAX NOODOMDR.	MAX EMERGN.-REV.	MAX ANTAL REV.	MAX RIAPERT.EM.	MAKS.WYCOF.BEZP.
Motor unit limit switch	Motoreinheit Endschalter	Fin de course de l'unité de moteur	Motorunit eindschakelaar	Final de carrera de la unidad de motor	Motorenheten gränslägesbrytare	Finecorsa unità motore	Zespół silnika wyłącznik krańcowy
Open	öffnen	Ouvert	open	abierto	Öppna	aperto	otwarte
Opening with closing after time	Öffnung mit Schließen nach Zeit	Ouverture avec fermeture après le temps	Opening met sluiten na tijd	Apertura con cierre después del tiempo	Öppning med stängning efter en tid	Apertura con chiusura dopo il tempo	Otwarcie z zamknięciem po raz
Opto electrical	Opto elektrischen	opto électrique	Opto-elektrische	optoelectrónico	Opto elektriska	Opto elettrica	Opto elektryczne
Photocells	Lichtschranken	Cellules photoélectriques	Fotocellen	Las fotocélulas	Fotoceller	fotocellule	fotokomórki
Pink	Rosa	Rose	Roze	rosa	Rosa	rosa	różowy
Potential free relay	Potentialfreie Relais	Relais libre de potentiel	Potentiaalvrij relais	Relé libre de potencial	Potentialfri relä	Potenziale relè libero	Przekaźnik bezpotencjałowy
Pull rope switch	Zugschalter	Tirez commutateur de corde	Trekkoord schakelaar	Tire del interruptor de la cuerda	Dragrepskontakt	Tirate l'interruttore corda	Pociągnij przełącznik liny
Push Button external	Drucktaster externen	Appuyez sur le bouton externe	Drukknop externe	Push Button externa	Tryckknapp extern	Pulsante esterno	Przycisk zewnętrzny
Radar + Infrared Sensor	Radar + Infrarot-Sensor	Capteur radar + infrarouge	Radar + Infrarood sensor	Radar + Sensor Infrarrojo	Radar + Infraröd sensor	Radar + sensore a infrarossi	Czujnik radarowy + podczerwień
Radio	Radio	Radio	Radio	radio	Radio	radio	radio
Radio RX	Radio-RX	Radio RX	Radio RX	Radio RX	Radio RX	Radio RX	Radio RX
Red	Rot	Rouge	Rood	rojo	Röd	rosso	czerwony
Safety chain input/output	Sicherheitskette Eingang / Ausgang	D'entrée/sortie de la chaîne	Veiligheid keten input/output	Cadena de seguridad de entrada / salida	Säkerhetskedja ingång / utgång	Ingresso Catena di sicurezza / output	Łańcuch bezpieczeństwa wejście / wyjście
Safety device	Sicherheitsvorrichtung	Dispositif de sécurité	veiligheidvoorziening	dispositivo de seguridad	säkerhetsanordning	dispositivo di sicurezza	urządzenie zabezpieczające
Safety edge	Sicherheitsleiste	Bourrelet de sécurité	sluitkantbeveiling	borde de Seguridad	Klämlist	Costa di sicurezza	krawędź bezpieczeństwa
SET TIME	UHRZEIT SETZEN	RÉGLAGE HEURE	tijd instellen	SET TIEMPO	STÄLL IN TID	REGOLAZ. TEMPO	UST.CZASU
Stop	Stopp	arrêter	stop	Deténgase	Stopp	Stop	Stop
Stop circuit chain	Stoppkette	Arrêter chaîne de circuits	Stop circuit keten	Deje de cadena circuito	Stoppkrets	Interrompere la catena circuito	Zatrzymać łańcuch obiegu
Thermo switch motor	Thermoschalter Motor	Thermo moteur commutateur	Thermo schakelaar motor	Motor Interruptor térmico	Thermo switch motor	Motore interruttore termico	Wyłącznik termiczny silnika
Three push button station	Dreifachtaster	Station de bouton-poussoir de trois	Drie drukknop station	Estación de tres botones de empuje	Tryckknappslåda med tre knappar	Stazione Pulsante Tre spinta	Przycisk Push Stacja trzy
Top roll monitoring	Ballenüberwachung	Suivi roll top	Top roll controle	Monitoreo rollo Top	Valsövervakning	Monitoraggio rullo superiore	Top Monitoring rolka
Traffic light	Ampel	Feu de circulation	verkeerslicht	Semáforo	trafikljus	semaforo	Sygnalizacji świetlnej
Violet	Violett	violet	violet	violeta	Violett	viola	fioletowy
Wago terminal	Wago Klemme	Borne Wago	WAGO terminal	terminales Wago	Wago terminal	terminale Wago	Terminal Wago
Warning lights	Warnleuchten	Feux de détresse	Waarschuwingslichten	luces de emergencia	Varningsljus	spie	światła ostrzegawcze
Yellow/green	Gelb / grün	Jaune/vert	Geel/groen	Amarillo / verde	Gul / grön	Giallo / verde	Żółty / zielony

ASSA ABLOY


Basic Wiring Diagram MCS Albany

Doc.no / Dok.nr

Rev. A7 6411R0001

Albany RP 100 MCS-R

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER CONTACTOR/RELAY		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE Gfa		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE DISABLED		
	SPECIAL SETUP RELAYS	RELAY (SET FUNKTION)	R1 TYPE BRAKE	RELEASE DELAY 0 ms
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 40		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 18		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	SAFETY 1 KL2 1-2 DISABLED	CONNECTED 8K2	CONNECTED DOWN FULL REV.	
	REVERSE DELAY	REVERSE DELAY 20		
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

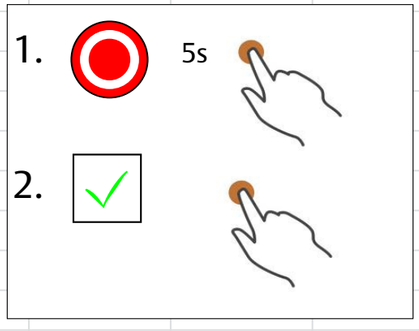

Albany RP 100 MCS-FC

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER INVERTER RUE		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE Gfa		
	MOTOR SETUP INV. PROFILE UP	MAX SPEED 110 Hz		
		SLOW SPEED 20 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 550 Incr.		
	MOTOR SETUP INV. PRFL. DOWN	MAX SPEED 65 Hz		
		SLOW SPEED 20 Hz		
		MEDIUM SPEED 65 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 400 Incr.		
	MOTOR SETUP FU PROFILE BOOST	RATED FREQUENCY 50 Hz		
		BOOST 20 %		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE DISABLED		
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 40		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 30		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	SAFETY 1 KL2 1-2 DISABLED	CONNECTED 8K2	CONNECTED DOWN FULL REV.	
	REVERSE DELAY	REVERSE DELAY 20		
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

Albany RR 200 MCS-FC

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER INVERTER RUE		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE Gfa		
	MOTOR SETUP INV. PROFILE UP	MAX SPEED 85 Hz		
		SLOW SPEED 20 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 512 Incr.		
	MOTOR SETUP INV. PRFL. DOWN	MAX SPEED 35 Hz		
		SLOW SPEED 20 Hz		
		MEDIUM SPEED 35 Hz		
		START RAMP 800 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 400 Incr.		
	MOTOR SETUP FU PROFILE BOOST	RATED FREQUENCY 50 Hz		
		BOOST 20 %		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY X	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. X
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 40		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 27		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	OSE2 SETUP KL4 DISABLED	NOT CONNECTED 4-W PHOTOC. KL4	NOT CONNECTED DOWN FULL REV.	
	REVERSE DELAY	REVERSE DELAY 80		
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

ASSA ABLOY


Basic Wiring Diagram MCS Albany

Doc.no / Dok.nr

Rev. A7 6411R0001

Albany RR 300 MCS-R

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER CONTACTOR/RELAY		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE Gfa		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP RELAYS	RELAY (SET FUNKTION)	R1 TYPE BRAKE	RELEASE DELAY 0 ms
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 100		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 18		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	SAFETY 1 KL2 1-2 DISABLED	CONNECTED 8K2	CONNECTED DOWN FULL REV.	
	REVERSE DELAY	REVERSE DELAY 20		
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

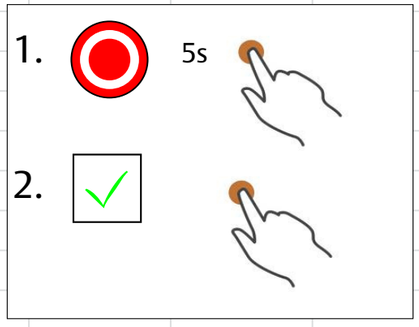

Albany RR 300 FLEXEDGE MCS-R

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER CONTACTOR/RELAY		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE Gfa		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP RELAYS	RELAY (SET FUNKTION)	R1 TYPE BRAKE	RELEASE DELAY 0 ms
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 100		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 10		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	SAFETY 1 KL2 1-2 DISABLED	CONNECTED 8K2	CONNECTED DOWN FULL REV.	
	REVERSE DELAY	REVERSE DELAY 20		
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

Albany RR 300 MCS-FC

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION RIGHT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER INVERTER RUE		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE Gfa		
	MOTOR SETUP INV. PROFILE UP	MAX SPEED 65 Hz		
		SLOW SPEED 20 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 500 Incr.		
	MOTOR SETUP INV. PRFL. DOWN	MAX SPEED 40 Hz		
		SLOW SPEED 20 Hz		
		MEDIUM SPEED 40 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 400 Incr.		
	MOTOR SETUP FU PROFILE BOOST	RATED FREQUENCY 50 Hz		
		BOOST 20 %		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 30		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 34		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	SAFETY 1 KL2 1-2 DISABLED	CONNECTED 8K2	CONNECTED DOWN FULL REV.	
	REVERSE DELAY	REVERSE DELAY 20		
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

ASSA ABLOY

Basic Wiring Diagram MCS Albany

Doc.no / Dok.nr


Rev. A7 6411R0001

Albany RR 300 FLEXEDGE MCS-FC

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION RIGHT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER INVERTER RUE		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE Gfa		
	MOTOR SETUP INV. PROFILE UP	MAX SPEED 65 Hz		
		SLOW SPEED 20 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 500 Incr.		
	MOTOR SETUP INV. PRFL. DOWN	MAX SPEED 40 Hz		
		SLOW SPEED 20 Hz		
		MEDIUM SPEED 40 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 400 Incr.		
	MOTOR SETUP FU PROFILE BOOST	RATED FREQUENCY 50 Hz		
		BOOST 20 %		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 30		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 25		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	OSE2 SETUP KL4 DISABLED	NOT CONNECTED 4-W PHOTOC. KL4	NOT CONNECTED DOWN FULL REV.	
	REVERSE DELAY	REVERSE DELAY 20		
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

Albany RR 300 PLUS MCS-R

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER CONTACTOR/RELAY		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE Gfa		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP RELAYS	RELAY (SET FUNKTION)	R1 TYPE BRAKE	RELEASE DELAY 0 ms
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 50		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 31		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	SAFETY 1 KL2 1-2 DISABLED	CONNECTED 8K2	CONNECTED DOWN FULL REV.	
	REVERSE DELAY	REVERSE DELAY 20		
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

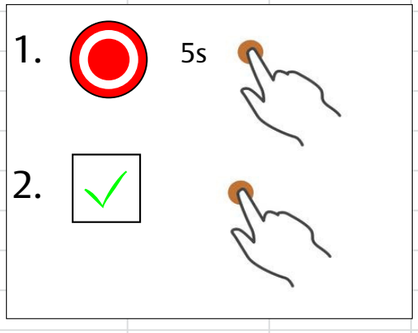

Albany RR 300 PLUS MCS-FC

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION RIGHT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER INVERTER RUE		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE Gfa		
	MOTOR SETUP INV. PROFILE UP	MAX SPEED 90 Hz		
		SLOW SPEED 20 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 650 Incr.		
	MOTOR SETUP INV. PRFL. DOWN	MAX SPEED 40 Hz		
		SLOW SPEED 20 Hz		
		MEDIUM SPEED 40 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 400 Incr.		
	MOTOR SETUP FU PROFILE BOOST	RATED FREQUENCY 50 Hz		
		BOOST 20 %		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 30		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 30		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	SAFETY 1 KL2 1-2 DISABLED	CONNECTED 8K2	CONNECTED DOWN FULL REV.	
	REVERSE DELAY	REVERSE DELAY 20		
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

ASSA ABLOY

Basic Wiring Diagram MCS Albany

Doc.no / Dok.nr


Rev. A7 6411R0001

Albany RR 300 PLUS FLEXEDGE MCS-FC

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION RIGHT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER IINVERTER RUE		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE Gfa		
	MOTOR SETUP INV. PROFILE UP	MAX SPEED 90 Hz		
		SLOW SPEED 20 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 650 Incr.		
	MOTOR SETUP INV. PRFL. DOWN	MAX SPEED 40 Hz		
		SLOW SPEED 20 Hz		
		MEDIUM SPEED 40 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 400 Incr.		
	MOTOR SETUP FU PROFILE BOOST	RATED FREQUENCY 50 Hz		
		BOOST 20 %		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 30		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 14		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	OSE2 SETUP KL4 DISABLED	4-W PHOTOC. KL4 TESTED INV.	4-W PHOTOC. KL4 DOWN FULL REV.	
	REVERSE DELAY	REVERSE DELAY 20		
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

Albany RR 300 PLUS FLEXEDGE MCS-R

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER CONTACTOR/RELAY		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE Gfa		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP RELAYS	RELAY (SET FUNKTION)	R1 TYPE BRAKE	RELEASE DELAY 0 ms
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 50		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 14		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISPLAY PHOTOC. XXXX
	OSE2 SETUP KL4 DISABLED	4W PHOTOC. KL4 TESTED INV.	4-W PHOTOC. KL4 DOWN FULL REV.	
	REVERSE DELAY	REVERSE DELAY 20		
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

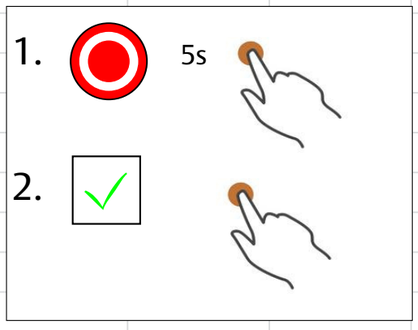

Albany RR 300 RETAIL (AKTOR LCS) MCS-FC

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER INVERTER RUE		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE Gfa		
	MOTOR SETUP INV. PROFILE UP	MAX SPEED 95 Hz		
		SLOW SPEED 20 Hz		
		START RAMP 700 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 700 Incr.		
	MOTOR SETUP INV. PRFL. DOWN	MAX SPEED 36 Hz		
		SLOW SPEED 20 Hz		
		MEDIUM SPEED 36 Hz		
		START RAMP 700 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 400 Incr.		
	MOTOR SETUP FU PROFILE BOOST	RATED FREQUENCY 50 Hz		
		BOOST 20 %		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 30		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 30		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 200		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL REV.	
	OSE2 SETUP KL4 DISABLED	NOT CONNECTED 4W PHOTOC. KL4	NOT CONNECTED DOWN FULL REV.	
	REVERSE DELAY	REVERSE DELAY 20		
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

ASSA ABLOY

Basic Wiring Diagram MCS Albany

Doc.no / Dok.nr

Rev. A7 6411R0001