NIDO

MACHINERIES
SUPPORT
RENTAL
AUTOMATION



AERIAL WORK
PLATFORM

NIDO SELF-PROPELLED SCISSOR LIFT

MODEL: ND-SL-SP-12

NIDO SLEF PROPELLED SCISSOR LIFT

MODEL: ND-SL-SP-12










M: +91 81081 15886 | T: +91 22 4225 6225 | E: sales@nidoworld.com | **nidoworld.com**

NIDO self-propelled scissor lift are widely used to provide temporary access to high, inaccessible areas on a variety of job sites such as maintenance and construction work. Indoor use is preferred. Capable of being fully operated by single person. The scissor structure enables reliable stability when lifts rise, the broad platform and high loading capacity get the aerial working more efficient and safety.

Technical Drawing

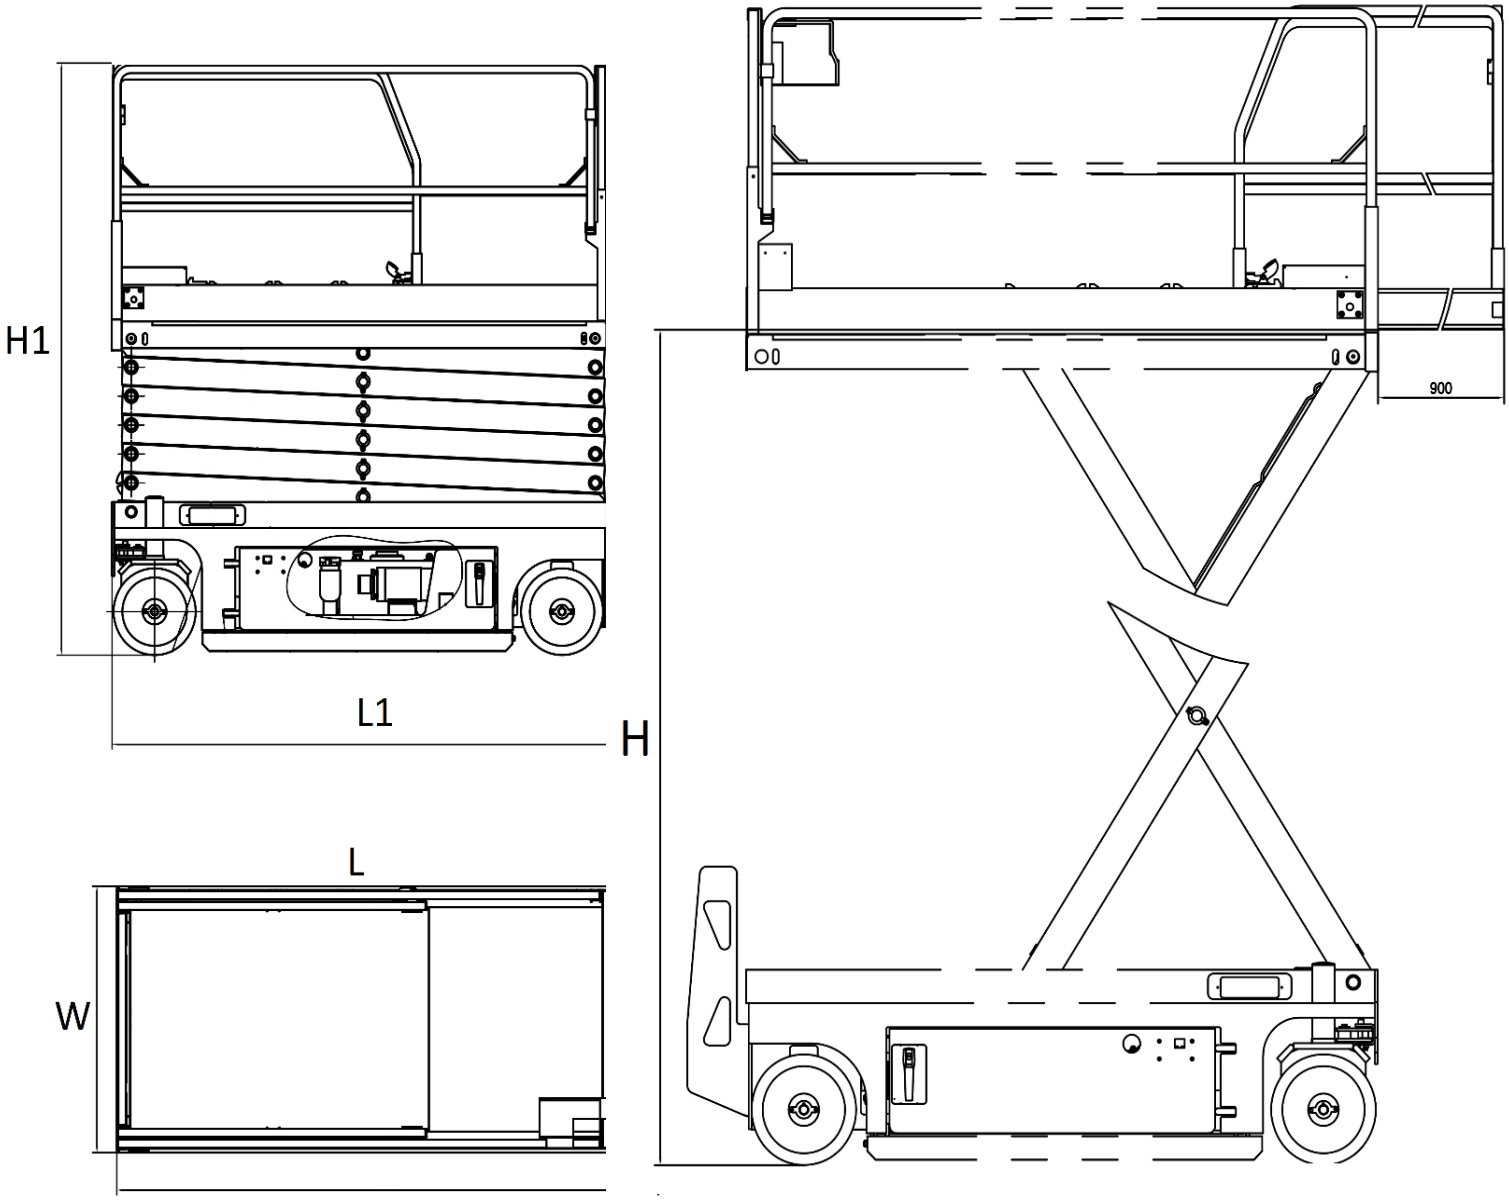

Technical Specification

Model No.		ND-SL-SP-12
S.W.L.	kg	320
S.W.L. on Extension	kg	113
Max. Number of Workers		2
Working Height	mm	13800
Platform Height (H)	mm	11800
Overall Length (L1)	mm	2430
Overall Width (W)	mm	1150
Overall Height (Rails Up)	mm	2550
Overall Height (Rails Down) (H1)	mm	2003
Platform Size (L*W)	mm	2270*1120
Platform Extension Size	mm	900
Ground Clearance (Raised)	mm	19
Wheelbase	mm	1870
Turning Radius (Inside)	mm	2200
Lift/Drive Motor	V/kw	24/4.5
Travel Speed (Stowed)	km/h	3
Travel Speed (Raised)	km/h	1
Raise/Lower Time	sec	70/45
Power Source	V/Ah	4*6/260
Charger	V/A	24/30
Gradeability	%	25
Maximum Working Slope	°	1.5/3
Tyre Size	mm	Ø380*129
Weight	kg	2830




Self-propelled Scissor Lift Features List


STANDARD FEATURES	
Proportional Control	Anti-burst valve
Inter-lock Door on the Platform	Lateral Forklift Pockets
Manual Extension Platform	Drivable at Full Height
Hydraulic Braking System	Over Charging Battery Protection
Hydraulic Motor Driving	Compact Turning Radius
Trace-less Tyres	Swing Out Tray
2 Wheel Driving	Anchorage (Hook), Lifting Hook
All Motion Alarm, Flashing Beacon	Tilting Level Sensor with Alarm
Emergency Stop Button	Toe Protection
Fault Diagnose System	Maintenance Free Battery – Trojan
Automatic Pothole Detection	Drive Speed Interlock Limit Speed While Elevated
Detachable/Foldable Fence	Safe Distance Protection During Lowering
25% Gradeability	Balance During Operation
Maintenance Support Bar	Manual Brake Release
Auxiliary Lowering	Battery Disconnect Switch
Hour Meter, Battery Charging Indicator	Powder Coated Painting, Toolbox


General Appearance




Display
Lift
Drive
Horn
Slow Speed
Emergency Stop

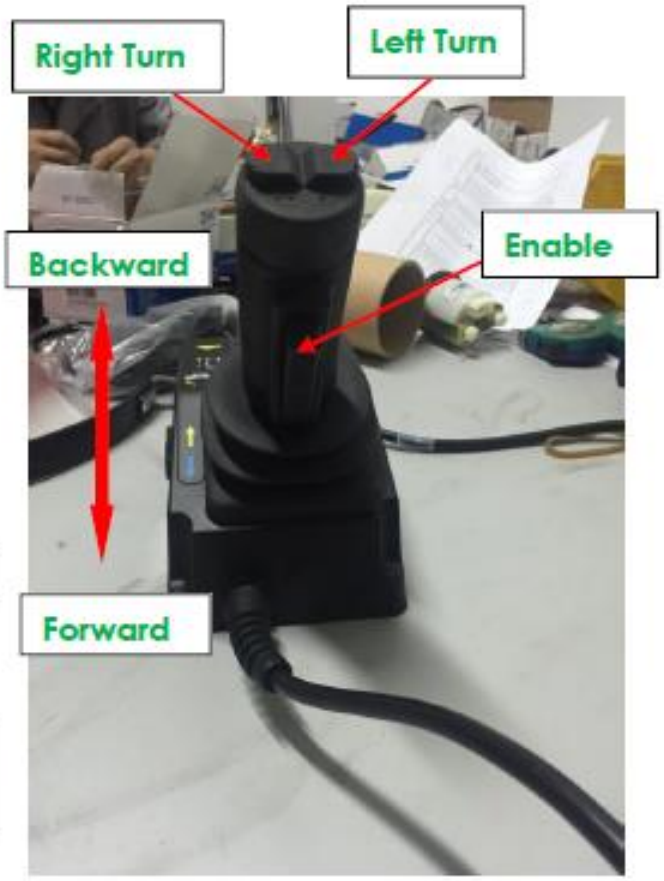
Right Turn
Left Turn
Backward
Enable
Forward

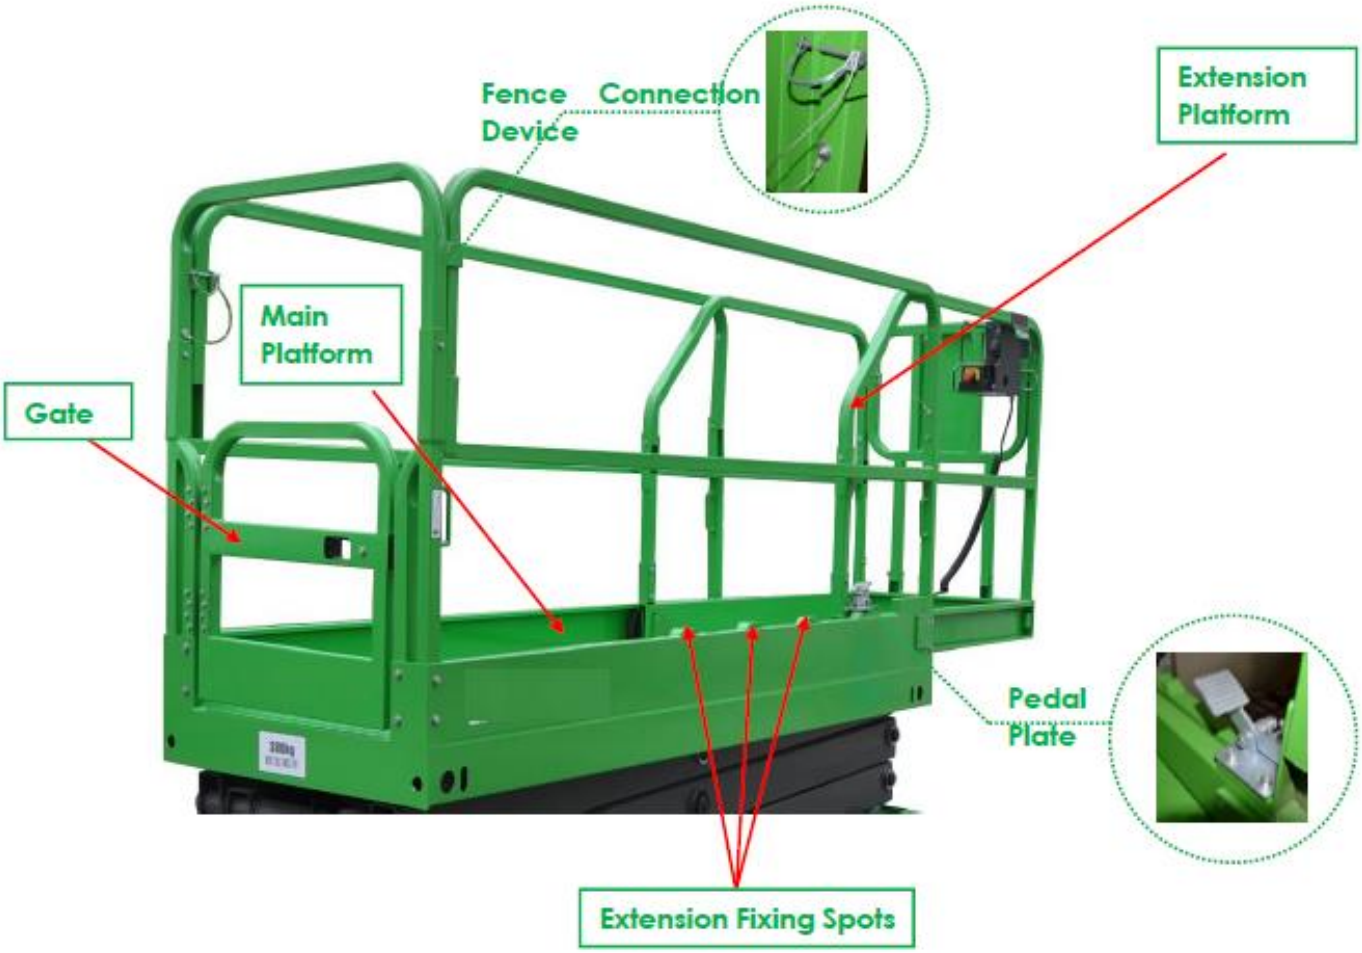
Fence Connection Device
Extension Platform
Main Platform
Gate
Pedal Plate
Extension Fixing Spots

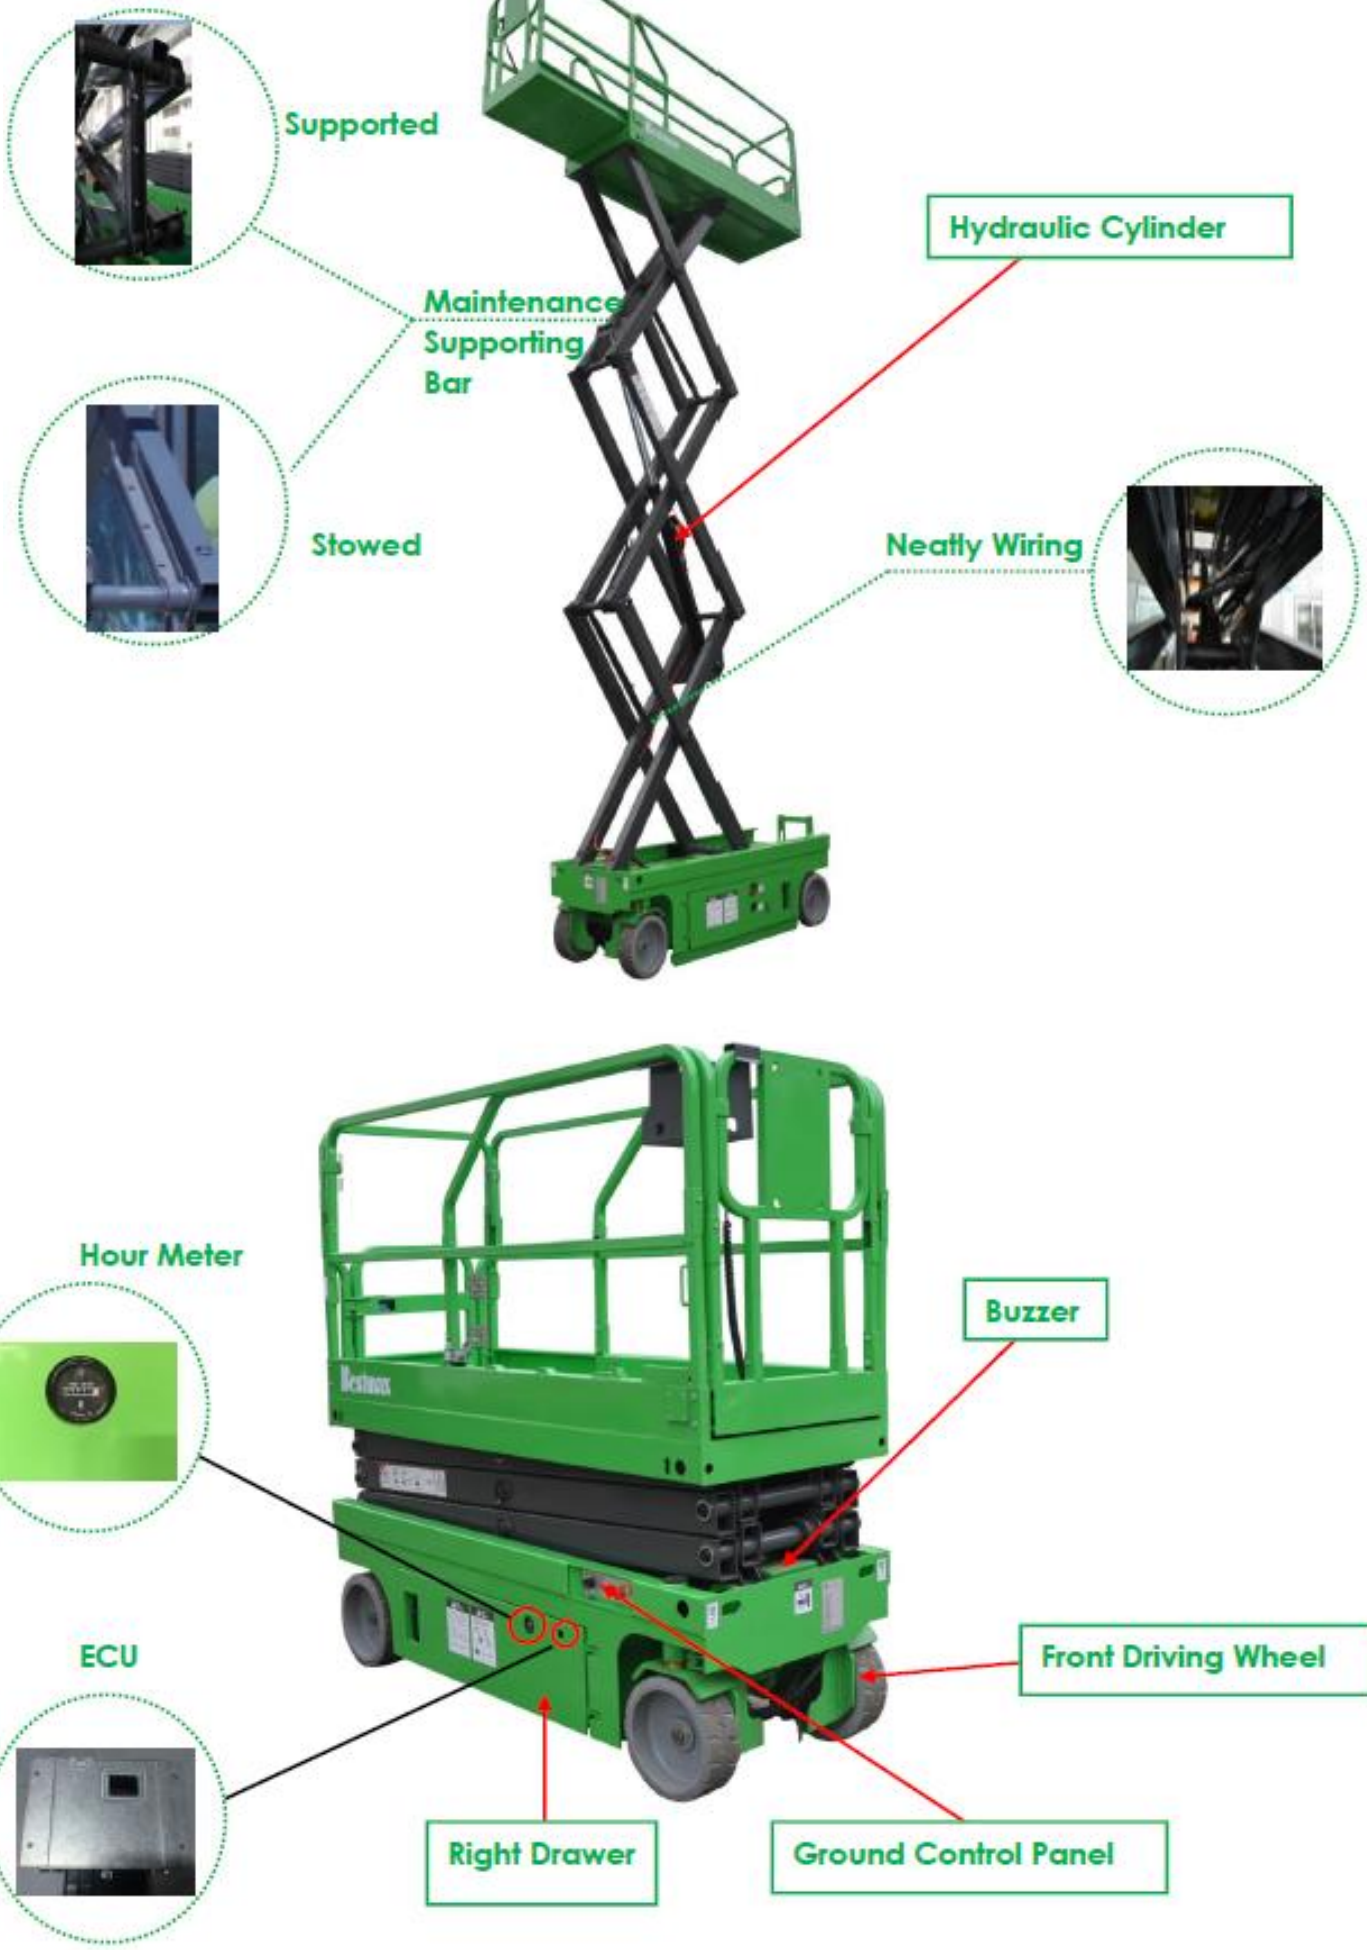
Supported
Maintenance Supporting Bar
Stowed
Hydraulic Cylinder
Neatly Wiring
Hour Meter
Buzzer
ECU
Front Driving Wheel
Right Drawer
Ground Control Panel





Auxiliary Lowering Device


When the power is off and the platform is in lifted station, you can pull this device, then the machine will descend slowly.




Brake Release Device

When the power is off, press this red button, the bake of the machine will be released, then you can move the machine to the charging spot.


Ground Control Panel

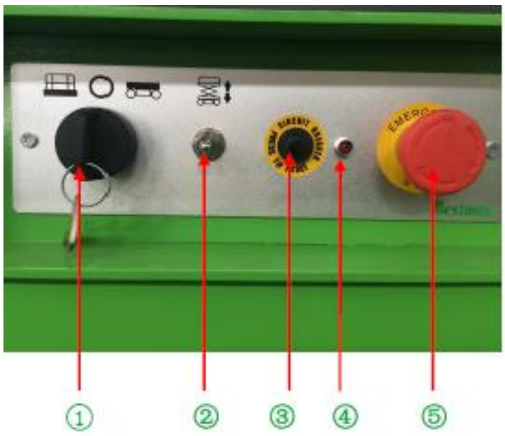


1. Switch Button
2. Lift/Descent
3. Resent Button
4. Indicator for Pressure Sensor
5. Emergency Stop

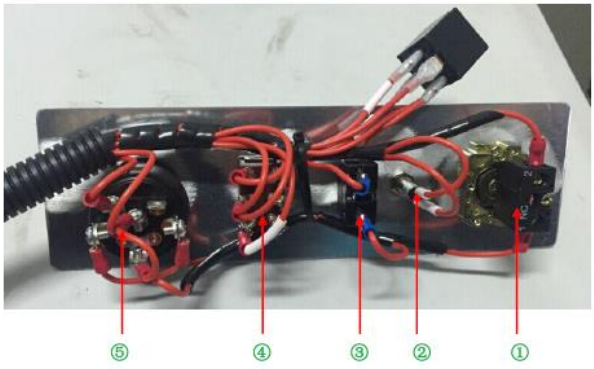

Wiring

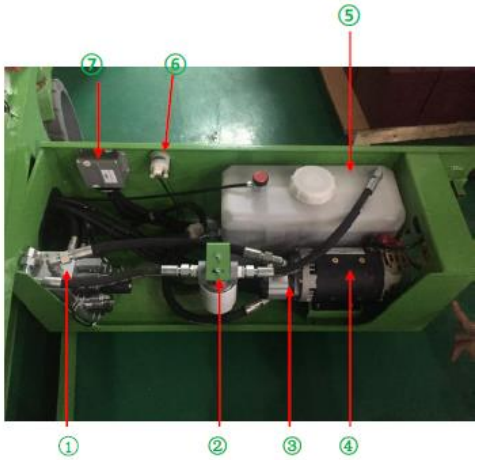


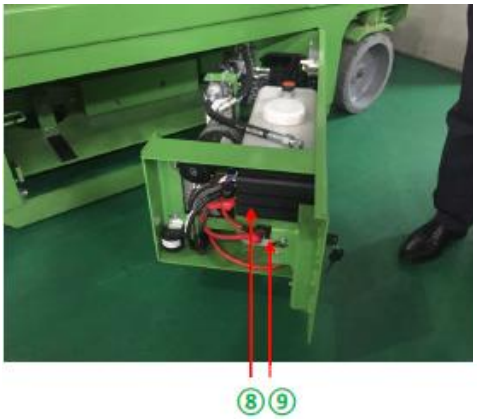

1. Hydraulic Power Pack
2. Filter
3. Gear Pump
4. Motor
5. Oil Tank
6. ECU
7. Controller
8. Fuse

Buzzer and Tilting Indicator



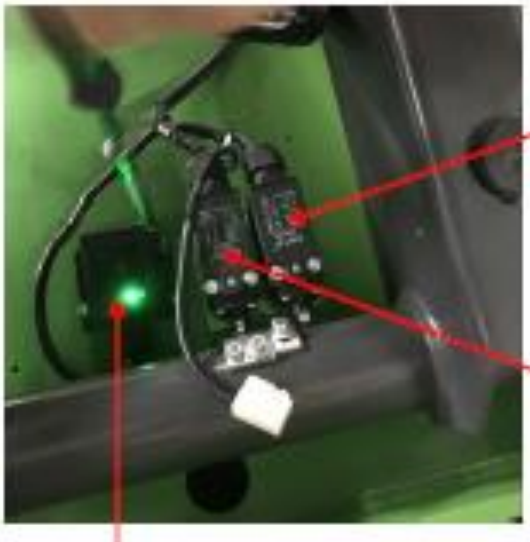


Tilting Alarm

When the tilting of the machine is more than 2.5° or 3° （depends on different models）, the light will turn red like following picture shows and the alarm will make noise.



Hydraulic Valve Block

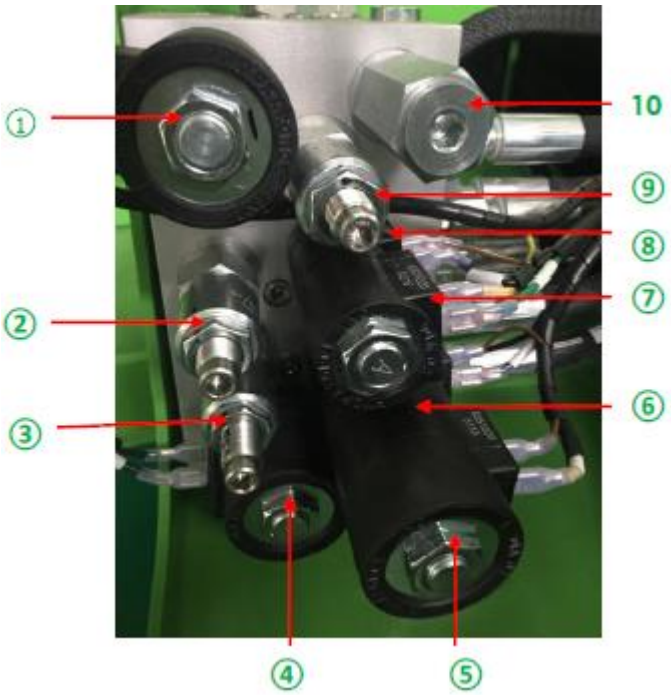

9. Turning, Driving Switch Valve
10. Lifting/Descending Solenoid Valve
11. Travelling Solenoid Valve
12. Forward Solenoid Valve
13. Backward Solenoid Valve
14. Right Turning Solenoid Valve
15. Left Turning Solenoid Valve
16. General Pressure Solenoid Valve
17. General Pressure Solenoid Valve




Hydraulic Motor Drive Device



Traceless Tyres



Hydraulic Motor and Gear

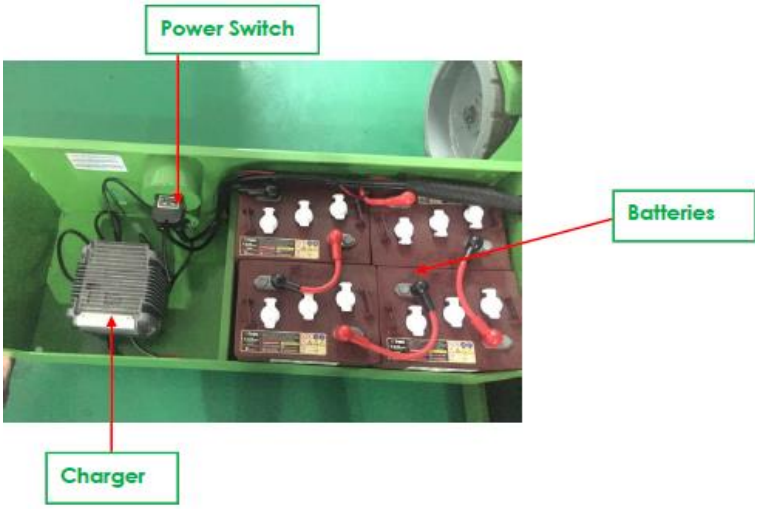




ver


The installation of battery electrode must be added to the M8 flat washer and spring washer and the torque is 20N/m.
The liquid level of the battery must be checked every month.

Pothole Protection System





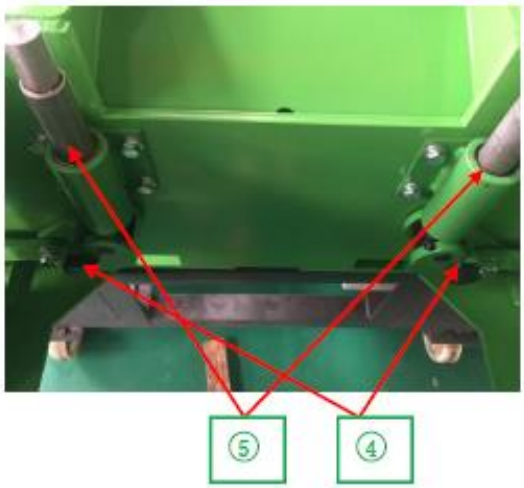

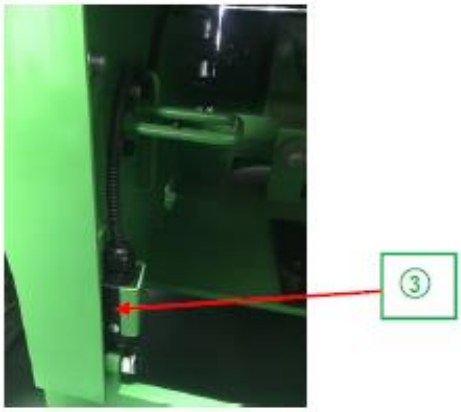

1. Pneumatic Ring
2. Connection Board
3. Piston Rod
4. Connection Joint
5. Limit for the Pothole Protection Board

When the machine tilts, the scissor arm leaves the rod. The rod will be in the position resulting int the joint t driving the connection board. The protection board will extend to prevent the tilting of the machine

OPTIONAL FEATURES	
Working Light on the Platform	Wireless Tracking
Air Tube to the Platform	Over Hoisting (Top Limit Protection Auto Stop Device)
AC Power to the Platform	Anti-collision System
Overloading Sensor with Alarm	Hydraulic Extension Platform

PACK | LIFT| MOVE | CLEAN | AUTOMATE

NIDO Machineries Pvt. Ltd.
Corporate Office: Unit 311, Wadala Udyog Bhavan, Naigaon Cross Rd Wadala, Mumbai 400031, India

Warehouse & Service Centre: Bldg. A16, Unit 15, Harihar Corporation, Mankoli Naka Village Dapoda, Bhiwandi Thane 421302, India

M: +91 81081 15886
T: +91 22 4225 6225
E: sales@nidoworld.com
CIN: U29253MH2009PTC198182

NIDO MACHINERIES SUPPORT RENTAL AUTOMATION

nidoworld.com