

# Retractable enclosure installation Guide

## Order-SK22013

## Semi commercial system-U Style

Pls combine this book with shop drawing to finish installation

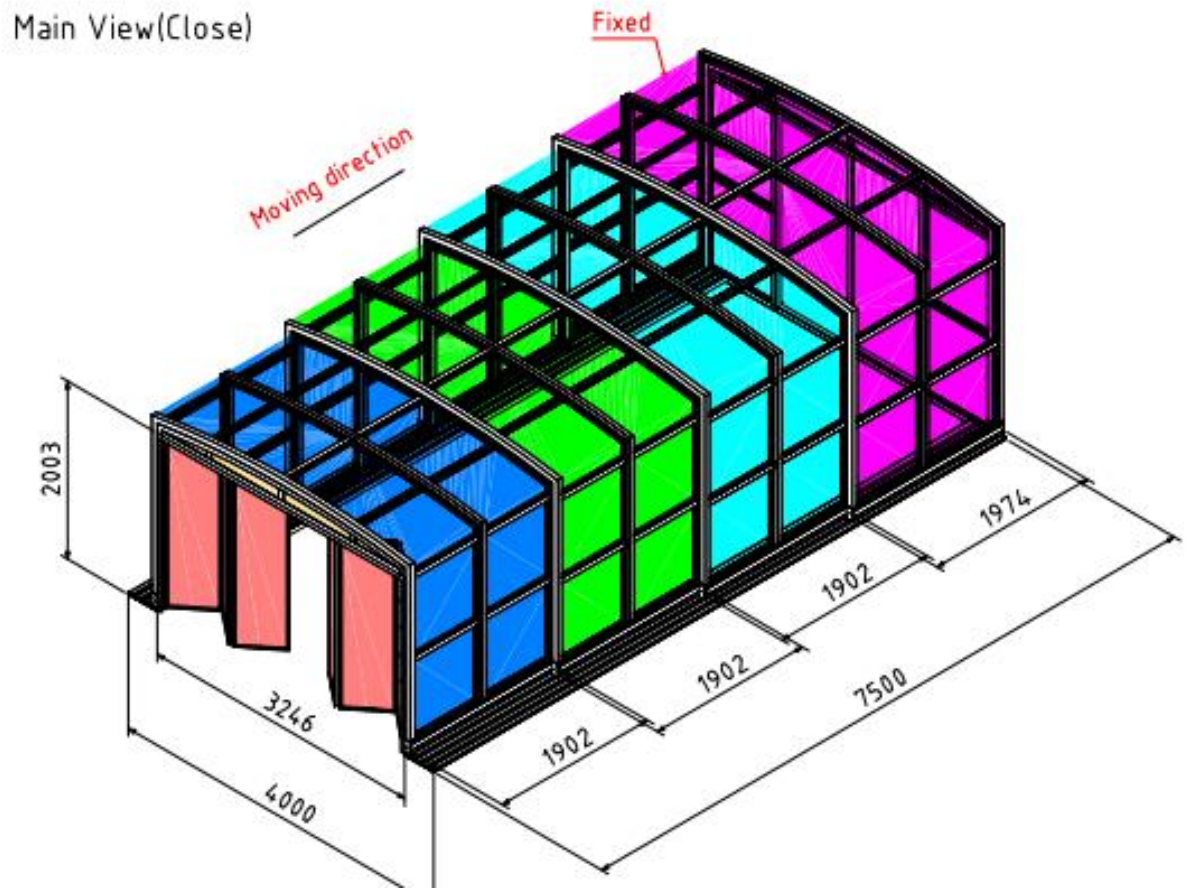

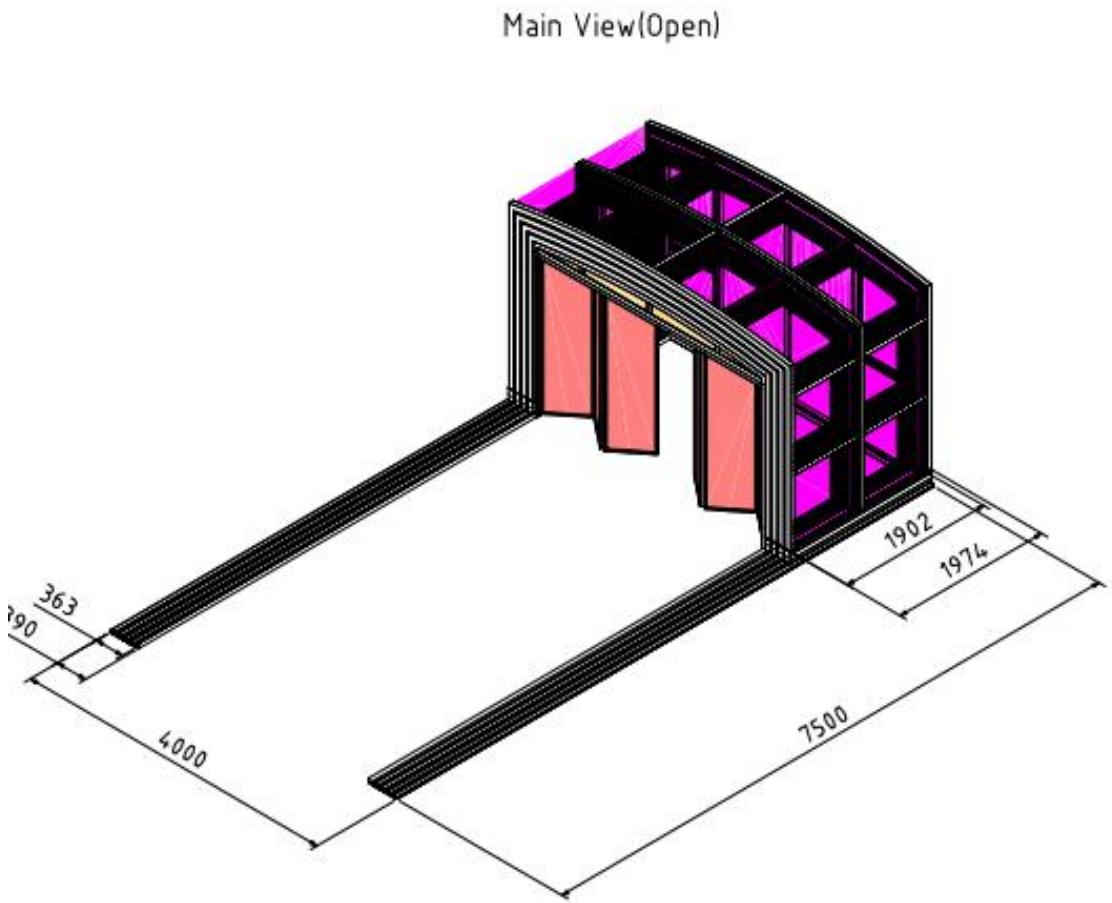



Step 

1) Assymble main sections
2) Install floor track
3) Install main sections
4) Install side sections
5) Install accessories,Sealing treatment

# 1）Assymble main sections


Sunkaer®

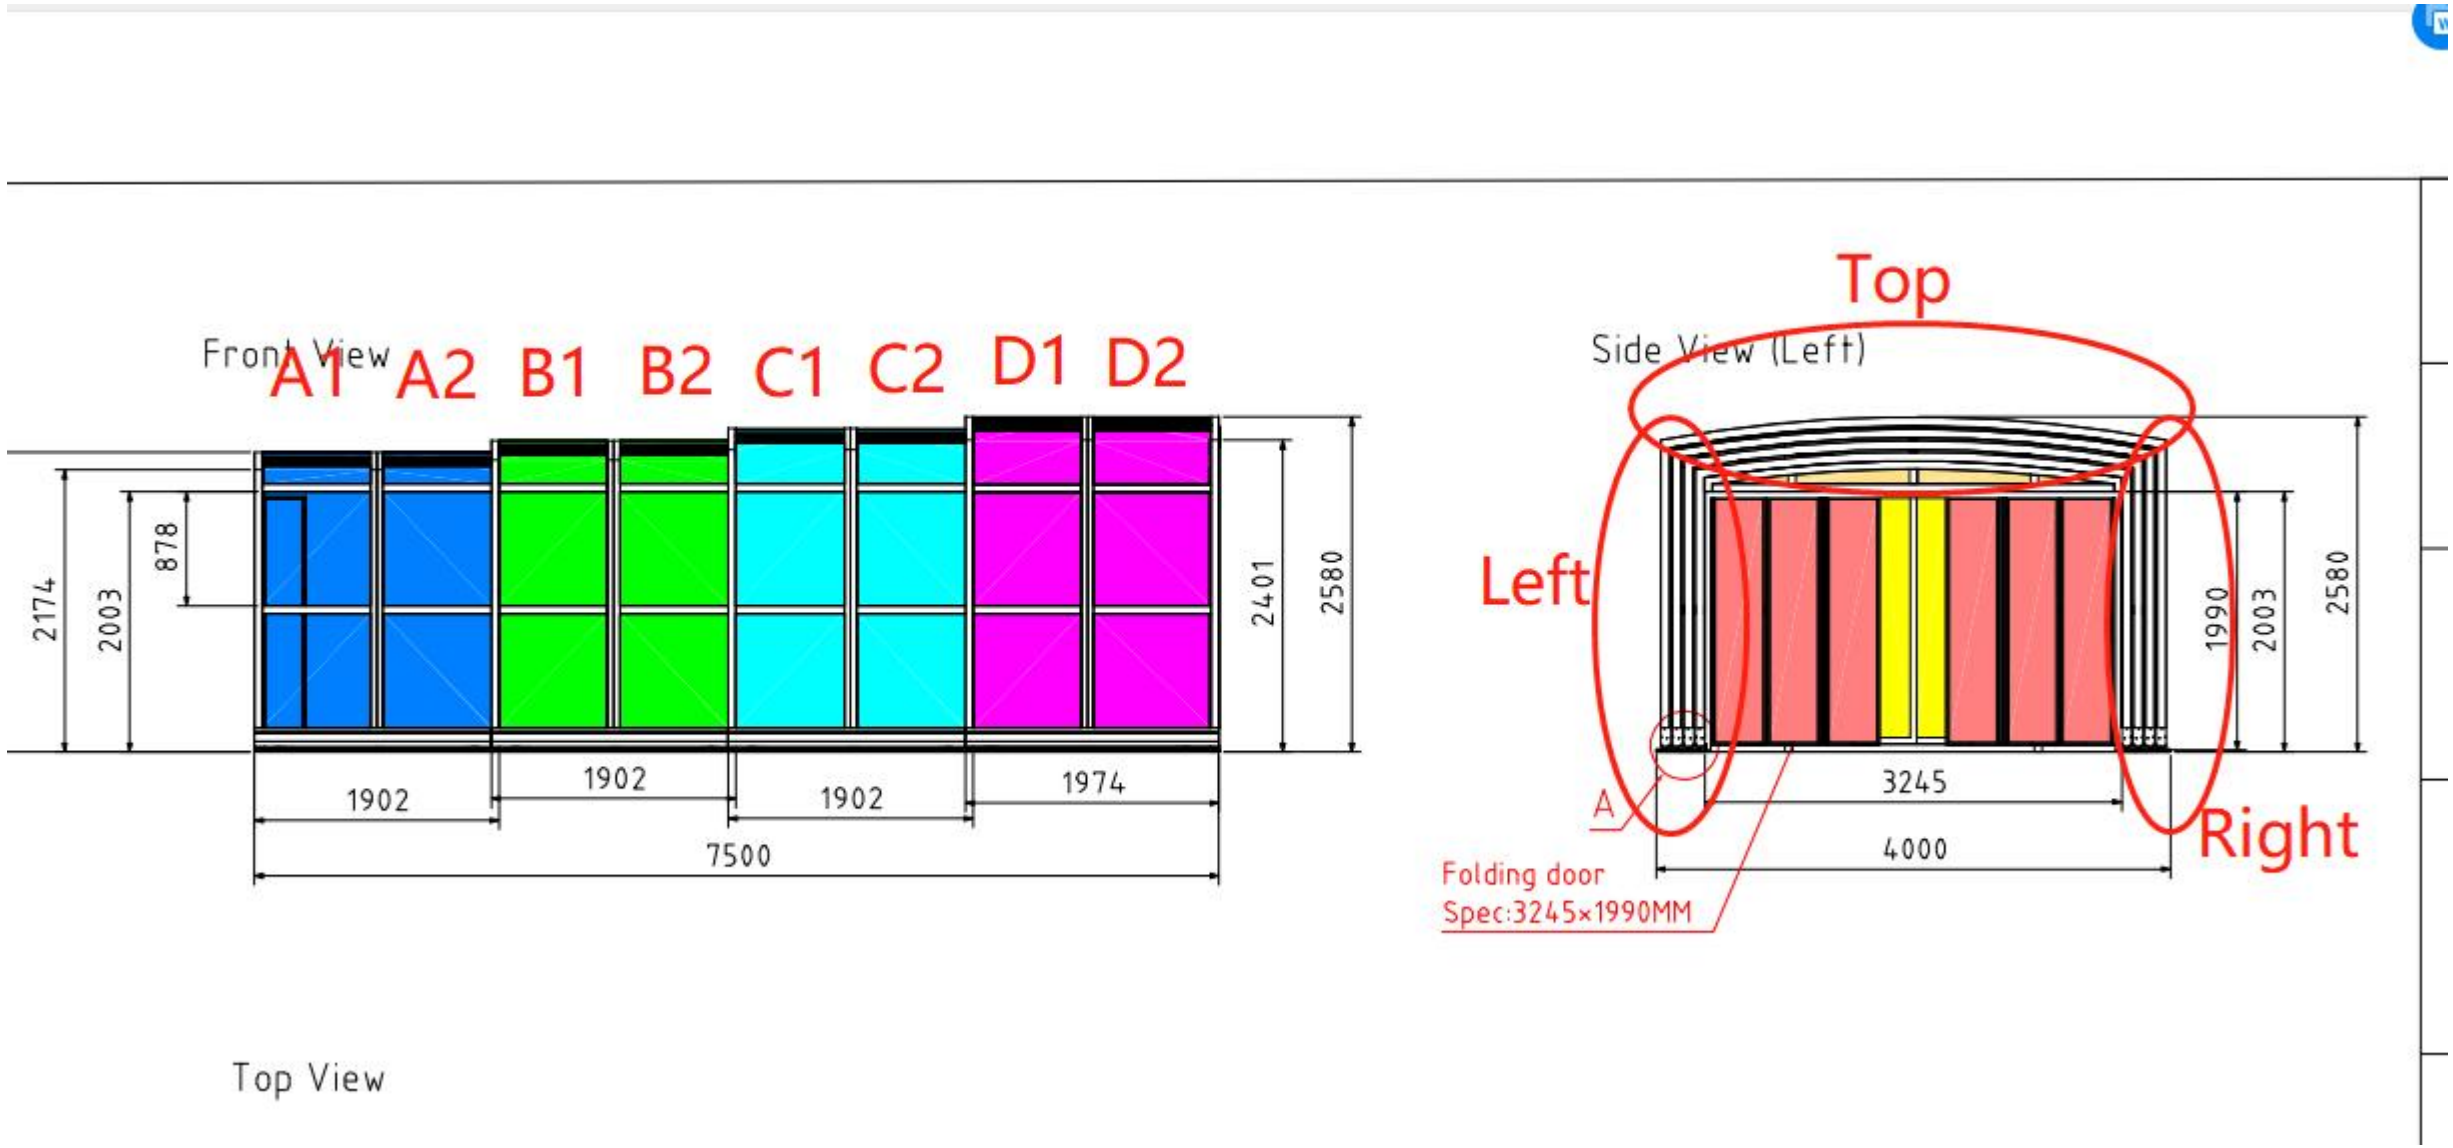



a)Each section was split into 6 parts,find each 6 parts of every section by the labels
b)Assymble Left & Right part to Top part according to the connection plate（A1 left +A1 top +A1 right)
c)Assymble every 2 separate sections into 1 main section by connection beam（M5.5*80）+ bottom beam（M6*38,M6*110）
d)Lock every 2 separate sections by M6*140(under every mullion beam)，seal the tolerance between every 2 separate sections,fix the Mullion beam cover

-The assembly site should be level
-Cardboard buffer protects aluminum from scratches
-The bolts of the connection plate need to be perfectly spliced at the corner joints before they can be locked,then seal the corner joints

e) Stuck bottom beam adhesive strip and all adhesive strips around the PC sheet
f) Fix the  Side Beam Cover

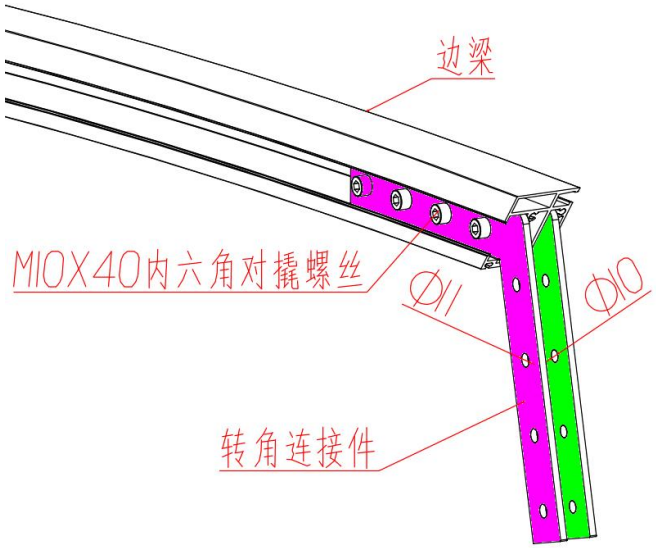
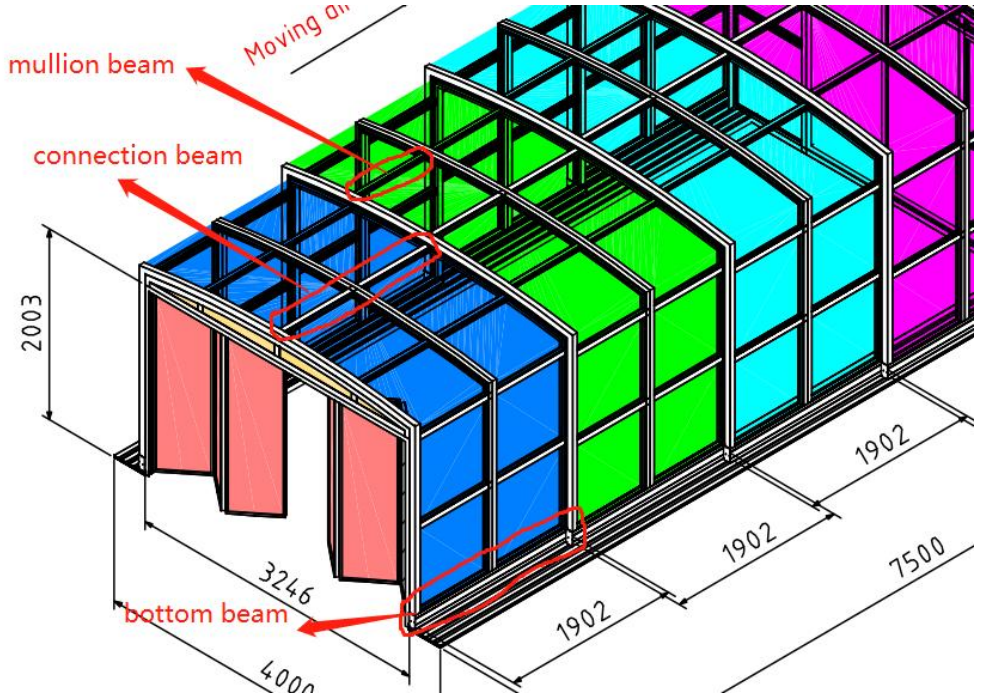
# 2) Install floor track

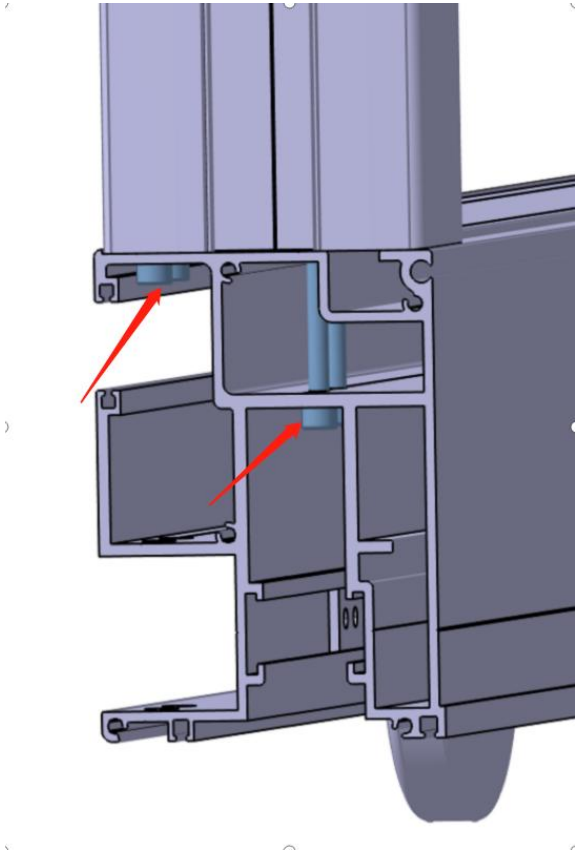Sunkaer®


a)Track splicing: Use track joints to splice the entire track (as shown in the following figure)


b)Track drilling:As indicated by the red arrow in the figure below，drill the first hole 50mm from the end，then every hole between 1000mm,12mm for the big arrow 8mm for the small(Floor track L plate still need drill)


c) Mark the position of the track on the ground according to the shop drawing dimension then place it，make sure A1=A2,B1=B2,C1=C2 as below figure，Use a level gauge to test and ensure level, and mark all hole positions on the track on the ground

d) Punch holes at the marked points with an electric hammer(expansion screw M10X150mm and M8*80mm)

e) Fix the Floor track L plate,floor track and Floor track cover

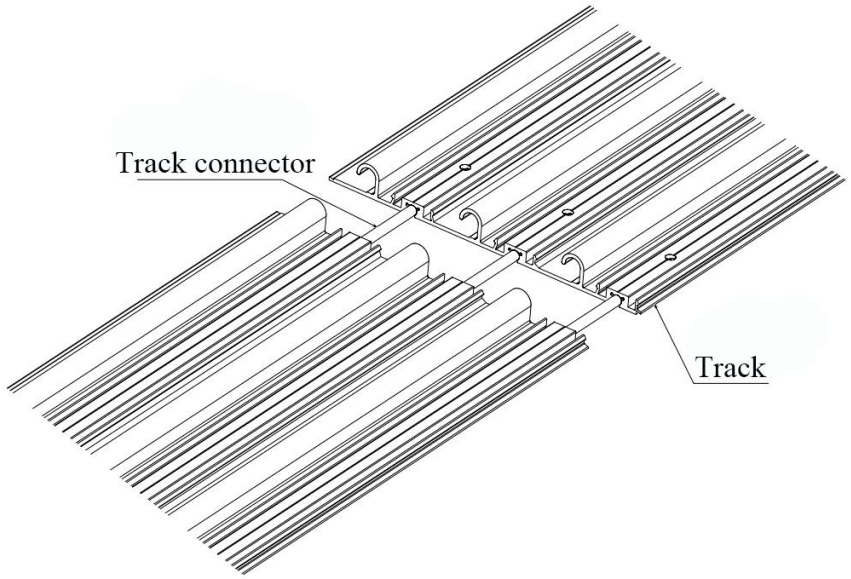

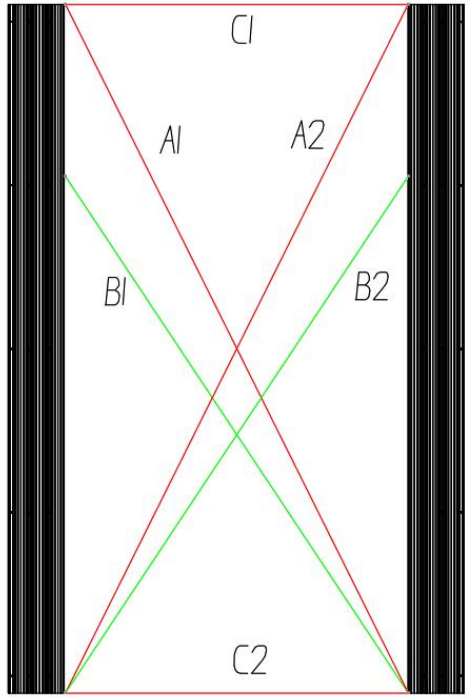
# 3) Install main sections

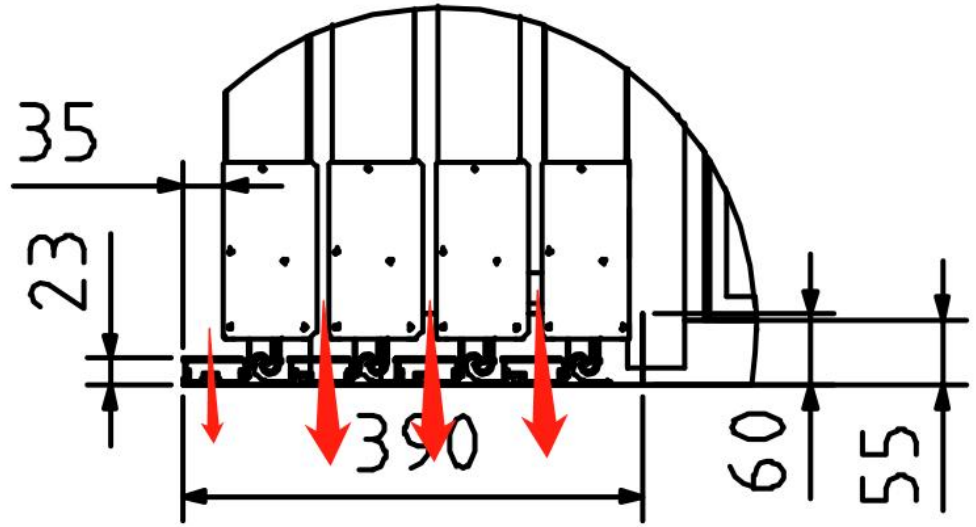
Sunkaer®


a) Place every main section onto the track from large to small according to the machining diagram, and test back and forth for smoothness and even clearance.

b) If necessary, Section D can be fixed on the ground track using a 6.3 * 70 screw as indicated by the arrow in the figure

cThread the track hook into the center position of the bottom beam and lock it with self tapping screws (as shown in the following figure)

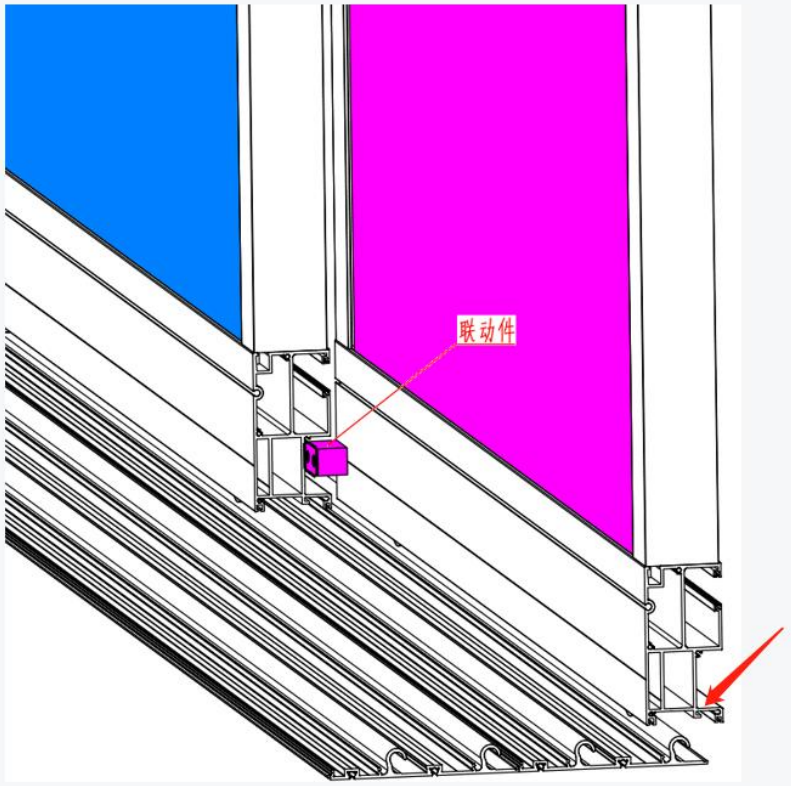

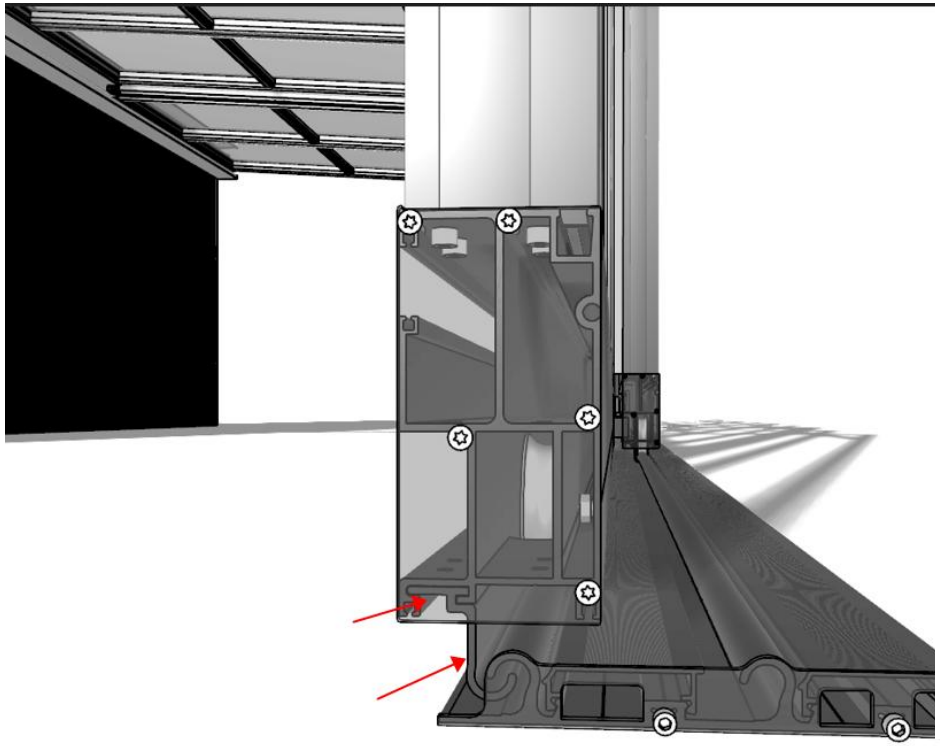

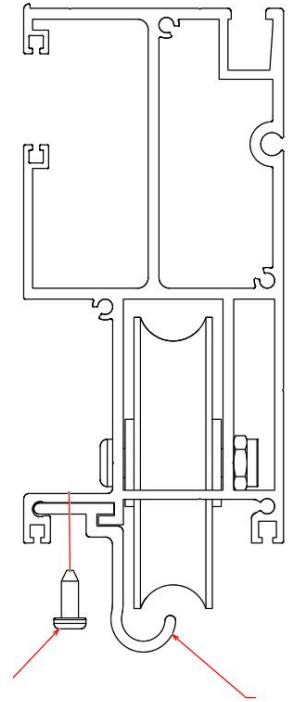
# 4) Install side sections


Sunkaer®

a)Assymble the door structure by the labels and shop drawing

Side View (Left)

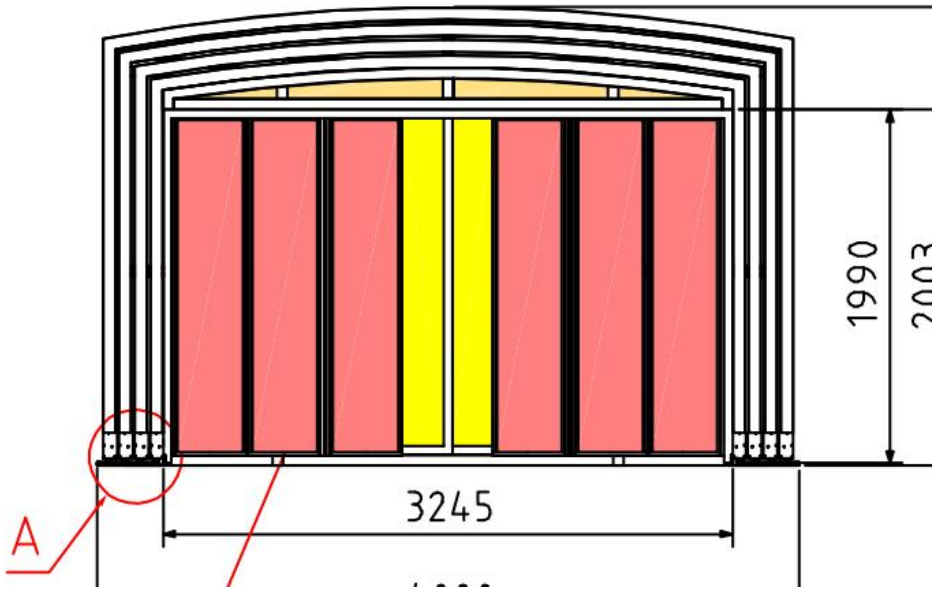


Side View (Right)

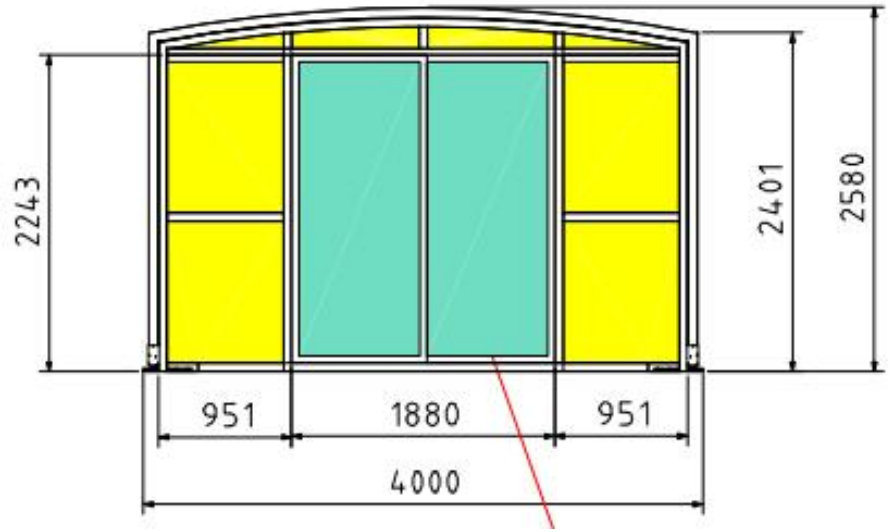

# 5）Install accessories,Sealing treatment

Sunkaer®

a）Install the side cover of the Floor track and the end cover of bottom beam
b）seal all tolerance:between track with floor,main section with side section,profile joints,corner joints,bottom beam drills
c）Install the handle and ground lock (position can be customized)

section floor lock



