SZG
Professional glass manufacturer

Mobile Sunroom Installation Manual

Manual

01 CONSTRUCTION STEPS BEFORE THE INSTALLATION OF THE SUN ROOM


02 CONSTRUCTION AND INSTALLATION STEP OF THE SUN ROOM

03 OPERATION STEPS OF SUNSHINE ROOM CONSTRUCTION

04 TOOLS REQUIRED

Shenzhen Sun Global Glass Co., Limited
ADD: 5K,QIHANG BUSINESS BUILDING,SHENFENG ROAD,LIUYUE,HENGGANG,CHINA
TEL: (86)-755 84 72 57 42 Ext 801
FAX: 0086 755 89340850
www.sggglassmanufacturer.com

CONSTRUCTION STEPS BEFORE THE INSTALLATION OF THE SUN ROOM

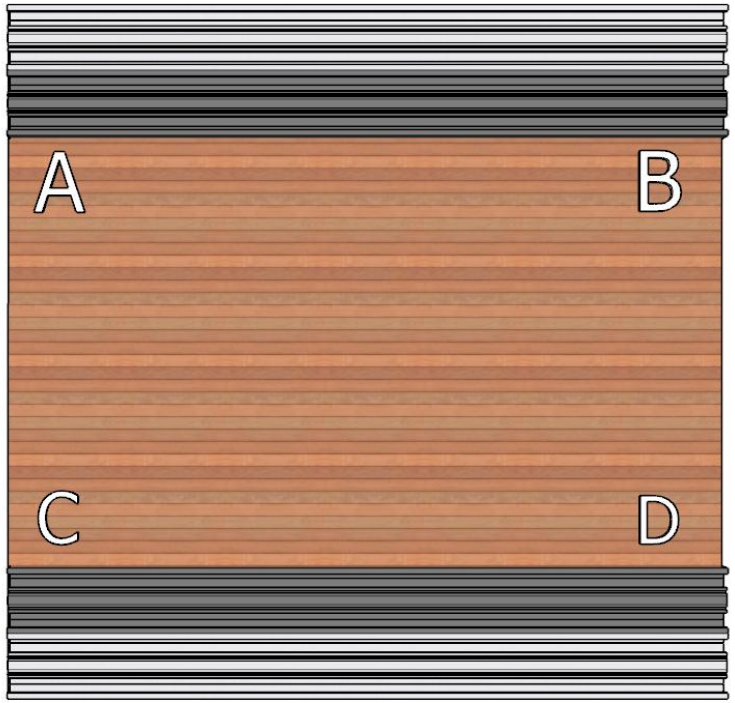


01 Determine the venue and lower track dimensions according to the drawing size requirements.

02 Observe the on-site construction environment and product entry conditions before on-site construction.

03 When the track floor and the wall against the wall need to be waterproof, they must be installed in the sunroom
Before entering the site, carry out waterproofing work in advance!


04 After the goods arrive at the project site, first check the on-site concrete structure, walls, and floors.
The surface must be kept flat to ensure it meets the installation requirements.

05 Orbits AB and CD remain parallel. The plane of orbit AB is parallel to orbit CD. The plane is positive and negative.
No more than 0≤5mm (lay out the wiring or use electronic level).

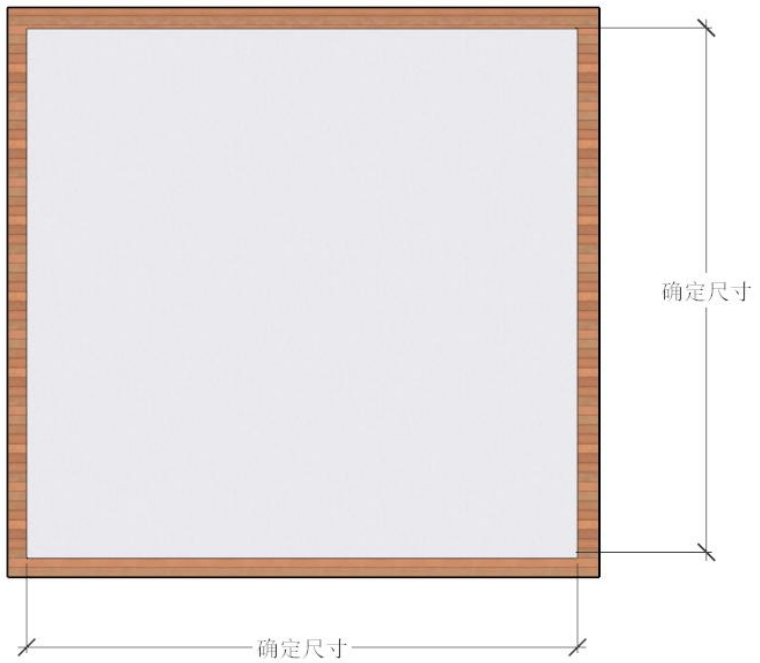

Step 1: Determine venue size


- Site requirements: concrete structure, flat ground, plus or minus not exceeding 0≤5mm,
Mark the size of the lower track on the ground and setting lines according to the drawing size requirements.

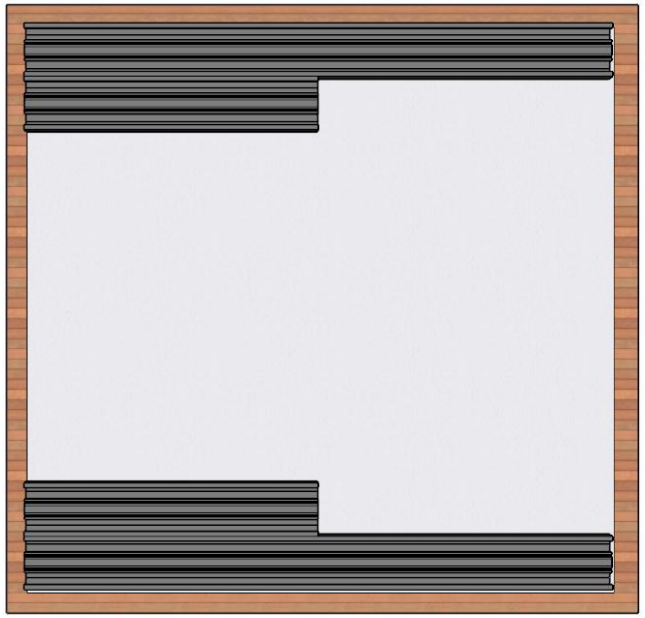


Step 2: Determine the track location for laying

- The ground track is laid first with long tracks and then with short tracks. After the track laying is completed, Measure the distance of the track again and fine-tune it until it meets your actual requirements.


Installation of upper and lower rails: Open 10mm holes and fix the upper and lower rails with 8mm explosive stainless steel screws. After drilling the screw holes, fix some positions first, do not lock directly Orbits, which can be fine-tuned later.

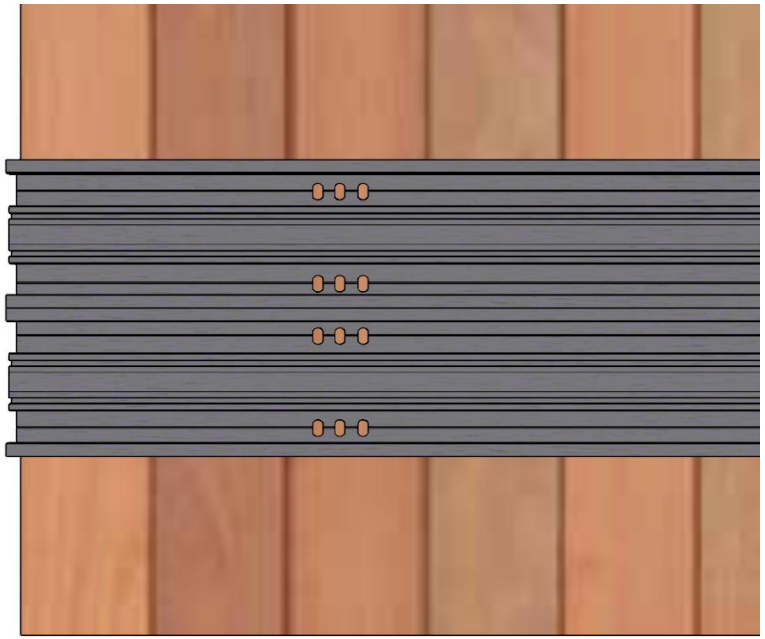


Step 3: Track opening

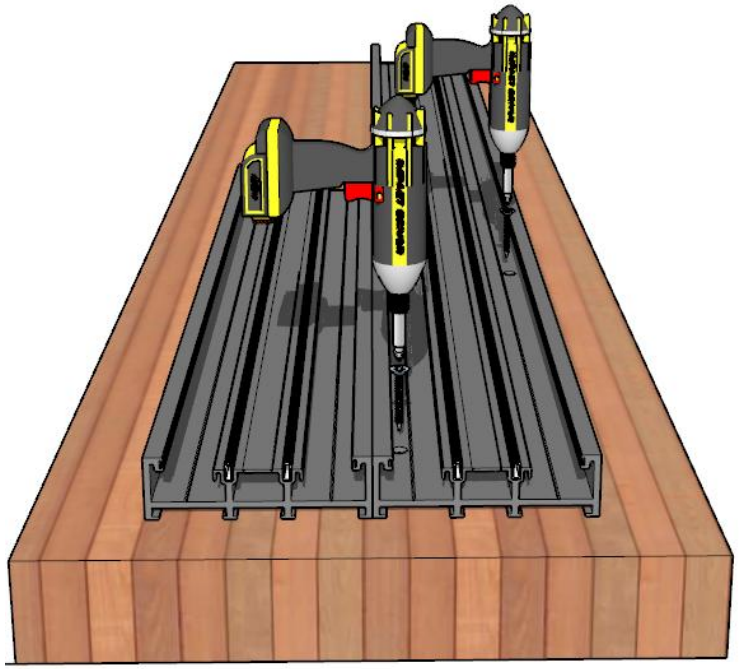

Step 4: Drill screws to fix the track

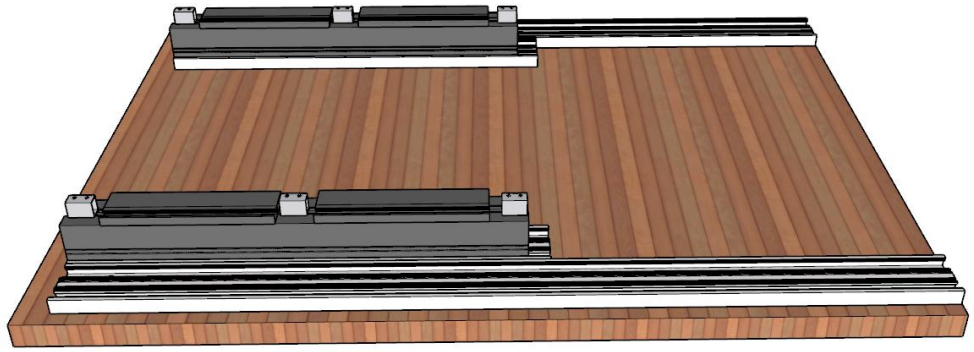


Step 5: Install sliding fittings

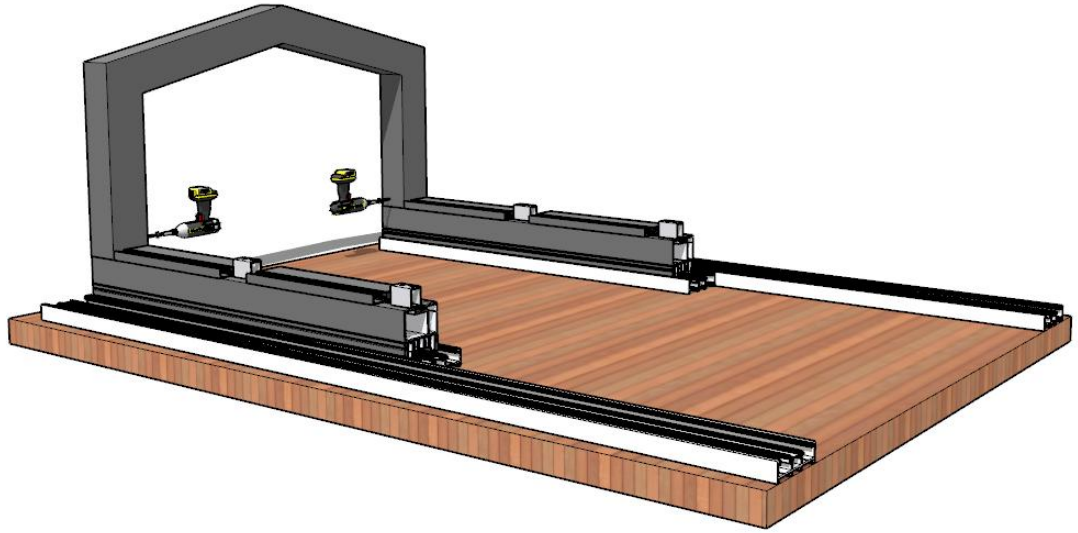


Step 6: Install side rails

- Find the corresponding lower slide, side bone, middle bone, closing opening, etc. according to the drawing coding sequence and install them. After determining the installation position, fix and lock with screws.
  Assemble and be careful to scratch the surface of the product.

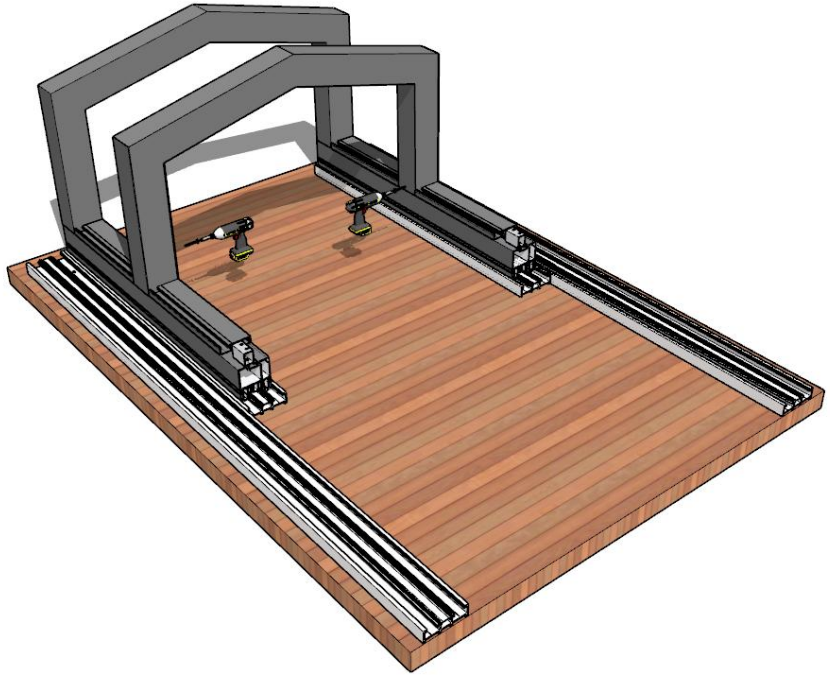


Step 7: Install the middle frame

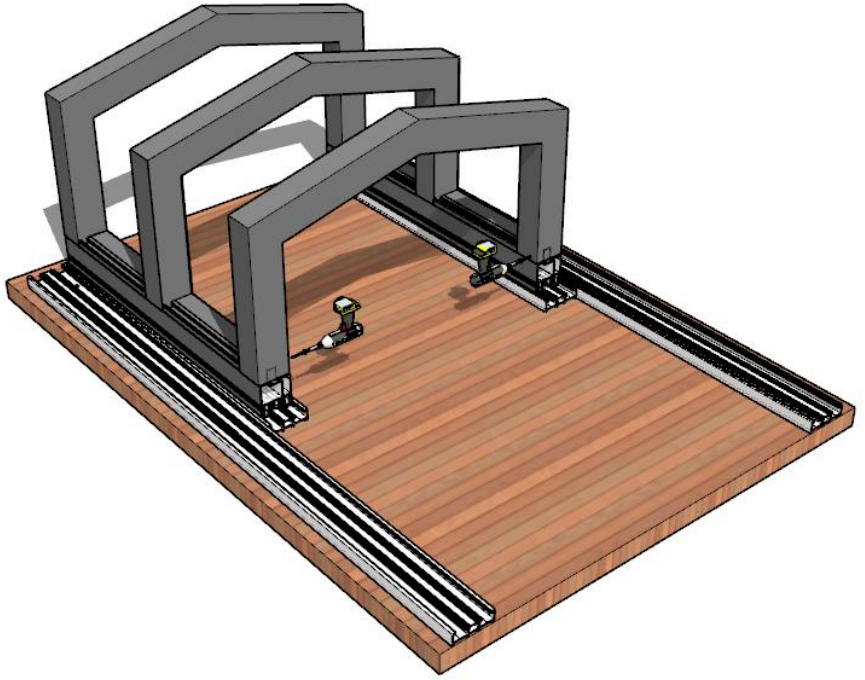


Step 8: Install side rails

- Installation of the main beam: According to the drawing, fix and lock the main beams such as the side ribs, middle ribs, and closing edges with the lower rail corner code sleeves with screws in sequence. Assemble and be careful to scratch the surface of the product.

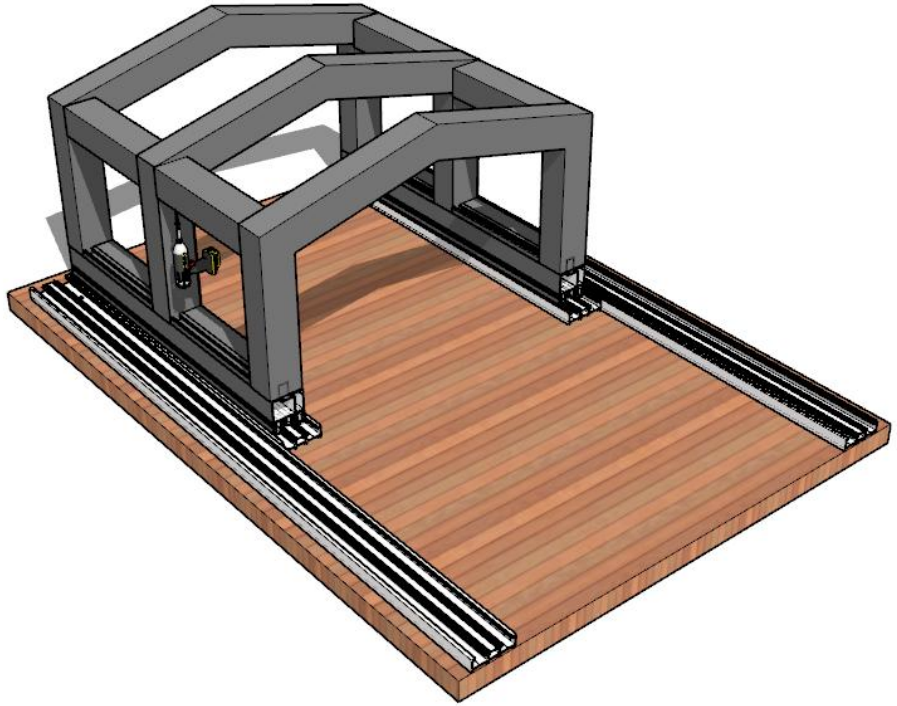


Step 9: Install middle rails

- Main beam installation: According to the drawings, install the main beams such as side ribs, middle ribs, and closing ends in order.
The lower rail corner code sleeve is fixed and locked with screws.

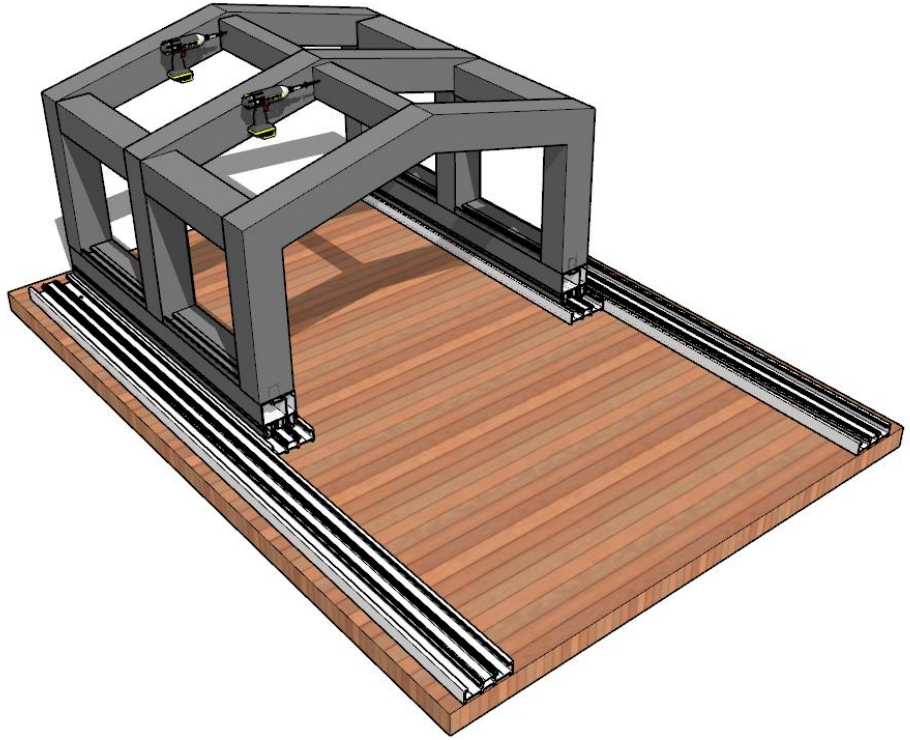

Step 10: Install auxiliary beams

- Sub-beam installation: Find the corresponding sub-beam according to the drawing, clamp it from top to bottom, and tighten the screws on both sides.

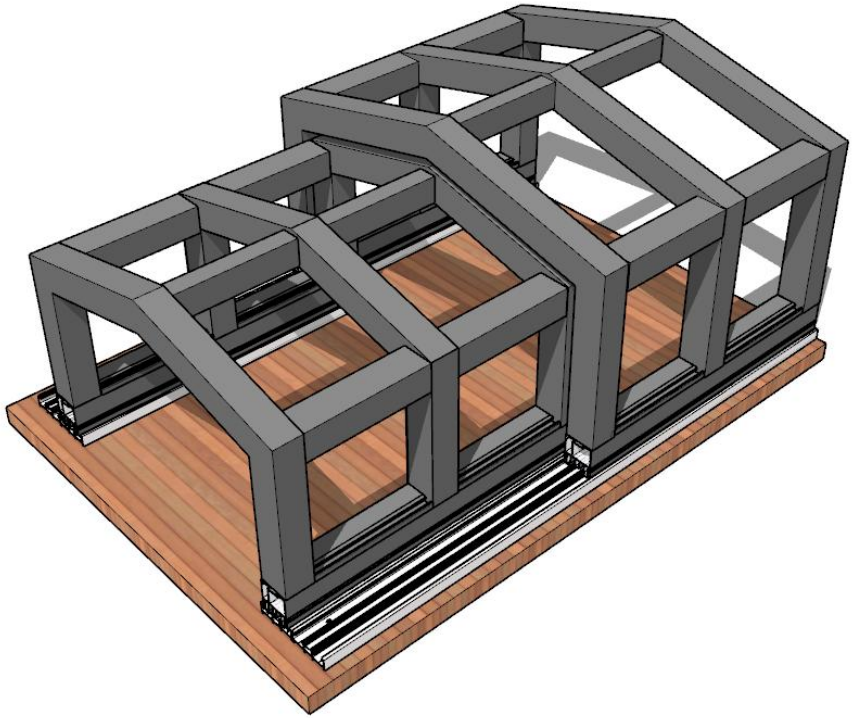

Step 11: Install the skeleton



Step 12: Install panels/glass

After all the skeletons are installed, measure whether the overall dimensions are accurate. If the panels/glass are installed accurately and sequentially (for panel and glass installation: remove the pressure plate and find the appropriate one according to the drawing coding sequence)
Install the plate or glass on the notch, install the removed cover, fix it with screws, decorate the cover, apply adhesive strips, apply glass glue, and hook it up for installation).

SZG
Professional glass manufacturer

1

Sealing

Clean and promote the smart sunroom pull smoothly. Top, side and facade sealant
Seal it well and apply exterior wall glue to prevent air leakage , rain leakage , and leakage.

2

Motor and wire installation


Find the power switch that can be connected and connect the 24V power supply.
Find the motor installation position according to the drawing, and install the motor box
Install the fixed motor and connect the main control board plug to the electrical
Connect the machine 24V power limit switch wires in sequence.

3


Sun room debugging

Use the remote control and control motherboard to complete the code matching and adjust the smart sun room.
Click to the end point to complete learning once and adjust more than 3 times. No problem.
The cover of the machine box is sealed with glass glue. The seal is good and the motor is running normally.
Then tear off the protective film. If there is dirt on the surface of the product, you can use
Wipe clean with denatured alcohol. Finally, rinse the sunroom roof with water.
Carry out the final leakage and waterproof inspection and complete the sunroom installation process.


Before installing the skeleton, the corresponding accessories must be installed first.

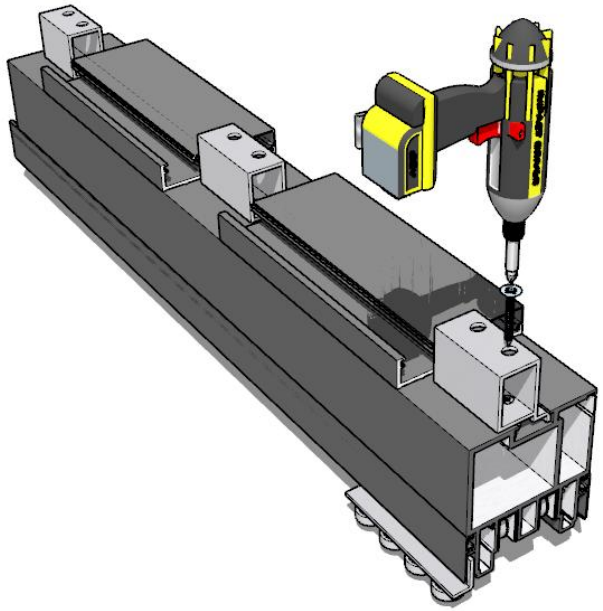


Step 1: Measure and mark the sleeve position according to the drawing size
Then install the sleeve and secure it with screws.

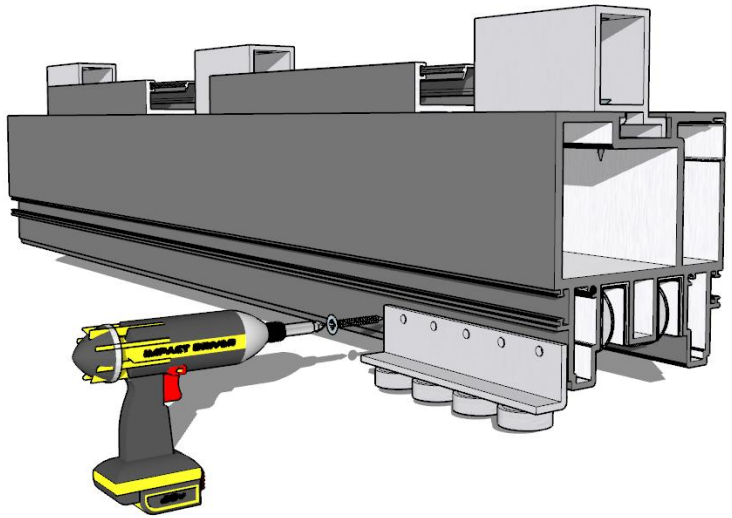


Step 2: Install the windproof wheel and tighten it with screws before sliding down.

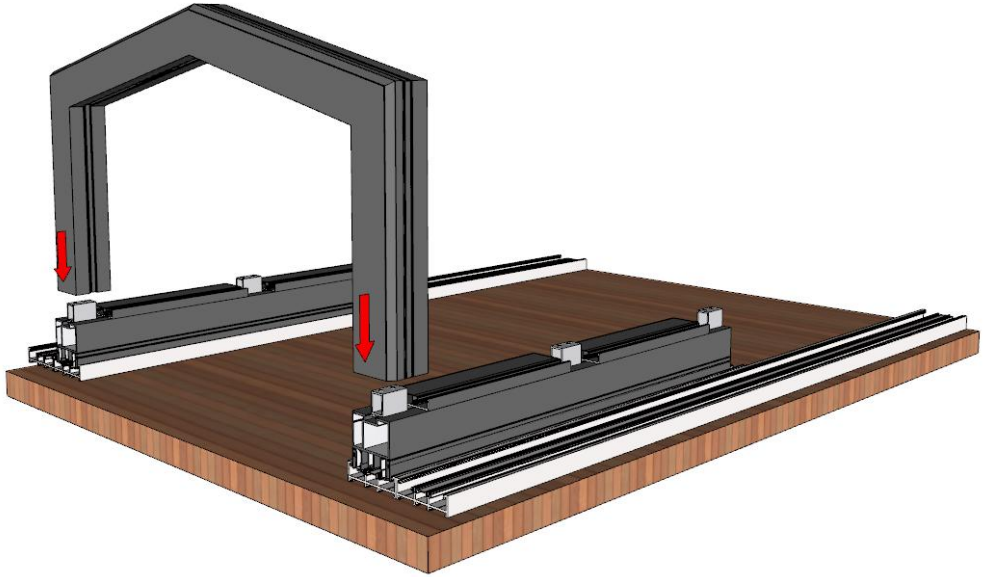


Step 3: After installation and sliding down, insert the side bone alignment sleeve (the same applies to other frames)

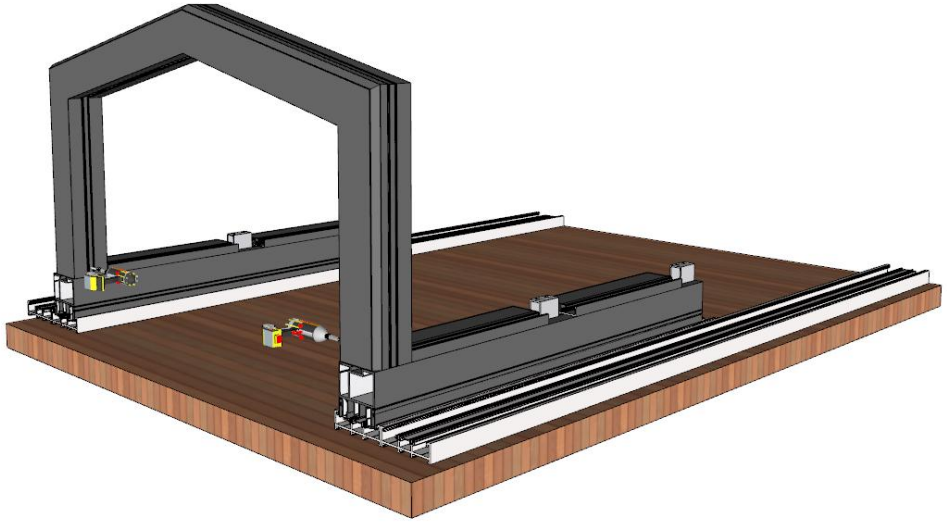


Step 4: After setting the side bones, fix and lock them with screws on the sides (the same applies to other frames)

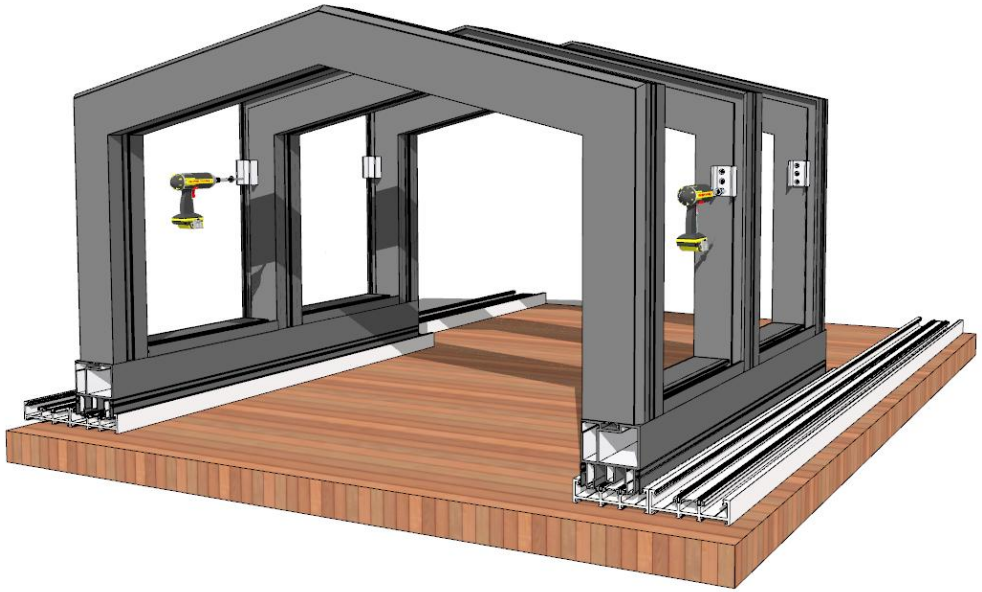


Step 5: Measure the installation position of the middle bone, install the middle bone sleeve, and secure it with screws.

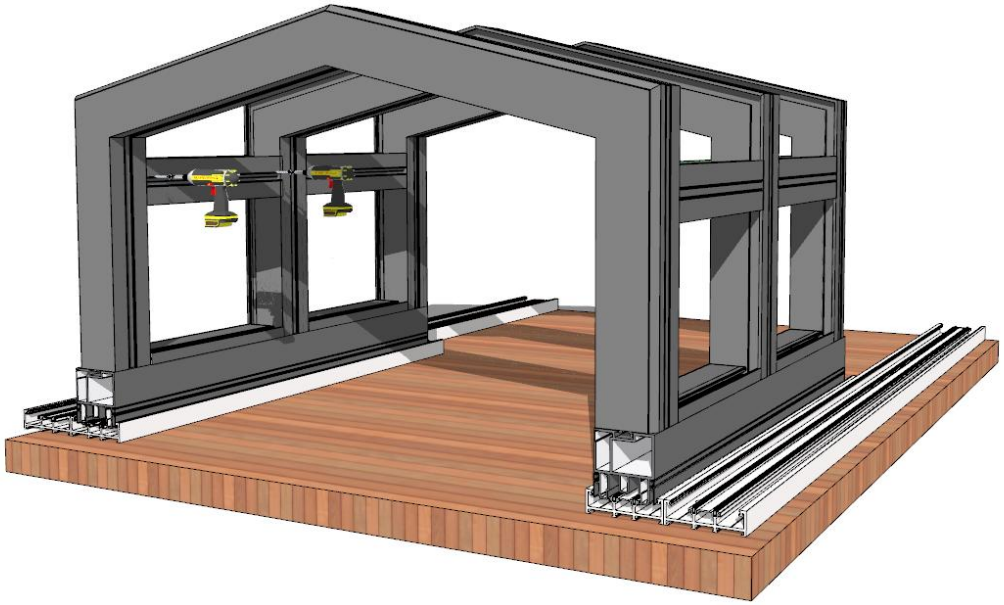


Step 6: After installing the sleeve, install the middle bone and secure it with screws.

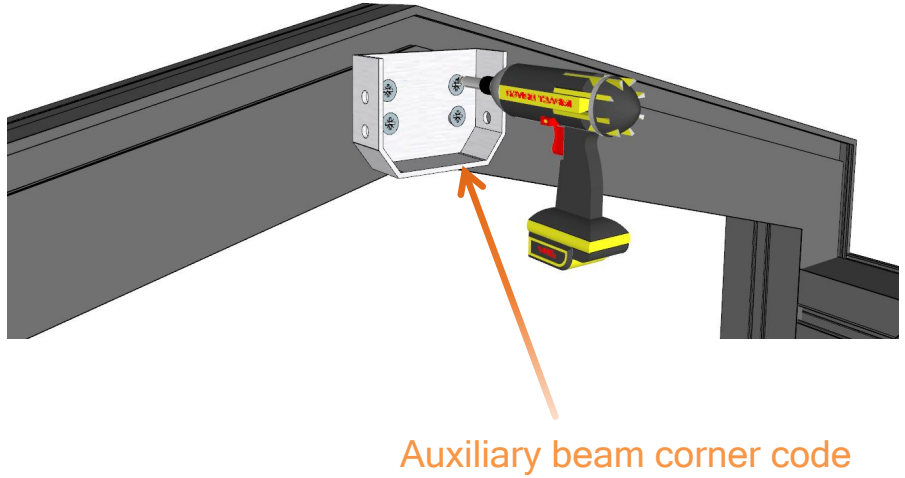

Step 7: Determine the installation position of the auxiliary beam according to the drawing and then install the auxiliary beam.
The corner code is fixed and locked with screws

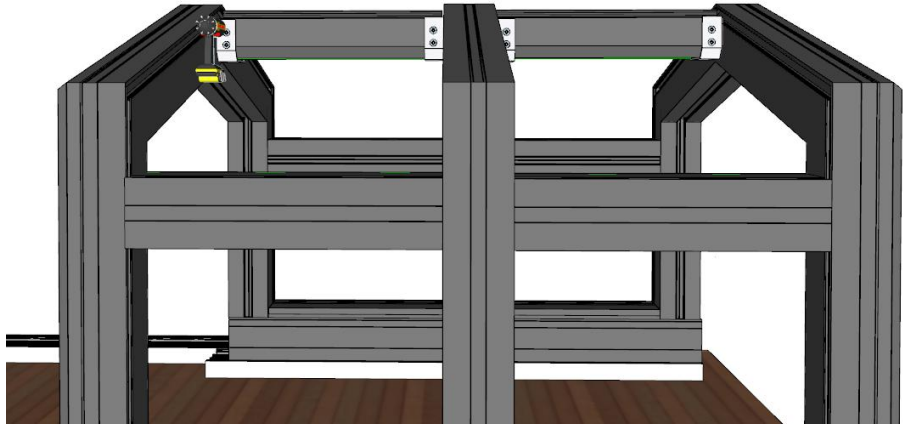


Step 8: After installing the corner code of the auxiliary beam, install the auxiliary beam and secure it with screws from both sides.

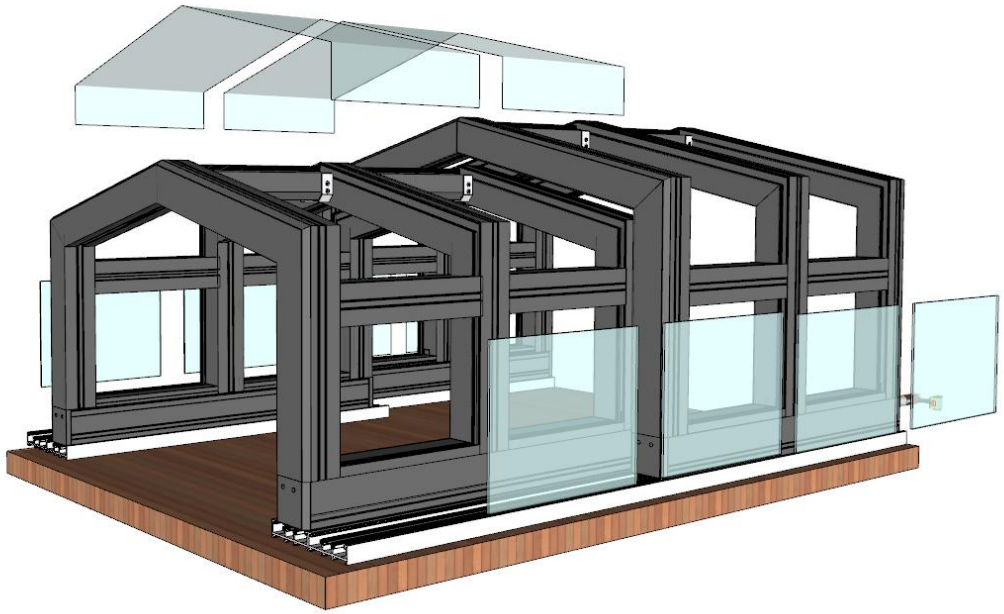


Step 9: After installing the frame, measure the installation dimensions of the plate/glass and press the mark
Find the corresponding plates and install them on the frame in turn.



Step 10: After the board/glass installation is completed, apply glass glue on the joints to prevent air leakage and rain leakage.

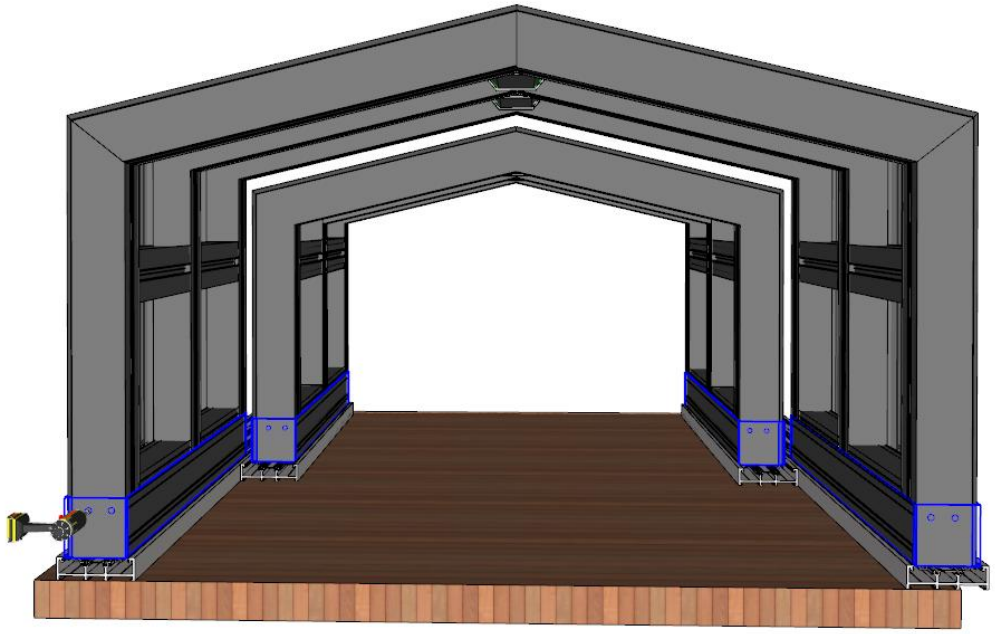

Step 11: Install the frame, put on the frame cover and tighten with screws

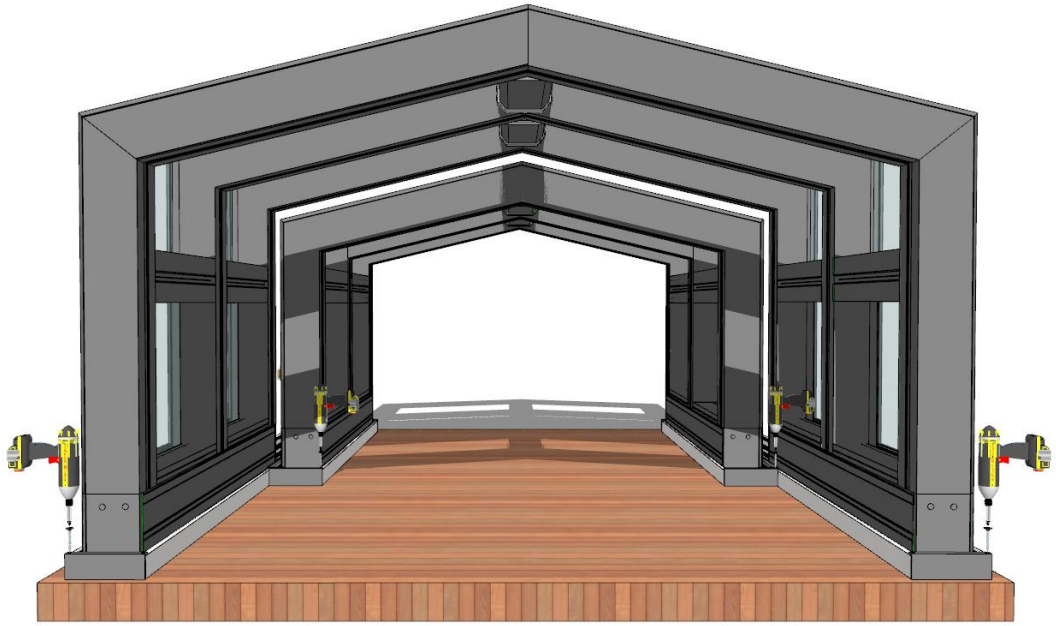

Step 12: After all installation is completed, install the track cover and lock it with screws

How to tear off the protective film:

Use a set square to block the strips to prevent force elements from damaging the strips. Then the triangle ruler

Fit the edges of the strips and keep them parallel. Hold the triangle firmly with your left hand

ruler. Hold the blade with your right hand and gently pull it down along the set square. don't want

Downstroke. To avoid damaging the circuit board, use the corner of a knife to pry off the protective film.

Then tear it off.

The specific method is shown in the figure on the right.



Threading: Install the skeleton electric mobile sunroom first. At the appropriate location, use a hole opener to drill a hole with a diameter of 22 mm and then thread it through.power cord

Threading:


The tank chain is first threaded through the power cord and then installed into the frame.




Threading hole




power cord

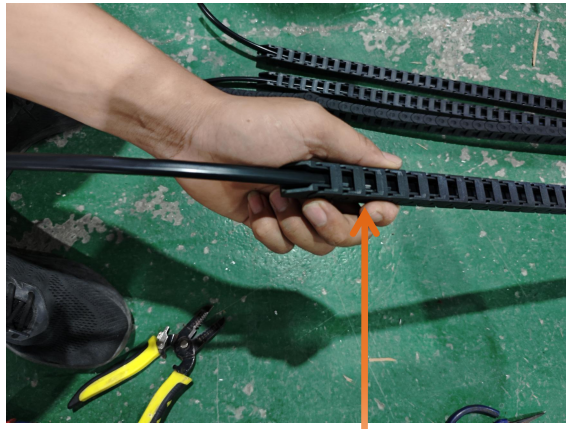

tank chain

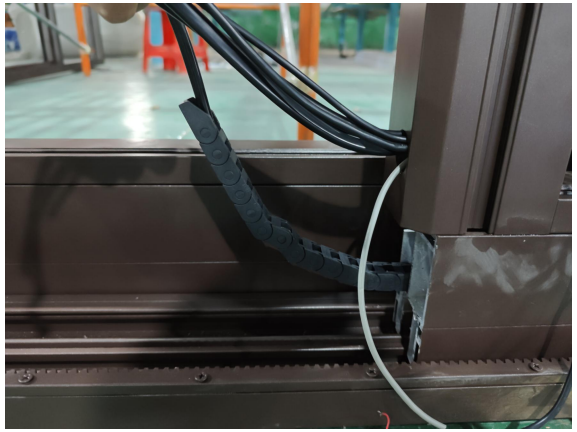


Put on the rubber strips: Put on the rubber strips before installing the frame

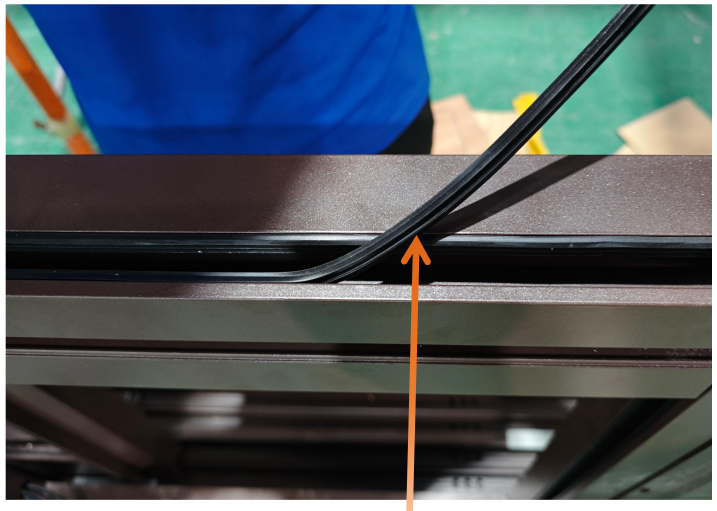

Install the cover:

Measure the length of the cover plate corresponding to the frame, and gently tap it with a rubber hammer until it is flush with the notch.



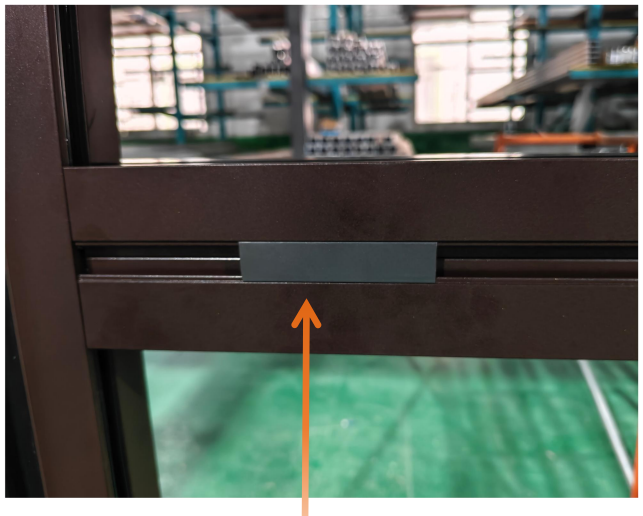

SZG
Professional glass manufacturer

手电钻 Jackhammer



冲击钻 Hammer Drill



六角扳手 Hex Wrench



人字梯 Ladder



劳动手套 Working Gloves



安全帽 Helmet



水平仪 Level Gauge



卷尺 Tape Measure



TOOLS REQUIRED

螺丝刀
Screwdriver



胶锤
Rubber Hammer



直尺
Ruler



方尺
Square feet



胶枪
Glue gun



剪刀
Scissors



SZG
Professional glass manufacturer

Mobile Sunroom
Installation Manual

2024.06

谢 谢

XIE XIE

THANK YOU!