Installation Instruction
Strip curtain
Fixing Method E

1. Compare parts supplied with packing list.

2. Check opening dimensions against delivery note.

3. Depending on assembly method E/A or E/D, transfer fixing bores of the profile to the surface underneath or in front of the lintel and fix profile in this position.

4. Now fit the individual strips onto the flat metal notches. Overlap width according to order has to be maintained.

Attention:
The slits for the end strips may have to be trimmed in order to achieve a clean finish of opening width. A threefold overlap of strips may result.

5. Screw the U shaped fixing profile to the fixing profil by means of screws M8 x 16

6. Check length of strips against floor and trim as required. This trim may have to be repeated by the user as required at the later stage.

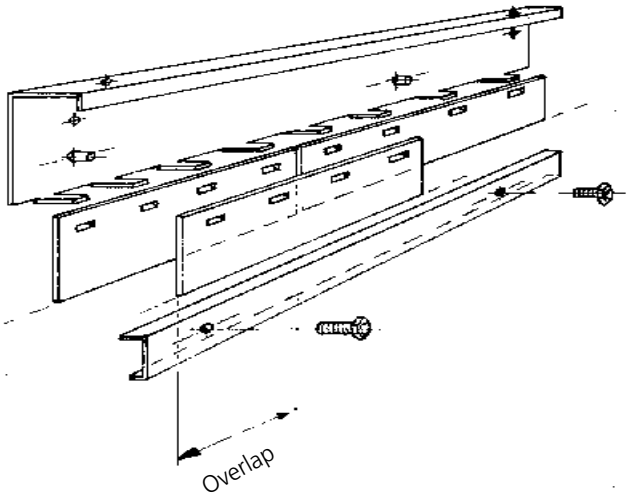

Direct fixing under lintel Method E/A

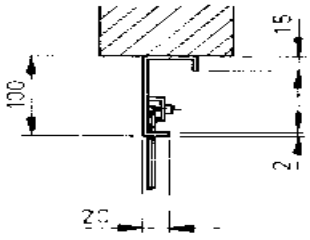

In Front of lintel Method DropE/D

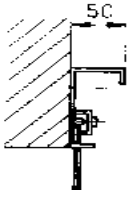

Model	Strip Size	Fixing Method	Overlag	
			%	mm
2/ 50	200 x 2	E	50	50
2/ 80	200 x 2	ABCD	80	80
3/ 60	300 x 3	ABCD	60	90
3/ 80	300 x 3	ABCD	80	120
3/100	300 x 3	ABCDE	100	150
4/ 50	400 x 4	E	50	100
4/ 60	400 x 4	ABCD	60	120
4/ 75	400 x 4	E	75	150
4/ 80	400 x 4	ABCD	80	160
4/100	400 x 4	ABCDE	100	200
5/ 50	400 x 5	E	50	100
5/ 60	400 x 5	ABCD	80	120
5/ 75	400 x 5	E	75	150
5/ 80	400 x 5	ABCD	80	160
5/100	400 x 5	ABCDE	100	200

 • Copyright by ALBANY DOOR SYSTEMS