

SUGGESTIONS

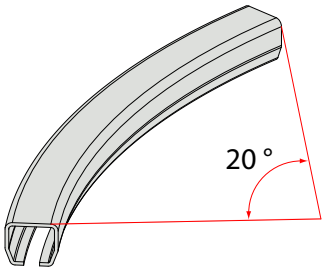


Curve sector		Radius
Track	Item Nr	
9010	9010 CS	500
9030	9030 CS	600
9040	9040 CS	600
9050	9050 CS	600
9060	9060 CS	800


ASSEMBLY POSSIBILITIES OF THE CURVE SECTORS :

This ensures a good seal for lateral displacement doors equipped with a service door.
Also for overhead conveyors with small deviations.

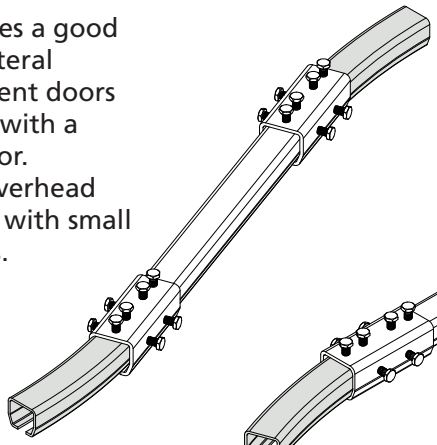


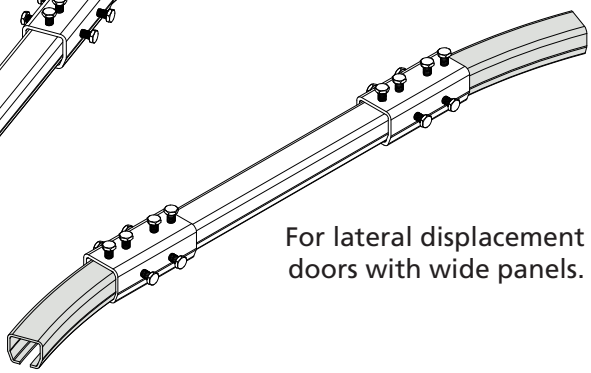


For lateral displacement doors with wide panels.

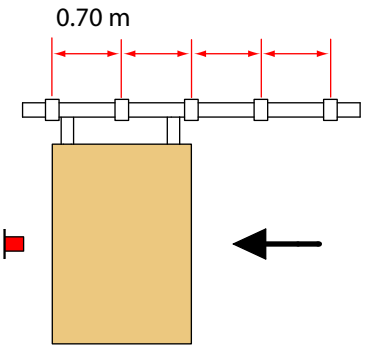


1 stop in the middle part

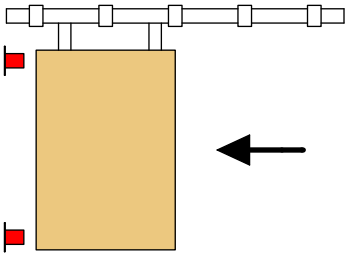


1 stop in the upper part
1 stop in the lower part

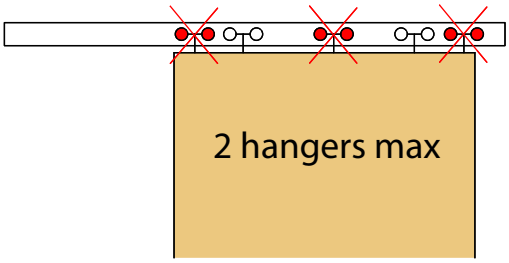

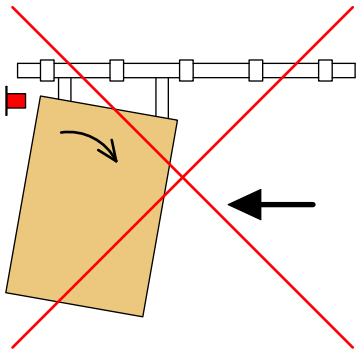

1 stop in the upper part

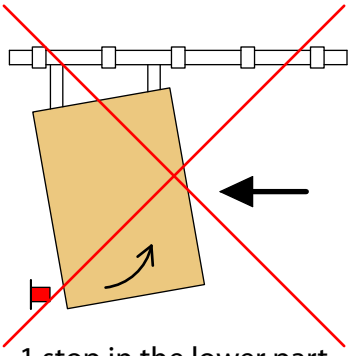

1 stop in the lower part

BRACKETS :

To be placed approx. each 0.70 m

STOPS :


1 point : to be placed at mid-height of the door
2 points : 1 stop at the upper part and 1 at the lower part.
Other stop fixing positions are not recom--mended.

INSTALLATION AND MAINTENANCE

Before the use of the doors, it is recommended to clean the inside of the tracks correctly and to grease them with bodied oil. To avoid any faulty sliding of the door, it is necessary to grease the inside of the tracks at least every 6 months.


POSITION OF THE HANGERS :

In order to improve the stability of the straight sliding doors, the bigger the ratio height/width is, the closer to the door you should fix the hangers.

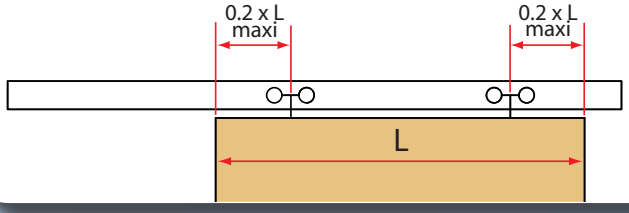

HOW TO CHOOSE THE TRACK :

For any types of doors for which we do not offer aluminium tracks, we strongly recommend the use of galvanised profiles. Their dimensions depend on the hangers, selected according to the panels weight.

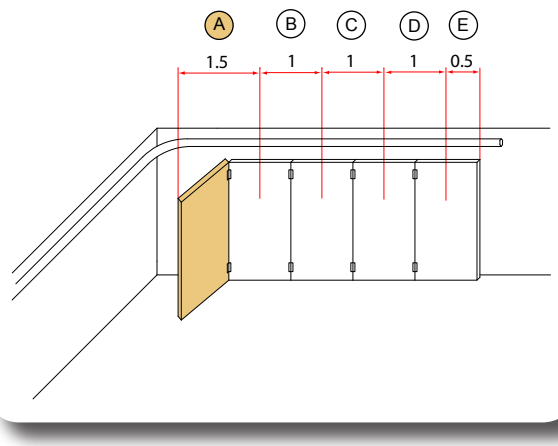

Special case : lateral displacement doors.

Each hanger (B) (C) and (D) supports one panel. The end-hanger (E) supports the weight of a half-panel. Hanger (A) supports the service door and half of the next panel, i.e. 1.5 time the weight of 1 panel.


This means that for any lateral displacement door equipped with a service door, the capacity of each hanger will equal at least 1.5 times the weight of a panel.

Thanks to this logo ®, you will recognize MANTION tracks, this is a garanty of quality

FIXING OF THE TRACK :

Before fixing the track, make sure that its dimensions are exactly the ones mentioned on page 8, especially the gap between the lower lips. If this dimension is not correct, adjust the track by narrowing or widening the gap.

SPECIAL CASE : 9500 and 9600 series

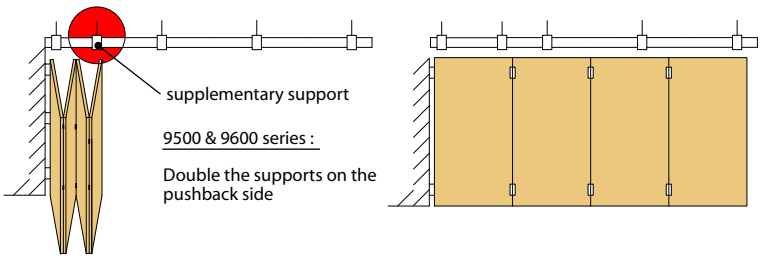

On the pushback side, the load is such that it is necessary to insert a supplementary support between the first two.

JOINTING OF 2 TRACKS :

The jointing of 2 tracks can weaken an installation : it is essential to use a jointing bracket , reinforced on both sides by one support. This will ensure a perfect jointing of the tracks and reinforce the installation. Galvanised tracks must never be welded ; welding plain tracks is also strongly advised against. It always leads to internal tensions, strains and a shifting of the tracks which might also mean early wear of the hangers.

