MCS-FC

BA3-kit

BA2-kit

BA4-kit

Loop det. | Traffic light | impulse | close | stop | open | Push B | Motor unit limit sw. | LS half | LS C | LS O | Frequen. Convert. | 12V+ | GND | A | B

Display (Red)

KL23 | KL22 | KL21 (not in use) | KL20 | KL19 | KL18

KL17 Encoder

KL1

Radio
GND
24V+
Alternating up-stop-down impulse
open
close
stop

KL2

PNE Safety 1 Bk2
Safety edge Air switch
PNE Safety 2 Bk2

KL3

OSE 1 white GND
optoel safety edge Green signal
Brown 12V+

KL4

OSE 2 GND
optoel safety edge signal
12V+
test

KL5

4-wire photocell
3-wire photocell
Light-curtain
24V+
test
signal
GND

KL6

Not in use

KL7

Door safety Additional Stop 24V+ signal

KL8

PK
GY
Motor safety Chain/thermo sw 24V+ signal

KL9

24VDC out Max. 300mA – +

NOTE!
Terminals KL17 – 23 are numbered from right to left!

Potential free Relay 3 KL16 com nc no

Potential free Relay 2 KL15 com nc no

Potential free Relay 1 KL14 com nc no

KL13 1 2 3 230V

Note!
The KL13 jumper shall be set before switching on power!

MCS
DOOR CONTROL

KL10 U V W

KL11 PE

KL12 L1 N L1 L2 L3 N N

WH
WH
GNYE
WH
GNYE
BN
BU

Frequency Converter

KL1 KL2 KL3 KL4 S1 200V 100V COM P-OFF P-ON

Motor

Mains Supply 230V

Main power
1 x 230V N PE, 50Hz, 10-16A
B characteristic or comparable

Drive Unit

M1 Y1 X1 X2 Shield

X12 X3 MC A/D B X1 A RS 485

F10 Thermo switch

S10 Manual lever

1=wire 4
2=wire 5

Backview/Rückansicht

6/BN 5/PK 4/YE 3/WH 2/GN 1/GY

X3

1=wire 1
2=wire 2
PE=GNYE
W=not used

1=wire 3
3=wire 2
2=wire 1
⏚=PE (GNYE)

200V power-off brake
KL2:1=wire 4
KL2:2=not used
KL2:3=wire 5
Switch S1=P-OFF

100V power-on brake
KL2:1=not used
KL2:2=wire 4
KL2:3=wire 5
Switch S1=P-ON

Note!
Albany RR 300 RETAIL
(AKTOR LCS)

Frequency Converter

KL1 KL2 KL3 KL4 S1

KL3:L1=wire 1
KL3:PE=PE (GNYE)
KL3:N=wire 2

Door Control

KL10 PE KL18 KL17 KL8

Color code:
PK = pink
GY = grey
GN = green
YE = yellow
WH = white
BN = brown
BK = black
GNYE = green/yellow

1510XXXX rX

2016-04-15

1(11)

ASSA ABLOY

Basic Wiring Diagram MCS Albany

Doc.no / Dok.nr

Rev. A3 6411R0002

MCS-R

BA3-kit

BA2-kit

BA4-kit

Display

Red

Loop det. 24V- 24V+ — 5 4 3 2 1 — KL23

Traffic light — 5 4 3 2 1 — KL22

KL21 (not in use)

Push B: impulse, close, stop, open (24V+) — 8 7 6 5 4 3 2 1 — KL20

Motor unit limit sw.: LS half, LS C, LS O (24V+) — 6 5 4 3 2 1 — KL19

4 3 2 1 — KL18

KL17 — 4 3 2 1 — Encoder (12V+, GND, A, B; BN, WH, YE, GN)

NOTE!
Terminals KL17 – 23 are numbered from right to left!

KL1
- Radio
- Alternating up-stop-down impulse: GND, 24V+, open, close, stop — 1 2 3 4 5 6

KL2
- PNE, Safety edge Air switch, Safety 1, Safety 2, 8k2 — 1 2 3 4

KL3
- OSE 1 white, optoel safety edge, Green, Brown, signal, GND, 12V+ — 1 2 3

KL4
- OSE 2, optoel safety edge, signal, GND, 12V+, test — 1 2 3 4

KL5
- 4-wire photocell, 3-wire photocell, Light-curtain: 24V+, test, signal, GND — 1 2 3 4

KL6
- Not in use — 1 2

KL7
- Door safety, Additional Stop, 24V+, signal — 1 2

KL8
- PK, GY
- Motor safety, Chain/thermo sw, 24V+, signal — 1 2

KL9
- 24VDC out, Max. 300mA, −, + — 1 2

Potential free Relay 3 — KL16 — com, nc, no

Potential free Relay 2 — KL15 — com, nc, no

Potential free Relay 1 — KL14 — com, nc, no — 5 4

KL13 — 1 2 3 — 400V

Note!
The KL13 jumper shall be set before switching on power!

MCS
DOOR CONTROL

KL10 — U V W — 1 2 3 — GNYE, GNYE

KL11 — PE — GNYE

KL12 — L1 L2 L3 N N — BK, BN, GY, BU

Motor

Mains supply 400V AC

Main power
3 x 400V N PE, 50Hz, 10-16A
B characteristic or comparable

Drive unit

X3: 21 22 23 24 25 26; MC, A/D, B, A, RS 485

F10, S10

Thermo sw. in motor *Manual lever*

Y1, M1 (W2 U2 V2 / U1 V1 W1, F10)

Shield, X2, X1 (U V PE W N)

Color code:
PK = pink
GY = grey
GN = green
YE = yellow
WH = white
BN = brown
BK = black
GNYE = green/yellow

Backview/Rückansicht — 6/BN, 5/PK, 4/YE, 3/WH, 2/GN, 1/GY

Shield

X2, 120 mm, RL1=wire/Ader 4, RL2=wire/Ader 5, 1=wire/Ader 1, 2=wire/Ader 2, 3=PE(GNYE), 4=wire/Ader 3, 5=N

KL17, KL8, PE, KL14, KL10

Door Control

2(11)

ASSA ABLOY

Basic Wiring Diagram MCS Albany


Doc.no / Dok.nr

Rev. A3 — 6411R0002

1510XXXX rX


2016-04-15

Control Unit MCS

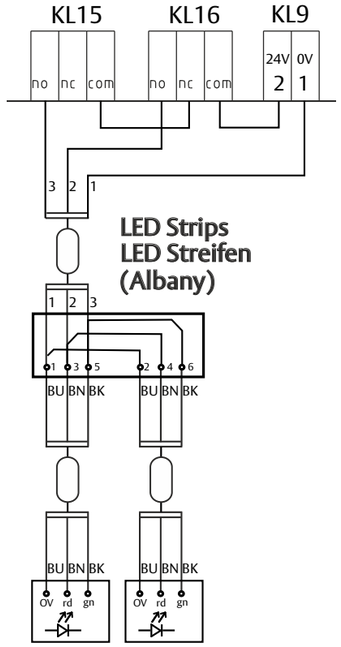

Red/Green LED Strips


Control Unit MCS

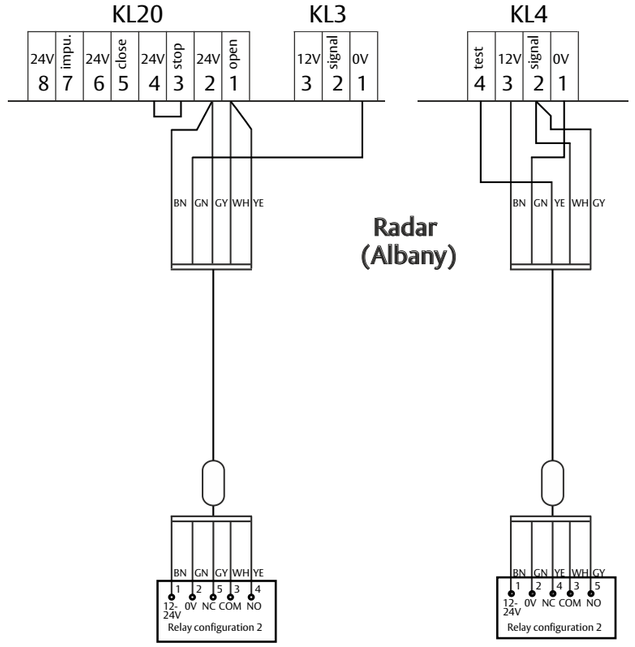

Radar open with closing after time


Radar as additional safety

Control Unit MCS

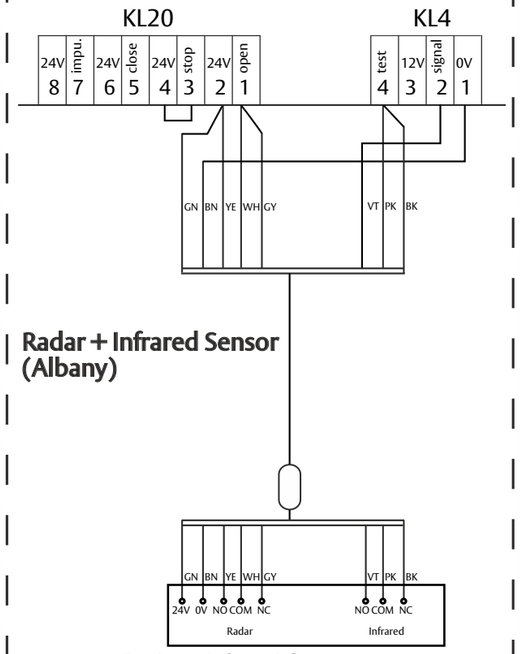


Radar + Infrared Sensor

Control Unit MCS

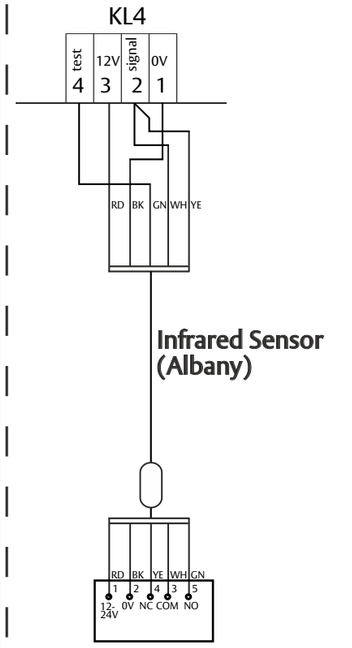


Infrared sensor as additional safety

Control Unit MCS

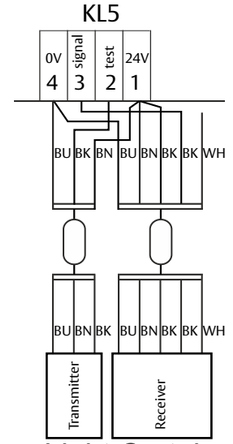


Light Curtain
(In side column)
(Closing after pass.)
(Mask position)

Control Unit MCS

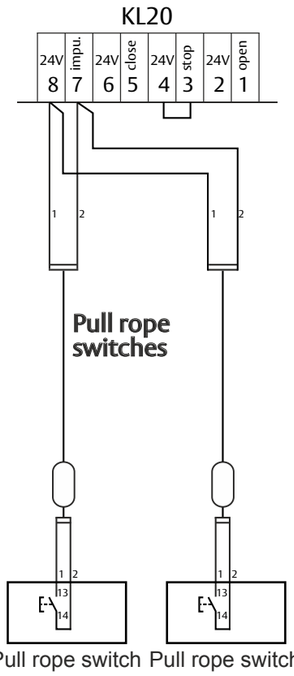


Pull rope switch Pull rope switch

Control Unit MCS

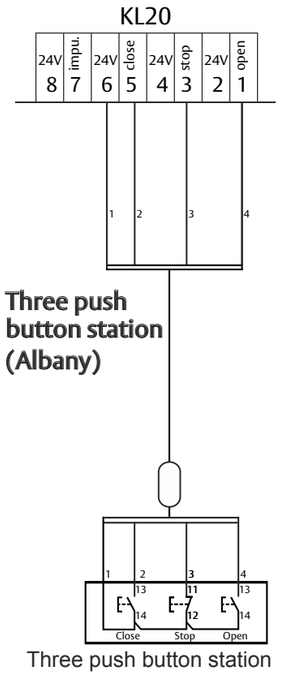

Three push button station


Control Unit MCS

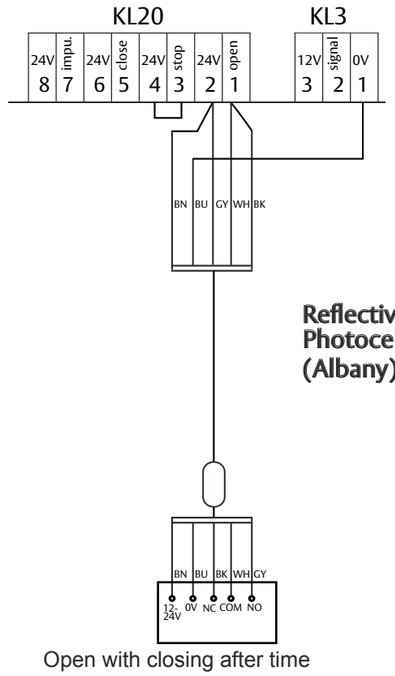

Open with closing after time


Additional safety

Control Unit MCS

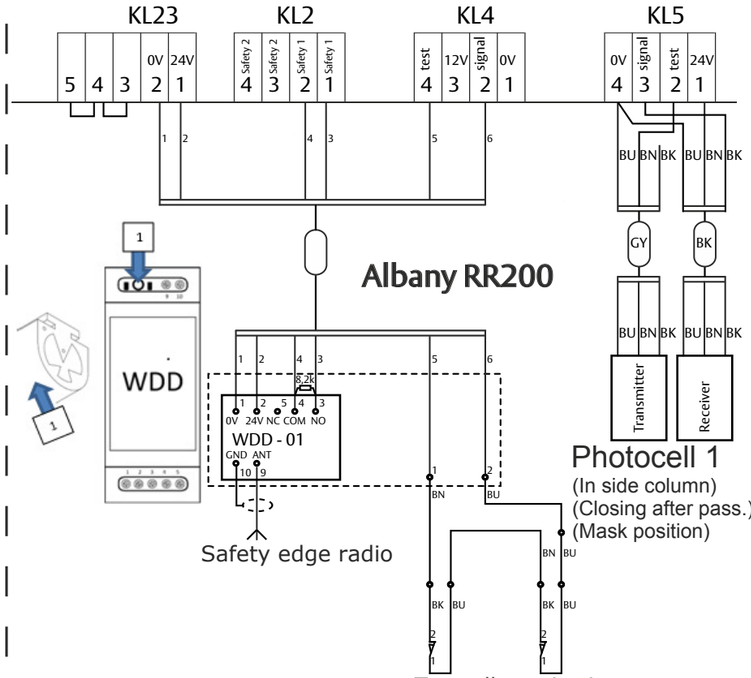

Top roll monitoring

Control Unit MCS

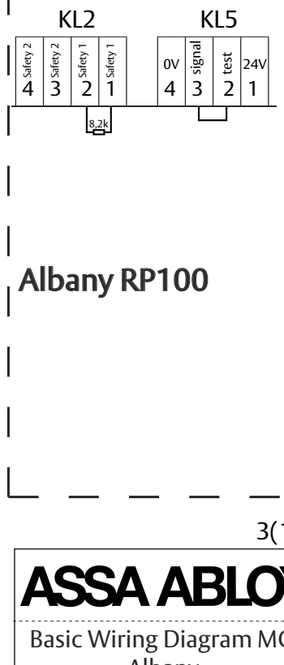

ASSA ABLOY

Basic Wiring Diagram MCS Albany

Doc.no / Dok.nr

Rev. A3

6411R0002

1510XXXX rX

2015-06-17

Albany
RR300 Plus

KL2

Safety 2 4 | Safety 2 3 | Safety 1 2 | Safety 1 1

BN BK

BN BK 1 2

8.2k

Safety
Edge

Control Unit MCS

KL15 | KL9 | KL15 | KL9 | KL15 | KL9

no nc com | 24V 0V 2 1 | no nc com | 24V 0V 2 1 | no nc com | 24V 0V 2 1

1 2 | 1 2 | 1 2

LED Lights
(Albany)

2 1 B1:1 B1:2 0Hz 1Hz 2Hz

2 1 La Lb

2 1 La Lb

Orange flashing LB | Orange flashing | Red

R4

NC NO COM

1 2 3 4 5 6 7 8 9 10 11

1 2 3 4 5

Control Unit MCS

KL22

1 2 3 4 5

Control Unit MCS

KL9

24V 0V 2 1

Control Unit MCS

KL20

1 2 3 4 5 6 7 8

Open – Inside | Open – Outside

1 2 N La Lb 3

Red | Green

Inside

1 2 N La Lb 3

Red | Green

Outside

LED Traffic Lights Albany (BA3)

KL1

RADIO RX (BA4)

Loop Detector (BA2)

PCA Loop Detector

1 2 3 4 | 1 2 3 4 5 6

Control Unit MCS

KL23

1 2 3 4 5

Induction loop 2 | Induction loop 1

KL2 | KL7

Safety 2 4 | Safety 2 3 | Safety 1 2 | Safety 1 1 | signal 2 | 24V 1

WH BN | GN YE

WH BN GN YE

8.2k

Safety Edge | RR300 Option Crash-Sensor

Albany RR100 | Albany RR300

Photocells (Albany)

Control Unit MCS

KL5

0V 4 | signal 3 | test 2 | 24V 1

BU BK BN | BU BK BN

Control Unit MCS

KL4

test 4 | 12V+ 3 | signal 2 | 0V 1

BU BK BN | BU BK BN

Photocell 1
(In side column)
(Closing after pass.)
(Mask position)

Photocell 2
(Extra safety)
(Prerunning)

Transmitter | Receiver | Transmitter | Receiver

ADD. EMERGENCY STOP BUTTON KIT M /ML

KL7

1 2

Interlock

KL20

24V 8 | impu. 7 | 24V 6 | close 5 | 24V 4 | stop 3 | 24V 2 | open 1

KL16

no nc com

MCS 1

Disable Interlock 13 14

1 2 3 4

Disable Interlock 13 14

no nc com

8 24V | 7 impu. | 6 24V | 5 close | 4 24V | 3 stop | 2 24V | 1 open

MCS 2

KL16 | KL20

4(11)

ASSA ABLOY

Basic Wiring Diagram MCS Albany


Doc.no / Dok.nr

Rev. A3 | 6411R0002

1510XXXX rX


2016-02-29

Control Unit MCS

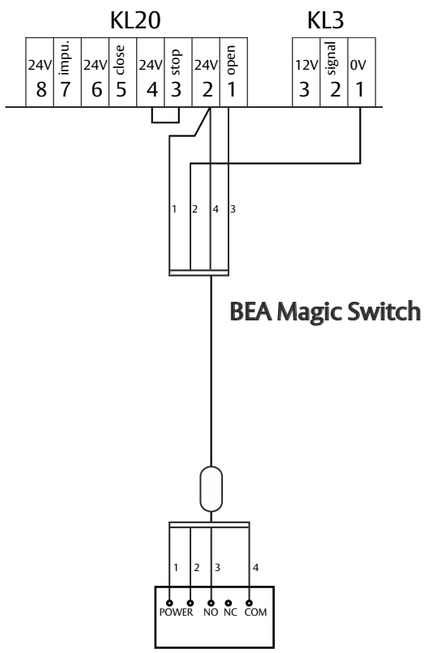

BEA Magic Switch

Control Unit MCS

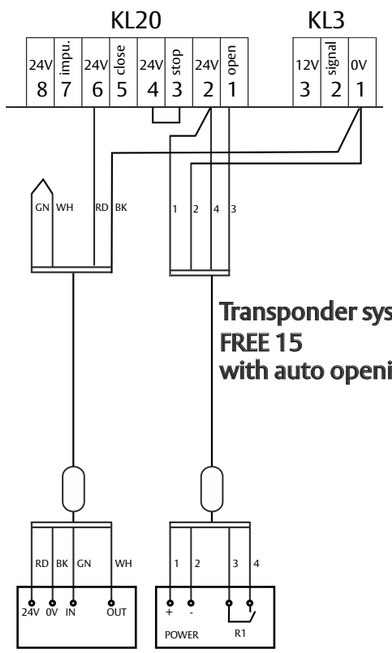


Transponder system
FREE 15
with auto opening

Antenna

Receiver Wave500 - 2B

Control Unit MCS

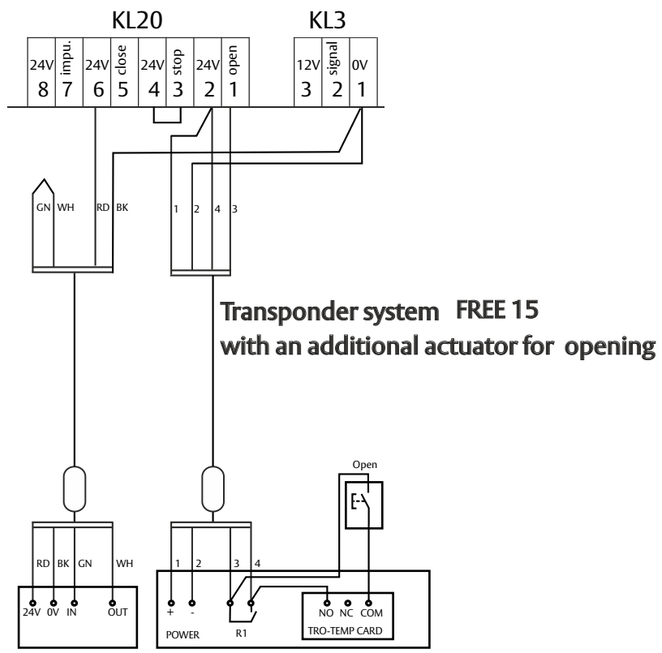


Transponder system FREE 15
with an additional actuator for opening

Antenna

Receiver Wave500 - 2B


Control Unit MCS

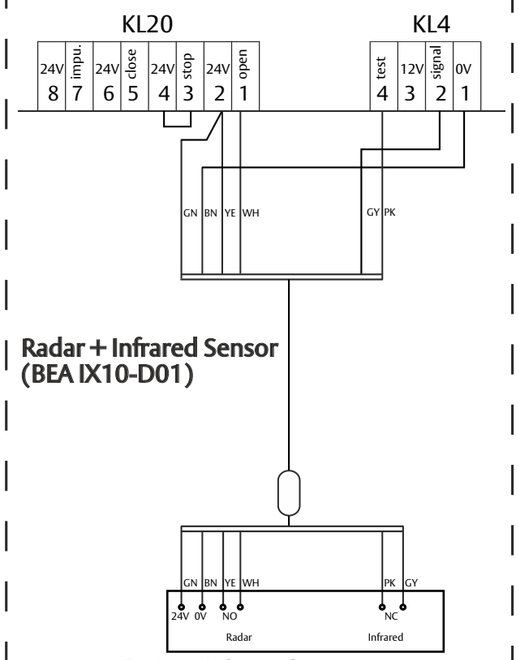

Radar + Infrared Sensor
(BEA IX10-D01)


Radar + Infrared Sensor

Control Unit MCS

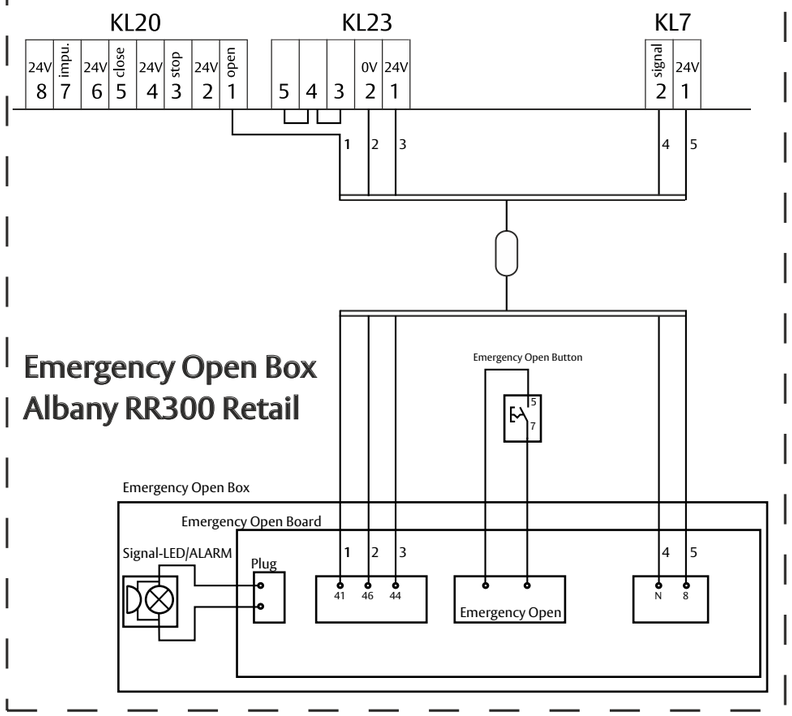

Emergency Open Box
Albany RR300 Retail

Control Unit MCS

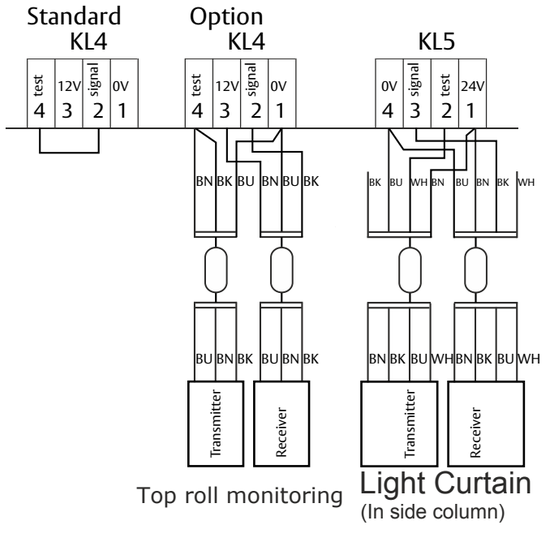


Top roll monitoring

Light Curtain
(In side column)

Albany RR300 Retail
(Aktor LCS)


Control Unit MCS

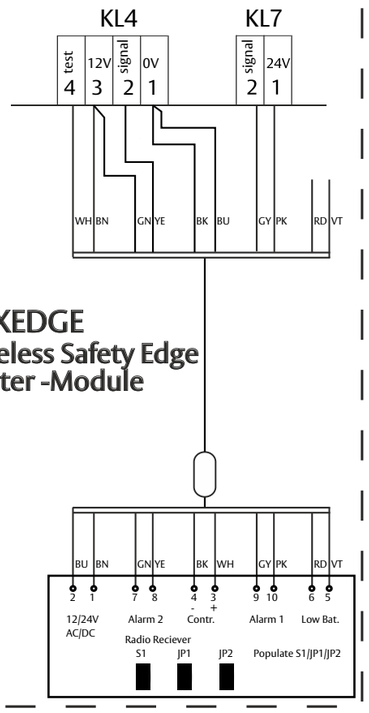

FLEXEDGE
Wireless Safety Edge
Master -Module

FLEXEDGE

Wireless Safety Edge
Slave - Module

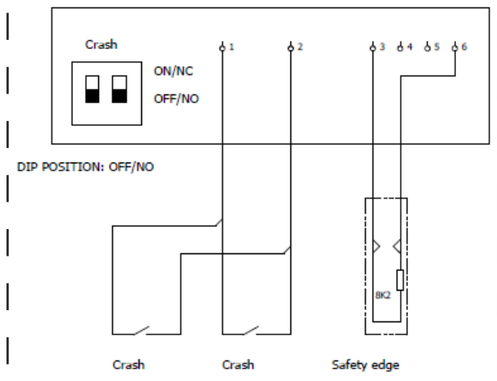

ASSA ABLOY

Basic Wiring Diagram MCS Albany

Doc.no / Dok.nr

Rev. A3 6411R0002

1510XXXX rX

2015-12-07

UPPER CASE WORDS ARE DISPLAY TEXT TRANSLATIONS
Lower case words are circuit diagram translations

EN	DE	FR	NL	ES	SE	IT	PL
additional safety	zusätzliche Sicherheit	une sécurité supplémentaire	extra veiligheid	de seguridad adicional	extra säkerhet	maggiore sicurezza	dodatkowe bezpieczeństwo
Back view	Rückansicht	vue de l'arrière	terug bekijken	Volver la vista	sedd bakifrån	vista posteriore	widok z tyłu
Black	Schwarz	noir	zwart	negro	Svart	nero	czarny
Blue	Blau	Bleu	Blau	azul	Blå	blu	niebieski
Brown/white	Braun / Weiß	Marron/blanc	Bruin/wit	Marrón / blanco	Brun / vit	Marrone / bianco	Brązowy / biały
Chain switch motor	Kettenschalter motor	Chaine moteur de switch	Keten schakelaar motor	Motor del interruptor de la cadena	Kedjeswitch motor	Motore interruttore a catena	Przełącznik łańcuch silnika
Close	schließen	proche	sluiten	cerca	Stäng	vicino	blisko
CLOSE DELAY	VERZÖ.SCHLIESSEN	RETARD FERMETURE	SLUIT VERTRAGING	RETARDO CIERRE	STÄNGNINGSTIMER	RITARDO CHIUSURA	OPÓZN.ZAMKN.
Control system	Steuersystem	Système de commande	controlesysteem	sistema de control	styrsystem	sistema di controllo	System kontroli
DISABLE PHOTOC.	AUSBLENDEN LS	CELLULE DÉSACT.	fotocel deactiv	FOTOC. DESACT.	FOTOCELL AV	F.RELE DISABIL.	FOTO NIEAKT.
Display	Anzeige	afficher	tonen	visualización	Display	Visualizza	wystawa
Drive unit	Antriebseinheit	Unité d'entraînement	aandrijfeenheid	unidad de accionamiento	Drivenhet	unità di azionamento	jednostka napędowa
Emergency stop	Not-Aus-	Arrêt d'urgence	noodstop	parada de emergencia	nödstopp	arresto di emergenza	zatrzymanie awaryjne
Encoder	Encoder	Encoder	Encoder	Encoder	Encoder	Encoder	enkoder
END POS. BOTTOM	ENDLAGE UNTEN	POS. FERMEE	eindstand neer	FIN CARRERA BAJ.	ÄNDLÄGE STÄNGD	POS.FINALE INF.	POZ.KONC.DÓL
END POSITION TOP	ENDLAGE OBEN	POS. OUVERT	eindstand open	FIN CARRERA SUB.	ÄNDLÄGE ÖPPEN	POS.FINALE SUP.	POZ.KONC.GÓRA
Frequency converter	Frequenzumrichter	Convertisseur de fréquence	frequentieomvormer	convertidor de frecuencia	Frekvensomvandlare	Convertitore di frequenza	przetwornica częstotliwości
Grey	Grau	Gris	Grijs	Gris	Grå	Grigio	Szary
Impulse	Impuls	Impulse	impuls	impulso	Impuls	impulso	impuls
Interlock	Verriegelung	Verrouillage	Veiligheidsvergrendeling	Bloqueo de puerta	Förregling	Interblocco	Blokowanie
Internal connection to terminal 1 of AMP connector	Interne Verbindung zum Terminal 1 des AMP-Stecker	Connexion interne à la borne 1 du connecteur AMP	Interne verbinding naar terminal 1 van AMP connector	Conexión interna hacia el terminal 1 del conector AMP	Intern anslutning till terminal 1 av AMP-kontakt	Connessione interna al morsetto 1 del connettore AMP	Połączenie wewnętrzne do zacisku 1 złącza AMP
Light curtain	Lichtgitter	Rideau de lumière	lichtscherm	cortina de luz	ljusridå	Barriera fotoelettrica	kurtyna
Limit switch half	Endschalter Halb	Limitez de moitié de commutation	Eindschakelaar helft	Final de carrera media	Gränsbrytare halv	Finecorsa metà	Wyłącznik krańcowy połowa
Loop detector	Schleifendetektor	Détecteur de boucle	Lusdetector	detector de lazo	Slingdetektor	rilevatore di loop	detektor pętli
Ls closed	ls geschlossen	Ls fermé	Ls gesloten	ls cerrados	ls stängd	Ls chiusi	ls zamknięte
Ls open	ls offen	Ls ouvert	Ls geopened	ls abiertas	ls öppna	Ls aperte	Czy otwarte
Magnetic loop	Magnetschleife	boucle magnétique	Magnetische lus	bucle magnético	Magnetslinga	Spira magnetica	pętla magnetyczna
Main power	Netzspannung	L'alimentation principale	hoofdschakelaar	Alimentación principal	Huvudström	alimentazione principale	główne zasilanie
MAX EMERGN.-REV.	MAX. NOT-REVERS.	NB INVERS. MAXI	MAX NOODOMDR.	MAX EMERGN.-REV.	MAX ANTAL REV.	MAX RIAPERT.EM.	MAKS.WYCOF.BEZP.
Motor unit limit switch	Motoreinheit Endschalter	Fin de course de l'unité de moteur	Motorunit eindschakelaar	Final de carrera de la unidad de motor	Motorenheten gränslägesbrytare	Finecorsa unità motore	Zespół silnika wyłącznik krańcowy
Open	öffnen	Ouvert	open	abierto	Öppna	aperto	otwarte
Opening with closing after time	Öffnung mit Schließen nach Zeit	Ouverture avec fermeture après le temps	Opening met sluiten na tijd	Apertura con cierre después del tiempo	Öppning med stängning efter en tid	Apertura con chiusura dopo il tempo	Otwarcie z zamknięciem po raz
Opto electrical	Opto elektrischen	opto électrique	Opto-elektrische	optoelectrónico	Opto elektriska	Opto elettrica	Opto elektryczne
Photocells	Lichtschranken	Cellules photoélectriques	Fotocellen	Las fotocélulas	Fotoceller	fotocellule	fotokomórki
Pink	Rosa	Rose	Roze	rosa	Rosa	rosa	różowy
Potential free relay	Potentialfreie Relais	Relais libre de potentiel	Potentiaalvrij relais	Relé libre de potencial	Potentialfri relä	Potenziale relè libero	Przekaźnik bezpotencjałowy
Pull rope switch	Zugschalter	Tirez commutateur de corde	Trekkoord schakelaar	Tire del interruptor de la cuerda	Dragrepskontakt	Tirate l'interruttore corda	Pociągnij przełącznik liny
Push Button external	Drucktaster externen	Appuyez sur le bouton externe	Drukknop externe	Push Button externa	Tryckknapp extern	Pulsante esterno	Przycisk zewnętrzny
Radar + Infrared Sensor	Radar + Infrarot-Sensor	Capteur radar + infrarouge	Radar + Infrarood sensor	Radar + Sensor Infrarrojo	Radar + Infraröd sensor	Radar + sensore a infrarossi	Czujnik radarowy + podczerwień
Radio	Radio	Radio	Radio	radio	Radio	radio	radio
Radio RX	Radio-RX	Radio RX	Radio RX	Radio RX	Radio RX	Radio RX	Radio RX
Red	Rot	Rouge	Rood	rojo	Röd	rosso	czerwony
Safety chain input/output	Sicherheitskette Eingang / Ausgang	D'entrée/sortie de la chaîne	Veiligheid keten input/output	Cadena de seguridad de entrada / salida	Säkerhetskedja ingång / utgång	Ingresso Catena di sicurezza / output	Łańcuch bezpieczeństwa wejście / wyjście
Safety device	Sicherheitsvorrichtung	Dispositif de sécurité	veiligheidvoorziening	dispositivo de seguridad	säkerhetsanordning	dispositivo di sicurezza	urządzenie zabezpieczające
Safety edge	Sicherheitsleiste	Bourrelet de sécurité	sluitkantbeveiling	borde de Seguridad	Klämlist	Costa di sicurezza	krawędź bezpieczeństwa
SET TIME	UHRZEIT SETZEN	RÉGLAGE HEURE	tijd instellen	SET TIEMPO	STÄLL IN TID	REGOLAZ. TEMPO	UST.CZASU
Stop	Stopp	arrêter	stop	Deténgase	Stopp	Stop	Stop
Stop circuit chain	Stoppkette	Arrêter chaîne de circuits	Stop circuit keten	Deje de cadena circuito	Stoppkrets	Interrompere la catena circuito	Zatrzymać łańcuch obiegu
Thermo switch motor	Thermoschalter Motor	Thermo moteur commutateur	Thermo schakelaar motor	Motor Interruptor térmico	Thermo switch motor	Motore interruttore termico	Wyłącznik termiczny silnika
Three push button station	Dreifachtaster	Station de bouton-poussoir de trois	Drie drukknop station	Estación de tres botones de empuje	Tryckknappslåda med tre knappar	Stazione Pulsante Tre spinta	Przycisk Push Stacja trzy
Top roll monitoring	Ballenüberwachung	Suivi roll top	Top roll controle	Monitoreo rollo Top	Valsövervakning	Monitoraggio rullo superiore	Top Monitoring rolka
Traffic light	Ampel	Feu de circulation	verkeerslicht	Semáforo	trafikljus	semaforo	Sygnalizacji świetlnej
Violet	Violett	violet	violet	violeta	Violett	viola	fioletowy
Wago terminal	Wago Klemme	Borne Wago	WAGO terminal	terminales Wago	Wago terminal	terminale Wago	Terminal Wago
Warning lights	Warnleuchten	Feux de détresse	Waarschuwingslichten	luces de emergencia	Varningsljus	spie	światła ostrzegawcze
Yellow/green	Gelb / grün	Jaune/vert	Geel/groen	Amarillo / verde	Gul / grön	Giallo / verde	Żółty / zielony

ASSA ABLOY


Basic Wiring Diagram MCS Albany

Doc.no / Dok.nr

Rev. A3 6411R0002

Albany RP100 Type 2820 MCS-R

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER CONTACTOR/RELAY		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE GfA		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE DISABLED		
	SPECIAL SETUP RELAYS	RELAY (SET FUNKTION)	R1 TYPE BRAKE	RELEASE DELAY 0 ms
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 40		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 18		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	SAFETY 1 KL2 1-2 DISABLED	CONNECTED 8K2	CONNECTED DOWN FULL REV.	
	REVERSE DELAY	REVERSE DELAY 20		
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

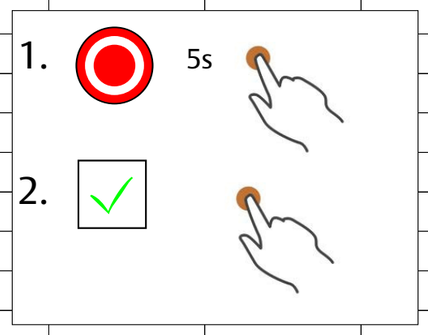

Albany RP100 Type 2820 MCS-FC

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER INVERTER FS		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE GfA		
	MOTOR SETUP INV. PROFILE UP	MAX SPEED 110 Hz		
		SLOW SPEED 20 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 550 Incr.		
	MOTOR SETUP INV. PRFL. DOWN	MAX SPEED 65 Hz		
		SLOW SPEED 20 Hz		
		MEDIUM SPEED 65 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 400 Incr.		
		REVERSE DUR. 20 ms		
		DOOR BALANCED NO		
	MOTOR SETUP FU PROFIL MOTOR	FU PROFIL MOTOR GfA 0.65kW		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE DISABLED		
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 20		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 30		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	SAFETY 1 KL2 1-2 DISABLED	CONNECTED 8K2	CONNECTED DOWN FULL REV.	
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

Albany RR200 Type 4110 MCS-FC

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER INVERTER FS		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE GfA		
	MOTOR SETUP INV. PROFILE UP	MAX SPEED 90 Hz		
		SLOW SPEED 20 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 512 Incr.		
	MOTOR SETUP INV. PRFL. DOWN	MAX SPEED 35 Hz		
		SLOW SPEED 20 Hz		
		MEDIUM SPEED 35 Hz		
		START RAMP 1200 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 300 Incr.		
		REVERSE DUR. 20 ms		
		DOOR BALANCED NO		
	MOTOR SETUP FU PROFIL MOTOR	FU PROFIL MOTOR GfA 0.65kW		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY X	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. X
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 30		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 12		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	OSE2 SETUP KL4 DISABLED	NOT CONNECTED 4-W PHOTOC. KL4	NOT CONNECTED DOWN FULL REV.	
	SAFETY 1 KL2 1-2 DISABLED	CONNECTED 8K2	CONNECTED DOWN FULL REV.	
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

ASSA ABLOY


Basic Wiring Diagram MCS Albany

Doc.no / Dok.nr

Rev. A3 6411R0002

Albany RR300 Type 1100 MCS-R

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER CONTACTOR/RELAY		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE GfA		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP RELAYS	RELAY (SET FUNKTION)	R1 TYPE BRAKE	RELEASE DELAY 0 ms
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 100		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 18		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	SAFETY 1 KL2 1-2 DISABLED	CONNECTED 8K2	CONNECTED DOWN FULL REV.	
	REVERSE DELAY	REVERSE DELAY 20		
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

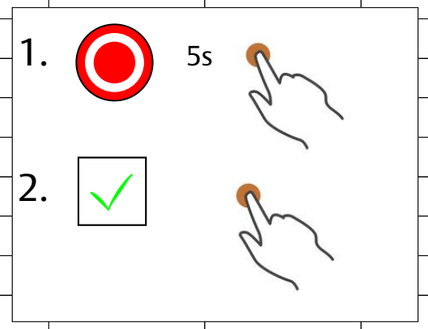

Albany RR300 Type 1100 FLEXEDGE MCS-R

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER CONTACTOR/RELAY		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE GfA		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP RELAYS	RELAY (SET FUNKTION)	R1 TYPE BRAKE	RELEASE DELAY 0 ms
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 100		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 10		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	OSE2 SETUP KL4 DISABLED	NOT CONNECTED 4-W PHOTOC. KL4	NOT CONNECTED DOWN FULL REV.	
	REVERSE DELAY	REVERSE DELAY 20		
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

Albany RR300 Type 1100 MCS-FC

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER INVERTER FS		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE GfA		
	MOTOR SETUP INV. PROFILE UP	MAX SPEED 90 Hz		
		SLOW SPEED 20 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 500 Incr.		
	MOTOR SETUP INV. PRFL. DOWN	MAX SPEED 40 Hz		
		SLOW SPEED 20 Hz		
		MEDIUM SPEED 40 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 300 Incr.		
		REVERSE DUR. 20 ms		
		DOOR BALANCED NO		
	MOTOR SETUP FU PROFIL MOTOR	FU PROFIL MOTOR GfA 0.75kW		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 30		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 23		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	SAFETY 1 KL2 1-2 DISABLED	CONNECTED 8K2	CONNECTED DOWN FULL REV.	
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

ASSA ABLOY

Basic Wiring Diagram MCS
Albany

Doc.no / Dok.nr


Rev. A3 6411R0002

Albany RR300 Type 1100 FLEXEDGE MCS-FC

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER INVERTER FS		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE GfA		
	MOTOR SETUP INV. PROFILE UP	MAX SPEED 90 Hz		
		SLOW SPEED 20 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 500 Incr.		
	MOTOR SETUP INV. PRFL. DOWN	MAX SPEED 40 Hz		
		SLOW SPEED 20 Hz		
		MEDIUM SPEED 40 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 300 Incr.		
		REVERSE DUR. 20 ms		
		DOOR BALANCED NO		
	MOTOR SETUP FU PROFIL MOTOR	FU PROFIL MOTOR GfA 0.75kW		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 30		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 17		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	OSE2 SETUP KL4 DISABLED	NOT CONNECTED 4-W PHOTOC. KL4	NOT CONNECTED DOWN FULL REV.	
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

Albany RR300 Plus Type 1300 MCS-R

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER CONTACTOR/RELAY		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE GfA		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP RELAYS	RELAY (SET FUNKTION)	R1 TYPE BRAKE	RELEASE DELAY 0 ms
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 50		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 31		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	SAFETY 1 KL2 1-2 DISABLED	CONNECTED 8K2	CONNECTED DOWN FULL REV.	
	REVERSE DELAY	REVERSE DELAY 20		
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

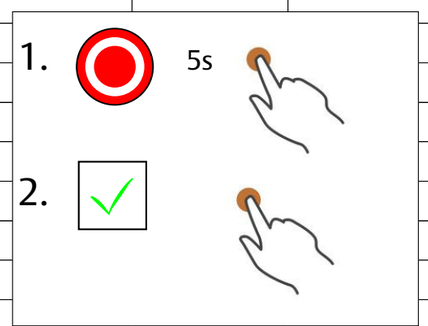

Albany RR300 Plus Type 1300 MCS-FC

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER INVERTER FS		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE GfA		
	MOTOR SETUP INV. PROFILE UP	MAX SPEED 90 Hz		
		SLOW SPEED 20 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 600 ms		
		STOP RAMP 650 Incr.		
	MOTOR SETUP INV. PRFL. DOWN	MAX SPEED 40 Hz		
		SLOW SPEED 20 Hz		
		MEDIUM SPEED 40 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 300 Incr.		
		REVERSE DUR. 20 ms		
		DOOR BALANCED NO		
	MOTOR SETUP FU PROFIL MOTOR	FU PROFIL MOTOR GfA 0.75kW		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 30		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 23		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	SAFETY 1 KL2 1-2 DISABLED	CONNECTED 8K2	CONNECTED DOWN FULL REV.	
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

ASSA ABLOY

Basic Wiring Diagram MCS Albany

Doc.no / Dok.nr

Rev. A3 6411R0002

Albany RR300 Plus Type 1300 FLEXEDGE MCS-FC


LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER INVERTER FS		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE GfA		
	MOTOR SETUP INV. PROFILE UP	MAX SPEED 90 Hz		
		SLOW SPEED 20 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 600 ms		
		STOP RAMP 650 Incr.		
	MOTOR SETUP INV. PRFL. DOWN	MAX SPEED 40 Hz		
		SLOW SPEED 20 Hz		
		MEDIUM SPEED 40 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 300 Incr.		
		REVERSE DUR. 20 ms		
		DOOR BALANCED NO		
	MOTOR SETUP FU PROFIL MOTOR	FU PROFIL MOTOR GfA 0.75kW		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 30		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 14		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	OSE2 SETUP KL4 DISABLED	NOT CONNECTED 4-W PHOTOC. KL4	NOT CONNECTED DOWN FULL REV.	
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

Albany RR300 Plus Type 1300 FLEXEDGE MCS-R

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER CONTACTOR/RELAY		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE GfA		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP RELAYS	RELAY (SET FUNKTION)	R1 TYPE BRAKE	RELEASE DELAY 0 ms
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 50		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 14		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	OSE2 SETUP KL4 DISABLED	NOT CONNECTED 4-W PHOTOC. KL4	NOT CONNECTED DOWN FULL REV.	
	REVERSE DELAY	REVERSE DELAY 20		
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

Albany RR300 Retail Type 284 (AKTOR LCS) MCS-FC

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER INVERTER FS		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE GfA		
	MOTOR SETUP INV. PROFILE UP	MAX SPEED 95 Hz		
		SLOW SPEED 20 Hz		
		START RAMP 700 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 600 Incr.		
	MOTOR SETUP INV. PRFL. DOWN	MAX SPEED 36 Hz		
		SLOW SPEED 20 Hz		
		MEDIUM SPEED 36 Hz		
		START RAMP 700 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 300 Incr.		
		REVERSE DUR. 20 ms		
		DOOR BALANCED NO		
	MOTOR SETUP FU PROFIL MOTOR	FU PROFIL MOTOR GfA 0.37kW		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 30		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 30		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 200		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL REV.	
	OSE2 SETUP KL4 DISABLED	NOT CONNECTED 4-W PHOTOC. KL4	NOT CONNECTED DOWN FULL REV.	
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

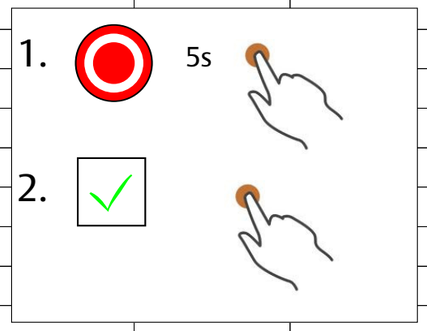

ASSA ABLOY

Basic Wiring Diagram MCS
Albany

Doc.no / Dok.nr


Rev. A3 6411R0002

Albany RR100 Type 1000 without Wind Ribs


LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER INVERTER FS		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE GfA		
	MOTOR SETUP INV. PROFILE UP	MAX SPEED 90 Hz		
		SLOW SPEED 20 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 500 Incr.		
	MOTOR SETUP INV. PRFL. DOWN	MAX SPEED 40 Hz		
		SLOW SPEED 20 Hz		
		MEDIUM SPEED 40 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 300 Incr.		
		REVERSE DUR. 20 ms		
		DOOR BALANCED NO		
	MOTOR SETUP FU PROFIL MOTOR	FU PROFIL MOTOR GfA 0.65kW		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 30		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 23		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	SAFETY 1 KL2 1-2 DISABLED	CONNECTED 8K2	CONNECTED DOWN FULL REV.	
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

Albany RR100 Type 1000 with Wind Ribs

LANGUAGE	LANGUAGE ENGLISH			
SERVICE	SERVICE SET TIME	YYYY-MM-DD HH:MM:SS		
	SERVICE MAINTE. COMPLETE	CONFIRM: SAVE OTHER KEY: ESC.		
	SERVICE MAINT. INTERVALS	LIMIT DOORCYCLES 50000		
		LIMIT DAYS 180		
MOTOR SETUP	MOTOR SETUP MOTOR DIRECTION	MOTOR DIRECTION LEFT		
	MOTOR SETUP ENCODER DIR.	ENCODER DIR. CLOCKW. INCR.		
	MOTOR SETUP MOTOR CONTROLLER	MOTOR CONTROLLER INVERTER FS		
	MOTOR SETUP LIMITSWITCH TYPE	LIMITSWITCH TYPE GfA		
	MOTOR SETUP INV. PROFILE UP	MAX SPEED 70 Hz		
		SLOW SPEED 20 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 500 Incr.		
	MOTOR SETUP INV. PRFL. DOWN	MAX SPEED 40 Hz		
		SLOW SPEED 20 Hz		
		MEDIUM SPEED 40 Hz		
		START RAMP 512 ms		
		SLOWDOWN SLOPE 512 ms		
		STOP RAMP 300 Incr.		
		REVERSE DUR. 20 ms		
		DOOR BALANCED NO		
	MOTOR SETUP FU PROFIL MOTOR	FU PROFIL MOTOR GfA 0.65kW		
SPECIAL SETUP	SPECIAL SETUP AUTO CLOSE	AUTO CLOSE ENABLED	CLOSE DELAY 10	
			TRIG. AUTO CLOSE DISABLED	MAX EMERGN.-REV. 3
	SPECIAL SETUP DOOR CTRL MODE	DOOR CTRL MODE HIGHSPEED DOOR		
	SPECIAL SETUP EXTERNAL BUTTONS	IN DEADMAN MODE NOT ACTIVE		
ADJUST ENDPOS.	ADJUST ENDPOS. TOP	END POSITION TOP XXXX		
	ADJUST ENDPOS. BOTTOM	END POS. BOTTOM XXXX		
	ADJUST ENDPOS. BRAKE OFFSET	BRAKE OFFSET 30		
	ADJUST ENDPOS. PRE END POSITION	PRE END POSITION 23		
	ADJUST ENDPOS. SAFETY LIMIT	SAFETY LIMIT 50		
SAFETY DEVICES	4-W PHOTOC. KL5 DISABLED	4-W PHOTOC. KL5 TESTED INV.	4-W PHOTOC. KL5 DOWN FULL/SW OFF	DISABLE PHOTOC. XXXX
	SAFETY 1 KL2 1-2 DISABLED	CONNECTED 8K2	CONNECTED DOWN FULL REV.	
OPERATING MODE	OPERATING MODE AUTOMATIC ↑/↓			

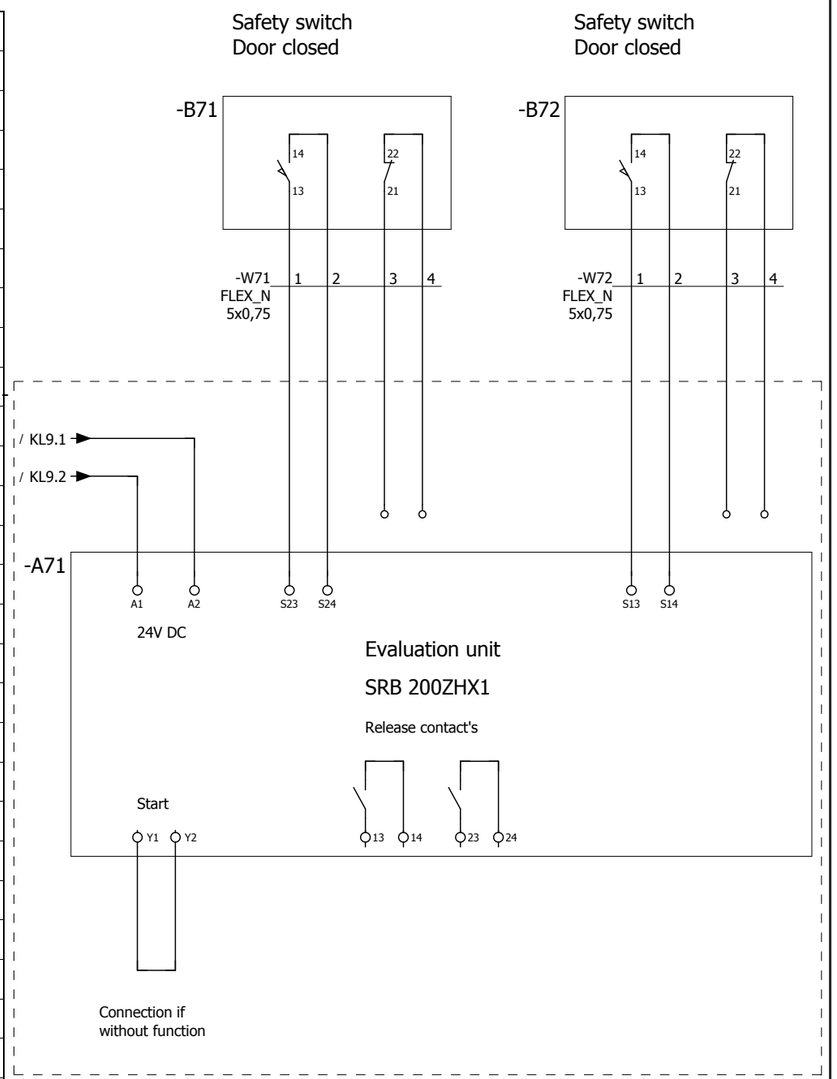

Option Safety Limit Switches

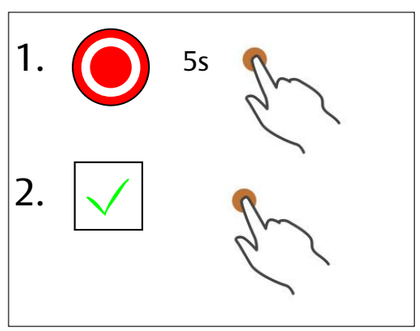

ASSA ABLOY

Basic Wiring Diagram MCS Albany

Doc.no / Dok.nr

Rev. A3

6411R0002