CLIENT	**:**	**CIAL**
PROJECT	**:**	**Installation of door for hanger at Cochin Airport**
LOCATION	**:**	**Kochi, Kerala**
PROJECT NO.	**:**	**1714**
DOCUMENT NO.	**:**	**STATIC-REPORT-001**

0	23.06.2022	For Information	R.H.B	H.A.B	
Rev No.	**Date**	**Description**	**Prepared By**	**Checked By**	**Approved By**

TABLE OF CONTENTS

Sr. No	Contents	Page No.
1	**Design Philosophy**	3
2	**Design Codes and Standards**	4
3	**Material Specifications Construction**	4
4	**Load Calculations**	5
4.1	Dead Load	5
4.2	Live Load	5
4.3	Equipment Loads	6
4.4	Wind Load Calculations	14
4.5	Seismic Load Calculation	15
5	**Primary Loads and Load Combinations**	16

1. Introduction purpose and scope

Cochin International Airport is located in Cochin city, Kerala state of India. The airport has two hangers for maintenance of planes adjacent to each other viz. 'Hanger 1' and 'Hanger 2'. Hanger 2 has a sliding door installed. Purpose of the door is to achieve weather protection from all sides in working area. Hanger 1 currently has no door and concerned authority wants to install new doors. NIHVA Technologies has been appointed to install the doors.

Purpose of this document to establish design and assumptions structural framing system to support the door. Currently there is an existing roof truss below which the door should be installed. In this calculation it will be established that existing roof truss can take additional dead load and operating load due to the door. Also, wind load will be applied and will be transferred to MWFRS of existing building. Additional framing is required to install the door. This framing will be connected to existing truss through bolted connections.

2. Design Philosophy

As door is installed on new framing, various DL and operating loads acting at different points on frame are transferred to existing truss. By truss action, the loads are then transferred to nearest columns and then the load is dispersed to foundation. The lateral loads due to wind shall be acting when door is closed. Wind braces are provided at locations mentioned in drawing. Lateral load is partially transferred through mullion to its foundation and partially to wind braces. Lateral load in braces is transferred through main wind force resisting system of roof truss. The end frames of structure are braced, which in turn will transfer load to respective foundations. The complete arrangement is modeled as 3D frame and analyzed/designed for worst combination of loads through STAAD.pro. Input and output files are enclosed which are self-explanatory. From the STAAD output, the support reactions for various primary load cases are tabulated accordingly.

3. Design Codes and Standards

Design and fabrication of equipment will be carried out as per following codes and standards.

Code / Standard	Applicability	Remark
IS800-2007	Design of steel structures	--
ASME Section IX	Welding & Brazing Qualifications	--
IS 875-Part I, II, III	For all load application and load cases other than earthquake load	--
IS1893	For seismic load applications	--


4. Material Specification For Construction

Material Specifications				
Sr. No.	**Materials**		**Specification**	**Minimum Strength**
1	Hot Rolled	Tubes	Indian Standards	Fy = 310 N/mm^2
		Channels	Indian Standards	Fy = 250 N/mm^2
		Beams, Columns, Plates, Angles, Bars	Indian Standards	Fy = 250 N/mm^2
2	Cold Formed	Handrail Pipe	Indian Standards	Fy = 230 N/mm^2
3	High Strength Bolts		Indian Standards	Fy = 630 N/mm^2
4	Nuts		Indian Standards	-
5	Washers		Indian Standards	-
6	Taper Washers		Indian Standards	-
7	Grating (Hot Dip Galvanized)		Bearing Bar 25x5 @ 30 C/C & 6 mm square twisted bar @ 100 mm C/C	-

5. Load Calculations

a. Dead Load

Self-weight of various structural members is applied using “selfweight” command in STAAD Pro.
Dead load is applied for roof sheeting on existing roof truss
Assuming spacing of adjacent truss as 2.5m and assuming dead load of sheeting as 0.2kN/sqm
DL=0.2x2.5 = 0.5kN/m

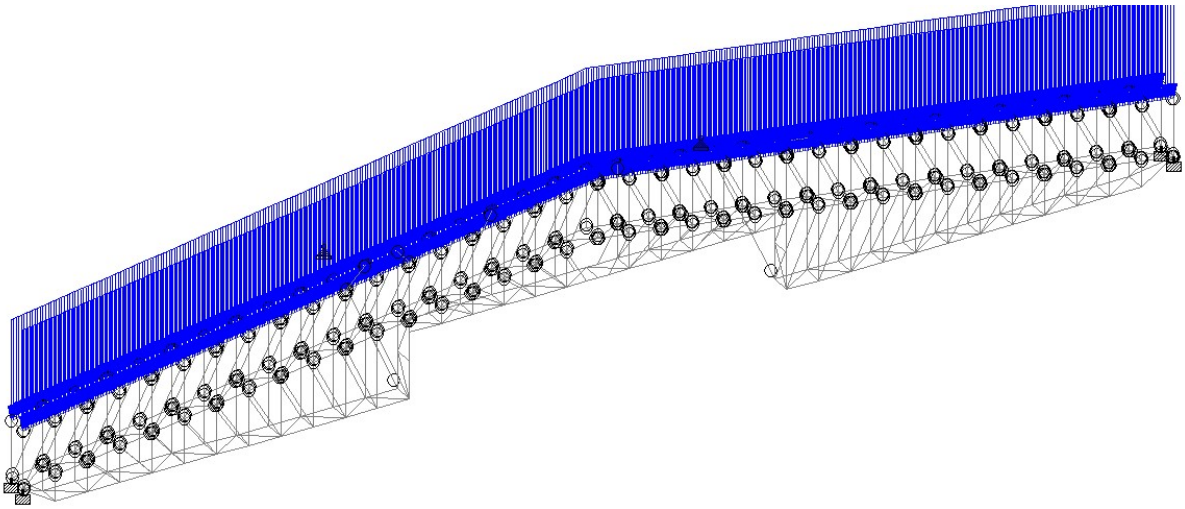


b. Live load

Live load on top of existing truss is applied in live load case.
Assuming live load of 0.75kN/m2
LL = 2.5x0.75 = 1.875kN/m


c. Door closed case

All dead loads for door are provided by ASSA ABLOY in drawing number 77249
Other dead loads of the door are applied in 2 cases
Case 1: Door closed

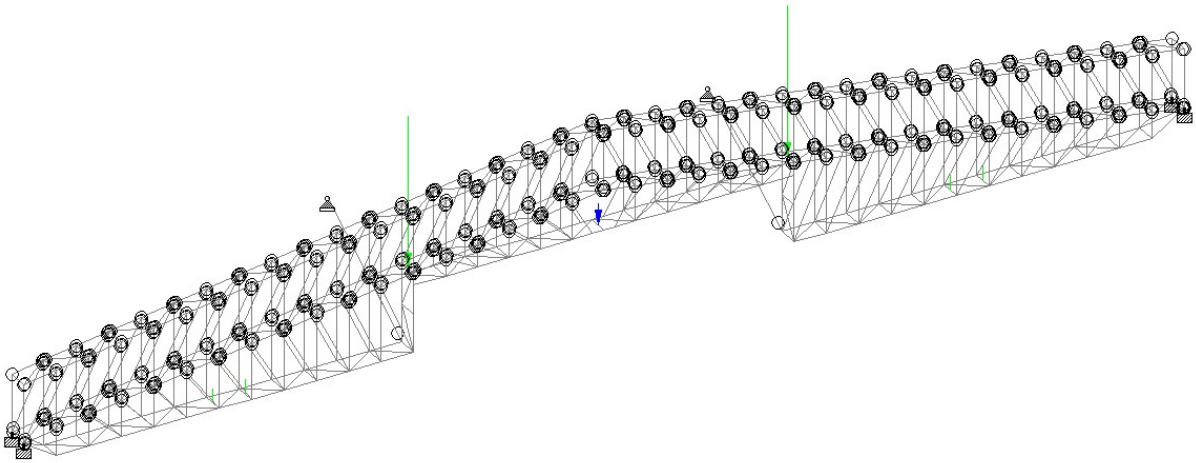


d. Operating load

Case 2: Door open

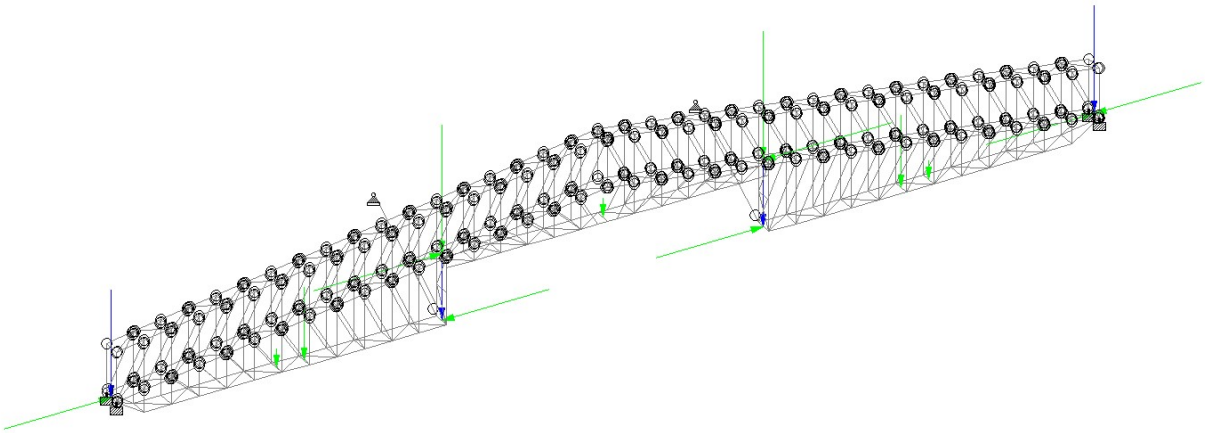


e. Testing load

Additional load to be applied during testing procedure is applied in “testing” load case.

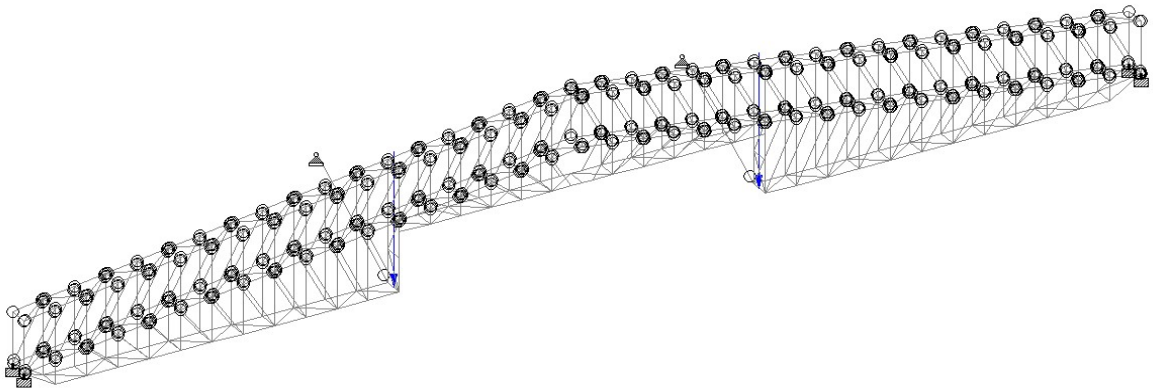

f. Wind load

Wind load shall be acting on the door and will be transferred to existing truss through 2 points where mullions will be installed.

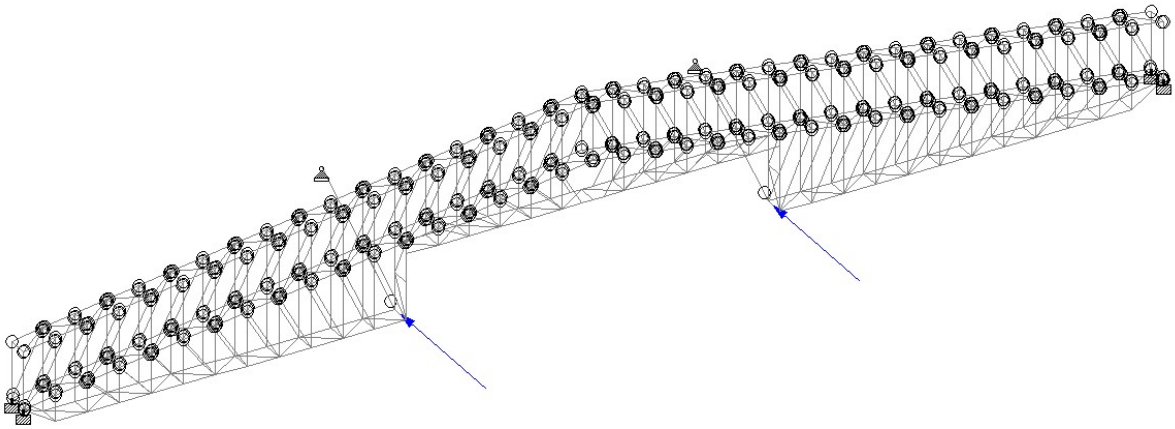

5. Primary Loads and Load Combinations

Primary loads

- Load 1 Dead Load (DL)
- Load 2 Live Load (LL)
- Load 3 Door Open
- Load 4 Door Closed
- Load 5 Testing load
- Load 6 Wind load

Load combinations

- LOAD COMB **101** 1.5DL+1.5LL+1.5DOOR OPEN
- LOAD COMB **102** 1.5DL+1.5LL+1.5DOOR CLOSED
- LOAD COMB **103** 1.5DL+1.5TESTING
- LOAD COMB **104** 1.2DL+1.2DOOR CLOSED+1.2WIND LOAD
- LOAD COMB **201** DL+LL+DOOR OPEN

ANNEXURE A – STAAD OUTPUT

PAGE NO. 1

```
            **************************************************
            *                                                *
            *          STAAD.Pro CONNECT Edition             *
            *          Version  22.02.00.26                  *
            *          Proprietary Program of                *
            *          Bentley Systems, Inc.                 *
            *          Date=    JUN 24, 2022                 *
            *          Time=    19:17:51                     *
            *                                                *
            *  Licensed to: only @ ::LAVTeam:: (R)           *
            **************************************************


     1. STAAD SPACE
INPUT FILE: C:\Users\HARSHA~1\OneDrive\Salt\1714CO~1\staad\cochin.STD
     2. START JOB INFORMATION
     3. ENGINEER DATE 28-MAY-22
     4. END JOB INFORMATION
     5. INPUT WIDTH 79
     6. UNIT METER KN
     7. JOINT COORDINATES
     8. 1 0 0 0; 2 49.4501 0 0; 3 24.7251 3.63301 0; 5 16.625 -0.920002 0
     9. 6 32.8251 -0.920002 0; 9 16.625 2.44282 0; 10 32.8251 2.44282 0
    10. 11 1.38542 0.203568 0; 12 2.77084 0.407137 0; 13 4.15626 0.610705 0
    11. 14 5.54168 0.814274 0; 15 6.9271 1.01784 0; 16 8.31252 1.22141 0
    12. 17 9.69794 1.42498 0; 18 11.0834 1.62855 0; 19 12.4688 1.83212 0
    13. 20 13.8542 2.03568 0; 21 15.2396 2.23925 0; 22 13.8542 -0.920002 0
    14. 23 11.0834 -0.920002 0; 24 8.31252 -0.920002 0; 25 5.54168 -0.920002 0
    15. 26 6.9271 -0.920002 0; 27 4.15626 -0.920002 0; 28 2.77084 -0.920002 0
    16. 29 1.38542 -0.920002 0; 30 9.69794 -0.920002 0; 31 12.4688 -0.920002 0
    17. 32 15.2396 -0.920002 0; 33 24.7251 1.92282 0; 34 17.975 2.64119 0
    18. 35 19.325 2.83955 0; 36 20.675 3.03791 0; 37 22.025 3.23628 0
    19. 38 23.375 3.43464 0; 39 23.375 1.92282 0; 40 22.025 1.92282 0
    20. 41 20.675 1.92282 0; 42 19.325 1.92282 0; 43 17.975 1.92282 0
    21. 44 48.0647 0.203568 0; 45 46.6793 0.407137 0; 46 45.2938 0.610705 0
    22. 47 43.9084 0.814274 0; 48 42.523 1.01784 0; 49 41.1376 1.22141 0
    23. 50 39.7522 1.42498 0; 51 38.3667 1.62855 0; 52 36.9813 1.83212 0
    24. 53 35.5959 2.03568 0; 54 34.2105 2.23925 0; 55 35.5959 -0.920002 0
    25. 56 38.3667 -0.920002 0; 57 41.1376 -0.920002 0; 58 43.9084 -0.920002 0
    26. 59 42.523 -0.920002 0; 60 45.2938 -0.920002 0; 61 46.6793 -0.920002 0
    27. 62 48.0647 -0.920002 0; 63 39.7522 -0.920002 0; 64 36.9813 -0.920002 0
    28. 65 34.2105 -0.920002 0; 66 31.4751 2.64118 0; 67 30.1251 2.83955 0
    29. 68 28.7751 3.03791 0; 69 27.4251 3.23628 0; 70 26.0751 3.43464 0
    30. 71 26.0751 1.92282 0; 72 27.4251 1.92282 0; 73 28.7751 1.92282 0
    31. 74 30.1251 1.92282 0; 75 31.4751 1.92282 0; 76 0 0 -0.900002
    32. 77 49.4501 0 -0.900002; 78 24.7251 3.63301 -0.900002
    33. 79 16.625 -0.920002 -0.900002; 80 32.8251 -0.920002 -0.900002
    34. 81 16.625 2.44282 -0.900002; 82 32.8251 2.44282 -0.900002
    35. 83 1.38542 0.203568 -0.900002; 84 2.77084 0.407137 -0.900002
    36. 85 4.15626 0.610705 -0.900002; 86 5.54168 0.814274 -0.900002
    37. 87 6.9271 1.01784 -0.900002; 88 8.31252 1.22141 -0.900002
    38. 89 9.69794 1.42498 -0.900002; 90 11.0834 1.62855 -0.900002
```

39. 91 12.4688 1.83212 -0.900002; 92 13.8542 2.03568 -0.900002
40. 93 15.2396 2.23925 -0.900002; 94 13.8542 -0.920002 -0.900002
41. 95 11.0834 -0.920002 -0.900002; 96 8.31252 -0.920002 -0.900002
42. 97 5.54168 -0.920002 -0.900002; 98 6.9271 -0.920002 -0.900002
43. 99 4.15626 -0.920002 -0.900002; 100 2.77084 -0.920002 -0.900002
44. 101 1.38542 -0.920002 -0.900002; 102 9.69794 -0.920002 -0.900002
45. 103 12.4688 -0.920002 -0.900002; 104 15.2396 -0.920002 -0.900002
46. 105 24.7251 1.92282 -0.900002; 106 17.975 2.64119 -0.900002
47. 107 19.325 2.83955 -0.900002; 108 20.675 3.03791 -0.900002
48. 109 22.025 3.23628 -0.900002; 110 23.375 3.43464 -0.900002
49. 111 23.375 1.92282 -0.900002; 112 22.025 1.92282 -0.900002
50. 113 20.675 1.92282 -0.900002; 114 19.325 1.92282 -0.900002
51. 115 17.975 1.92282 -0.900002; 116 48.0647 0.203568 -0.900002
52. 117 46.6793 0.407137 -0.900002; 118 45.2938 0.610705 -0.900002
53. 119 43.9084 0.814274 -0.900002; 120 42.523 1.01784 -0.900002
54. 121 41.1376 1.22141 -0.900002; 122 39.7522 1.42498 -0.900002
55. 123 38.3667 1.62855 -0.900002; 124 36.9813 1.83212 -0.900002
56. 125 35.5959 2.03568 -0.900002; 126 34.2105 2.23925 -0.900002
57. 127 35.5959 -0.920002 -0.900002; 128 38.3667 -0.920002 -0.900002
58. 129 41.1376 -0.920002 -0.900002; 130 43.9084 -0.920002 -0.900002
59. 131 42.523 -0.920002 -0.900002; 132 45.2938 -0.920002 -0.900002
60. 133 46.6793 -0.920002 -0.900002; 134 48.0647 -0.920002 -0.900002
61. 135 39.7522 -0.920002 -0.900002; 136 36.9813 -0.920002 -0.900002
62. 137 34.2105 -0.920002 -0.900002; 138 31.4751 2.64118 -0.900002
63. 139 30.1251 2.83955 -0.900002; 140 28.7751 3.03791 -0.900002
64. 141 27.4251 3.23628 -0.900002; 142 26.0751 3.43464 -0.900002
65. 143 26.0751 1.92282 -0.900002; 144 27.4251 1.92282 -0.900002
66. 145 28.7751 1.92282 -0.900002; 146 30.1251 1.92282 -0.900002
67. 147 31.4751 1.92282 -0.900002; 148 0 2.50001 0; 149 49.4501 2.50001 0
68. 150 24.7251 6.13301 0; 151 16.625 4.94283 0; 152 32.8251 4.94283 0
69. 153 1.38542 2.70357 0; 154 2.77084 2.90714 0; 155 4.15626 3.11071 0
70. 156 5.54168 3.31428 0; 157 6.9271 3.51785 0; 158 8.31252 3.72142 0
71. 159 9.69794 3.92498 0; 160 11.0834 4.12855 0; 161 12.4688 4.33212 0
72. 162 13.8542 4.53569 0; 163 15.2396 4.73926 0; 164 17.975 5.14119 0
73. 165 19.325 5.33955 0; 166 20.675 5.53792 0; 167 22.025 5.73628 0
74. 168 23.375 5.93465 0; 169 48.0647 2.70357 0; 170 46.6793 2.90714 0
75. 171 45.2938 3.11071 0; 172 43.9084 3.31428 0; 173 42.523 3.51785 0
76. 174 41.1376 3.72142 0; 175 39.7522 3.92498 0; 176 38.3667 4.12855 0
77. 177 36.9813 4.33212 0; 178 35.5959 4.53569 0; 179 34.2105 4.73926 0
78. 180 31.4751 5.14119 0; 181 30.1251 5.33955 0; 182 28.7751 5.53792 0
79. 183 27.4251 5.73628 0; 184 26.0751 5.93465 0; 186 0 2.50001 -0.900002
80. 187 49.4501 2.50001 -0.900002; 188 24.7251 6.13301 -0.900002
81. 189 16.625 4.94283 -0.900002; 190 32.8251 4.94283 -0.900002
82. 191 1.38542 2.70357 -0.900002; 192 2.77084 2.90714 -0.900002
83. 193 4.15626 3.11071 -0.900002; 194 5.54168 3.31428 -0.900002
84. 195 6.9271 3.51785 -0.900002; 196 8.31252 3.72142 -0.900002
85. 197 9.69794 3.92498 -0.900002; 198 11.0834 4.12855 -0.900002
86. 199 12.4688 4.33212 -0.900002; 200 13.8542 4.53569 -0.900002
87. 201 15.2396 4.73926 -0.900002; 202 17.975 5.14119 -0.900002
88. 203 19.325 5.33955 -0.900002; 204 20.675 5.53792 -0.900002
89. 205 22.025 5.73628 -0.900002; 206 23.375 5.93465 -0.900002
90. 207 48.0647 2.70357 -0.900002; 208 46.6793 2.90714 -0.900002
91. 209 45.2938 3.11071 -0.900002; 210 43.9084 3.31428 -0.900002
92. 211 42.523 3.51785 -0.900002; 212 41.1376 3.72142 -0.900002
93. 213 39.7522 3.92498 -0.900002; 214 38.3667 4.12855 -0.900002
94. 215 36.9813 4.33212 -0.900002; 216 35.5959 4.53569 -0.900002

```
 95. 217 34.2105 4.73926 -0.900002; 218 31.4751 5.14119 -0.900002
 96. 219 30.1251 5.33955 -0.900002; 220 28.7751 5.53792 -0.900002
 97. 221 27.4251 5.73628 -0.900002; 222 26.0751 5.93465 -0.900002
 98. 223 16.625 0.686409 0; 224 16.625 0.686409 -0.900002; 225 32.8251 0.686409 0
 99. 226 32.8251 0.686409 -0.900002; 227 16.625 2.5 -6.40001
100. 228 32.8251 2.5 -6.40001; 229 16.625 1.92282 0; 230 16.625 1.92282 -0.900002
101. 231 32.8251 1.92282 0; 232 32.8251 1.92282 -0.900002; 233 25.2251 1.92282 0
102. 234 25.2251 1.92282 -0.900002; 235 24.225 1.92282 0
103. 236 24.225 1.92282 -0.900002
104. MEMBER INCIDENCES
105. 1 1 11; 2 3 70; 3 1 29; 7 6 65; 8 5 223; 9 6 225; 10 9 34; 11 10 54; 12 229 43
106. 13 11 12; 14 12 13; 15 13 14; 16 14 15; 17 15 16; 18 16 17; 19 17 18; 20 18 19
107. 21 19 20; 22 20 21; 23 21 9; 24 22 32; 25 20 22; 26 23 31; 27 18 23; 28 24 30
108. 29 16 24; 30 25 26; 31 14 25; 32 26 24; 33 15 26; 34 27 25; 35 13 27; 36 28 27
109. 37 12 28; 41 24 15; 42 26 14; 43 25 13; 44 27 12; 45 29 28; 46 11 29; 47 30 23
110. 48 17 30; 49 31 22; 50 19 31; 51 22 19; 52 31 18; 53 23 17; 54 30 16; 55 32 5
111. 56 21 32; 57 5 21; 58 32 20; 59 33 233; 61 34 35; 62 35 36; 63 36 37; 64 37 38
112. 65 38 3; 66 39 235; 67 38 39; 68 40 39; 69 37 40; 70 41 40; 71 36 41; 72 42 41
113. 73 35 42; 74 43 42; 75 34 43; 76 235 38; 77 39 37; 78 40 36; 79 41 35
114. 80 42 34; 81 44 2; 82 45 44; 83 46 45; 84 47 46; 85 48 47; 86 49 48; 87 50 49
115. 88 51 50; 89 52 51; 90 53 52; 91 54 53; 92 55 64; 93 56 63; 94 57 59; 95 58 60
116. 96 59 58; 97 60 61; 98 61 62; 99 62 2; 100 63 57; 101 64 56; 102 65 55
117. 103 66 10; 104 67 66; 105 68 67; 106 69 68; 107 70 69; 108 71 72; 109 72 73
118. 110 73 74; 111 74 75; 112 75 231; 113 53 55; 114 51 56; 115 49 57; 116 47 58
119. 117 48 59; 118 46 60; 119 45 61; 120 57 48; 121 59 47; 122 58 46; 123 60 45
120. 124 44 62; 125 50 63; 126 52 64; 127 55 52; 128 64 51; 129 56 50; 130 63 49
121. 131 54 65; 132 6 54; 133 65 53; 134 70 71; 135 69 72; 136 68 73; 137 67 74
122. 138 66 75; 139 233 70; 140 71 69; 141 72 68; 142 73 67; 143 74 66; 144 1 76
123. 145 2 77; 146 3 78; 147 5 79; 148 6 80; 149 9 81; 150 10 82; 151 11 83
124. 152 12 84; 153 13 85; 154 14 86; 155 15 87; 156 16 88; 157 17 89; 158 18 90
125. 159 19 91; 160 20 92; 161 21 93; 162 22 94; 163 23 95; 164 24 96; 165 25 97
126. 166 26 98; 167 27 99; 168 28 100; 169 29 101; 170 30 102; 171 31 103
127. 172 32 104; 173 33 105; 174 34 106; 175 35 107; 176 36 108; 177 37 109
128. 178 38 110; 179 39 111; 180 40 112; 181 41 113; 182 42 114; 183 43 115
129. 184 44 116; 185 45 117; 186 46 118; 187 47 119; 188 48 120; 189 49 121
130. 190 50 122; 191 51 123; 192 52 124; 193 53 125; 194 54 126; 195 55 127
131. 196 56 128; 197 57 129; 198 58 130; 199 59 131; 200 60 132; 201 61 133
132. 202 62 134; 203 63 135; 204 64 136; 205 65 137; 206 66 138; 207 67 139
133. 208 68 140; 209 69 141; 210 70 142; 211 71 143; 212 72 144; 213 73 145
134. 214 74 146; 215 75 147; 216 76 83; 217 78 142; 218 76 101; 219 80 137
135. 220 79 224; 221 80 226; 222 81 106; 223 82 126; 224 230 115; 225 83 84
136. 226 84 85; 227 85 86; 228 86 87; 229 87 88; 230 88 89; 231 89 90; 232 90 91
137. 233 91 92; 234 92 93; 235 93 81; 236 94 104; 237 92 94; 238 95 103; 239 90 95
138. 240 96 102; 241 88 96; 242 97 98; 243 86 97; 244 98 96; 245 87 98; 246 99 97
139. 247 85 99; 248 100 99; 249 84 100; 250 96 87; 251 98 86; 252 97 85; 253 99 84
140. 254 101 100; 255 83 101; 256 102 95; 257 89 102; 258 103 94; 259 91 103
141. 260 94 91; 261 103 90; 262 95 89; 263 102 88; 264 104 79; 265 93 104
142. 266 79 93; 267 104 92; 268 105 234; 270 106 107; 271 107 108; 272 108 109
143. 273 109 110; 274 110 78; 275 111 236; 276 110 111; 277 112 111; 278 109 112
144. 279 113 112; 280 108 113; 281 114 113; 282 107 114; 283 115 114; 284 106 115
145. 285 236 110; 286 111 109; 287 112 108; 288 113 107; 289 114 106; 290 116 77
146. 291 117 116; 292 118 117; 293 119 118; 294 120 119; 295 121 120; 296 122 121
147. 297 123 122; 298 124 123; 299 125 124; 300 126 125; 301 127 136; 302 128 135
148. 303 129 131; 304 130 132; 305 131 130; 306 132 133; 307 133 134; 308 134 77
149. 309 135 129; 310 136 128; 311 137 127; 312 138 82; 313 139 138; 314 140 139
150. 315 141 140; 316 142 141; 317 143 144; 318 144 145; 319 145 146; 320 146 147
```

151. 321 147 232; 322 125 127; 323 123 128; 324 121 129; 325 119 130; 326 120 131
152. 327 118 132; 328 117 133; 329 129 120; 330 131 119; 331 130 118; 332 132 117
153. 333 116 134; 334 122 135; 335 124 136; 336 127 124; 337 136 123; 338 128 122
154. 339 135 121; 340 126 137; 341 80 126; 342 137 125; 343 142 143; 344 141 144
155. 345 140 145; 346 139 146; 347 138 147; 348 234 142; 349 143 141; 350 144 140
156. 351 145 139; 352 146 138; 353 1 148; 354 2 149; 355 3 150; 356 9 151
157. 357 10 152; 358 11 153; 359 12 154; 360 13 155; 361 14 156; 362 15 157
158. 363 16 158; 364 17 159; 365 18 160; 366 19 161; 367 20 162; 368 21 163
159. 369 34 164; 370 35 165; 371 36 166; 372 37 167; 373 38 168; 374 44 169
160. 375 45 170; 376 46 171; 377 47 172; 378 48 173; 379 49 174; 380 50 175
161. 381 51 176; 382 52 177; 383 53 178; 384 54 179; 385 180 66; 386 67 181
162. 387 68 182; 388 69 183; 389 70 184; 391 76 186; 392 77 187; 393 78 188
163. 394 81 189; 395 82 190; 396 83 191; 397 84 192; 398 85 193; 399 86 194
164. 400 87 195; 401 88 196; 402 89 197; 403 90 198; 404 91 199; 405 92 200
165. 406 93 201; 407 106 202; 408 107 203; 409 108 204; 410 109 205; 411 110 206
166. 412 116 207; 413 117 208; 414 118 209; 415 119 210; 416 120 211; 417 121 212
167. 418 122 213; 419 123 214; 420 124 215; 421 125 216; 422 126 217; 423 218 138
168. 424 139 219; 425 140 220; 426 141 221; 427 142 222; 429 148 153; 430 150 184
169. 431 151 164; 432 152 179; 433 153 154; 434 154 155; 435 155 156; 436 156 157
170. 437 157 158; 438 158 159; 439 159 160; 440 160 161; 441 161 162; 442 162 163
171. 443 163 151; 444 164 165; 445 165 166; 446 166 167; 447 167 168; 448 168 150
172. 449 169 149; 450 170 169; 451 171 170; 452 172 171; 453 173 172; 454 174 173
173. 455 175 174; 456 176 175; 457 177 176; 458 178 177; 459 179 178; 460 180 152
174. 461 181 180; 462 182 181; 463 183 182; 464 184 183; 466 186 191; 467 188 222
175. 468 189 202; 469 190 217; 470 191 192; 471 192 193; 472 193 194; 473 194 195
176. 474 195 196; 475 196 197; 476 197 198; 477 198 199; 478 199 200; 479 200 201
177. 480 201 189; 481 202 203; 482 203 204; 483 204 205; 484 205 206; 485 206 188
178. 486 207 187; 487 208 207; 488 209 208; 489 210 209; 490 211 210; 491 212 211
179. 492 213 212; 493 214 213; 494 215 214; 495 216 215; 496 217 216; 497 218 190
180. 498 219 218; 499 220 219; 500 221 220; 501 222 221; 503 187 149; 504 188 150
181. 505 189 151; 506 190 152; 507 191 153; 508 192 154; 509 193 155; 510 194 156
182. 511 195 157; 512 196 158; 513 197 159; 514 198 160; 515 199 161; 516 200 162
183. 517 201 163; 518 202 164; 519 203 165; 520 204 166; 521 205 167; 522 206 168
184. 523 207 169; 524 208 170; 525 209 171; 526 210 172; 527 211 173; 528 212 174
185. 529 213 175; 530 214 176; 531 215 177; 532 216 178; 533 217 179; 534 218 180
186. 535 219 181; 536 220 182; 537 221 183; 538 222 184; 540 186 148; 541 1 153
187. 542 11 154; 543 12 155; 544 13 156; 545 14 157; 546 15 158; 547 16 159
188. 548 17 160; 549 18 161; 550 19 162; 551 20 163; 552 21 151; 553 9 164
189. 554 34 165; 555 35 166; 556 36 167; 557 37 168; 558 38 150; 559 2 169
190. 560 44 170; 561 45 171; 562 46 172; 563 47 173; 564 48 174; 565 49 175
191. 566 50 176; 567 51 177; 568 52 178; 569 53 179; 570 54 152; 571 10 180
192. 572 66 181; 573 67 182; 574 68 183; 575 69 184; 576 70 150; 577 76 191
193. 578 83 192; 579 84 193; 580 85 194; 581 86 195; 582 87 196; 583 88 197
194. 584 89 198; 585 90 199; 586 91 200; 587 92 201; 588 93 189; 589 81 202
195. 590 106 203; 591 107 204; 592 108 205; 593 109 206; 594 110 188; 595 77 207
196. 596 116 208; 597 117 209; 598 118 210; 599 119 211; 600 120 212; 601 121 213
197. 602 122 214; 603 123 215; 604 124 216; 605 125 217; 606 126 190; 607 82 218
198. 608 138 219; 609 139 220; 610 140 221; 611 141 222; 612 142 188; 613 148 191
199. 614 191 154; 615 154 193; 616 193 156; 617 156 195; 618 195 158; 619 158 197
200. 620 197 160; 621 160 199; 622 199 162; 623 162 201; 624 201 151; 625 151 202
201. 626 202 165; 627 165 204; 628 204 167; 629 167 206; 630 206 150; 631 149 207
202. 632 207 170; 633 170 209; 634 209 172; 635 172 211; 636 211 174; 637 174 213
203. 638 213 176; 639 176 215; 640 215 178; 641 178 217; 642 217 152; 643 152 218
204. 644 218 181; 645 181 220; 646 220 183; 647 183 222; 648 222 150; 649 1 83
205. 650 83 12; 651 12 85; 652 85 14; 653 14 87; 654 87 16; 655 16 89; 656 89 18
206. 657 18 91; 658 91 20; 659 20 93; 660 93 9; 661 9 106; 662 106 35; 663 35 108

```
207. 664 108 37; 665 37 110; 666 110 3; 667 2 116; 668 116 45; 669 45 118
208. 670 118 47; 671 47 120; 672 120 49; 673 49 122; 674 122 51; 675 51 124
209. 676 124 53; 677 53 126; 678 126 10; 679 10 138; 680 138 67; 681 67 140
210. 682 140 69; 683 69 142; 684 142 3; 685 1 101; 686 101 28; 687 28 99; 688 99 25
211. 689 25 98; 690 98 24; 691 24 102; 692 102 23; 693 23 103; 694 103 22
212. 695 22 104; 696 104 5; 697 230 43; 698 43 114; 699 114 41; 700 41 112
213. 701 112 39; 702 39 105; 703 2 134; 704 134 61; 705 61 132; 706 132 58
214. 707 58 131; 708 131 57; 709 57 135; 710 135 56; 711 56 136; 712 136 55
215. 713 55 137; 714 137 6; 715 232 75; 716 75 146; 717 146 73; 718 73 144
216. 719 144 71; 720 71 105; 721 223 229; 722 224 230; 723 224 223; 724 5 224
217. 725 224 9; 726 225 231; 727 226 232; 728 226 225; 729 6 226; 730 226 10
218. 731 79 227; 732 80 228; 733 66 75; 734 138 147; 735 229 9; 737 230 81
219. 739 231 10; 741 232 82; 742 233 71; 743 234 143; 744 235 33; 745 236 105
220. DEFINE PMEMBER
221. 1 13 TO 23 PMEMBER 1
222. 10 61 TO 65 PMEMBER 2
223. START GROUP DEFINITION
224. MEMBER
225. _EXISTING 1 2 10 11 13 TO 23 61 TO 65 81 TO 91 103 TO 107 144 TO 146 -
226. 149 TO 161 174 TO 178 184 TO 194 206 TO 210 216 217 222 223 225 TO 235 270 -
227. 271 TO 274 290 TO 300 312 TO 316 353 TO 389 391 TO 427 429 TO 464 466 TO 501 -
228. 503 TO 538 540 TO 684 703 735 737
229. END GROUP DEFINITION
230. DEFINE MATERIAL START
231. ISOTROPIC STEEL
232. E 1.99947E+08
233. POISSON 0.3
234. DENSITY 76.8191
235. ALPHA 6.5E-06
236. DAMP 0.03
237. TYPE STEEL
238. STRENGTH RY 1.5 RT 1.2
239. END DEFINE MATERIAL
240. MEMBER PROPERTY INDIAN
241. 1 2 10 11 13 TO 23 61 TO 65 81 TO 91 103 TO 107 216 217 222 223 225 TO 235 -
242. 270 TO 274 290 TO 300 312 TO 316 429 TO 464 466 TO 500 -
243. 501 TABLE LD ISA100X100X12
244. 144 TO 146 149 TO 215 503 TO 538 540 547 TO 558 565 TO 576 583 TO 594 601 -
245. 602 TO 612 TABLE LD ISA65X65X8
246. MEMBER PROPERTY TATASTRUCTURA
247. 25 27 29 31 33 35 37 41 TO 44 46 48 50 TO 54 56 58 67 69 71 73 75 TO 80 113 -
248. 114 TO 131 133 TO 143 237 239 241 243 245 247 249 TO 253 255 257 259 TO 263 -
249. 265 267 276 278 280 282 284 TO 289 322 TO 340 342 TO 352 735 737 739 -
250. 741 TABLE ST 50X50X2.9SHS
251. 3 7 TO 9 12 24 26 28 30 32 34 36 45 47 49 55 57 59 66 68 70 72 74 92 TO 102 -
252. 108 TO 112 132 147 148 218 TO 221 224 236 238 240 242 244 246 248 254 256 -
253. 258 264 266 268 275 277 279 281 283 301 TO 311 317 TO 321 341 721 TO 730 -
254. 742 TO 745 TABLE ST 72X72X3.2SHS
255. MEMBER PROPERTY INDIAN
256. 613 TO 720 TABLE ST ISA65X65X8
257. 353 TO 389 391 TO 427 541 TO 546 559 TO 564 577 TO 582 595 TO 600 733 -
258. 734 TABLE LD ISA100X100X8
259. MEMBER PROPERTY TATASTRUCTURA
260. 731 732 TABLE ST 150X150X6.0SHS
261. CONSTANTS
262. MATERIAL STEEL ALL
```

```
263. SUPPORTS
264. 1 2 76 77 FIXED
265. 227 228 PINNED
266. MEMBER RELEASE
267. 1 145 146 149 TO 161 174 TO 178 184 TO 194 206 TO 210 216 355 TO 389 -
268. 393 TO 427 503 TO 538 540 TO 684 731 732 START MY MZ
269. 81 145 146 149 TO 161 174 TO 178 184 TO 194 206 TO 210 290 355 TO 389 393 -
270. 394 TO 427 503 TO 538 540 TO 684 END MY MZ
271. LOAD 1 LOADTYPE DEAD  TITLE DL
**WARNING- MEMBERS     733 &     138 ARE BETWEEN THE SAME JOINTS.
**WARNING- MEMBERS     347 &     734 ARE BETWEEN THE SAME JOINTS.
272. SELFWEIGHT Y -1
273. MEMBER LOAD
274. 429 TO 464 466 TO 501 UNI GY -0.5
275. LOAD 2 LOADTYPE LIVE  TITLE LL
276. MEMBER LOAD
277. 429 TO 464 466 TO 501 UNI GY -1.875
278. LOAD 3 LOADTYPE NONE  TITLE DOOR CLOSED
279. MEMBER LOAD
280. 144 145 CON GY -0.3
281. 164 170 197 203 CON GY -2.3
282. 173 CON GY -3.3
283. 149 150 CON GY -22.8
284. LOAD 4 LOADTYPE NONE  TITLE DOOR OPEN
285. MEMBER LOAD
286. 144 145 147 148 CON GY -18
287. 145 147 CON GX -18
288. 144 145 148 CON GX 18
289. 164 173 197 CON GY -3.3
290. 170 203 CON GY -12.2
291. 149 150 CON GY -12.3
292. 149 150 CON GY -21.5
293. 150 CON GX -21.5
294. 149 CON GX 21.5
295. LOAD 5 LOADTYPE NONE  TITLE TESTING LOAD
296. MEMBER LOAD
297. 147 148 CON GY -55
298. LOAD 6 LOADTYPE NONE  TITLE WIND LOAD
299. MEMBER LOAD
300. 147 148 CON GZ -213
301. LOAD COMB 101 1.5(DL+LL+DOOR OPEN)
302. 1 1.5 2 1.5 4 1.5
303. LOAD COMB 102 1.5(DL+LL+DOOR CLOSED)
304. 1 1.5 2 1.5 3 1.5
305. LOAD COMB 103 1.5DL+1.5TESTING
306. 1 1.5 5 1.5
307. LOAD COMB 104 1.2DL+1.2DOOR CLOSED+1.2WIND LOAD
308. 1 1.2 3 1.2 6 1.2
309. LOAD COMB 201 DL+LL+DOOR OPEN
310. 1 1.0 2 1.0 4 1.0
311. PERFORM ANALYSIS
```

STAAD SPACE -- PAGE NO. 7

P R O B L E M S T A T I S T I C S

NUMBER OF JOINTS	232	NUMBER OF MEMBERS	729
NUMBER OF PLATES	0	NUMBER OF SOLIDS	0
NUMBER OF SURFACES	0	NUMBER OF SUPPORTS	6

Using 64-bit analysis engine.

SOLVER USED IS THE IN-CORE ADVANCED MATH SOLVER

TOTAL PRIMARY LOAD CASES = 6, TOTAL DEGREES OF FREEDOM = 1362
TOTAL LOAD COMBINATION CASES = 5 SO FAR.

312. PARAMETER 1
313. CODE IS800 LSD
314. FYLD 250000 ALL
315. CHECK CODE ALL
STEEL DESIGN

Member Number:	1				
Member Section:	LD	ISA100X100X12	(INDIAN SECTIONS)		
Status: PASS	Ratio:	0.562	Critical Load Case:	101	Location: 1.40
Critical Condition: Sec. 9.3.2.2					

Member Number:	2				
Member Section:	LD	ISA100X100X12	(INDIAN SECTIONS)		
Status: PASS	Ratio:	0.349	Critical Load Case:	104	Location: 0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 8

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number:	3				
Member Section:	ST 72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.274	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number:	7				
Member Section:	ST 72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.255	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number:	8				
Member Section:	ST 72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.586	Critical Load Case:	103	Location:	0.00
Critical Condition: Sec. 8.2.1.2					

Member Number:	9				
Member Section:	ST 72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.586	Critical Load Case:	103	Location:	0.00
Critical Condition: Sec. 8.2.1.2					

STAAD SPACE -- PAGE NO. 9

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 10					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.268	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 11					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.187	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 12					
Member Section: ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.088	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 8.2.1.2					

Member Number: 13					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.485	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 10

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 14					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.440	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 15					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.372	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 16					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.337	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 17					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.280	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 11

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 18					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.269	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 19					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.231	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 20					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.212	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 21					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.184	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 22					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.175	Critical Load Case:	104	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 23					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.180	Critical Load Case:	104	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 24					
Member Section: ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.065	Critical Load Case:	4	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

Member Number: 25					
Member Section: ST	50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.063	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 6.2					

STAAD SPACE -- PAGE NO. 13

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number:	26				
Member Section:	ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)		
Status: PASS	Ratio:	0.045	Critical Load Case:	102	Location: 0.00
Critical Condition: Sec. 6.2					

Member Number:	27				
Member Section:	ST	50X50X2.9SHS	(TATA STRUCTURA SECTIONS)		
Status: PASS	Ratio:	0.196	Critical Load Case:	102	Location: 2.55
Critical Condition: Sec. 9.3.2.2					

Member Number:	28				
Member Section:	ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)		
Status: PASS	Ratio:	0.066	Critical Load Case:	104	Location: 0.00
Critical Condition: Sec. 9.3.2.2					

Member Number:	29				
Member Section:	ST	50X50X2.9SHS	(TATA STRUCTURA SECTIONS)		
Status: PASS	Ratio:	0.193	Critical Load Case:	101	Location: 0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 14

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 30					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.121	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 31					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.208	Critical Load Case:	101	Location:	1.73
Critical Condition: Sec. 9.3.2.2					

Member Number: 32					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.117	Critical Load Case:	104	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

Member Number: 33					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.228	Critical Load Case:	101	Location:	1.94
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 15

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 34					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.141	Critical Load Case:	104	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

Member Number: 35					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.158	Critical Load Case:	101	Location:	1.53
Critical Condition: Sec. 9.3.2.2					

Member Number: 36					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.202	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 37					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.046	Critical Load Case:	104	Location:	1.33
Critical Condition: Sec. 8.2.1.2					

STAAD SPACE -- PAGE NO. 16

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 41					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.215	Critical Load Case:	6	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 42					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.194	Critical Load Case:	6	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 43					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.181	Critical Load Case:	6	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 44					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.162	Critical Load Case:	6	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 17

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 45					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.167	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 46					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.105	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 6.2					

Member Number: 47					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.088	Critical Load Case:	6	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

Member Number: 48					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.213	Critical Load Case:	101	Location:	2.34
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 18

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 49					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.068	Critical Load Case:	6	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 50					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.139	Critical Load Case:	102	Location:	2.75
Critical Condition: Sec. 9.3.2.2					

Member Number: 51					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.265	Critical Load Case:	104	Location:	3.08
Critical Condition: Sec. 9.3.2.2					

Member Number: 52					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.237	Critical Load Case:	6	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 19

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number:	53				
Member Section:	ST 50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.211	Critical Load Case:	6	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number:	54				
Member Section:	ST 50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.190	Critical Load Case:	6	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number:	55				
Member Section:	ST 72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.254	Critical Load Case:	101	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

Member Number:	56				
Member Section:	ST 50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.081	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 6.2					

STAAD SPACE -- PAGE NO. 20

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 57					
Member Section: ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.206	Critical Load Case: 103	Location:	0.00	
Critical Condition: Sec. 8.2.1.2					

Member Number: 58					
Member Section: ST	50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.378	Critical Load Case: 104	Location:	3.26	
Critical Condition: Sec. 9.3.2.2					

Member Number: 59					
Member Section: ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.524	Critical Load Case: 104	Location:	0.00	
Critical Condition: Sec. 9.3.2.2					

Member Number: 61					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.237	Critical Load Case: 104	Location:	0.00	
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 21

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 62					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.243	Critical Load Case: 104	Location:	1.36	
Critical Condition: Sec. 9.3.2.2					

Member Number: 63					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.252	Critical Load Case: 104	Location:	0.00	
Critical Condition: Sec. 9.3.2.2					

Member Number: 64					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.279	Critical Load Case: 104	Location:	1.36	
Critical Condition: Sec. 9.3.2.2					

Member Number: 65					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.349	Critical Load Case: 104	Location:	1.36	
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 22

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 66					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.487	Critical Load Case:	104	Location:	0.85
Critical Condition: Sec. 9.3.2.2					

Member Number: 67					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.180	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 6.2					

Member Number: 68					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.407	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 69					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.143	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 6.2					

STAAD SPACE -- PAGE NO. 23

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 70					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.272	Critical Load Case:	104	Location:	1.35
Critical Condition: Sec. 9.3.2.2					

Member Number: 71					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.122	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 6.2					

Member Number: 72					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.161	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 73					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.112	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 6.2					

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number:	74				
Member Section:	ST 72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.006	Critical Load Case:	103	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number:	75				
Member Section:	ST 50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.118	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 8.2.1.2					

Member Number:	76				
Member Section:	ST 50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.053	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 8.2.1.2					

Member Number:	77				
Member Section:	ST 50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.474	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 25

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 78					
Member Section: ST	50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.393	Critical Load Case: 104	Location:	0.00	
Critical Condition: Sec. 9.3.2.2					

Member Number: 79					
Member Section: ST	50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.326	Critical Load Case: 104	Location:	0.00	
Critical Condition: Sec. 9.3.2.2					

Member Number: 80					
Member Section: ST	50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.336	Critical Load Case: 104	Location:	1.53	
Critical Condition: Sec. 9.3.2.2					

Member Number: 81					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.562	Critical Load Case: 101	Location:	0.00	
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 26

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 82					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.485	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 83					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.440	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 84					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.371	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 85					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.337	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 27

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 86					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.280	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 87					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.268	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 88					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.231	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 89					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.212	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 28

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 90					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.183	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 91					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.176	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 92					
Member Section: ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.068	Critical Load Case:	6	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

Member Number: 93					
Member Section: ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.088	Critical Load Case:	6	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 29

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 94					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.117	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 95					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.141	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 96					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.120	Critical Load Case:	101	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

Member Number: 97					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.202	Critical Load Case:	101	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 30

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 98					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.167	Critical Load Case:	104	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

Member Number: 99					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.274	Critical Load Case:	101	Location:	1.66
Critical Condition: Sec. 9.3.2.2					

Member Number: 100					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.066	Critical Load Case:	104	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

Member Number: 101					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.045	Critical Load Case:	102	Location:	0.00
Critical Condition: Sec. 6.2					

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 102					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.065	Critical Load Case:	4	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 103					
Member Section: LD ISA100X100X12 (INDIAN SECTIONS)					
Status: PASS	Ratio: 0.276	Critical Load Case:	104	Location:	1.36
Critical Condition: Sec. 9.3.2.2					

Member Number: 104					
Member Section: LD ISA100X100X12 (INDIAN SECTIONS)					
Status: PASS	Ratio: 0.237	Critical Load Case:	104	Location:	1.36
Critical Condition: Sec. 9.3.2.2					

Member Number: 105					
Member Section: LD ISA100X100X12 (INDIAN SECTIONS)					
Status: PASS	Ratio: 0.241	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 32

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 106					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.252	Critical Load Case:	104	Location:	1.36
Critical Condition: Sec. 9.3.2.2					

Member Number: 107					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.279	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 108					
Member Section: ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.411	Critical Load Case:	104	Location:	1.35
Critical Condition: Sec. 9.3.2.2					

Member Number: 109					
Member Section: ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.275	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 33

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 110					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.164	Critical Load Case:	104	Location:	1.35
Critical Condition: Sec. 9.3.2.2					

Member Number: 111					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.038	Critical Load Case:	104	Location:	1.35
Critical Condition: Sec. 8.2.1.2					

Member Number: 112					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.100	Critical Load Case:	104	Location:	1.35
Critical Condition: Sec. 8.2.1.2					

Member Number: 113					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.063	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 6.2					

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 114					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.196	Critical Load Case:	102	Location:	2.55
Critical Condition: Sec. 9.3.2.2					

Member Number: 115					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.193	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 116					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.208	Critical Load Case:	101	Location:	1.73
Critical Condition: Sec. 9.3.2.2					

Member Number: 117					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.228	Critical Load Case:	101	Location:	1.94
Critical Condition: Sec. 9.3.2.2					

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 118					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.158	Critical Load Case:	101	Location:	1.53
Critical Condition: Sec. 9.3.2.2					

Member Number: 119					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.046	Critical Load Case:	104	Location:	1.33
Critical Condition: Sec. 8.2.1.2					

Member Number: 120					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.216	Critical Load Case:	6	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 121					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.194	Critical Load Case:	6	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 122					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.181	Critical Load Case:	6	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 123					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.162	Critical Load Case:	6	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 124					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.105	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 6.2					

Member Number: 125					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.213	Critical Load Case:	101	Location:	2.34
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 37

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 126					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.139	Critical Load Case:	102	Location:	2.75
Critical Condition: Sec. 9.3.2.2					

Member Number: 127					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.265	Critical Load Case:	104	Location:	3.08
Critical Condition: Sec. 9.3.2.2					

Member Number: 128					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.237	Critical Load Case:	6	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 129					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.211	Critical Load Case:	6	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 38

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 130					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.190	Critical Load Case:	6	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 131					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.081	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 6.2					

Member Number: 132					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.206	Critical Load Case:	103	Location:	0.00
Critical Condition: Sec. 8.2.1.2					

Member Number: 133					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.378	Critical Load Case:	104	Location:	3.26
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 39

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 134					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.181	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 6.2					

Member Number: 135					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.144	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 6.2					

Member Number: 136					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.121	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 6.2					

Member Number: 137					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.110	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 6.2					

STAAD SPACE -- PAGE NO. 40

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 138					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.049	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 8.2.1.2					

Member Number: 139					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.053	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 8.2.1.2					

Member Number: 140					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.478	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 141					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.395	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 41

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 142					
Member Section: ST	50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.328	Critical Load Case: 104	Location:	0.00	
Critical Condition: Sec. 9.3.2.2					

Member Number: 143					
Member Section: ST	50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.321	Critical Load Case: 104	Location:	0.00	
Critical Condition: Sec. 9.3.2.2					

Member Number: 144					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.806	Critical Load Case: 101	Location:	0.00	
Critical Condition: Sec. 9.3.1.1					

Member Number: 145					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.897	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 42

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 146						
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.007	Critical Load Case:	101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1						

* Member Number: 147						
Member Section: ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)				
Status: FAIL	Ratio: 5.559	Critical Load Case:	103	Location:	0.45	
Critical Condition: Sec. 9.3.1.1						

* Member Number: 148						
Member Section: ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)				
Status: FAIL	Ratio: 5.560	Critical Load Case:	103	Location:	0.45	
Critical Condition: Sec. 9.3.1.1						

* Member Number: 149						
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)				
Status: FAIL	Ratio: 2.539	Critical Load Case:	101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1						

STAAD SPACE -- PAGE NO. 43

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

|* Member Number: 150
| Member Section: LD ISA65X65X8 (INDIAN SECTIONS)
| Status: FAIL Ratio: 2.539 Critical Load Case: 101 Location: 0.45
| Critical Condition: Sec. 9.3.1.1

| Member Number: 151
| Member Section: LD ISA65X65X8 (INDIAN SECTIONS)
| Status: PASS Ratio: 0.016 Critical Load Case: 101 Location: 0.45
| Critical Condition: Sec. 9.3.1.1

| Member Number: 152
| Member Section: LD ISA65X65X8 (INDIAN SECTIONS)
| Status: PASS Ratio: 0.020 Critical Load Case: 101 Location: 0.45
| Critical Condition: Sec. 9.3.1.1

| Member Number: 153
| Member Section: LD ISA65X65X8 (INDIAN SECTIONS)
| Status: PASS Ratio: 0.019 Critical Load Case: 101 Location: 0.45
| Critical Condition: Sec. 9.3.1.1

STAAD SPACE -- PAGE NO. 44

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 154					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.016	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 155					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.015	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 156					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.013	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 157					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.012	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 45

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 158					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.011	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 159					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.010	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 160					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.009	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 161					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.008	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 46

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 162					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.018	Critical Load Case: 103	Location:	0.00	
Critical Condition: Sec. 9.3.1.1					

Member Number: 163					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.041	Critical Load Case: 101	Location:	0.00	
Critical Condition: Sec. 9.3.1.1					

Member Number: 164					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.160	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 165					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.047	Critical Load Case: 104	Location:	0.00	
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 47

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 166					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.035	Critical Load Case: 104	Location:	0.00	
Critical Condition: Sec. 9.3.1.1					

Member Number: 167					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.029	Critical Load Case: 104	Location:	0.00	
Critical Condition: Sec. 9.3.1.1					

Member Number: 168					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.027	Critical Load Case: 101	Location:	0.00	
Critical Condition: Sec. 9.3.1.1					

Member Number: 169					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.032	Critical Load Case: 101	Location:	0.90	
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 48

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 170					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.499	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 171					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.018	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.1.1					

Member Number: 172					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.084	Critical Load Case:	103	Location:	0.90
Critical Condition: Sec. 9.3.1.1					

Member Number: 173					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.141	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 49

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 174					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.009	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 175					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.010	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 176					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.010	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 177					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.010	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 50

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 178					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.009	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 179					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.045	Critical Load Case:	104	Location:	0.90
Critical Condition: Sec. 9.3.1.1					

Member Number: 180					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.042	Critical Load Case:	104	Location:	0.90
Critical Condition: Sec. 9.3.1.1					

Member Number: 181					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.021	Critical Load Case:	104	Location:	0.90
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 51

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 182					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.018	Critical Load Case: 104	Location:	0.90	
Critical Condition: Sec. 9.3.1.1					

Member Number: 183					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.016	Critical Load Case: 103	Location:	0.00	
Critical Condition: Sec. 9.3.1.1					

Member Number: 184					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.016	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 185					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.020	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 52

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 186					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.019	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 187					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.016	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 188					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.015	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 189					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.013	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 190					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.012	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 191					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.011	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 192					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.010	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 193					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.009	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 54

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 194					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.008	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 195					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.018	Critical Load Case: 103	Location:	0.00	
Critical Condition: Sec. 9.3.1.1					

Member Number: 196					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.041	Critical Load Case: 101	Location:	0.00	
Critical Condition: Sec. 9.3.1.1					

Member Number: 197					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.160	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 55

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 198					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.047	Critical Load Case: 104	Location:	0.00	
Critical Condition: Sec. 9.3.1.1					

Member Number: 199					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.035	Critical Load Case: 104	Location:	0.00	
Critical Condition: Sec. 9.3.1.1					

Member Number: 200					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.029	Critical Load Case: 104	Location:	0.00	
Critical Condition: Sec. 9.3.1.1					

Member Number: 201					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.027	Critical Load Case: 101	Location:	0.00	
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 56

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 202					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.032	Critical Load Case: 101	Location:	0.90	
Critical Condition: Sec. 9.3.1.1					

Member Number: 203					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.499	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 204					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.018	Critical Load Case: 104	Location:	0.00	
Critical Condition: Sec. 9.3.1.1					

Member Number: 205					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.084	Critical Load Case: 103	Location:	0.90	
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 57

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 206					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.009	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 207					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.010	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 208					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.010	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 209					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.010	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 58

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 210					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.009	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 211					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.045	Critical Load Case: 104	Location:	0.90	
Critical Condition: Sec. 9.3.1.1					

Member Number: 212					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.043	Critical Load Case: 104	Location:	0.90	
Critical Condition: Sec. 9.3.1.1					

Member Number: 213					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.023	Critical Load Case: 104	Location:	0.90	
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 59

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 214					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.021	Critical Load Case: 104	Location:	0.90	
Critical Condition: Sec. 9.3.1.1					

Member Number: 215					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.031	Critical Load Case: 104	Location:	0.90	
Critical Condition: Sec. 9.3.1.1					

Member Number: 216					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.810	Critical Load Case: 104	Location:	1.40	
Critical Condition: Sec. 9.3.2.2					

Member Number: 217					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.237	Critical Load Case: 101	Location:	0.00	
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 60

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 218					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.570	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 219					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.309	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 220					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.692	Critical Load Case:	103	Location:	0.00
Critical Condition: Sec. 8.2.1.2					

Member Number: 221					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.691	Critical Load Case:	103	Location:	0.00
Critical Condition: Sec. 8.2.1.2					

STAAD SPACE -- PAGE NO. 61

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 222					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.127	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 223					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.096	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 224					
Member Section: ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.035	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 8.2.1.2					

Member Number: 225					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.717	Critical Load Case:	104	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 62

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 226					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.668	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 227					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.523	Critical Load Case:	104	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 228					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.499	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 229					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.371	Critical Load Case:	104	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 63

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 230					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.359	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 231					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.234	Critical Load Case:	104	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 232					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.212	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 233					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.156	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 64

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 234					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.133	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 235					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.097	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 236					
Member Section: ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.053	Critical Load Case:	101	Location:	0.58
Critical Condition: Sec. 9.3.2.2					

Member Number: 237					
Member Section: ST	50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.295	Critical Load Case:	104	Location:	2.96
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 65

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 238					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.073	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 239					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.435	Critical Load Case:	104	Location:	2.55
Critical Condition: Sec. 9.3.2.2					

Member Number: 240					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.160	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 241					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.375	Critical Load Case:	104	Location:	2.14
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 66

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 242					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.267	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 243					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.258	Critical Load Case:	104	Location:	1.73
Critical Condition: Sec. 9.3.2.2					

Member Number: 244					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.234	Critical Load Case:	104	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

Member Number: 245					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.324	Critical Load Case:	104	Location:	1.94
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 67

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 246					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.343	Critical Load Case:	104	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

Member Number: 247					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.156	Critical Load Case:	104	Location:	1.53
Critical Condition: Sec. 9.3.2.2					

Member Number: 248					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.358	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 249					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.052	Critical Load Case:	104	Location:	1.33
Critical Condition: Sec. 8.2.1.2					

STAAD SPACE -- PAGE NO. 68

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 250					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.185	Critical Load Case:	104	Location:	2.38
Critical Condition: Sec. 6.2					

Member Number: 251					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.176	Critical Load Case:	104	Location:	2.22
Critical Condition: Sec. 6.2					

Member Number: 252					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.153	Critical Load Case:	104	Location:	2.06
Critical Condition: Sec. 6.2					

Member Number: 253					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.092	Critical Load Case:	101	Location:	1.92
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 69

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 254					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.369	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 255					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.276	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 6.2					

Member Number: 256					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.131	Critical Load Case:	104	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

Member Number: 257					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.446	Critical Load Case:	104	Location:	2.34
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 70

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 258					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.085	Critical Load Case:	6	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

Member Number: 259					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.378	Critical Load Case:	104	Location:	2.75
Critical Condition: Sec. 9.3.2.2					

Member Number: 260					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.261	Critical Load Case:	101	Location:	0.51
Critical Condition: Sec. 9.3.2.2					

Member Number: 261					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.139	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 71

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 262					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.165	Critical Load Case:	104	Location:	2.72
Critical Condition: Sec. 6.2					

Member Number: 263					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.197	Critical Load Case:	104	Location:	2.55
Critical Condition: Sec. 6.2					

Member Number: 264					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.308	Critical Load Case:	101	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

Member Number: 265					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.207	Critical Load Case:	6	Location:	3.16
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 72

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 266					
Member Section: ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.329	Critical Load Case: 101	Location:	0.00	
Critical Condition: Sec. 9.3.2.2					

Member Number: 267					
Member Section: ST	50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.430	Critical Load Case: 101	Location:	0.27	
Critical Condition: Sec. 9.3.2.2					

Member Number: 268					
Member Section: ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.324	Critical Load Case: 101	Location:	0.00	
Critical Condition: Sec. 9.3.2.2					

Member Number: 270					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.134	Critical Load Case: 101	Location:	0.00	
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 73

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 271					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.150	Critical Load Case:	101	Location:	1.36
Critical Condition: Sec. 9.3.2.2					

Member Number: 272					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.161	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 273					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.183	Critical Load Case:	101	Location:	1.36
Critical Condition: Sec. 9.3.2.2					

Member Number: 274					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.237	Critical Load Case:	101	Location:	1.36
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 74

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 275					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.285	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 276					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.131	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 6.2					

Member Number: 277					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.203	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 278					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.091	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 6.2					

STAAD SPACE -- PAGE NO. 75

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 279					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.115	Critical Load Case:	101	Location:	1.35
Critical Condition: Sec. 9.3.2.2					

Member Number: 280					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.056	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 6.2					

Member Number: 281					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.047	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 282					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.030	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 6.2					

STAAD SPACE -- PAGE NO. 76

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 283					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.006	Critical Load Case:	103	Location:	0.00
Critical Condition: Sec. 8.2.1.2					

Member Number: 284					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.037	Critical Load Case:	104	Location:	0.72
Critical Condition: Sec. 8.2.1.2					

Member Number: 285					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.037	Critical Load Case:	101	Location:	1.73
Critical Condition: Sec. 8.2.1.2					

Member Number: 286					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.342	Critical Load Case:	101	Location:	1.88
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 77

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 287					
Member Section: ST	50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.243	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 288					
Member Section: ST	50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.145	Critical Load Case:	101	Location:	0.41
Critical Condition: Sec. 9.3.2.2					

Member Number: 289					
Member Section: ST	50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.082	Critical Load Case:	101	Location:	1.53
Critical Condition: Sec. 9.3.2.2					

Member Number: 290					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.810	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 78

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 291					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.717	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 292					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.668	Critical Load Case:	104	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 293					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.523	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 294					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.499	Critical Load Case:	104	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 79

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 295					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.371	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 296					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.358	Critical Load Case:	104	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 297					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.234	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 298					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.212	Critical Load Case:	104	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 80

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 299					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.156	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 300					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.133	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 301					
Member Section: ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.084	Critical Load Case:	6	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 302					
Member Section: ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.131	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 81

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 303					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.234	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 304					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.343	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 305					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.267	Critical Load Case:	104	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

Member Number: 306					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.358	Critical Load Case:	104	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 82

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 307					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.369	Critical Load Case:	104	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

Member Number: 308					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.570	Critical Load Case:	101	Location:	1.66
Critical Condition: Sec. 9.3.2.2					

Member Number: 309					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.160	Critical Load Case:	101	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

Member Number: 310					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.073	Critical Load Case:	101	Location:	1.39
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 83

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 311					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.052	Critical Load Case: 101	Location:	0.81	
Critical Condition: Sec. 9.3.2.2					

Member Number: 312					
Member Section: LD ISA100X100X12 (INDIAN SECTIONS)					
Status: PASS	Ratio: 0.126	Critical Load Case: 101	Location:	1.36	
Critical Condition: Sec. 9.3.2.2					

Member Number: 313					
Member Section: LD ISA100X100X12 (INDIAN SECTIONS)					
Status: PASS	Ratio: 0.135	Critical Load Case: 101	Location:	1.36	
Critical Condition: Sec. 9.3.2.2					

Member Number: 314					
Member Section: LD ISA100X100X12 (INDIAN SECTIONS)					
Status: PASS	Ratio: 0.150	Critical Load Case: 101	Location:	0.00	
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 84

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 315					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.161	Critical Load Case:	101	Location:	1.36
Critical Condition: Sec. 9.3.2.2					

Member Number: 316					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.183	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 317					
Member Section: ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.203	Critical Load Case:	101	Location:	1.35
Critical Condition: Sec. 9.3.2.2					

Member Number: 318					
Member Section: ST	72X72X3.2SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.114	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 319					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.047	Critical Load Case:	101	Location:	1.35
Critical Condition: Sec. 9.3.2.2					

Member Number: 320					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.008	Critical Load Case:	104	Location:	1.35
Critical Condition: Sec. 8.2.1.2					

Member Number: 321					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.036	Critical Load Case:	101	Location:	1.35
Critical Condition: Sec. 8.2.1.2					

Member Number: 322					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.294	Critical Load Case:	104	Location:	2.96
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 86

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 323					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.435	Critical Load Case:	104	Location:	2.55
Critical Condition: Sec. 9.3.2.2					

Member Number: 324					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.375	Critical Load Case:	104	Location:	2.14
Critical Condition: Sec. 9.3.2.2					

Member Number: 325					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.258	Critical Load Case:	104	Location:	1.73
Critical Condition: Sec. 9.3.2.2					

Member Number: 326					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.324	Critical Load Case:	104	Location:	1.94
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 87

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 327					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.156	Critical Load Case:	104	Location:	1.53
Critical Condition: Sec. 9.3.2.2					

Member Number: 328					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.052	Critical Load Case:	104	Location:	1.33
Critical Condition: Sec. 8.2.1.2					

Member Number: 329					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.185	Critical Load Case:	104	Location:	2.38
Critical Condition: Sec. 6.2					

Member Number: 330					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.176	Critical Load Case:	104	Location:	2.22
Critical Condition: Sec. 6.2					

STAAD SPACE -- PAGE NO. 88

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 331					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.154	Critical Load Case:	104	Location:	2.06
Critical Condition: Sec. 6.2					

Member Number: 332					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.091	Critical Load Case:	101	Location:	1.92
Critical Condition: Sec. 9.3.2.2					

Member Number: 333					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.276	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 6.2					

Member Number: 334					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.446	Critical Load Case:	104	Location:	2.34
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 89

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 335					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.378	Critical Load Case:	104	Location:	2.75
Critical Condition: Sec. 9.3.2.2					

Member Number: 336					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.261	Critical Load Case:	101	Location:	0.51
Critical Condition: Sec. 9.3.2.2					

Member Number: 337					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.139	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 338					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.165	Critical Load Case:	104	Location:	2.72
Critical Condition: Sec. 6.2					

STAAD SPACE -- PAGE NO. 90

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 339					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.198	Critical Load Case:	104	Location:	2.55
Critical Condition: Sec. 6.2					

Member Number: 340					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.207	Critical Load Case:	6	Location:	3.16
Critical Condition: Sec. 9.3.2.2					

Member Number: 341					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.331	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 342					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.431	Critical Load Case:	101	Location:	0.27
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 91

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 343					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.129	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 6.2					

Member Number: 344					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.089	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 6.2					

Member Number: 345					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.054	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 6.2					

Member Number: 346					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.029	Critical Load Case:	104	Location:	0.92
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 92

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 347					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.007	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 8.2.1.2					

Member Number: 348					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.037	Critical Load Case:	101	Location:	1.73
Critical Condition: Sec. 8.2.1.2					

Member Number: 349					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.340	Critical Load Case:	101	Location:	1.88
Critical Condition: Sec. 9.3.2.2					

Member Number: 350					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.240	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 93

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 351					
Member Section: ST	50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.143	Critical Load Case: 101	Location:	0.27	
Critical Condition: Sec. 9.3.2.2					

Member Number: 352					
Member Section: ST	50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.074	Critical Load Case: 101	Location:	0.51	
Critical Condition: Sec. 9.3.2.2					

Member Number: 353					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.131	Critical Load Case: 101	Location:	0.00	
Critical Condition: Sec. 9.3.1.3					

Member Number: 354					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.053	Critical Load Case: 101	Location:	0.00	
Critical Condition: Sec. 9.3.1.3					

STAAD SPACE -- PAGE NO. 94

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 355					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.145	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 7.1.2					

Member Number: 356					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.058	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 357					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.058	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 358					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.208	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 359					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.181	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 360					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.151	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 361					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.132	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 362					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.117	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

STAAD SPACE -- PAGE NO. 96

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 363						
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.102	Critical Load Case:	101	Location:	2.50	
Critical Condition: Sec. 6.2						

Member Number: 364						
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.084	Critical Load Case:	104	Location:	2.50	
Critical Condition: Sec. 6.2						

Member Number: 365						
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.080	Critical Load Case:	104	Location:	2.50	
Critical Condition: Sec. 6.2						

Member Number: 366						
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.078	Critical Load Case:	104	Location:	2.50	
Critical Condition: Sec. 6.2						

STAAD SPACE -- PAGE NO. 97

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 367					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.076	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 368					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.073	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 369					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.147	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 7.1.2					

Member Number: 370					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.122	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 7.1.2					

STAAD SPACE -- PAGE NO. 98

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 371					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.124	Critical Load Case: 101	Location:	0.00	
Critical Condition: Sec. 7.1.2					

Member Number: 372					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.130	Critical Load Case: 101	Location:	0.00	
Critical Condition: Sec. 7.1.2					

Member Number: 373					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.125	Critical Load Case: 101	Location:	0.00	
Critical Condition: Sec. 7.1.2					

Member Number: 374					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.208	Critical Load Case: 101	Location:	2.50	
Critical Condition: Sec. 6.2					

STAAD SPACE -- PAGE NO. 99

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 375					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.181	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 376					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.151	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 377					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.132	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 378					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.117	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

STAAD SPACE -- PAGE NO. 100

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 379					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.102	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 380					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.084	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 381					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.080	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 382					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.078	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 6.2					

STAAD SPACE -- PAGE NO. 101

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 383					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.076	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 384					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.073	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 385					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.147	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 7.1.2					

Member Number: 386					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.122	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 7.1.2					

STAAD SPACE -- PAGE NO. 102

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 387					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.125	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 7.1.2					

Member Number: 388					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.131	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 7.1.2					

Member Number: 389					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.126	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 7.1.2					

Member Number: 391					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.098	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.1.3					

STAAD SPACE -- PAGE NO. 103

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 392					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.041	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.1.3					

Member Number: 393					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.089	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 7.1.2					

Member Number: 394					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.027	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 395					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.027	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

STAAD SPACE -- PAGE NO. 104

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 396					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.205	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 397					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.148	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 398					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.138	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 399					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.117	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

STAAD SPACE -- PAGE NO. 105

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 400					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.102	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 401					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.086	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 402					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.071	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 403					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.065	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 6.2					

STAAD SPACE -- PAGE NO. 106

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 404					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.062	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 405					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.060	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 406					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.061	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 407					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.101	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 7.1.2					

STAAD SPACE -- PAGE NO. 107

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 408					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.112	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 7.1.2					

Member Number: 409					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.109	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 7.1.2					

Member Number: 410					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.106	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 7.1.2					

Member Number: 411					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.104	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 7.1.2					

STAAD SPACE -- PAGE NO. 108

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 412					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.205	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 413					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.148	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 414					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.138	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 415					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.117	Critical Load Case:	101	Location:	2.50
Critical Condition: Sec. 6.2					

STAAD SPACE -- PAGE NO. 109

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 416						
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.102	Critical Load Case:	101	Location:	2.50	
Critical Condition: Sec. 6.2						

Member Number: 417						
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.086	Critical Load Case:	101	Location:	2.50	
Critical Condition: Sec. 6.2						

Member Number: 418						
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.071	Critical Load Case:	104	Location:	2.50	
Critical Condition: Sec. 6.2						

Member Number: 419						
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.065	Critical Load Case:	104	Location:	2.50	
Critical Condition: Sec. 6.2						

STAAD SPACE -- PAGE NO. 110

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 420					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.062	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 421					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.060	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 422					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.061	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 6.2					

Member Number: 423					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.099	Critical Load Case:	104	Location:	2.50
Critical Condition: Sec. 7.1.2					

STAAD SPACE -- PAGE NO. 111

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 424						
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.112	Critical Load Case:	104	Location:	0.00	
Critical Condition: Sec. 7.1.2						

Member Number: 425						
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.109	Critical Load Case:	104	Location:	0.00	
Critical Condition: Sec. 7.1.2						

Member Number: 426						
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.107	Critical Load Case:	101	Location:	0.00	
Critical Condition: Sec. 7.1.2						

Member Number: 427						
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.105	Critical Load Case:	101	Location:	0.00	
Critical Condition: Sec. 7.1.2						

STAAD SPACE -- PAGE NO. 112

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 429					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.068	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.1.1					

Member Number: 430					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.573	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 431					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.729	Critical Load Case:	101	Location:	1.36
Critical Condition: Sec. 9.3.2.2					

Member Number: 432					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.722	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 113

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 433					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.161	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 434					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.254	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 435					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.338	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 436					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.414	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 114

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 437					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.486	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 438					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.538	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 439					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.584	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 440					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.628	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 115

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 441					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.659	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 442					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.697	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 443					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.722	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 444					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.703	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 116

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 445					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.668	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 446					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.639	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 447					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.610	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 448					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.573	Critical Load Case:	101	Location:	1.36
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 117

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 449					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.068	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.1.1					

Member Number: 450					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.162	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 451					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.254	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 452					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.338	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 118

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 453					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.414	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 454					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.486	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 455					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.538	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 456					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.584	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 119

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 457					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.628	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 458					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.659	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 459					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.697	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 460					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.729	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 120

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 461					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.703	Critical Load Case:	101	Location:	1.36
Critical Condition: Sec. 9.3.2.2					

Member Number: 462					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.669	Critical Load Case:	101	Location:	1.36
Critical Condition: Sec. 9.3.2.2					

Member Number: 463					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.640	Critical Load Case:	101	Location:	1.36
Critical Condition: Sec. 9.3.2.2					

Member Number: 464					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.610	Critical Load Case:	101	Location:	1.36
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 121

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 466					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.063	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.1.1					

Member Number: 467					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.516	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 468					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.646	Critical Load Case:	101	Location:	1.36
Critical Condition: Sec. 9.3.2.2					

Member Number: 469					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.644	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 122

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 470					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.155	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 471					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.241	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 472					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.315	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 473					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.387	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 123

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 474					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.448	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 475					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.496	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 476					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.534	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 477					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.572	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 124

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 478					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.594	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 479					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.627	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 480					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.643	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 481					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.632	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 125

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 482					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.604	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 483					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.584	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 484					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.556	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 485					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.516	Critical Load Case:	101	Location:	1.36
Critical Condition: Sec. 9.3.2.2					

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 486					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.063	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.1.1					

Member Number: 487					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.155	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 488					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.241	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 489					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.315	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 127

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 490					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.387	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 491					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.448	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 492					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.497	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 493					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.534	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 128

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 494					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.572	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 495					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.595	Critical Load Case:	101	Location:	1.40
Critical Condition: Sec. 9.3.2.2					

Member Number: 496					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.627	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 497					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.646	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 129

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 498					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.632	Critical Load Case:	101	Location:	1.36
Critical Condition: Sec. 9.3.2.2					

Member Number: 499					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.605	Critical Load Case:	101	Location:	1.36
Critical Condition: Sec. 9.3.2.2					

Member Number: 500					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.584	Critical Load Case:	101	Location:	1.36
Critical Condition: Sec. 9.3.2.2					

Member Number: 501					
Member Section: LD	ISA100X100X12	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.556	Critical Load Case:	101	Location:	1.36
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 130

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 503					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.004	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 504					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.012	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 505					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.027	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 506					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.027	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 131

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 507					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.006	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 508					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.009	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 509					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.012	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 510					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.015	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 132

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 511					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.017	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 512					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.020	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 513					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.021	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 514					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.023	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 133

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 515					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.024	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 516					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.025	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 517					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.026	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 518					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.027	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 134

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 519					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.026	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 520					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.025	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 521					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.023	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 522					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.017	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 135

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 523					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.006	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 524					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.009	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 525					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.012	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 526					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.015	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 136

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 527					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.017	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 528					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.020	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 529					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.021	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 530					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.023	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 137

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 531					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.024	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 532					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.025	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 533					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.026	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

Member Number: 534					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.027	Critical Load Case:	101	Location:	0.45
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 138

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 535					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.026	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 536					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.025	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 537					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.023	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

Member Number: 538					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.017	Critical Load Case: 101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 139

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 540						
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.004	Critical Load Case:	101	Location:	0.45	
Critical Condition: Sec. 9.3.1.1						

***WARNING: THE VALUE OF MOMENT AMPLIFICATION FACTORS KY OR KZ IS GREATER THAN 1.4
FOR MEMBER # 541 FOR LOADCASE- 101. SECOND-ORDER ELASTIC ANALYSIS MUST BE PERFORMED
AS PER SECTION 4.4.2 of IS800-2007. ALSO, ENSURE THAT THE TYPE OF COMBINATION USED IS
REPEAT LOAD OR REFERENCE LOAD INSTEAD OF THE LOAD COMBINATION SYNTAX EXCEPT FOR
RESPONSE SPECTRUM LOAD CASES.

Member Number: 541						
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.561	Critical Load Case:	101	Location:	1.52	
Critical Condition: Sec. 9.3.2.2						

Member Number: 542						
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.486	Critical Load Case:	101	Location:	1.52	
Critical Condition: Sec. 9.3.2.2						

Member Number: 543						
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.413	Critical Load Case:	101	Location:	1.52	
Critical Condition: Sec. 9.3.2.2						

STAAD SPACE -- PAGE NO. 140

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 544						
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.364	Critical Load Case:	101	Location:	1.52	
Critical Condition: Sec. 9.3.2.2						

Member Number: 545						
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.325	Critical Load Case:	101	Location:	1.52	
Critical Condition: Sec. 9.3.2.2						

Member Number: 546						
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.289	Critical Load Case:	101	Location:	1.27	
Critical Condition: Sec. 9.3.2.2						

***WARNING: THE VALUE OF MOMENT AMPLIFICATION FACTORS KY OR KZ IS GREATER THAN 1.4
FOR MEMBER # 547 FOR LOADCASE- 101. SECOND-ORDER ELASTIC ANALYSIS MUST BE PERFORMED
AS PER SECTION 4.4.2 of IS800-2007. ALSO, ENSURE THAT THE TYPE OF COMBINATION USED IS
REPEAT LOAD OR REFERENCE LOAD INSTEAD OF THE LOAD COMBINATION SYNTAX EXCEPT FOR
RESPONSE SPECTRUM LOAD CASES.

Member Number: 547						
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.695	Critical Load Case:	101	Location:	1.52	
Critical Condition: Sec. 9.3.2.2						

***WARNING: THE VALUE OF MOMENT AMPLIFICATION FACTORS KY OR KZ IS GREATER THAN 1.4
FOR MEMBER # 548 FOR LOADCASE- 104. SECOND-ORDER ELASTIC ANALYSIS MUST BE PERFORMED
AS PER SECTION 4.4.2 of IS800-2007. ALSO, ENSURE THAT THE TYPE OF COMBINATION USED IS
REPEAT LOAD OR REFERENCE LOAD INSTEAD OF THE LOAD COMBINATION SYNTAX EXCEPT FOR
RESPONSE SPECTRUM LOAD CASES.

STAAD SPACE -- PAGE NO. 141

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

|---|
| Member Number: 548 |
| Member Section: LD ISA65X65X8 (INDIAN SECTIONS) |
| Status: PASS Ratio: 0.653 Critical Load Case: 104 Location: 1.52 |
| Critical Condition: Sec. 9.3.2.2 |

***WARNING: THE VALUE OF MOMENT AMPLIFICATION FACTORS KY OR KZ IS GREATER THAN 1.4
FOR MEMBER # 549 FOR LOADCASE- 104. SECOND-ORDER ELASTIC ANALYSIS MUST BE PERFORMED
AS PER SECTION 4.4.2 of IS800-2007. ALSO, ENSURE THAT THE TYPE OF COMBINATION USED IS
REPEAT LOAD OR REFERENCE LOAD INSTEAD OF THE LOAD COMBINATION SYNTAX EXCEPT FOR
RESPONSE SPECTRUM LOAD CASES.

|---|
| Member Number: 549 |
| Member Section: LD ISA65X65X8 (INDIAN SECTIONS) |
| Status: PASS Ratio: 0.637 Critical Load Case: 104 Location: 1.52 |
| Critical Condition: Sec. 9.3.2.2 |

***WARNING: THE VALUE OF MOMENT AMPLIFICATION FACTORS KY OR KZ IS GREATER THAN 1.4
FOR MEMBER # 550 FOR LOADCASE- 104. SECOND-ORDER ELASTIC ANALYSIS MUST BE PERFORMED
AS PER SECTION 4.4.2 of IS800-2007. ALSO, ENSURE THAT THE TYPE OF COMBINATION USED IS
REPEAT LOAD OR REFERENCE LOAD INSTEAD OF THE LOAD COMBINATION SYNTAX EXCEPT FOR
RESPONSE SPECTRUM LOAD CASES.

|---|
| Member Number: 550 |
| Member Section: LD ISA65X65X8 (INDIAN SECTIONS) |
| Status: PASS Ratio: 0.617 Critical Load Case: 104 Location: 1.52 |
| Critical Condition: Sec. 9.3.2.2 |

***WARNING: THE VALUE OF MOMENT AMPLIFICATION FACTORS KY OR KZ IS GREATER THAN 1.4
FOR MEMBER # 551 FOR LOADCASE- 104. SECOND-ORDER ELASTIC ANALYSIS MUST BE PERFORMED
AS PER SECTION 4.4.2 of IS800-2007. ALSO, ENSURE THAT THE TYPE OF COMBINATION USED IS
REPEAT LOAD OR REFERENCE LOAD INSTEAD OF THE LOAD COMBINATION SYNTAX EXCEPT FOR
RESPONSE SPECTRUM LOAD CASES.
THERE MAY BE MORE SUCH CASES. ADDITIONAL SUCH MESSAGES ARE SUPPRESSED.

|---|
| Member Number: 551 |
| Member Section: LD ISA65X65X8 (INDIAN SECTIONS) |
| Status: PASS Ratio: 0.606 Critical Load Case: 104 Location: 1.52 |
| Critical Condition: Sec. 9.3.2.2 |

STAAD SPACE -- PAGE NO. 142

Member Number: 552					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.464	Critical Load Case:	104	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 553					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.172	Critical Load Case:	104	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

Member Number: 554					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.145	Critical Load Case:	104	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

Member Number: 555					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.144	Critical Load Case:	104	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

Member Number: 556					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.143	Critical Load Case:	101	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 143

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 557					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.148	Critical Load Case:	101	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

Member Number: 558					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.218	Critical Load Case:	101	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

Member Number: 559					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.561	Critical Load Case:	101	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 560					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.486	Critical Load Case:	101	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 144

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 561					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.413	Critical Load Case:	101	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 562					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.364	Critical Load Case:	101	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 563					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.325	Critical Load Case:	101	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 564					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.290	Critical Load Case:	101	Location:	1.27
Critical Condition: Sec. 9.3.2.2					

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 565						
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.696	Critical Load Case:	101	Location:	1.52	
Critical Condition: Sec. 9.3.2.2						

Member Number: 566						
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.653	Critical Load Case:	104	Location:	1.52	
Critical Condition: Sec. 9.3.2.2						

Member Number: 567						
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.637	Critical Load Case:	104	Location:	1.52	
Critical Condition: Sec. 9.3.2.2						

Member Number: 568						
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)				
Status: PASS	Ratio: 0.617	Critical Load Case:	104	Location:	1.52	
Critical Condition: Sec. 9.3.2.2						

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 569					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.607	Critical Load Case: 104	Location:	1.52	
Critical Condition: Sec. 9.3.2.2					

Member Number: 570					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.463	Critical Load Case: 104	Location:	1.52	
Critical Condition: Sec. 9.3.2.2					

Member Number: 571					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.172	Critical Load Case: 104	Location:	1.51	
Critical Condition: Sec. 9.3.1.1					

Member Number: 572					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.144	Critical Load Case: 104	Location:	1.51	
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 147

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 573					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.145	Critical Load Case:	104	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

Member Number: 574					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.143	Critical Load Case:	101	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

Member Number: 575					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.149	Critical Load Case:	101	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

Member Number: 576					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.219	Critical Load Case:	101	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 148

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 577					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.553	Critical Load Case:	101	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 578					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.400	Critical Load Case:	101	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 579					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.379	Critical Load Case:	101	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 580					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.327	Critical Load Case:	101	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 581					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.287	Critical Load Case:	101	Location:	1.27
Critical Condition: Sec. 9.3.2.2					

Member Number: 582					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.249	Critical Load Case:	101	Location:	1.27
Critical Condition: Sec. 9.3.2.2					

Member Number: 583					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.580	Critical Load Case:	101	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 584					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.532	Critical Load Case:	104	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 150

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 585					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.512	Critical Load Case:	104	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 586					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.499	Critical Load Case:	104	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 587					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.503	Critical Load Case:	104	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 588					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.283	Critical Load Case:	101	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 151

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 589					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.120	Critical Load Case:	104	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

Member Number: 590					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.133	Critical Load Case:	104	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

Member Number: 591					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.130	Critical Load Case:	104	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

Member Number: 592					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.124	Critical Load Case:	104	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 152

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 593					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.123	Critical Load Case:	101	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

Member Number: 594					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.180	Critical Load Case:	101	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

Member Number: 595					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.553	Critical Load Case:	101	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 596					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.400	Critical Load Case:	101	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 153

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 597					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.379	Critical Load Case:	101	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 598					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.327	Critical Load Case:	101	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 599					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.288	Critical Load Case:	101	Location:	1.27
Critical Condition: Sec. 9.3.2.2					

Member Number: 600					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.249	Critical Load Case:	101	Location:	1.27
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 154

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 601					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.581	Critical Load Case:	101	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 602					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.532	Critical Load Case:	104	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 603					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.512	Critical Load Case:	104	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 604					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.499	Critical Load Case:	104	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 155

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 605					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.503	Critical Load Case:	104	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 606					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.285	Critical Load Case:	101	Location:	1.52
Critical Condition: Sec. 9.3.2.2					

Member Number: 607					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.119	Critical Load Case:	104	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

Member Number: 608					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.134	Critical Load Case:	104	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 156

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 609					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.130	Critical Load Case:	104	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

Member Number: 610					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.125	Critical Load Case:	104	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

Member Number: 611					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.123	Critical Load Case:	101	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

Member Number: 612					
Member Section: LD	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.181	Critical Load Case:	101	Location:	1.51
Critical Condition: Sec. 9.3.1.1					

STAAD SPACE -- PAGE NO. 157

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 613					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.028	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 614					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.061	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 615					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.102	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 616					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.135	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 158

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 617					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.167	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 618					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.193	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 619					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.217	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 620					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.235	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 159

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 621					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.252	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 622					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.264	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 623					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.276	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 624					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.283	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 160

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 625					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.280	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

Member Number: 626					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.275	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

Member Number: 627					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.263	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

Member Number: 628					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.249	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 161

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 629					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.220	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

Member Number: 630					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.113	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

Member Number: 631					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.028	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 632					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.062	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 633					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.102	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 634					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.136	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 635					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.167	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 636					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.193	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 163

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 637					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.217	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 638					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.235	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 639					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.252	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 640					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.264	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 641					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.276	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 642					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.284	Critical Load Case:	101	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 643					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.280	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

Member Number: 644					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.275	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 165

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 645					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.263	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

Member Number: 646					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.249	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

Member Number: 647					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.220	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

Member Number: 648					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.113	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 649					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.173	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.1.1					

Member Number: 650					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.737	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 651					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.135	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.1.1					

Member Number: 652					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.731	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 167

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 653					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.151	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.1.1					

Member Number: 654					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.706	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 655					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.165	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.1.1					

Member Number: 656					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.682	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 168

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 657					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.176	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.1.1					

Member Number: 658					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.654	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 659					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.187	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.1.1					

Member Number: 660					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.606	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 169

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 661					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.064	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

Member Number: 662					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.089	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

Member Number: 663					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.079	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

Member Number: 664					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.095	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 170

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 665					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.090	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

Member Number: 666					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.059	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

Member Number: 667					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.173	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.1.1					

Member Number: 668					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.739	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 171

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 669					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.135	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.1.1					

Member Number: 670					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.732	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 671					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.152	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.1.1					

Member Number: 672					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.707	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 172

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 673					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.165	Critical Load Case: 104	Location:	0.83	
Critical Condition: Sec. 9.3.1.1					

Member Number: 674					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.683	Critical Load Case: 104	Location:	0.83	
Critical Condition: Sec. 9.3.2.2					

Member Number: 675					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.176	Critical Load Case: 104	Location:	0.83	
Critical Condition: Sec. 9.3.1.1					

Member Number: 676					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.655	Critical Load Case: 104	Location:	0.83	
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 173

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 677					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.188	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.1.1					

Member Number: 678					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.606	Critical Load Case:	104	Location:	0.83
Critical Condition: Sec. 9.3.2.2					

Member Number: 679					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.068	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

Member Number: 680					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.092	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 174

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 681					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.076	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

Member Number: 682					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.098	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

Member Number: 683					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.088	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

Member Number: 684					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.061	Critical Load Case:	101	Location:	0.82
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 175

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 685					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.221	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 686					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.155	Critical Load Case:	101	Location:	1.65
Critical Condition: Sec. 9.3.2.2					

Member Number: 687					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.113	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 688					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.128	Critical Load Case:	101	Location:	1.65
Critical Condition: Sec. 9.3.2.2					

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 689					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.114	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 690					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.115	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 691					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.107	Critical Load Case:	6	Location:	1.65
Critical Condition: Sec. 9.3.2.2					

Member Number: 692					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.119	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 177

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 693					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.105	Critical Load Case:	6	Location:	1.65
Critical Condition: Sec. 9.3.2.2					

Member Number: 694					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.081	Critical Load Case:	101	Location:	1.65
Critical Condition: Sec. 9.3.2.2					

Member Number: 695					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.113	Critical Load Case:	6	Location:	1.65
Critical Condition: Sec. 9.3.2.2					

Member Number: 696					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.299	Critical Load Case:	101	Location:	1.65
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 178

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 697					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.023	Critical Load Case:	104	Location:	0.54
Critical Condition: Sec. 9.3.1.1					

Member Number: 698					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.040	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 699					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.020	Critical Load Case:	104	Location:	0.27
Critical Condition: Sec. 9.3.1.1					

Member Number: 700					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.060	Critical Load Case:	104	Location:	1.62
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 179

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 701					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.063	Critical Load Case:	101	Location:	1.62
Critical Condition: Sec. 9.3.2.2					

Member Number: 702					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.094	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 703					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.221	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 704					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.155	Critical Load Case:	101	Location:	1.65
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 180

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 705					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.113	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 706					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.128	Critical Load Case:	101	Location:	1.65
Critical Condition: Sec. 9.3.2.2					

Member Number: 707					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.114	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 708					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.115	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 181

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 709					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.107	Critical Load Case:	6	Location:	1.65
Critical Condition: Sec. 9.3.2.2					

Member Number: 710					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.120	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 711					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.105	Critical Load Case:	6	Location:	1.65
Critical Condition: Sec. 9.3.2.2					

Member Number: 712					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.081	Critical Load Case:	101	Location:	1.65
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 182

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 713					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.112	Critical Load Case:	6	Location:	1.65
Critical Condition: Sec. 9.3.2.2					

Member Number: 714					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.298	Critical Load Case:	101	Location:	1.65
Critical Condition: Sec. 9.3.2.2					

Member Number: 715					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.024	Critical Load Case:	104	Location:	0.14
Critical Condition: Sec. 9.3.1.1					

Member Number: 716					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.051	Critical Load Case:	104	Location:	1.62
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 183

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 717					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.023	Critical Load Case:	104	Location:	0.27
Critical Condition: Sec. 9.3.1.1					

Member Number: 718					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.065	Critical Load Case:	104	Location:	1.62
Critical Condition: Sec. 9.3.2.2					

Member Number: 719					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.060	Critical Load Case:	101	Location:	1.62
Critical Condition: Sec. 9.3.2.2					

Member Number: 720					
Member Section: ST	ISA65X65X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.097	Critical Load Case:	101	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 184

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 721					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.222	Critical Load Case:	104	Location:	1.24
Critical Condition: Sec. 6.2					

Member Number: 722					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.163	Critical Load Case:	104	Location:	1.24
Critical Condition: Sec. 6.2					

Member Number: 723					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.143	Critical Load Case:	103	Location:	0.90
Critical Condition: Sec. 8.2.1.2					

Member Number: 724					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.562	Critical Load Case:	103	Location:	0.00
Critical Condition: Sec. 8.2.1.2					

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 725					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.250	Critical Load Case:	104	Location:	1.97
Critical Condition: Sec. 6.2					

Member Number: 726					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.223	Critical Load Case:	104	Location:	1.24
Critical Condition: Sec. 6.2					

Member Number: 727					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.161	Critical Load Case:	104	Location:	1.24
Critical Condition: Sec. 6.2					

Member Number: 728					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.143	Critical Load Case:	103	Location:	0.90
Critical Condition: Sec. 8.2.1.2					

STAAD SPACE -- PAGE NO. 186

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 729					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.562	Critical Load Case:	103	Location:	0.00
Critical Condition: Sec. 8.2.1.2					

Member Number: 730					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.252	Critical Load Case:	104	Location:	1.97
Critical Condition: Sec. 6.2					

Member Number: 731					
Member Section: ST 150X150X6.0SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.757	Critical Load Case:	104	Location:	3.24
Critical Condition: Sec. 9.3.2.2					

Member Number: 732					
Member Section: ST 150X150X6.0SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.757	Critical Load Case:	104	Location:	3.24
Critical Condition: Sec. 9.3.2.2					

STAAD SPACE -- PAGE NO. 187

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 733					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.089	Critical Load Case:	104	Location:	0.72
Critical Condition: Sec. 9.3.1.3					

Member Number: 734					
Member Section: LD	ISA100X100X8	(INDIAN SECTIONS)			
Status: PASS	Ratio: 0.028	Critical Load Case:	101	Location:	0.72
Critical Condition: Sec. 9.3.1.3					

Member Number: 735					
Member Section: ST	50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.357	Critical Load Case:	104	Location:	0.52
Critical Condition: Sec. 6.2					

Member Number: 737					
Member Section: ST	50X50X2.9SHS	(TATA STRUCTURA SECTIONS)			
Status: PASS	Ratio: 0.267	Critical Load Case:	104	Location:	0.52
Critical Condition: Sec. 6.2					

STAAD SPACE -- PAGE NO. 188

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

Member Number: 739					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.357	Critical Load Case:	104	Location:	0.52
Critical Condition: Sec. 6.2					

Member Number: 741					
Member Section: ST 50X50X2.9SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.263	Critical Load Case:	104	Location:	0.52
Critical Condition: Sec. 6.2					

Member Number: 742					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.487	Critical Load Case:	104	Location:	0.00
Critical Condition: Sec. 9.3.2.2					

Member Number: 743					
Member Section: ST 72X72X3.2SHS (TATA STRUCTURA SECTIONS)					
Status: PASS	Ratio: 0.284	Critical Load Case:	101	Location:	0.85
Critical Condition: Sec. 9.3.2.2					

STAAD.PRO CODE CHECKING - IS-800-2007-LSD (V2.1)
****

```
|-------------------------------------------------------------------------------|
|  Member Number:    744                                                        |
|  Member Section:  ST   72X72X3.2SHS    (TATA STRUCTURA SECTIONS)              |
|  Status: PASS  Ratio:   0.524  Critical Load Case:   104  Location:      0.50  |
|  Critical Condition: Sec. 9.3.2.2                                             |
|-------------------------------------------------------------------------------|

|-------------------------------------------------------------------------------|
|  Member Number:    745                                                        |
|  Member Section:  ST   72X72X3.2SHS    (TATA STRUCTURA SECTIONS)              |
|  Status: PASS  Ratio:   0.325  Critical Load Case:   101  Location:      0.50  |
|  Critical Condition: Sec. 9.3.2.2                                             |
|-------------------------------------------------------------------------------|
```

316. STEEL MEMBER TAKE OFF LIST 3 7 TO 9 12 24 TO 37 41 TO 59 66 TO 80 92 TO 102 -

STEEL TAKE OFF

STEEL TAKE-OFF

PROFILE	LENGTH(METE)	WEIGHT(KN)
317. 108 TO 143 147 148 162 TO 173 179 TO 183 195 TO 205 211 TO 215 218 TO 221 -		
318. 224 236 TO 268 275 TO 289 301 TO 311 317 TO 352 685 TO 732 735 737 739 741 -		
319. 742 TO 745		
ST 72X72X3.2SHS	136.41	8.949
ST 50X50X2.9SHS	245.15	9.887
LD ISA65X65X8	29.70	4.454
ST ISA65X65X8	59.60	4.468
ST 150X150X6.0SHS	12.95	3.346
	TOTAL =	31.104

MEMBER	PROFILE	LENGTH (METE)	WEIGHT (KN)
3	ST 72X72X3.2SHS	1.66	0.109
7	ST 72X72X3.2SHS	1.39	0.091
8	ST 72X72X3.2SHS	1.61	0.105
9	ST 72X72X3.2SHS	1.61	0.105
12	ST 72X72X3.2SHS	1.35	0.089
24	ST 72X72X3.2SHS	1.39	0.091
25	ST 50X50X2.9SHS	2.96	0.119
26	ST 72X72X3.2SHS	1.39	0.091
27	ST 50X50X2.9SHS	2.55	0.103
28	ST 72X72X3.2SHS	1.39	0.091
29	ST 50X50X2.9SHS	2.14	0.086
30	ST 72X72X3.2SHS	1.39	0.091
31	ST 50X50X2.9SHS	1.73	0.070
32	ST 72X72X3.2SHS	1.39	0.091
33	ST 50X50X2.9SHS	1.94	0.078
34	ST 72X72X3.2SHS	1.39	0.091
35	ST 50X50X2.9SHS	1.53	0.062
36	ST 72X72X3.2SHS	1.39	0.091
37	ST 50X50X2.9SHS	1.33	0.054
41	ST 50X50X2.9SHS	2.38	0.096
42	ST 50X50X2.9SHS	2.22	0.090
43	ST 50X50X2.9SHS	2.06	0.083
44	ST 50X50X2.9SHS	1.92	0.077
45	ST 72X72X3.2SHS	1.39	0.091
46	ST 50X50X2.9SHS	1.12	0.045
47	ST 72X72X3.2SHS	1.39	0.091
48	ST 50X50X2.9SHS	2.34	0.095
49	ST 72X72X3.2SHS	1.39	0.091
50	ST 50X50X2.9SHS	2.75	0.111
51	ST 50X50X2.9SHS	3.08	0.124
52	ST 50X50X2.9SHS	2.90	0.117
53	ST 50X50X2.9SHS	2.72	0.110
54	ST 50X50X2.9SHS	2.55	0.103

55	ST	72X72X3.2SHS	1.39	0.091
56	ST	50X50X2.9SHS	3.16	0.127
57	ST	72X72X3.2SHS	3.45	0.226
58	ST	50X50X2.9SHS	3.26	0.132
59	ST	72X72X3.2SHS	0.50	0.033
66	ST	72X72X3.2SHS	0.85	0.056
67	ST	50X50X2.9SHS	1.51	0.061
68	ST	72X72X3.2SHS	1.35	0.089
69	ST	50X50X2.9SHS	1.31	0.053
70	ST	72X72X3.2SHS	1.35	0.089
71	ST	50X50X2.9SHS	1.12	0.045
72	ST	72X72X3.2SHS	1.35	0.089
73	ST	50X50X2.9SHS	0.92	0.037
74	ST	72X72X3.2SHS	1.35	0.089
75	ST	50X50X2.9SHS	0.72	0.029
76	ST	50X50X2.9SHS	1.73	0.070
77	ST	50X50X2.9SHS	1.88	0.076
78	ST	50X50X2.9SHS	1.75	0.071
79	ST	50X50X2.9SHS	1.63	0.066
80	ST	50X50X2.9SHS	1.53	0.062
92	ST	72X72X3.2SHS	1.39	0.091
93	ST	72X72X3.2SHS	1.39	0.091
94	ST	72X72X3.2SHS	1.39	0.091
95	ST	72X72X3.2SHS	1.39	0.091
96	ST	72X72X3.2SHS	1.39	0.091
97	ST	72X72X3.2SHS	1.39	0.091
98	ST	72X72X3.2SHS	1.39	0.091
99	ST	72X72X3.2SHS	1.66	0.109
100	ST	72X72X3.2SHS	1.39	0.091
101	ST	72X72X3.2SHS	1.39	0.091
102	ST	72X72X3.2SHS	1.39	0.091
108	ST	72X72X3.2SHS	1.35	0.089
109	ST	72X72X3.2SHS	1.35	0.089
110	ST	72X72X3.2SHS	1.35	0.089
111	ST	72X72X3.2SHS	1.35	0.089
112	ST	72X72X3.2SHS	1.35	0.089
113	ST	50X50X2.9SHS	2.96	0.119
114	ST	50X50X2.9SHS	2.55	0.103
115	ST	50X50X2.9SHS	2.14	0.086
116	ST	50X50X2.9SHS	1.73	0.070
117	ST	50X50X2.9SHS	1.94	0.078
118	ST	50X50X2.9SHS	1.53	0.062
119	ST	50X50X2.9SHS	1.33	0.054
120	ST	50X50X2.9SHS	2.38	0.096
121	ST	50X50X2.9SHS	2.22	0.090
122	ST	50X50X2.9SHS	2.06	0.083
123	ST	50X50X2.9SHS	1.92	0.077
124	ST	50X50X2.9SHS	1.12	0.045
125	ST	50X50X2.9SHS	2.34	0.095
126	ST	50X50X2.9SHS	2.75	0.111
127	ST	50X50X2.9SHS	3.08	0.124
128	ST	50X50X2.9SHS	2.90	0.117
129	ST	50X50X2.9SHS	2.72	0.110
130	ST	50X50X2.9SHS	2.55	0.103
131	ST	50X50X2.9SHS	3.16	0.127
132	ST	72X72X3.2SHS	3.45	0.226

133	ST	50X50X2.9SHS	3.26	0.132
134	ST	50X50X2.9SHS	1.51	0.061
135	ST	50X50X2.9SHS	1.31	0.053
136	ST	50X50X2.9SHS	1.12	0.045
137	ST	50X50X2.9SHS	0.92	0.037
138	ST	50X50X2.9SHS	0.72	0.029
139	ST	50X50X2.9SHS	1.73	0.070
140	ST	50X50X2.9SHS	1.88	0.076
141	ST	50X50X2.9SHS	1.75	0.071
142	ST	50X50X2.9SHS	1.63	0.066
143	ST	50X50X2.9SHS	1.53	0.062
147	ST	72X72X3.2SHS	0.90	0.059
148	ST	72X72X3.2SHS	0.90	0.059
162	LD	ISA65X65X8	0.90	0.135
163	LD	ISA65X65X8	0.90	0.135
164	LD	ISA65X65X8	0.90	0.135
165	LD	ISA65X65X8	0.90	0.135
166	LD	ISA65X65X8	0.90	0.135
167	LD	ISA65X65X8	0.90	0.135
168	LD	ISA65X65X8	0.90	0.135
169	LD	ISA65X65X8	0.90	0.135
170	LD	ISA65X65X8	0.90	0.135
171	LD	ISA65X65X8	0.90	0.135
172	LD	ISA65X65X8	0.90	0.135
173	LD	ISA65X65X8	0.90	0.135
179	LD	ISA65X65X8	0.90	0.135
180	LD	ISA65X65X8	0.90	0.135
181	LD	ISA65X65X8	0.90	0.135
182	LD	ISA65X65X8	0.90	0.135
183	LD	ISA65X65X8	0.90	0.135
195	LD	ISA65X65X8	0.90	0.135
196	LD	ISA65X65X8	0.90	0.135
197	LD	ISA65X65X8	0.90	0.135
198	LD	ISA65X65X8	0.90	0.135
199	LD	ISA65X65X8	0.90	0.135
200	LD	ISA65X65X8	0.90	0.135
201	LD	ISA65X65X8	0.90	0.135
202	LD	ISA65X65X8	0.90	0.135
203	LD	ISA65X65X8	0.90	0.135
204	LD	ISA65X65X8	0.90	0.135
205	LD	ISA65X65X8	0.90	0.135
211	LD	ISA65X65X8	0.90	0.135
212	LD	ISA65X65X8	0.90	0.135
213	LD	ISA65X65X8	0.90	0.135
214	LD	ISA65X65X8	0.90	0.135
215	LD	ISA65X65X8	0.90	0.135
218	ST	72X72X3.2SHS	1.66	0.109
219	ST	72X72X3.2SHS	1.39	0.091
220	ST	72X72X3.2SHS	1.61	0.105
221	ST	72X72X3.2SHS	1.61	0.105
224	ST	72X72X3.2SHS	1.35	0.089
236	ST	72X72X3.2SHS	1.39	0.091
237	ST	50X50X2.9SHS	2.96	0.119
238	ST	72X72X3.2SHS	1.39	0.091
239	ST	50X50X2.9SHS	2.55	0.103
240	ST	72X72X3.2SHS	1.39	0.091

241	ST	50X50X2.9SHS	2.14	0.086
242	ST	72X72X3.2SHS	1.39	0.091
243	ST	50X50X2.9SHS	1.73	0.070
244	ST	72X72X3.2SHS	1.39	0.091
245	ST	50X50X2.9SHS	1.94	0.078
246	ST	72X72X3.2SHS	1.39	0.091
247	ST	50X50X2.9SHS	1.53	0.062
248	ST	72X72X3.2SHS	1.39	0.091
249	ST	50X50X2.9SHS	1.33	0.054
250	ST	50X50X2.9SHS	2.38	0.096
251	ST	50X50X2.9SHS	2.22	0.090
252	ST	50X50X2.9SHS	2.06	0.083
253	ST	50X50X2.9SHS	1.92	0.077
254	ST	72X72X3.2SHS	1.39	0.091
255	ST	50X50X2.9SHS	1.12	0.045
256	ST	72X72X3.2SHS	1.39	0.091
257	ST	50X50X2.9SHS	2.34	0.095
258	ST	72X72X3.2SHS	1.39	0.091
259	ST	50X50X2.9SHS	2.75	0.111
260	ST	50X50X2.9SHS	3.08	0.124
261	ST	50X50X2.9SHS	2.90	0.117
262	ST	50X50X2.9SHS	2.72	0.110
263	ST	50X50X2.9SHS	2.55	0.103
264	ST	72X72X3.2SHS	1.39	0.091
265	ST	50X50X2.9SHS	3.16	0.127
266	ST	72X72X3.2SHS	3.45	0.226
267	ST	50X50X2.9SHS	3.26	0.132
268	ST	72X72X3.2SHS	0.50	0.033
275	ST	72X72X3.2SHS	0.85	0.056
276	ST	50X50X2.9SHS	1.51	0.061
277	ST	72X72X3.2SHS	1.35	0.089
278	ST	50X50X2.9SHS	1.31	0.053
279	ST	72X72X3.2SHS	1.35	0.089
280	ST	50X50X2.9SHS	1.12	0.045
281	ST	72X72X3.2SHS	1.35	0.089
282	ST	50X50X2.9SHS	0.92	0.037
283	ST	72X72X3.2SHS	1.35	0.089
284	ST	50X50X2.9SHS	0.72	0.029
285	ST	50X50X2.9SHS	1.73	0.070
286	ST	50X50X2.9SHS	1.88	0.076
287	ST	50X50X2.9SHS	1.75	0.071
288	ST	50X50X2.9SHS	1.63	0.066
289	ST	50X50X2.9SHS	1.53	0.062
301	ST	72X72X3.2SHS	1.39	0.091
302	ST	72X72X3.2SHS	1.39	0.091
303	ST	72X72X3.2SHS	1.39	0.091
304	ST	72X72X3.2SHS	1.39	0.091
305	ST	72X72X3.2SHS	1.39	0.091
306	ST	72X72X3.2SHS	1.39	0.091
307	ST	72X72X3.2SHS	1.39	0.091
308	ST	72X72X3.2SHS	1.66	0.109
309	ST	72X72X3.2SHS	1.39	0.091
310	ST	72X72X3.2SHS	1.39	0.091
311	ST	72X72X3.2SHS	1.39	0.091
317	ST	72X72X3.2SHS	1.35	0.089
318	ST	72X72X3.2SHS	1.35	0.089

319	ST	72X72X3.2SHS	1.35	0.089
320	ST	72X72X3.2SHS	1.35	0.089
321	ST	72X72X3.2SHS	1.35	0.089
322	ST	50X50X2.9SHS	2.96	0.119
323	ST	50X50X2.9SHS	2.55	0.103
324	ST	50X50X2.9SHS	2.14	0.086
325	ST	50X50X2.9SHS	1.73	0.070
326	ST	50X50X2.9SHS	1.94	0.078
327	ST	50X50X2.9SHS	1.53	0.062
328	ST	50X50X2.9SHS	1.33	0.054
329	ST	50X50X2.9SHS	2.38	0.096
330	ST	50X50X2.9SHS	2.22	0.090
331	ST	50X50X2.9SHS	2.06	0.083
332	ST	50X50X2.9SHS	1.92	0.077
333	ST	50X50X2.9SHS	1.12	0.045
334	ST	50X50X2.9SHS	2.34	0.095
335	ST	50X50X2.9SHS	2.75	0.111
336	ST	50X50X2.9SHS	3.08	0.124
337	ST	50X50X2.9SHS	2.90	0.117
338	ST	50X50X2.9SHS	2.72	0.110
339	ST	50X50X2.9SHS	2.55	0.103
340	ST	50X50X2.9SHS	3.16	0.127
341	ST	72X72X3.2SHS	3.45	0.226
342	ST	50X50X2.9SHS	3.26	0.132
343	ST	50X50X2.9SHS	1.51	0.061
344	ST	50X50X2.9SHS	1.31	0.053
345	ST	50X50X2.9SHS	1.12	0.045
346	ST	50X50X2.9SHS	0.92	0.037
347	ST	50X50X2.9SHS	0.72	0.029
348	ST	50X50X2.9SHS	1.73	0.070
349	ST	50X50X2.9SHS	1.88	0.076
350	ST	50X50X2.9SHS	1.75	0.071
351	ST	50X50X2.9SHS	1.63	0.066
352	ST	50X50X2.9SHS	1.53	0.062
685	ST	ISA65X65X8	1.89	0.142
686	ST	ISA65X65X8	1.65	0.124
687	ST	ISA65X65X8	1.65	0.124
688	ST	ISA65X65X8	1.65	0.124
689	ST	ISA65X65X8	1.65	0.124
690	ST	ISA65X65X8	1.65	0.124
691	ST	ISA65X65X8	1.65	0.124
692	ST	ISA65X65X8	1.65	0.124
693	ST	ISA65X65X8	1.65	0.124
694	ST	ISA65X65X8	1.65	0.124
695	ST	ISA65X65X8	1.65	0.124
696	ST	ISA65X65X8	1.65	0.124
697	ST	ISA65X65X8	1.62	0.122
698	ST	ISA65X65X8	1.62	0.122
699	ST	ISA65X65X8	1.62	0.122
700	ST	ISA65X65X8	1.62	0.122
701	ST	ISA65X65X8	1.62	0.122
702	ST	ISA65X65X8	1.62	0.122
703	ST	ISA65X65X8	1.89	0.142
704	ST	ISA65X65X8	1.65	0.124
705	ST	ISA65X65X8	1.65	0.124
706	ST	ISA65X65X8	1.65	0.124

STAAD SPACE -- PAGE NO. 195

707	ST	ISA65X65X8	1.65	0.124
708	ST	ISA65X65X8	1.65	0.124
709	ST	ISA65X65X8	1.65	0.124
710	ST	ISA65X65X8	1.65	0.124
711	ST	ISA65X65X8	1.65	0.124
712	ST	ISA65X65X8	1.65	0.124
713	ST	ISA65X65X8	1.65	0.124
714	ST	ISA65X65X8	1.65	0.124
715	ST	ISA65X65X8	1.62	0.122
716	ST	ISA65X65X8	1.62	0.122
717	ST	ISA65X65X8	1.62	0.122
718	ST	ISA65X65X8	1.62	0.122
719	ST	ISA65X65X8	1.62	0.122
720	ST	ISA65X65X8	1.62	0.122
721	ST	72X72X3.2SHS	1.24	0.081
722	ST	72X72X3.2SHS	1.24	0.081
723	ST	72X72X3.2SHS	0.90	0.059
724	ST	72X72X3.2SHS	1.84	0.121
725	ST	72X72X3.2SHS	1.97	0.129
726	ST	72X72X3.2SHS	1.24	0.081
727	ST	72X72X3.2SHS	1.24	0.081
728	ST	72X72X3.2SHS	0.90	0.059
729	ST	72X72X3.2SHS	1.84	0.121
730	ST	72X72X3.2SHS	1.97	0.129
731	ST	150X150X6.0SHS	6.48	1.673
732	ST	150X150X6.0SHS	6.48	1.673
735	ST	50X50X2.9SHS	0.52	0.021
737	ST	50X50X2.9SHS	0.52	0.021
739	ST	50X50X2.9SHS	0.52	0.021
741	ST	50X50X2.9SHS	0.52	0.021
742	ST	72X72X3.2SHS	0.85	0.056
743	ST	72X72X3.2SHS	0.85	0.056
744	ST	72X72X3.2SHS	0.50	0.033
745	ST	72X72X3.2SHS	0.50	0.033
			---	---
		TOTAL =		31.104

********** END OF DATA FROM INTERNAL STORAGE **********

320. FINISH

********** END OF THE STAAD.Pro RUN **********

**** DATE= JUN 24,2022 TIME= 19:18:16 ****

****
* For technical assistance on STAAD.Pro, please visit *
* http://www.bentley.com/en/support/ *
* *
* Details about additional assistance from *
* Bentley and Partners can be found at program menu *
* Help->Technical Support *
* *
* Copyright (c) 1997-2017 Bentley Systems, Inc. *
* http://www.bentley.com *
****