Dock Leveler

Short Technical Specification (For tender use)

Product - Description for std. 09 ton NIHVA Dock Leveller


Supply and Installation of NIHVA make electro Hydraulic Dock Leveler is of various capacity's 5 ton to 22 ton, for standard 9 ton dock leveler = Dock width - 2030 mm, Overall Length with LIP extension - 3120 mm, LIP extension - 400mm, Height of frame - 480mm Working ranges - UP - 300, Down - 250 mm. Frame - composed with welded steel profiles. Reinforcing welded sections ISMB 150x75. Upper plate thickness - 5 mm with antiskid ribs (1mm height). Hydraulic movement - Lifting of the deck & opening of the lip is by means of single acting chrome plated shaft and honed cylinder. Power supply - 440V 3phase, Electric Motor - 1 HP. UDL - 9000 kgs. Concentrated Load - 6000 kgs. Optional Accessories - Rubber Bumpers & Flashing Lights.
Used Our PMP - " Planned Maintence Program"



NIHVA is the premier solutions provider of safe, effective and innovative Material handling equipment's. We offer variety of loading equipment's including dock levelers, Dock shelters, Dock seal, Scissor lifts, Goods Lifts along with other customized material handling products. We offer turnkey solutions for the most demanding freight-handling needs.
Dock levelers are one of the simplest equipment designed according to the Indian conditions, continuous operations and ruggedness for not only helping the loading and unloading the vehicles easily but also reducing the dispatch time the vehicles significantly.
We offer various automation along with Dock leveler as a example- "Automatic loading and unloading recording time system of the vehicle and many more

Why NIHVA Dock leveller

- Heavy duty structure to take the Dynamic load & Peak pressure
- Stronger base frame with self - standing capability. With two cylinder movement
- Stronger lip & rear hinges
- 16mm thick lip plate with step at tip plate with step at tip for adopting smaller vehicles
- Design to suit Indian working condition & easy to use
- Collapsible telescopic side guard for safety protection
- Used best rod seales & piston seals in Hyd. cylinder
- Single approachable steady rest for maintenance
- NIHVA train / educate the users
- Stand alone power pack and control panel for ease of operation and maintenance.
- Excellent service back up

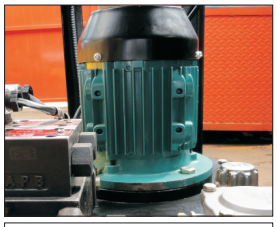





Technical Data

Nominal length	2000, 2500, 3000, 3500, 4000, 4500 mm
Nominal width	1750, 2000, 2200 mm
Load capacity	6, 9, 15, 22 tonnes
Vertical working range	
Rise above dock	300mm
Fall below dock	250mm
Platform tear-plate thickness with platform reinforcements according tothe load capacity	6/8, 8/10 mm
Colour	RAL 5010, Hot dip galvanized
Lip material & length	400 / 500 mm
Nominal voltage	400V 3-phase
Nominal motor power	1 HP
Hydraulic	7 liter
European standard	EN 1398 Dock levellers

Safety Instruction

1 Read manual carefully before installing, operating, or servicing dock leveler.
2 Be sure truck wheels are chocked or truck is held in place by a restraining device before loading or unloading.
3 Make sure leveler is returned to its level, stored position after truck pulls away from dock.
4 Do not attempt to manually lift the dock leveler platform or lip. Do Not operate leveler with equipment, material or people on the platform, lip or in front of the leveler.
5 Keep pedestrians and forklifts away from open door area when not loading or unloading truck.
6 If dock leveler appears to be broken or is not working properly, contact your authorized McGuire representative.
7 Dock levellers shall be so designed that the gradient in the operational position does not exceed ± 12,5 % (approximately ± 7').

Safety Practices

1 Do not operate this equipment while under the influence of drugs or alcohol.
2 Do not stand in the driveway between the leveler and a moving truck.
3 Be sure that the trailer wheels are chocked or restraint device is positioned.
4 Do not use the leveler if appears to be broken or operating improperly.
5 Do not operate the leveler with equipment, material or people on the platform.
6 Be certain that nothing is on the leveler while a truck pulls away from the dock.
7 Keep all limbs clear of the leveler while it is in motion.
8 Do not attempt to manually lift the leveler platform.
9 Always make sure the leveler has been returned to the dock level (stored) position.
10 Never work under the dock leveler without proper placement of the service leg.
11 When servicing leveler, disconnect power and tag control panel "Out of Service." Place a barrier on grade level in front of the leveler to prevent any truck from backing to the dock.

Head Office: G-Block, 1st Floor, Thermax Chowk, MIDC, Above Renault Showroom, Chinchwad, Pune - 411019

NIHVA

NIHVA Technologies Pvt. Ltd.

+91 2066 3040 33 +91 85 51091 333 sales@nihva.com www.nihva.com