

1.) Dismounting of the old encoder unit (double star operation)

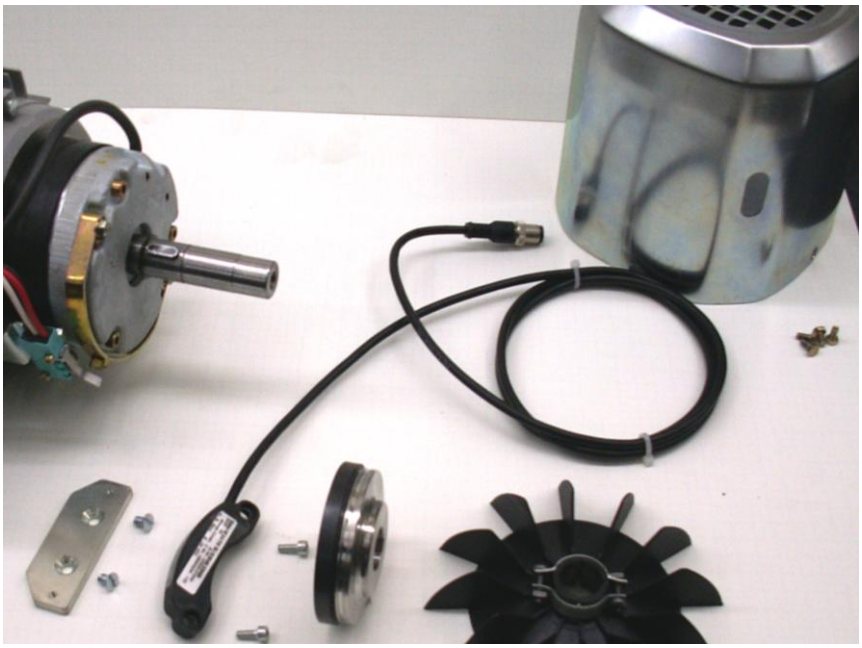


2.) Mounting of bracket on the brake

Here are 2 versions possible. Picture 2 (Follow up model) offers only a bigger range of adjusting possibilities.

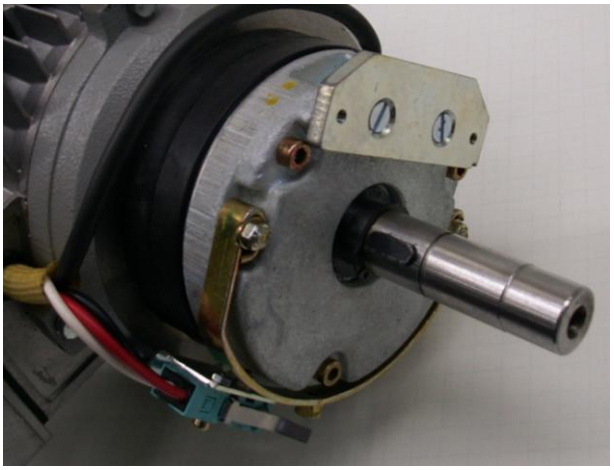


Picture 1

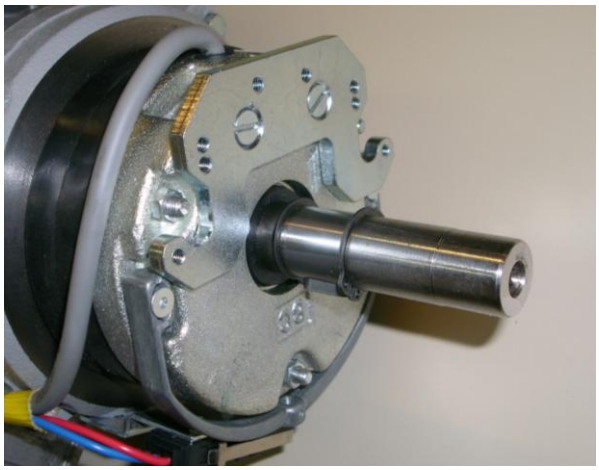

Picture 2


3.) Mounting of the magnet ring on the engine hub

Warning! Do not beat the magnet ring with a hammer on the hub!
Risk of fracture.
Magnet ring must be fixed by locking ring and feather key.

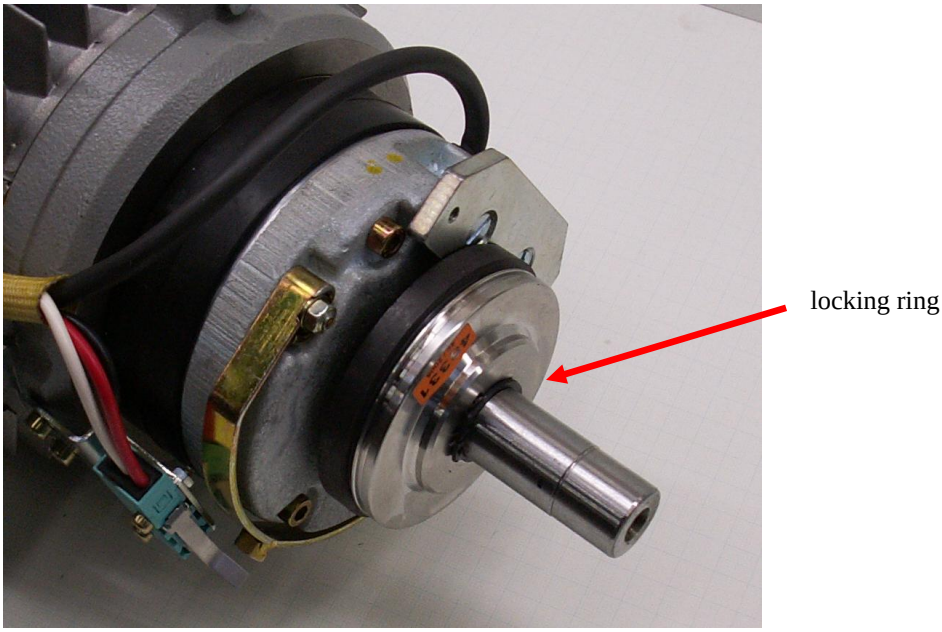


4.) Mounting of electronics on the bracket

The capping side with the label must be visible!

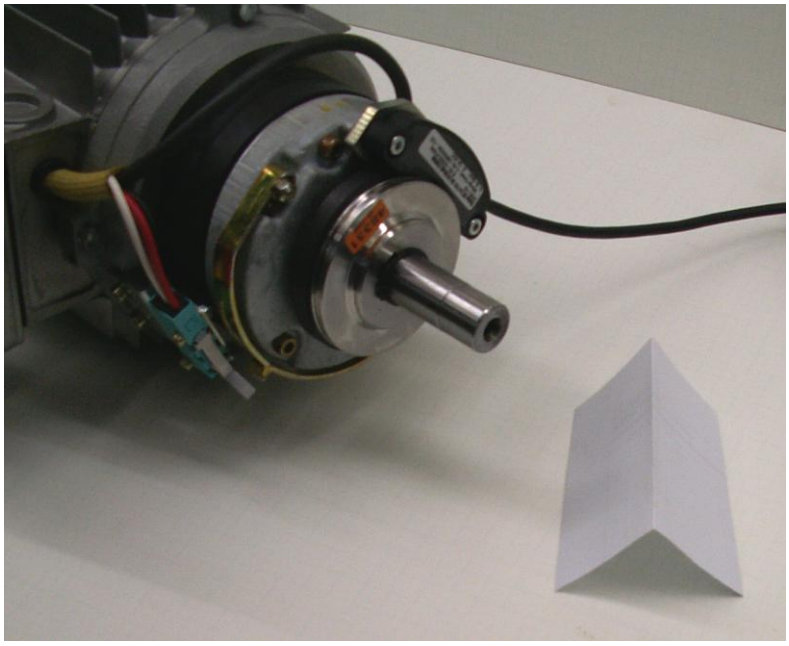

Albany Door Systems GmbH •
Am Mondschein 25 • D-59557 Lippstadt • Germany
Tel: +49-2941-766-0 • Fax: +49-2941-766-136

Display of the possible electronic mounting positions (only for follow up model see chapter 2).

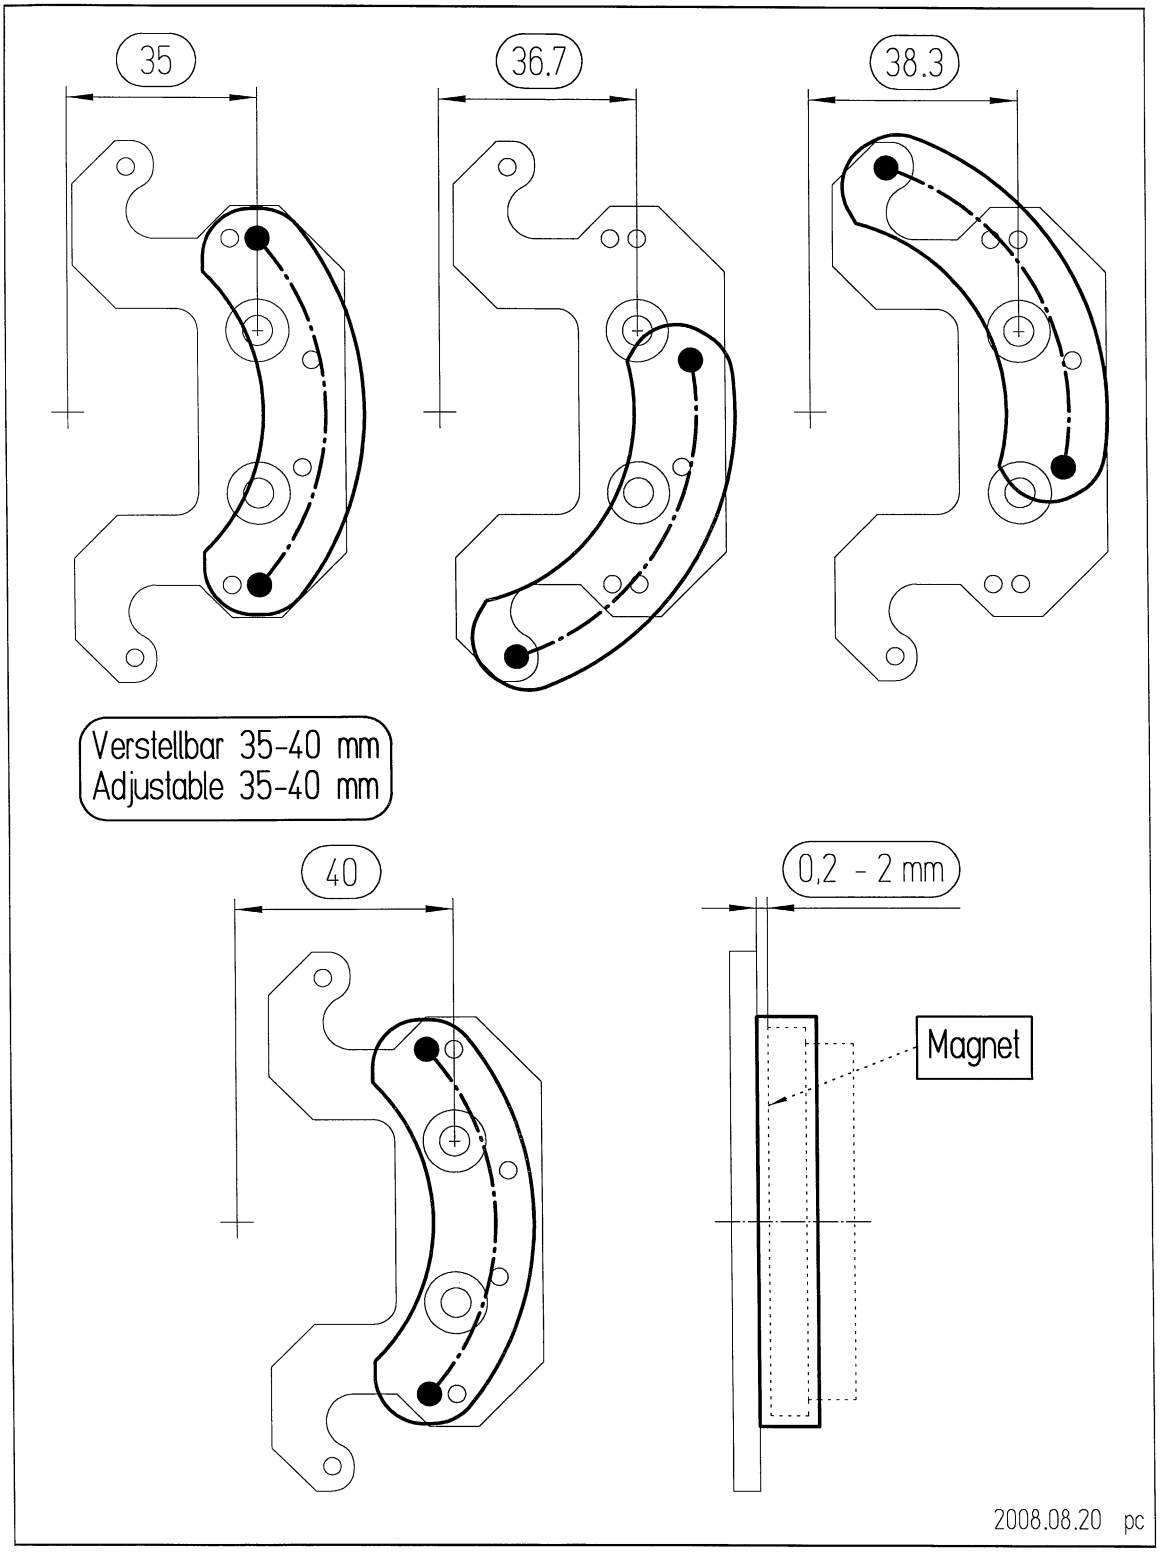


Albany Door Systems GmbH ●
Am Mondschein 25 ● D-59557 Lippstadt ● Germany
Tel: +49-2941-766-0 ● Fax: +49-2941-766-136


Document: K:\PE\6_Produkte\1_Steuerungen\1.01 MCC\Anleitungen und Doku\Weggebermontage\6410R0123_M_Encoder Bonfigliolimotor_MCC GB3.doc
Created: 03.04.09 09:57
Printed: 03.04.09 10:41

5.) Adjustment of electronics

Put a normal typewriting paper (approx. 0.1 mm of strength) doubly (=> 0.2 mm) or use the attached adjustment template between electronics and magnet ring; press the electronics **slightly** to the magnet ring. Tighten the screws.

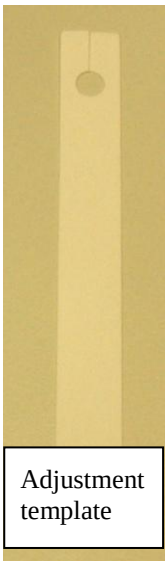


Adjustment template

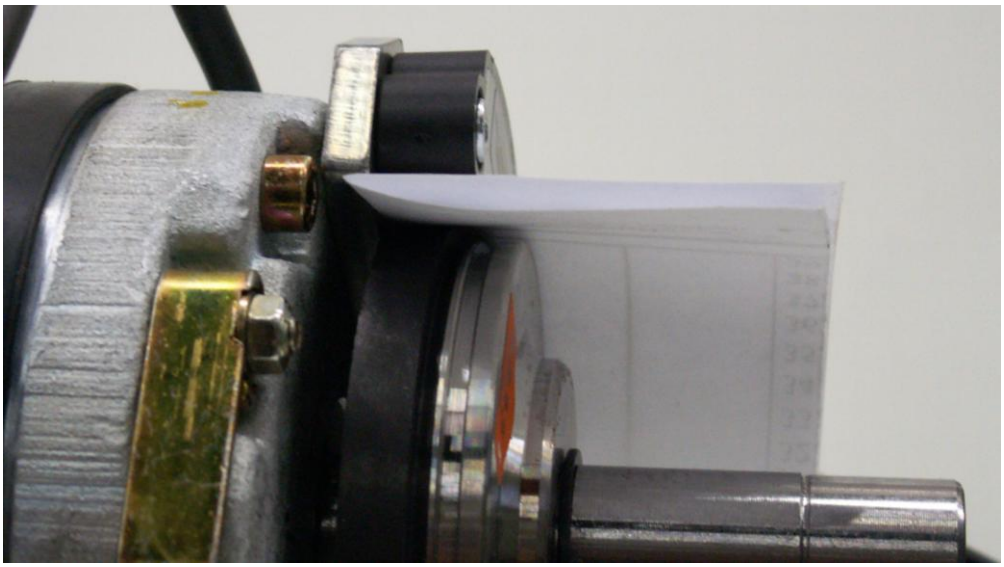

6.) Control of the adjustment


Put a normal typewriting paper simply (approx. 0.1 mm) between electronics and magnet ring, release brake by hand (activate brake release lever), turn rotor. Magnet ring may not grind at the electronics during the **entire** rotor revolution! Correct if necessary.

The air gap between magnet ring and electronics may amount to maximum 0.25 ± 0.1 mm!

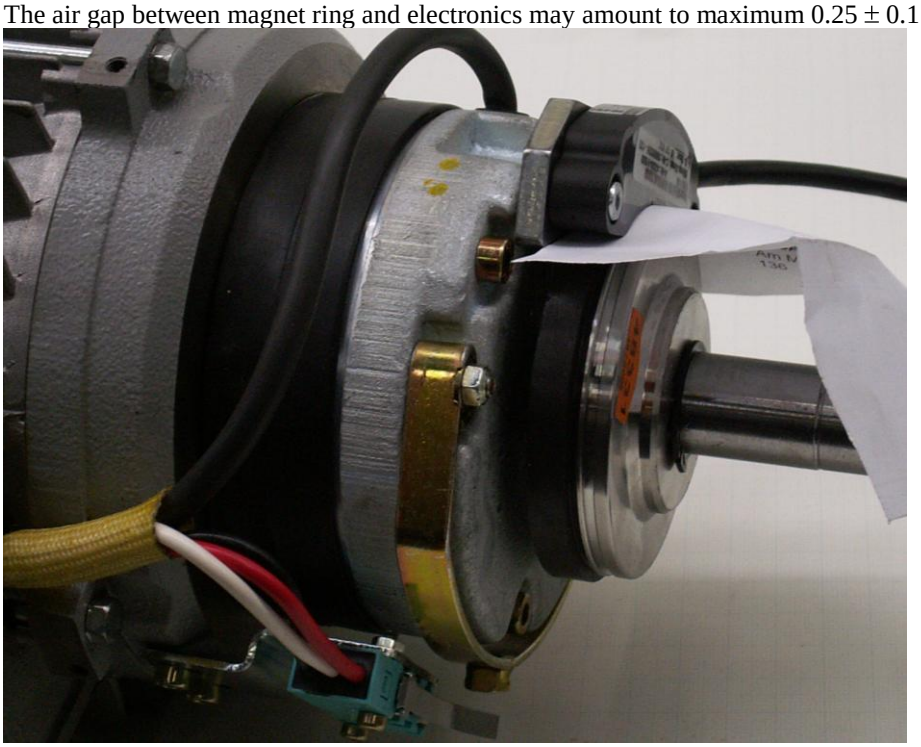

7.) Mounting of the fan

Fix the connecting cable of the encoder by means of cable straps as shown in the picture.

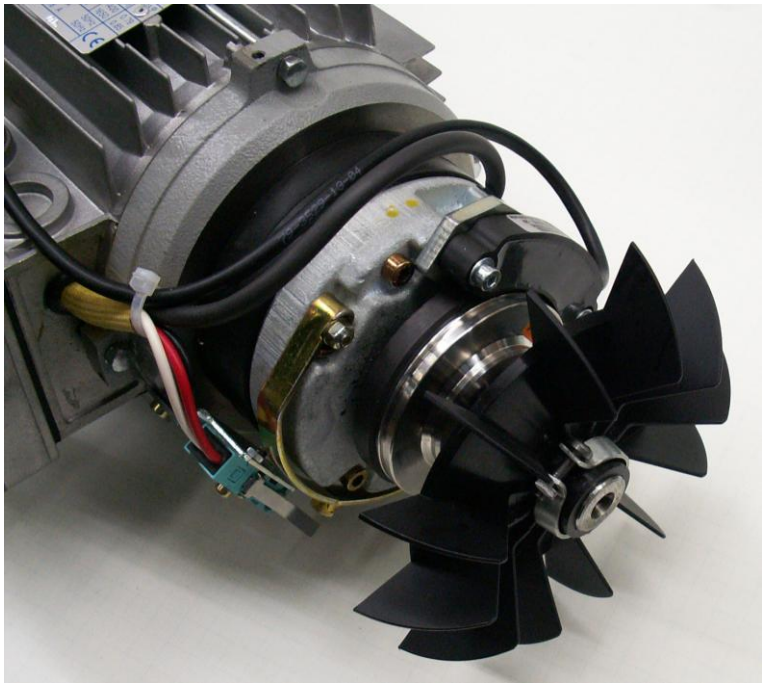

8.) Mounting of the fan cover

