
Please refer to your bike service manual for additional guidance.

- **M8 Softails and Dynas with ABS and stock-height front end:** To install your big brake kit, you need to change your lower brake lines to +2". **Magnum Shielding** offers reliable bolt-on brake lines for these bikes.
  For Softails with dual disc and OEM front end, use this **Magnum Shielding** kit: AS470192 (upper brake line will be required. Refer to our "Cables Fitment Charts" in the "TECH" section on our website for more information.
- **2014-2023 Touring models with ABS and stock height front end:** You need to change your lower brake lines to +2" to install your big brake kit. If you are using a **Magnum Shielding** kit, we recommend this option:
  - **ABS DOT Dual Disc Lower Brake Lines:** AS470162RAD
- **Non-ABS Touring Models with stock height front end:** You need to change your lower brake lines to +2" to install your big brake kit. We highly recommend 35° banjos for the caliper connection.


If your bike is equipped with ABS, you must consult a certified technician who will use advanced tools to bleed the front braking system.

1. Drain all brake fluid from the front braking system.
2. Remove the lower brake line.


2014-2023 Touring with ABS (items 15 and 16)

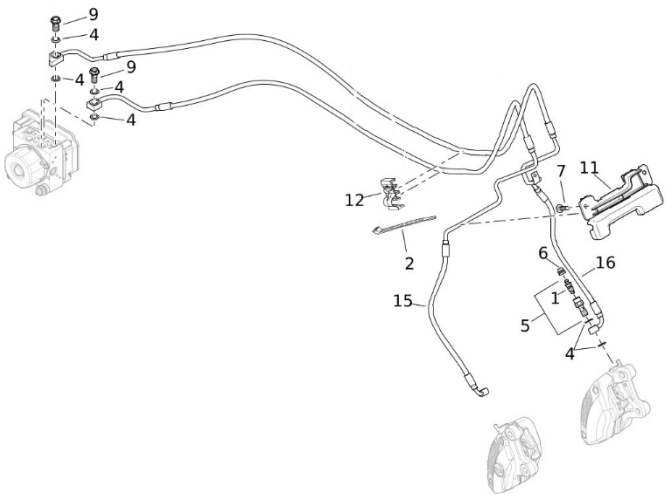

Dual rotor Softails & Dynas with ABS (item 16)

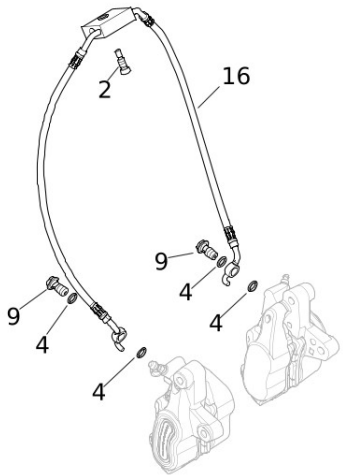



Single rotor Softails & Dynas with ABS (item 15)

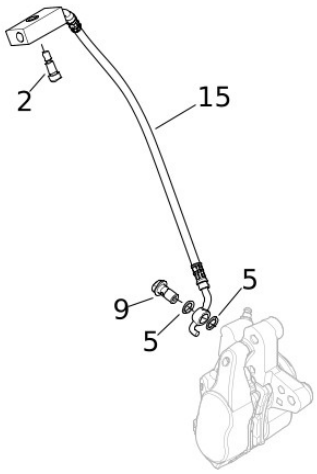

3. Remove your OEM calipers.
4. Remove the front wheel.
5. Replace the OEM rotors with the ones supplied with the kit. Torque to **25 ft-lbs**.


6. Install the **OG Radial Caliper adapters** using the ARP M10 Bolt (Short) and the M10 Washers (Thickest). Ensure that you place **a M10 Flat washers *BETWEEN*** the ARP bolt head and the fork lower and another washer ***BETWEEN*** the fork leg and the **OG Radial Caliper adapters**. The **M10 flat washers** are the thickest available in the **OG Radial Caliper adapter hardware bag**. See the diagram below.

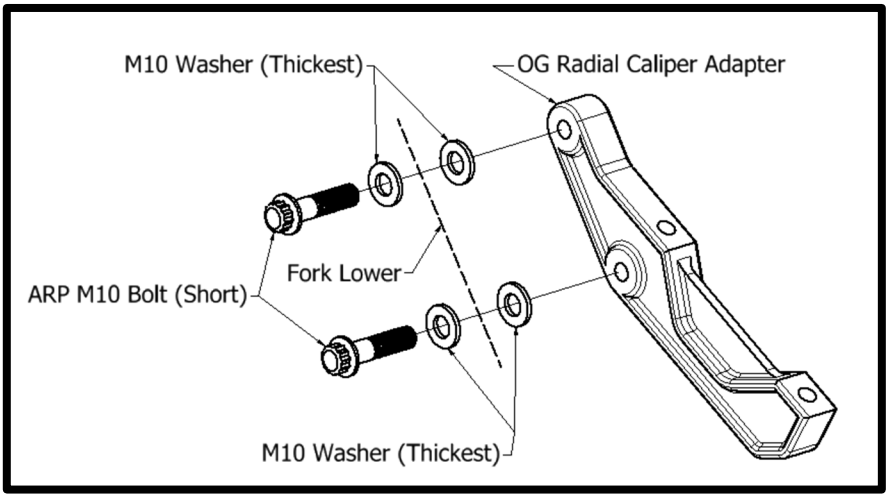

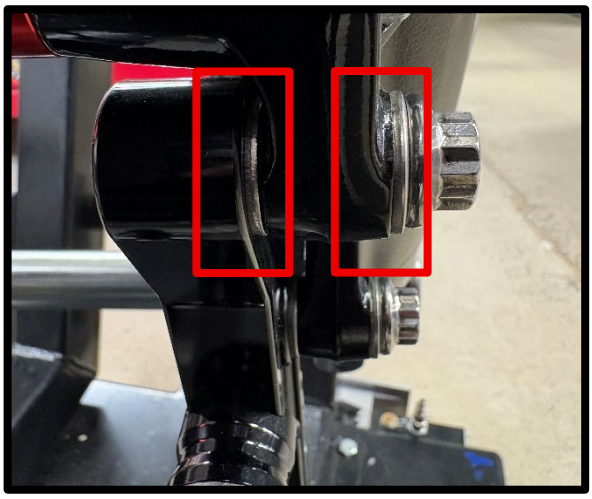

If your bike has ABS, follow these steps. If it doesn't have ABS, go to step 8.

7. Remove and discard the wheel speed sensor cover (24).

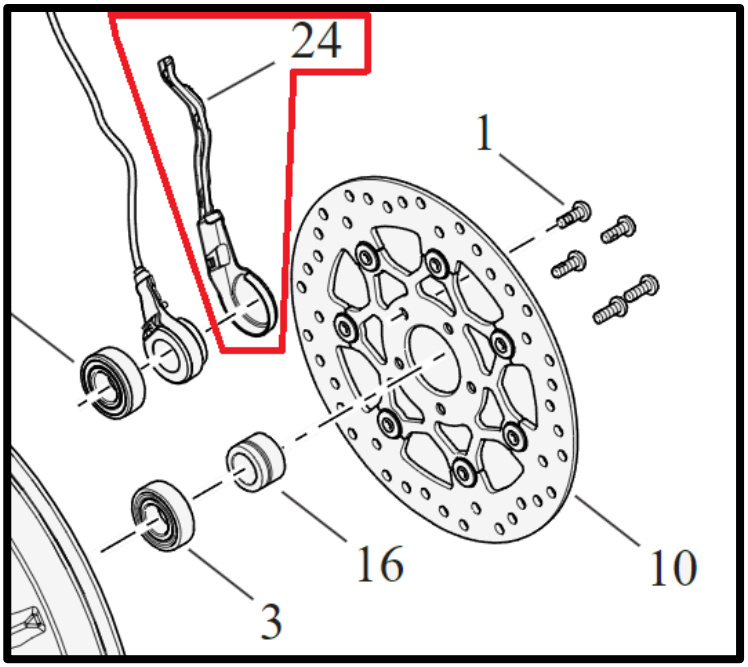


8. Re-install the front wheel. For bikes equipped with ABS make sure to route the ABS sensor




harness as shown below (Bike on picture: FXLRST)


9. Install the **Brembo Calipers** using the **OG Radial Caliper Adapters, OG Caliper Spacer** and **ARP M10 Bolt (Long)**.

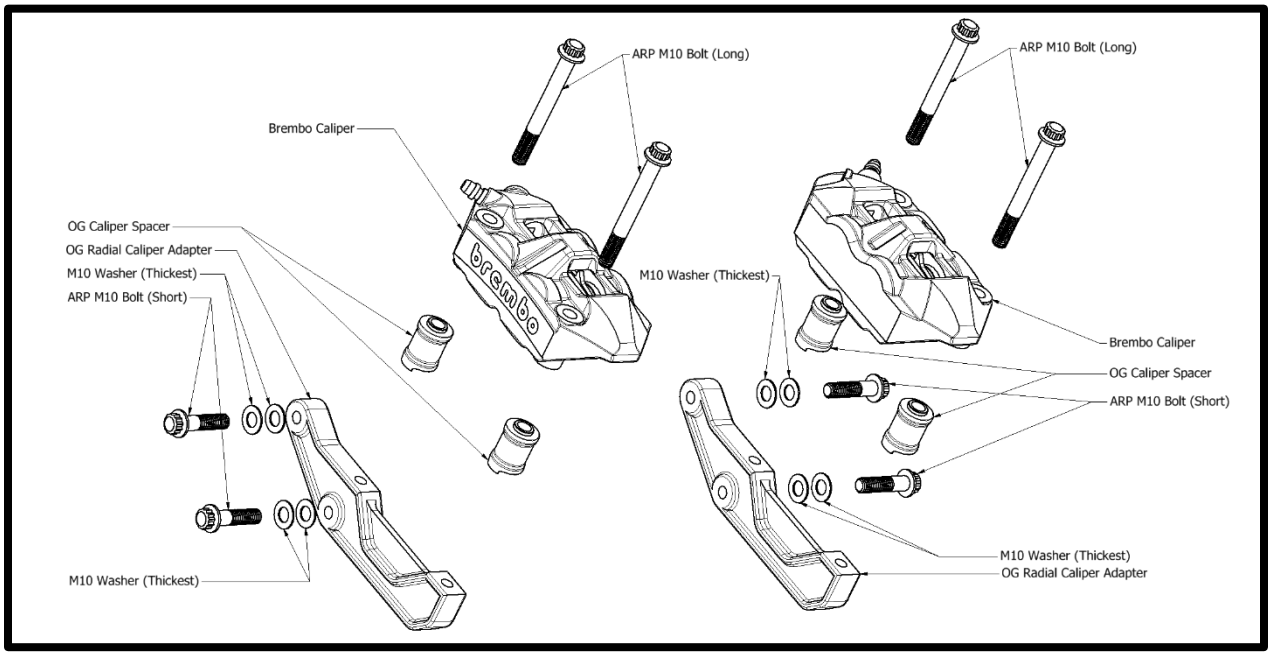

10. Before torquing everything down, make sure your rotor is **centered** between the tabs of your caliper on each side, like in the picture below.

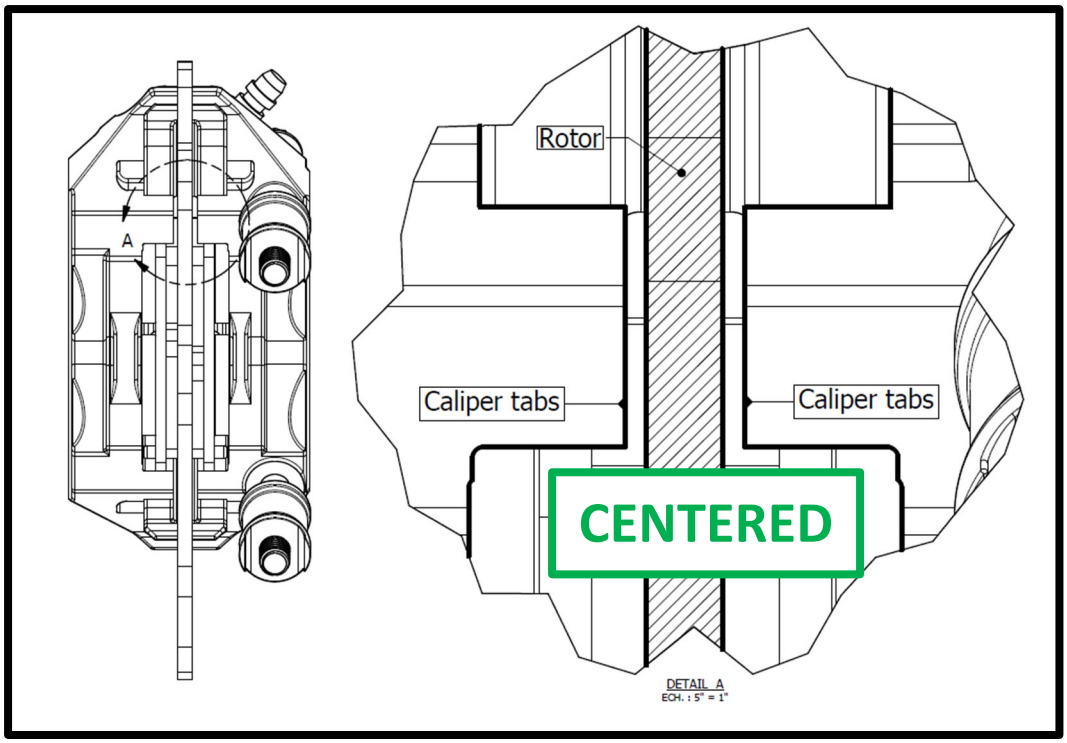

11. If the rotor is not centered between the Caliper tabs, you **MUST** adjust the caliper position with the **M10 Spacers** shown in step 6.

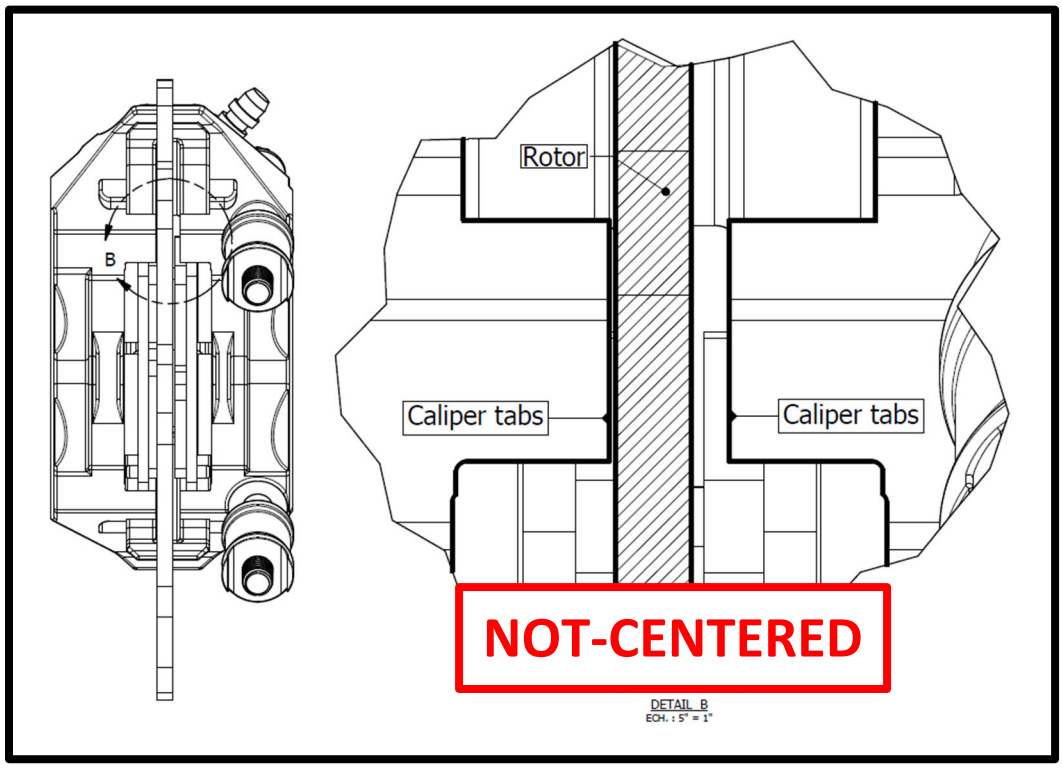

12. Torque the **ARP M10 Bolt (Short)** to **50 ft-lbs**.
13. Torque the **ARP M10 Bolt (Long)** to **50 ft-lbs.**
14. Install the +2” lower brake lines. Do not re-use the OEM banjo bolts, use the ones included with the Brembo calipers.
15. Secure the ABS harness to the brake line with zip ties or clamps.
16. Spin the wheel to check for interference and proper rotor alignment.
17. Bleed the front braking system. If your bike is equipped with ABS, you must refer to a certified technician who will bleed the front braking system using advanced tooling.