
2k Guide

1-3-13

Shipping Container and Contents

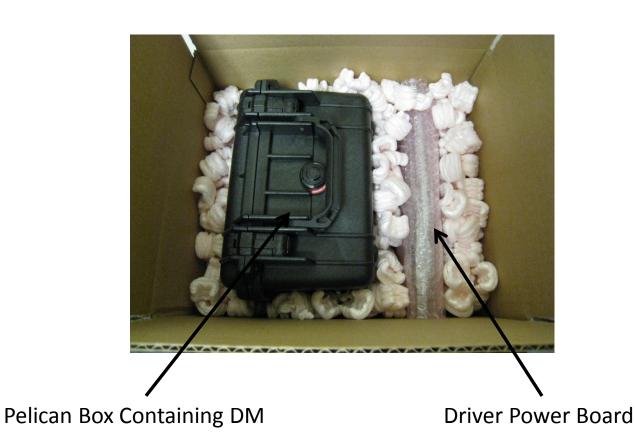

2k Device Carrier


DM Box






 Remove the four thumb screws on the top and remove the lid



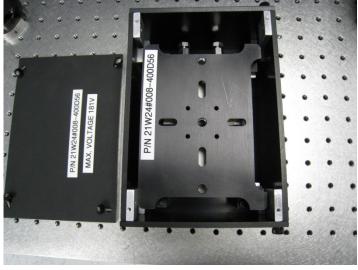



 Remove the remaining four thumb screws and slide out the side panel



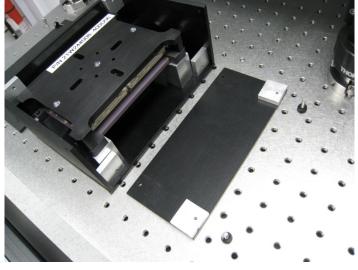


- Remove the four 4-40 screws on the inside corners of the DM
- Remove the DM with Mounting plate attached
- Remove the four 6-32 screws from the DM

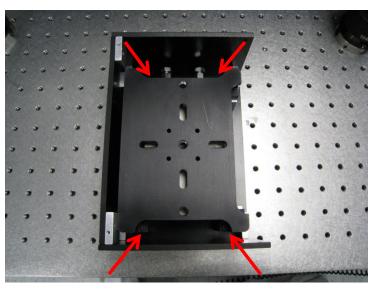

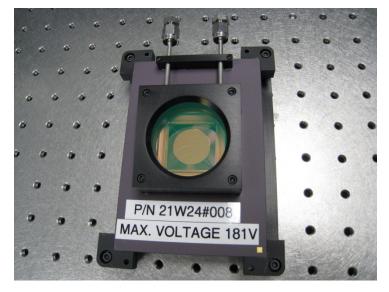


- Place the DM back in the shipping box
- Replace the four 4-40 screws

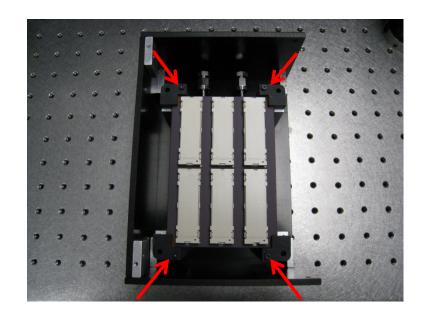


- Attach the four megarray cables
- Make sure to match up the cable designation with the labels on the package
- Do not use the two center cables on the package, C and D



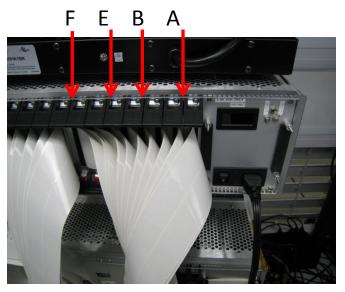

- Flip the DM with cables attached back onto the mounting plate
- Replace the four 6-32 screws

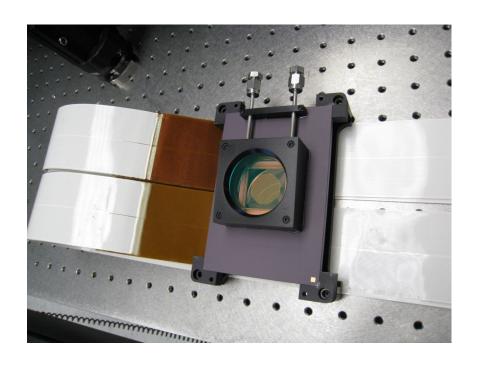

Window Assembly

- The window assembly has two steal 1/8" compression fittings for input and output
- The system should have a pressure between 1psi to 1.5psi above atmosphere with very low flow
- Do not exceed 2psi as you may incur more leaking in the assembly

