D1b TRAINER · FOAM TEMPLATES 1:1

1 Print this file at 100 % (actual size). Never 'fit to page'.
2 Measure the 50 mm bar on every page and the 100 mm square below.
3 Tape the pages of one part together: grey band = overlap, line up the crosses.
4 Cut the paper on the thick line. Trace it onto the foam. Dashed lines are marks, not cuts.
5 Orange = cut-outs (servo window, horn slits, dowel holes).

Part	Name	Material	Cut	Pages
F1	Fuselage core	XPS 30 mm	1 ×	2–4
F2	Fuselage side wall	Depron 6 mm	2 ×	5–7
T1	Stabilizer + elevator	Depron 6 mm	1 ×	8–9
T2	Fin + rudder	Depron 6 mm	1 ×	10
S1	Top skin, centre	Depron 3 mm	1 ×	11–13
S2	Top skin, outer panel + tip	Depron 3 mm	2 ×	14–16
S3	Bottom skin, centre	Depron 3 mm	1 ×	17–18
S4	Bottom skin, outer panel	Depron 3 mm	2 ×	19–20

100 × 100 mm
measure both sides

Status: Design checked · first flight pending. Calculated, not yet flown.



50 mm check: must measure exactly 50 mm




◀ NOSE



50 mm check: must measure exactly 50 mm

Saw outside the line · F1b = tunnel roof (separate piece)
Drill dowel holes after gluing (Ø 4)


F1 1/3

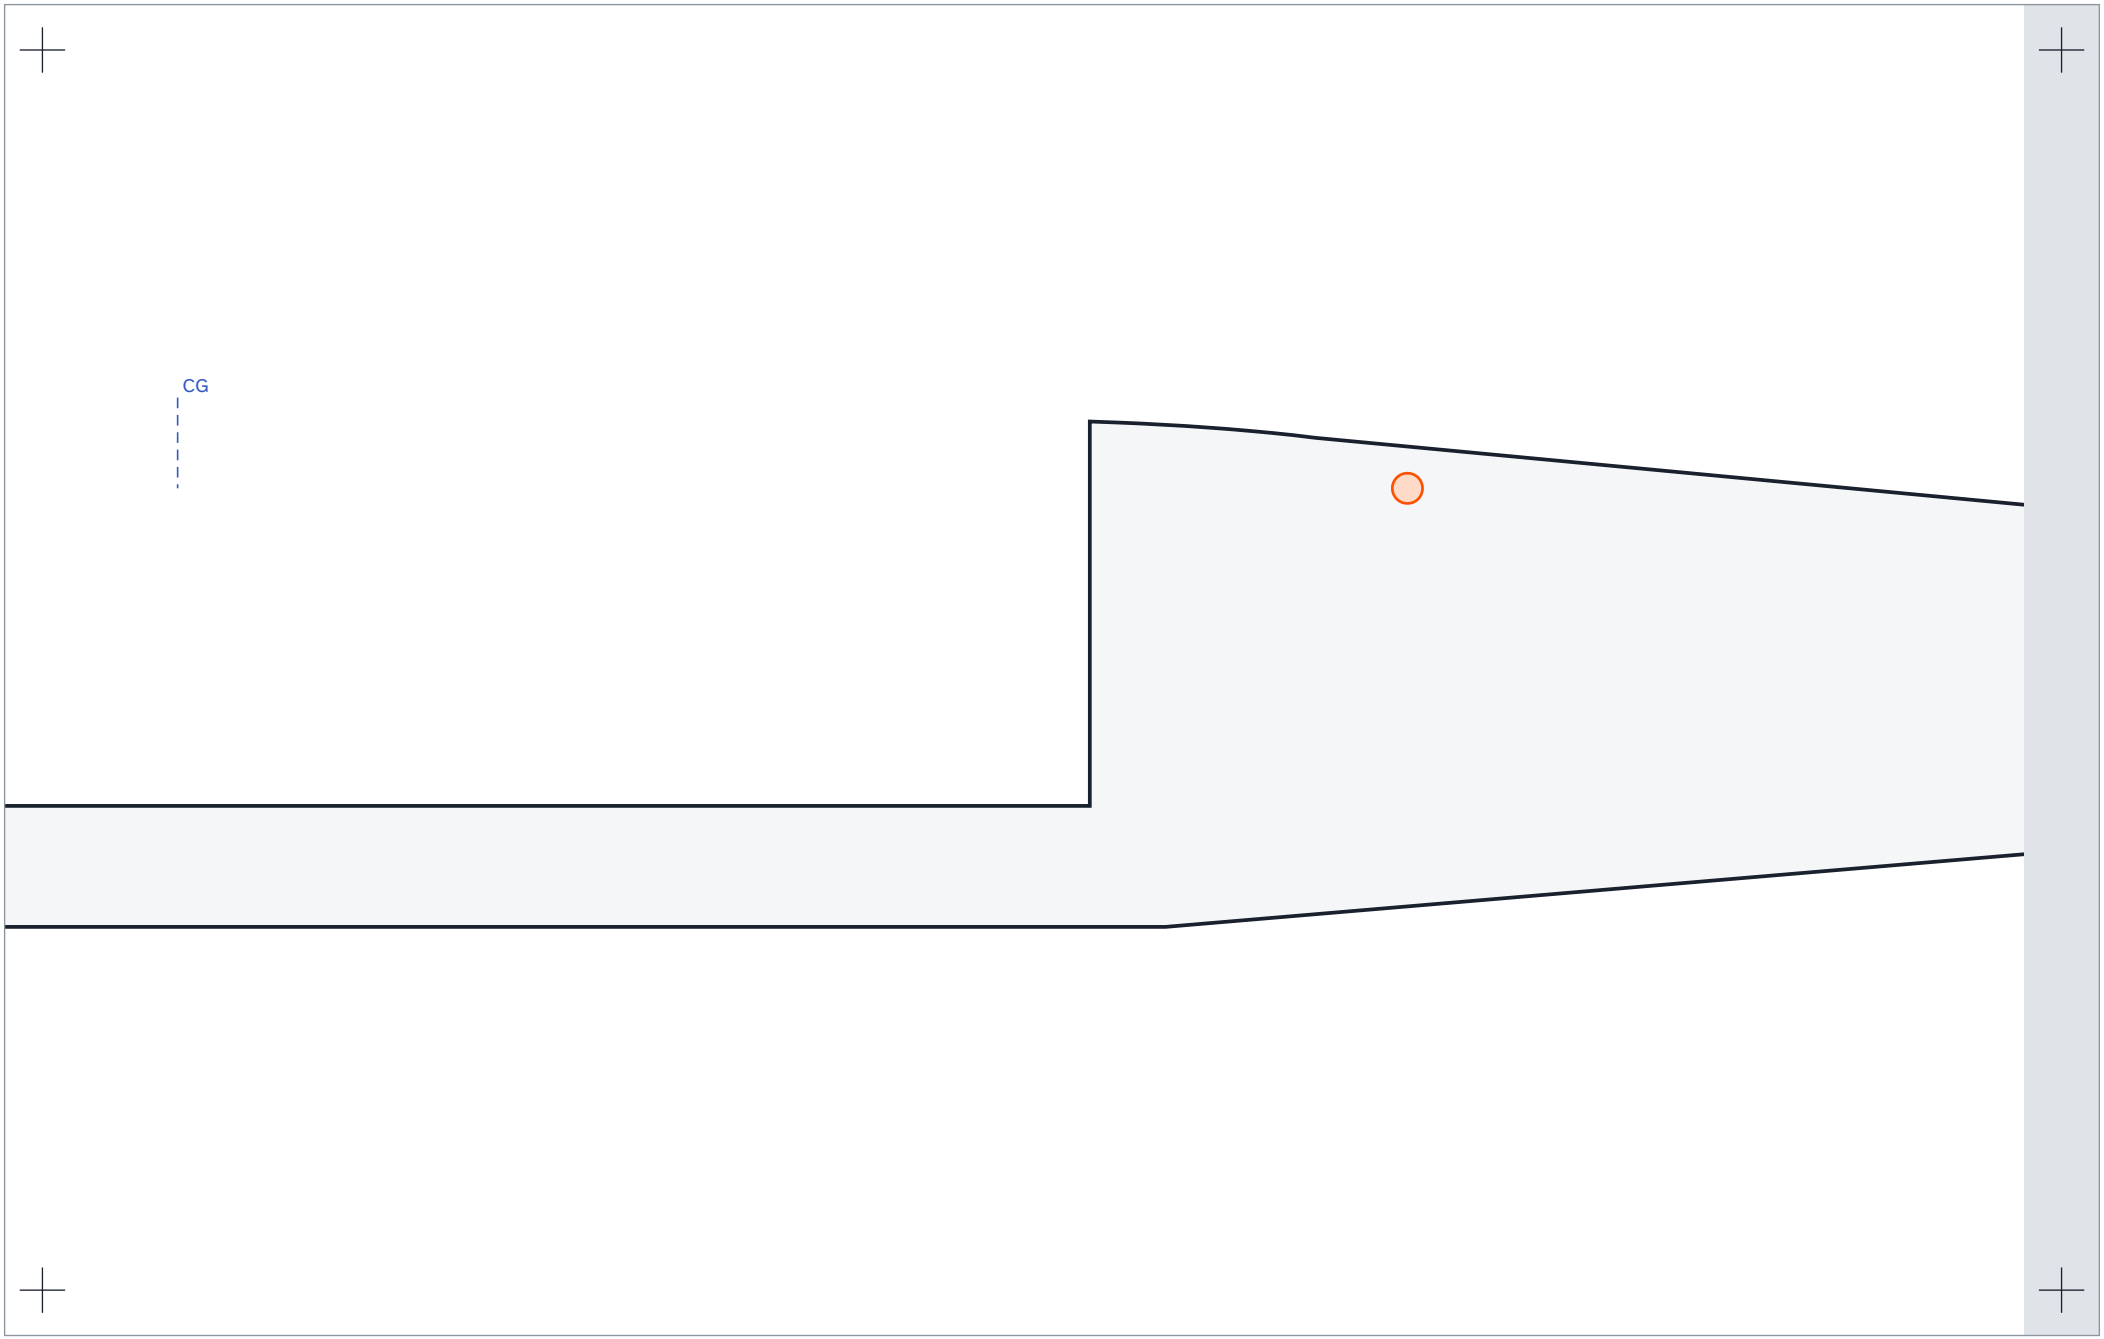

50 mm check: must measure exactly 50 mm

Saw outside the line · F1b = tunnel roof (separate piece)
Drill dowel holes after gluing (Ø 4)

F1 2/3

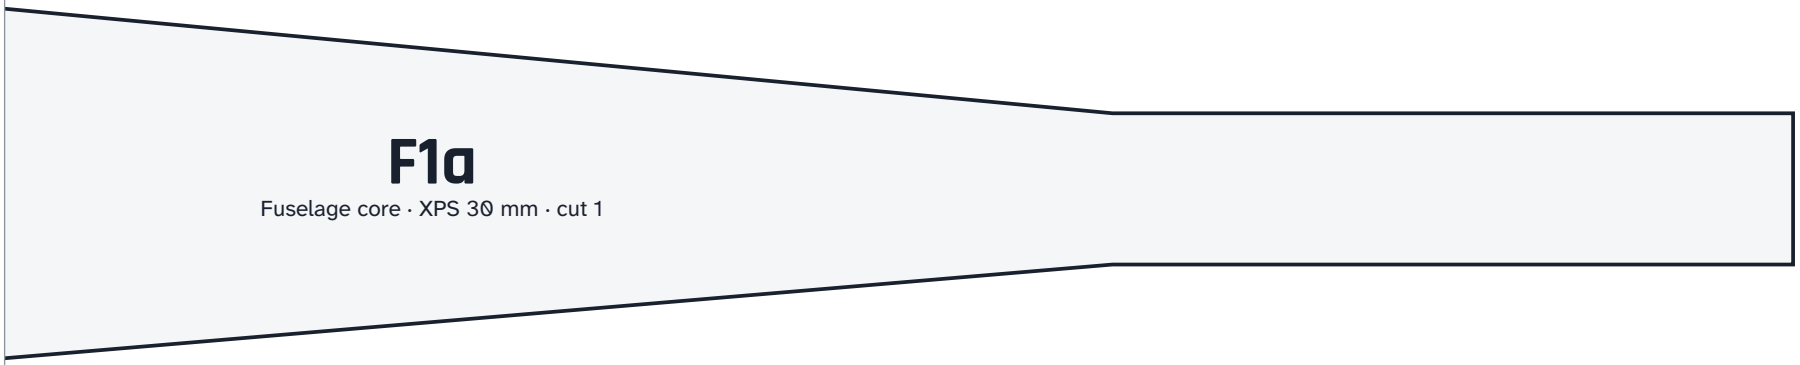


F1a

Fuselage core · XPS 30 mm · cut 1

50 mm check: must measure exactly 50 mm

Saw outside the line · F1b = tunnel roof (separate piece)
Drill dowel holes after gluing (Ø 4)


F1 3/3

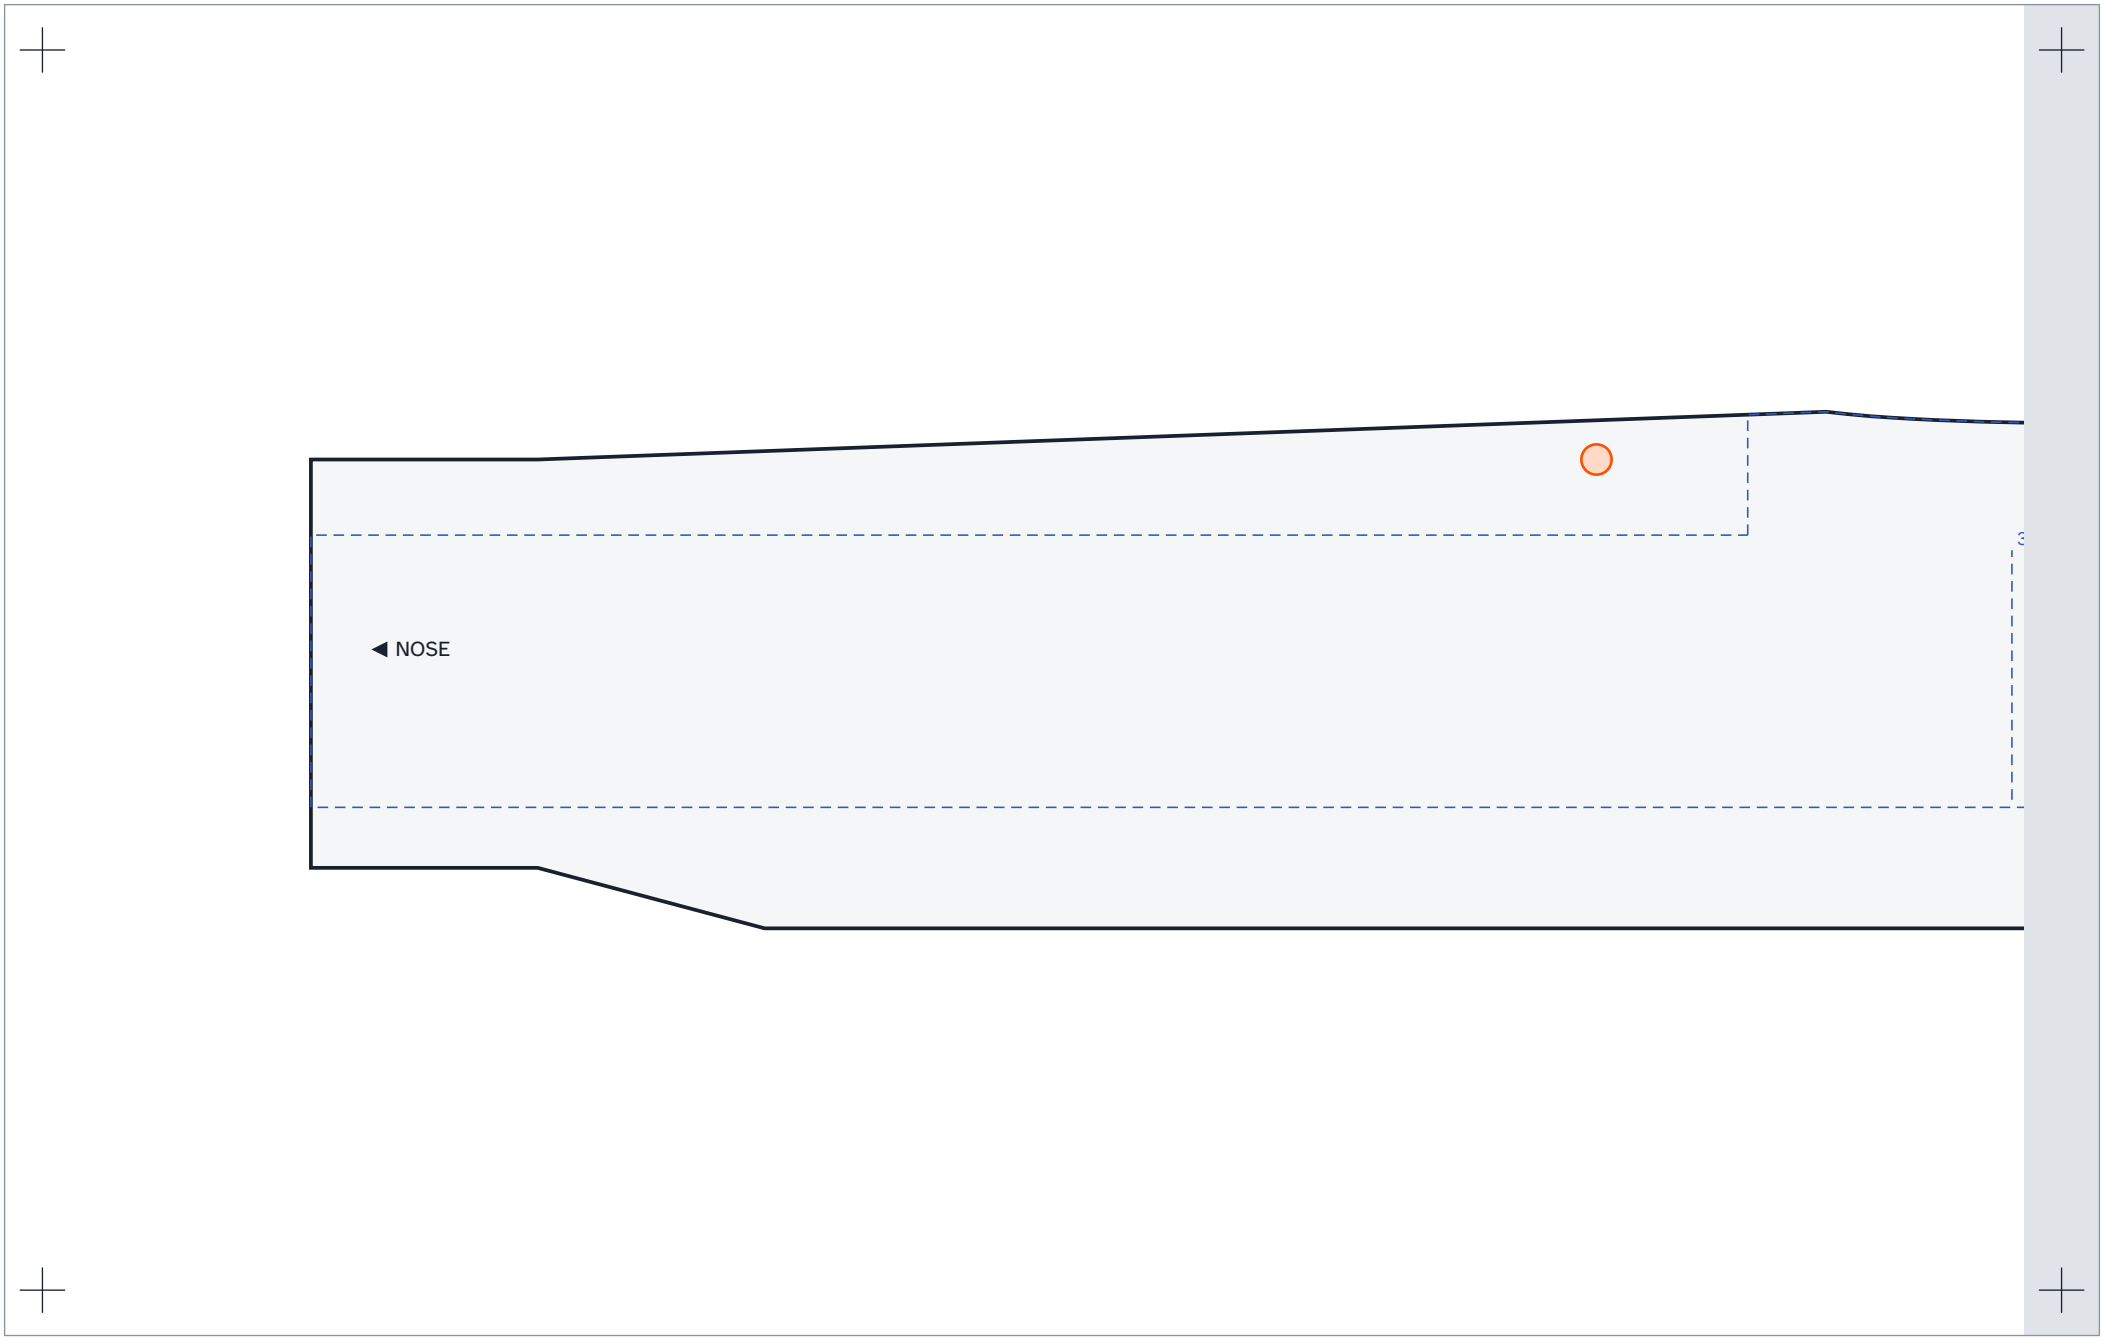

50 mm check: must measure exactly 50 mm

Cut 2 (flip one) · Cut out the servo window
Dashed = battery bay behind the wall


F2 1/3

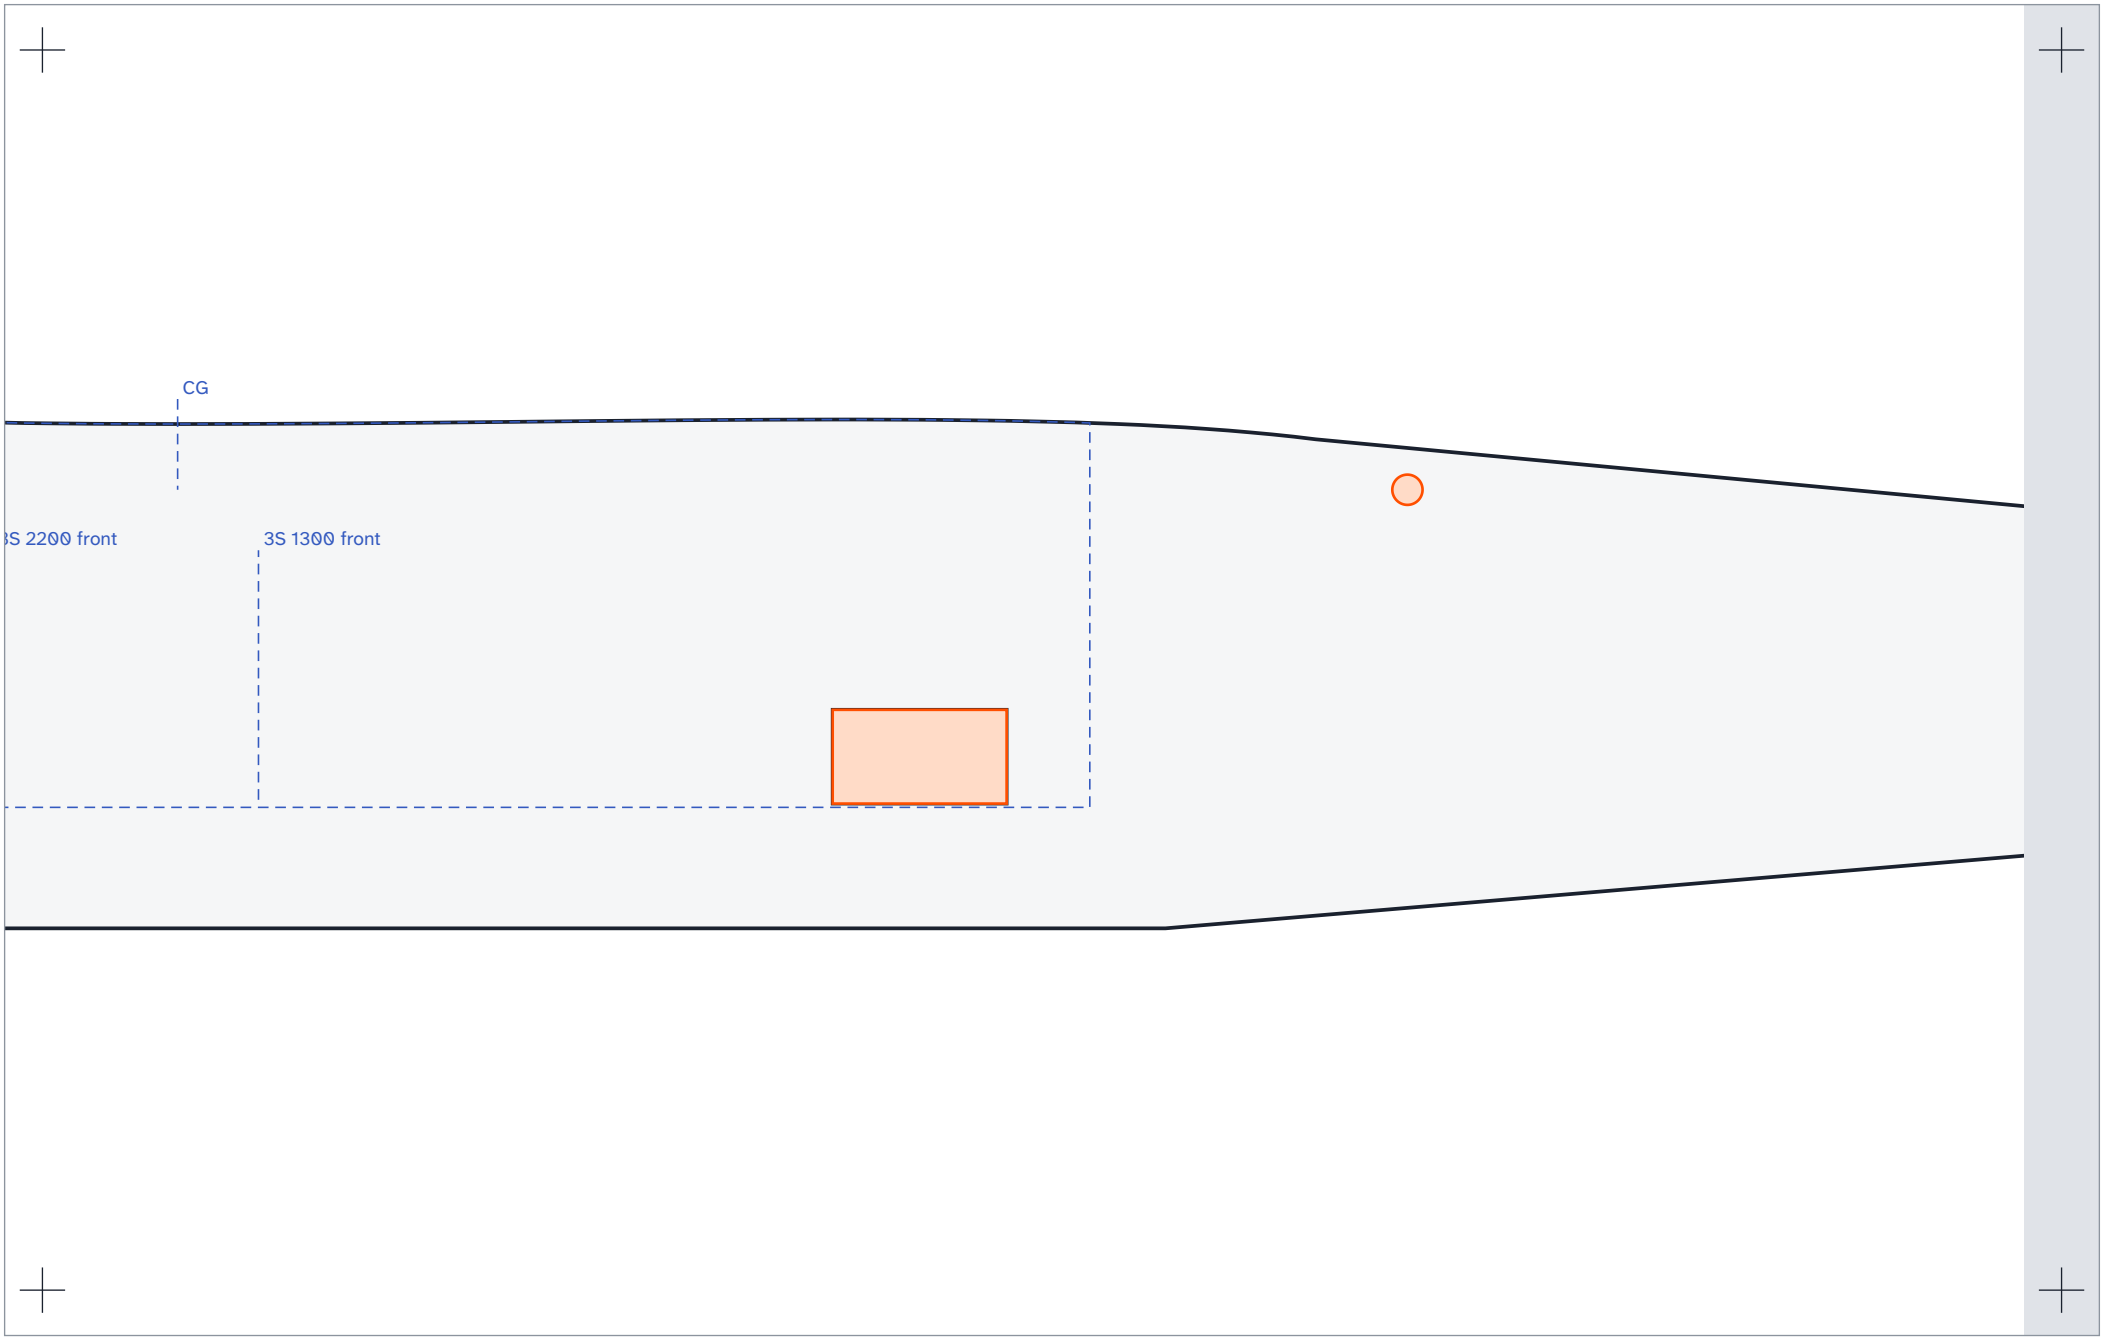

50 mm check: must measure exactly 50 mm

Cut 2 (flip one) · Cut out the servo window
Dashed = battery bay behind the wall


F2 2/3

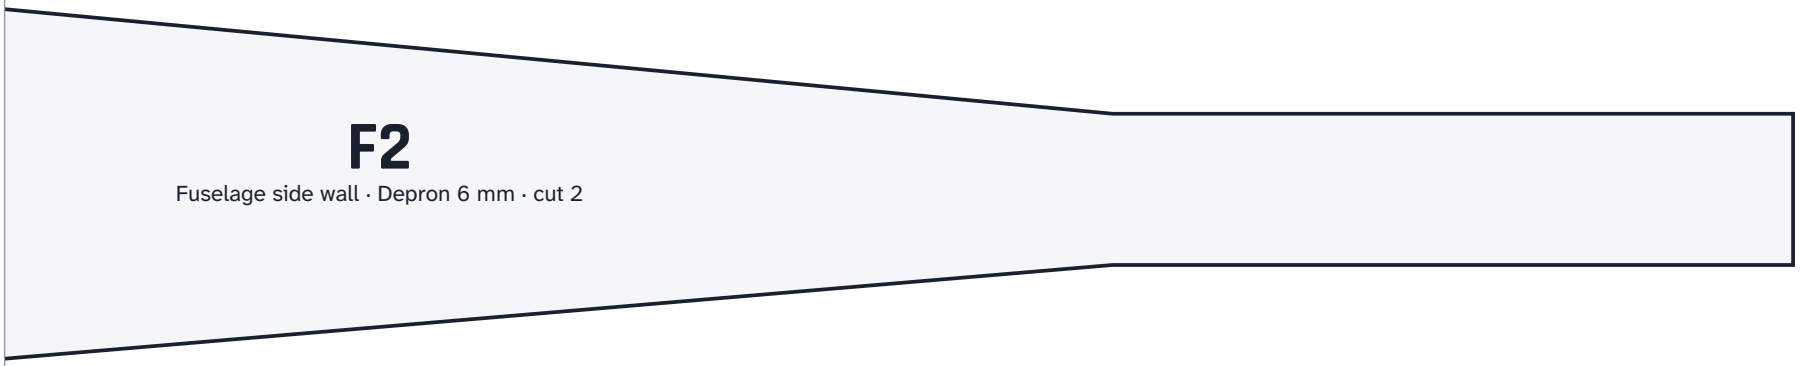

50 mm check: must measure exactly 50 mm

Cut 2 (flip one) · Cut out the servo window
Dashed = battery bay behind the wall

F2 3/3

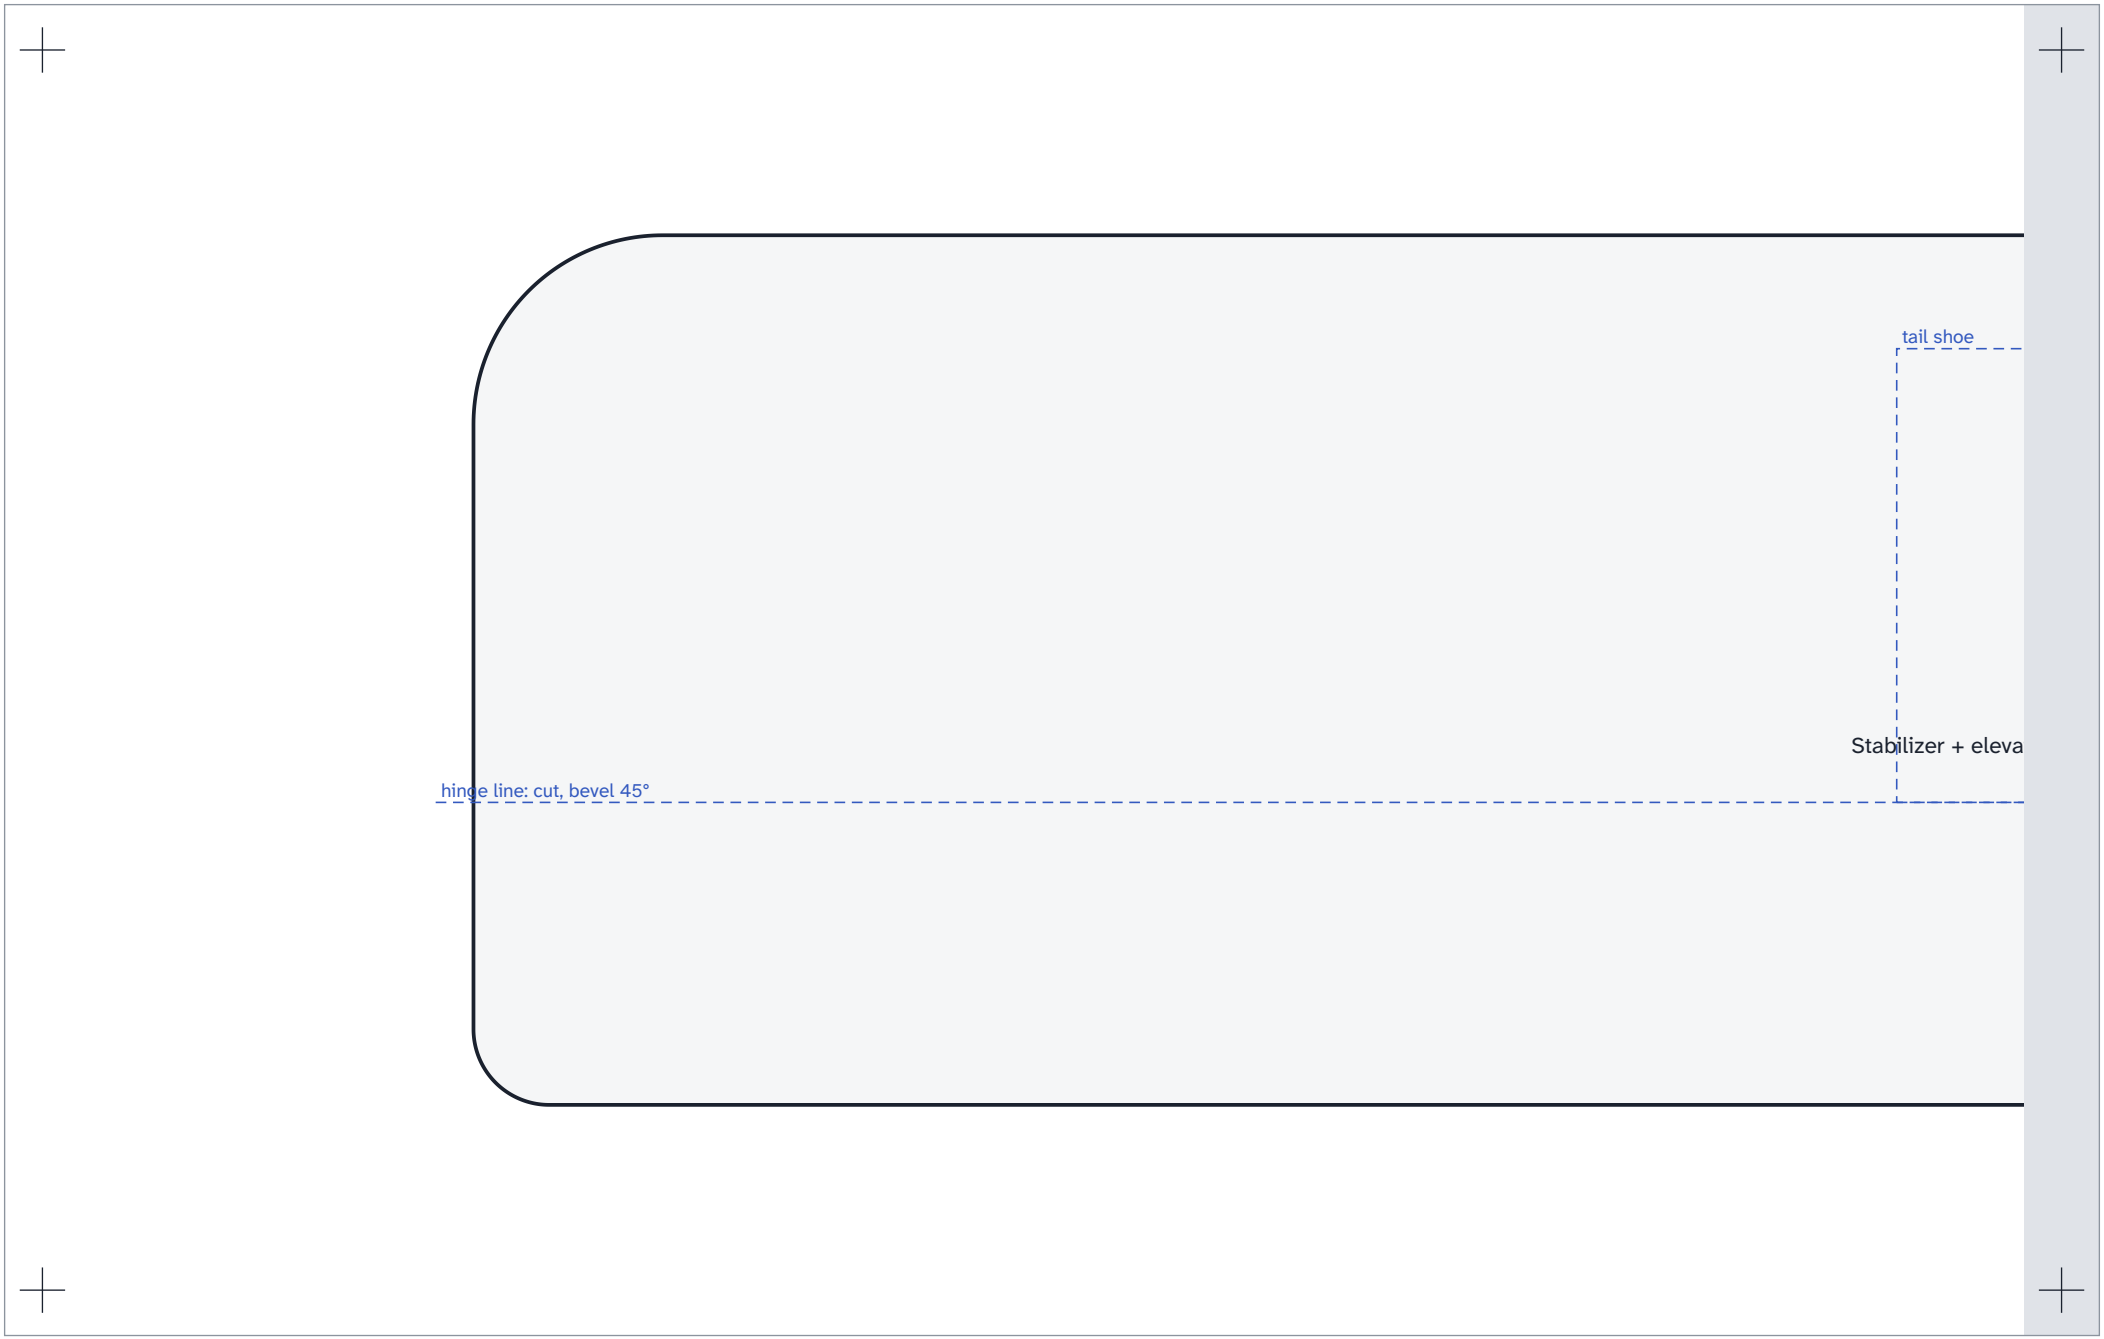

50 mm check: must measure exactly 50 mm

Horn slit 12 mm on the elevator, right side


T1 1/2



50 mm check: must measure exactly 50 mm

Horn slit 12 mm on the elevator, right side


T1 2/2

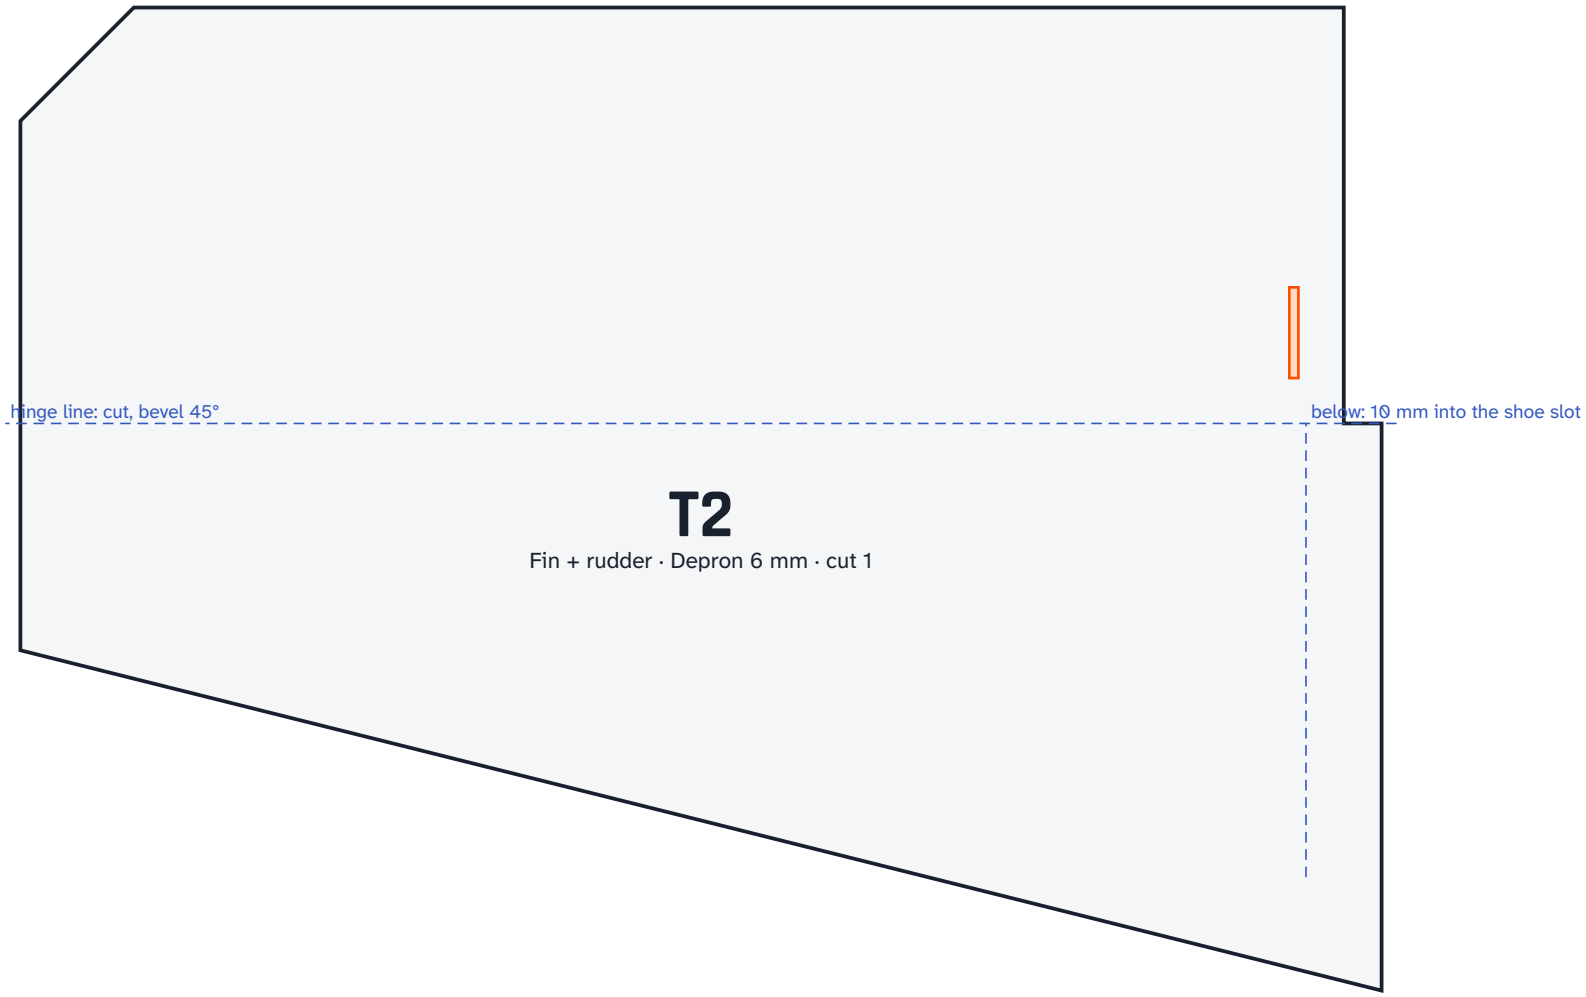

50 mm check: must measure exactly 50 mm

Horn slit on the rudder, left side

T2 1/1

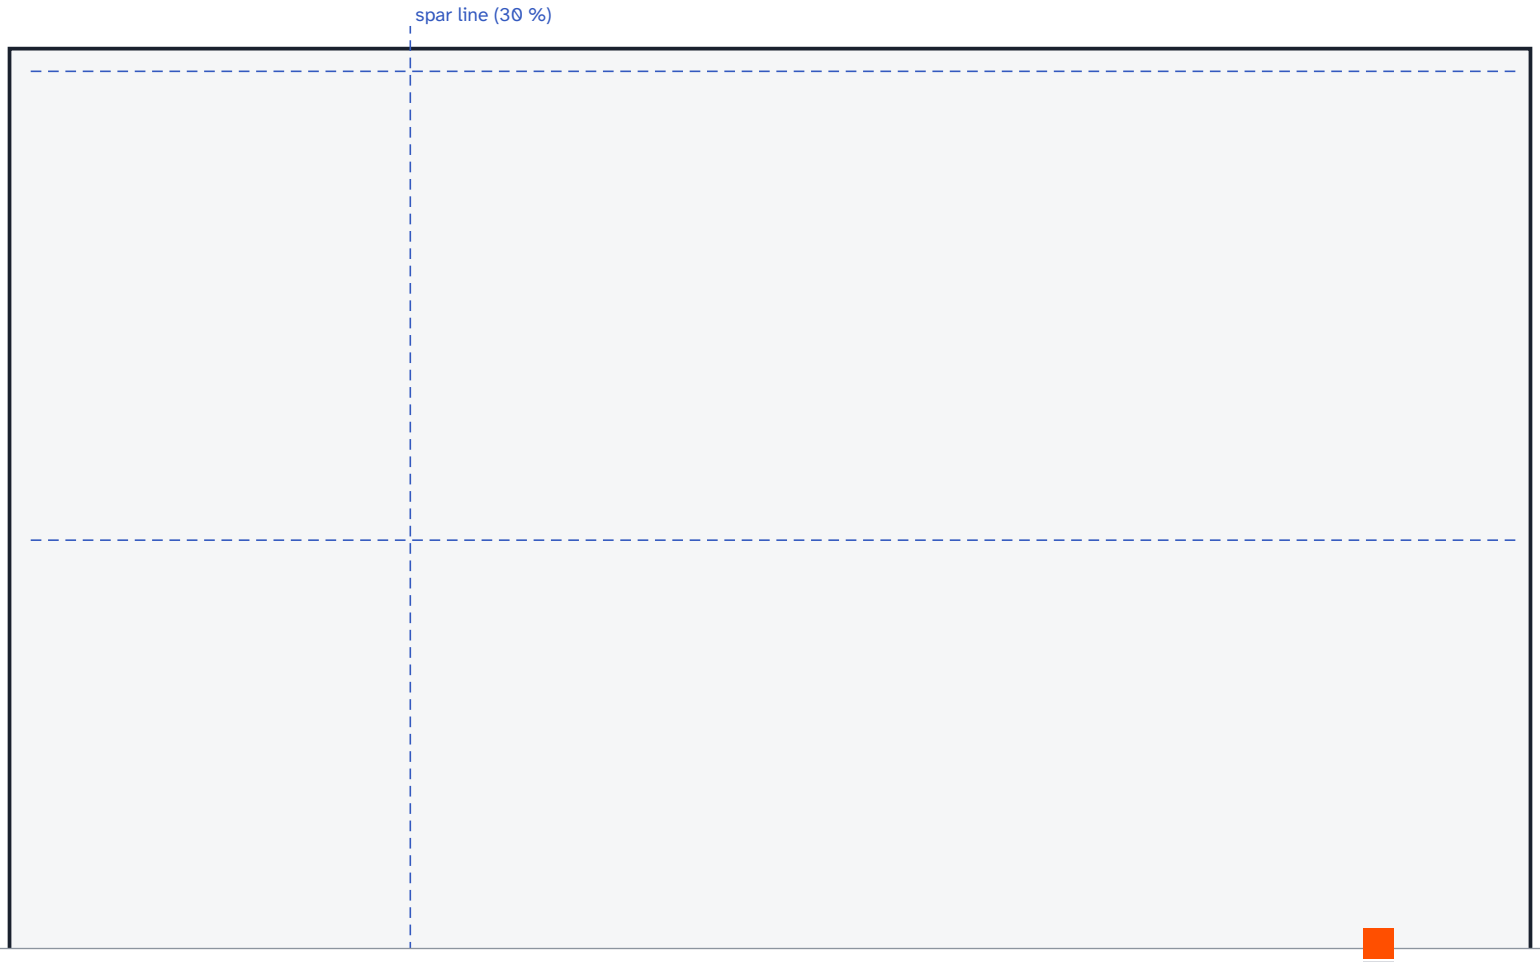

50 mm check: must measure exactly 50 mm

Dashed lines = ribs (glue lines)


S1 1/3



50 mm check: must measure exactly 50 mm

Dashed lines = ribs (glue lines)


S1 2/3

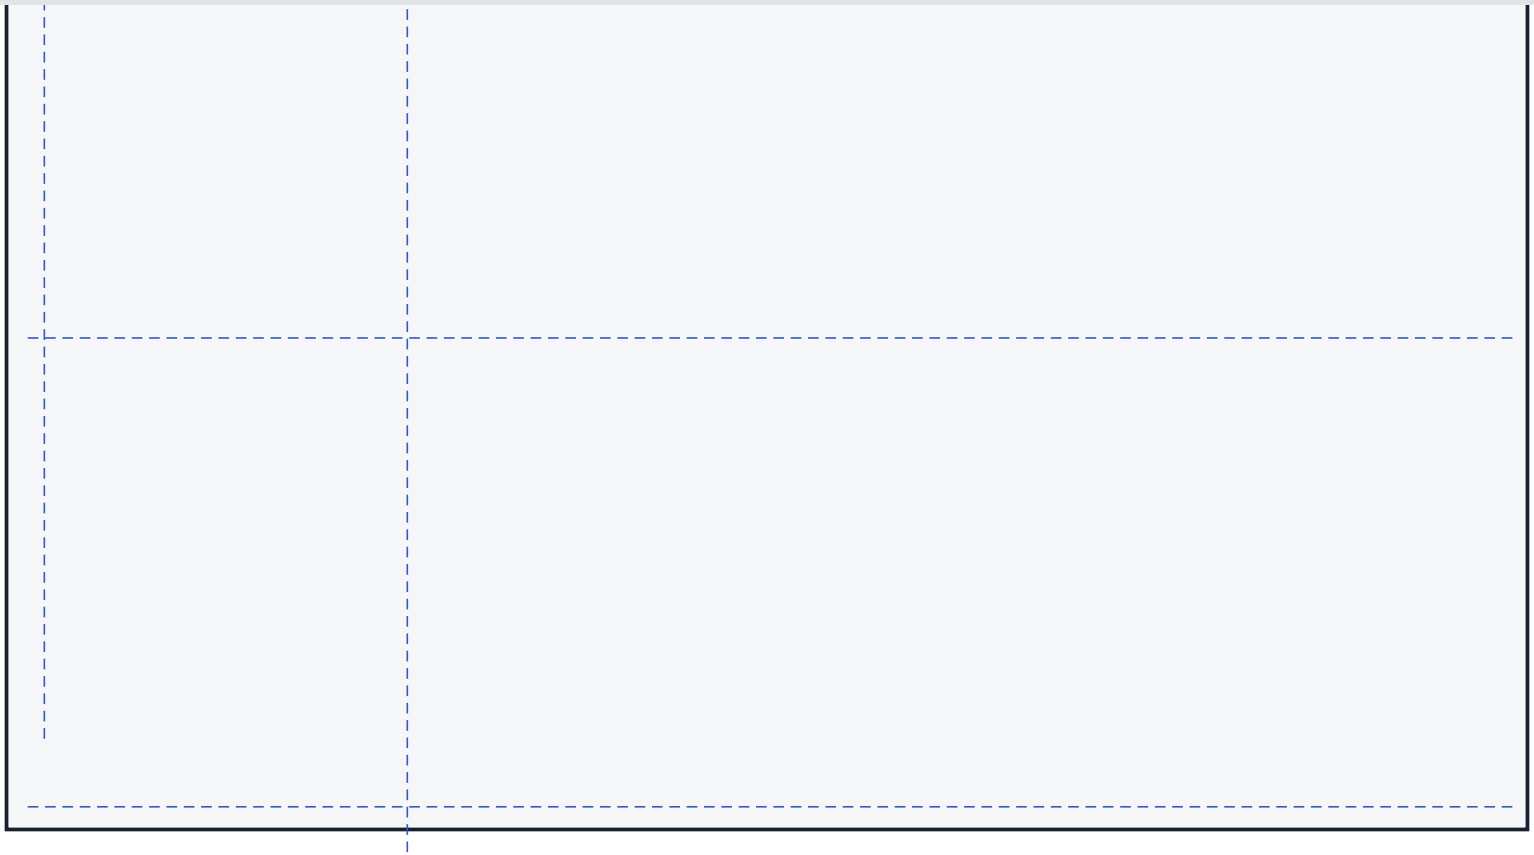

50 mm check: must measure exactly 50 mm

Dashed lines = ribs (glue lines)


S1 3/3

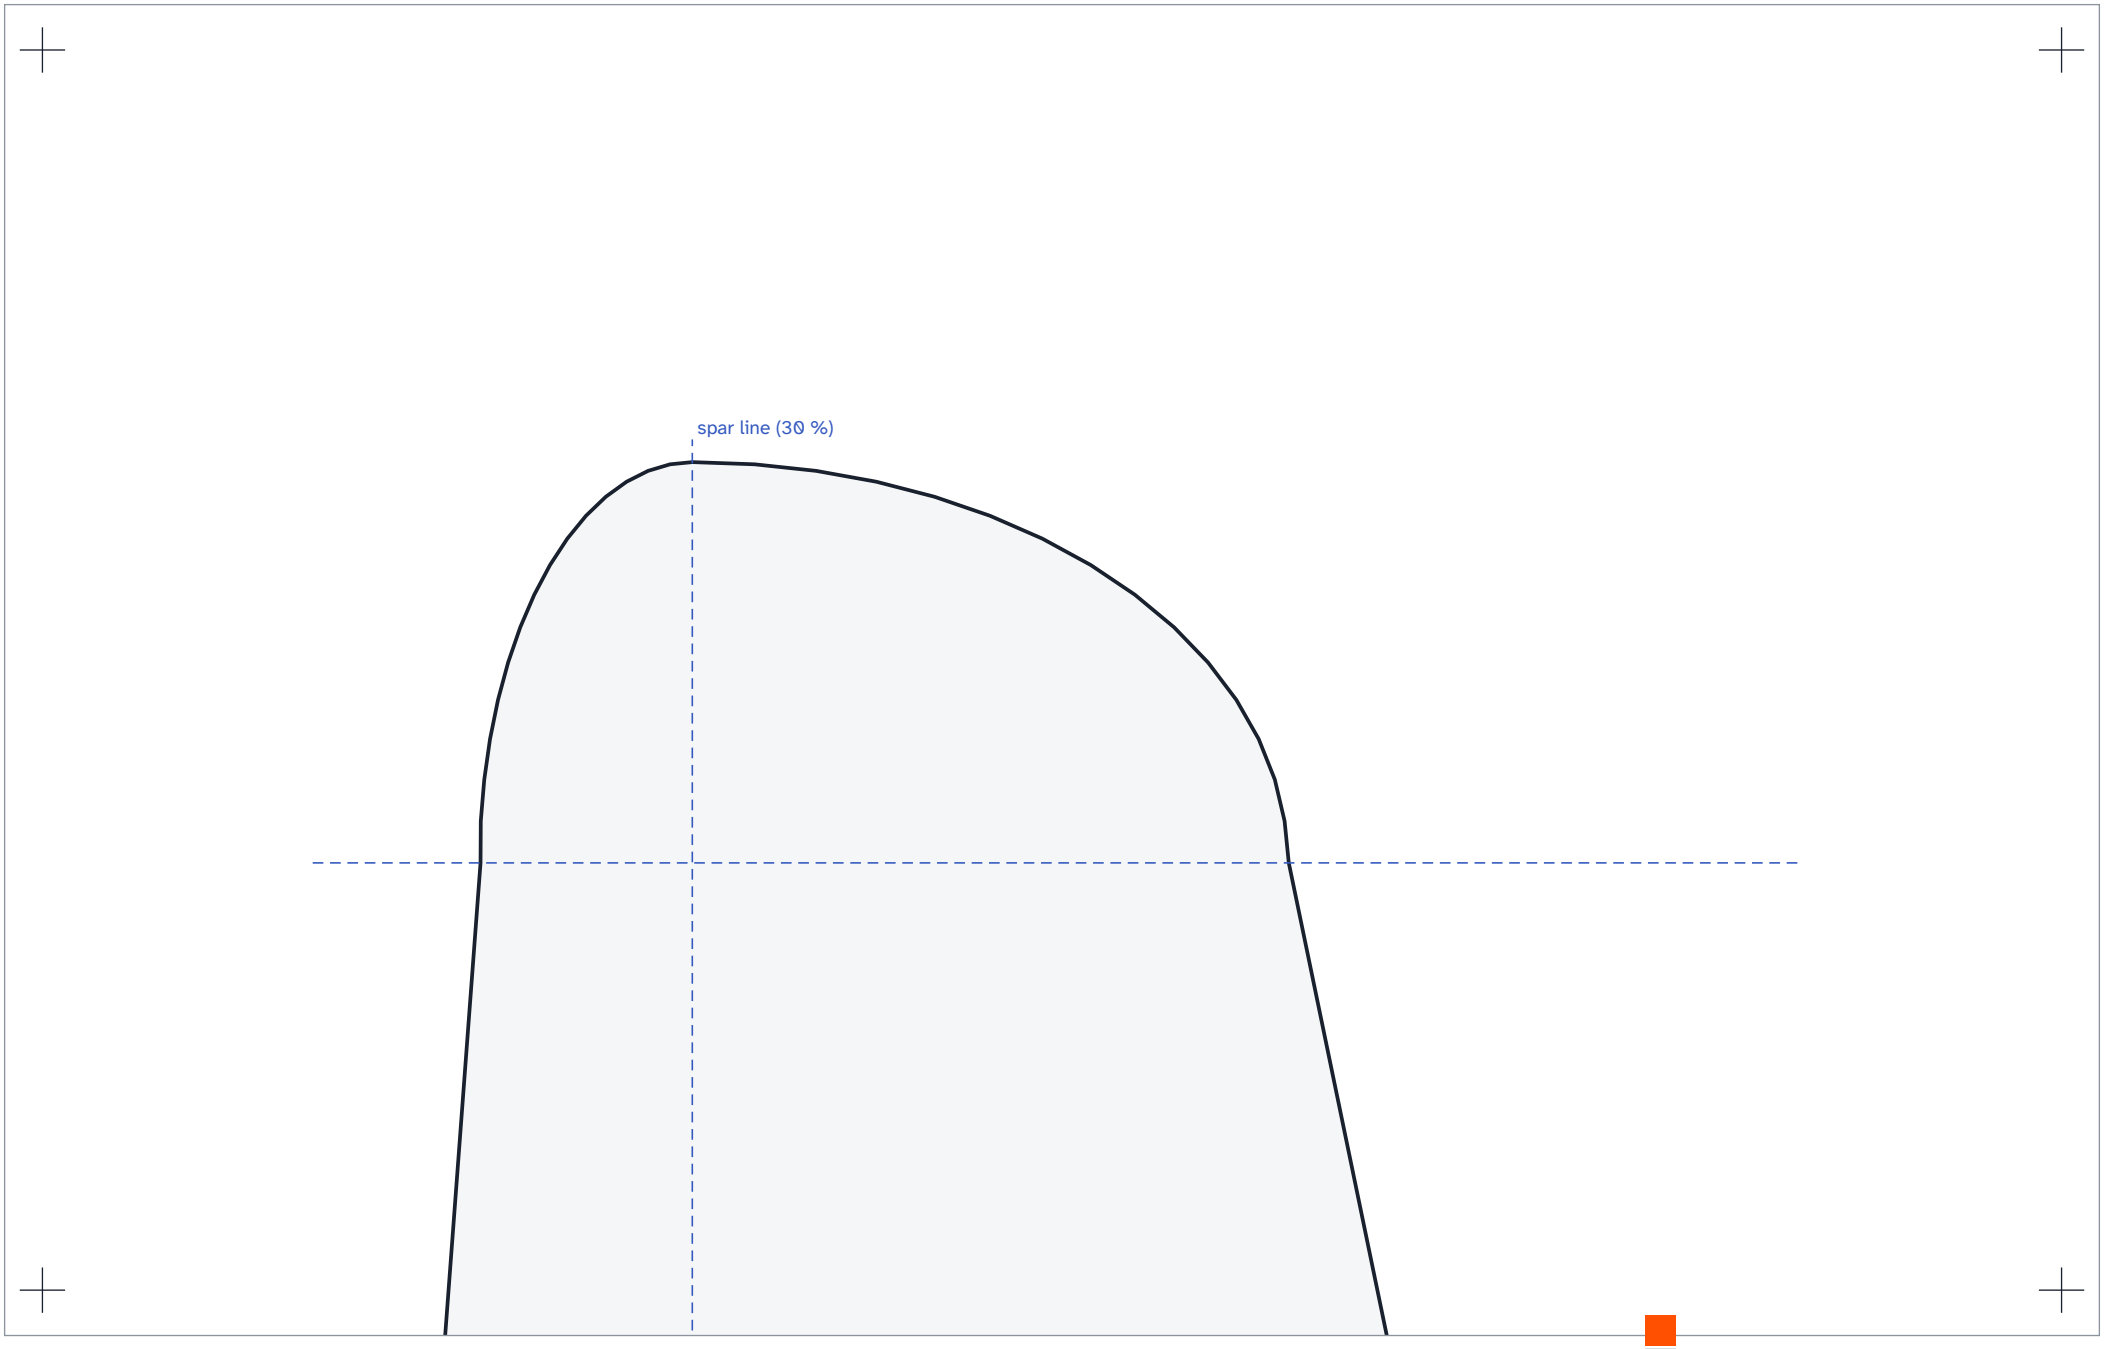

50 mm check: must measure exactly 50 mm

Cut 2, flip one for the left wing · Dashed lines = ribs (glue lines)
Left end = break, right end = tip


S2 1/3

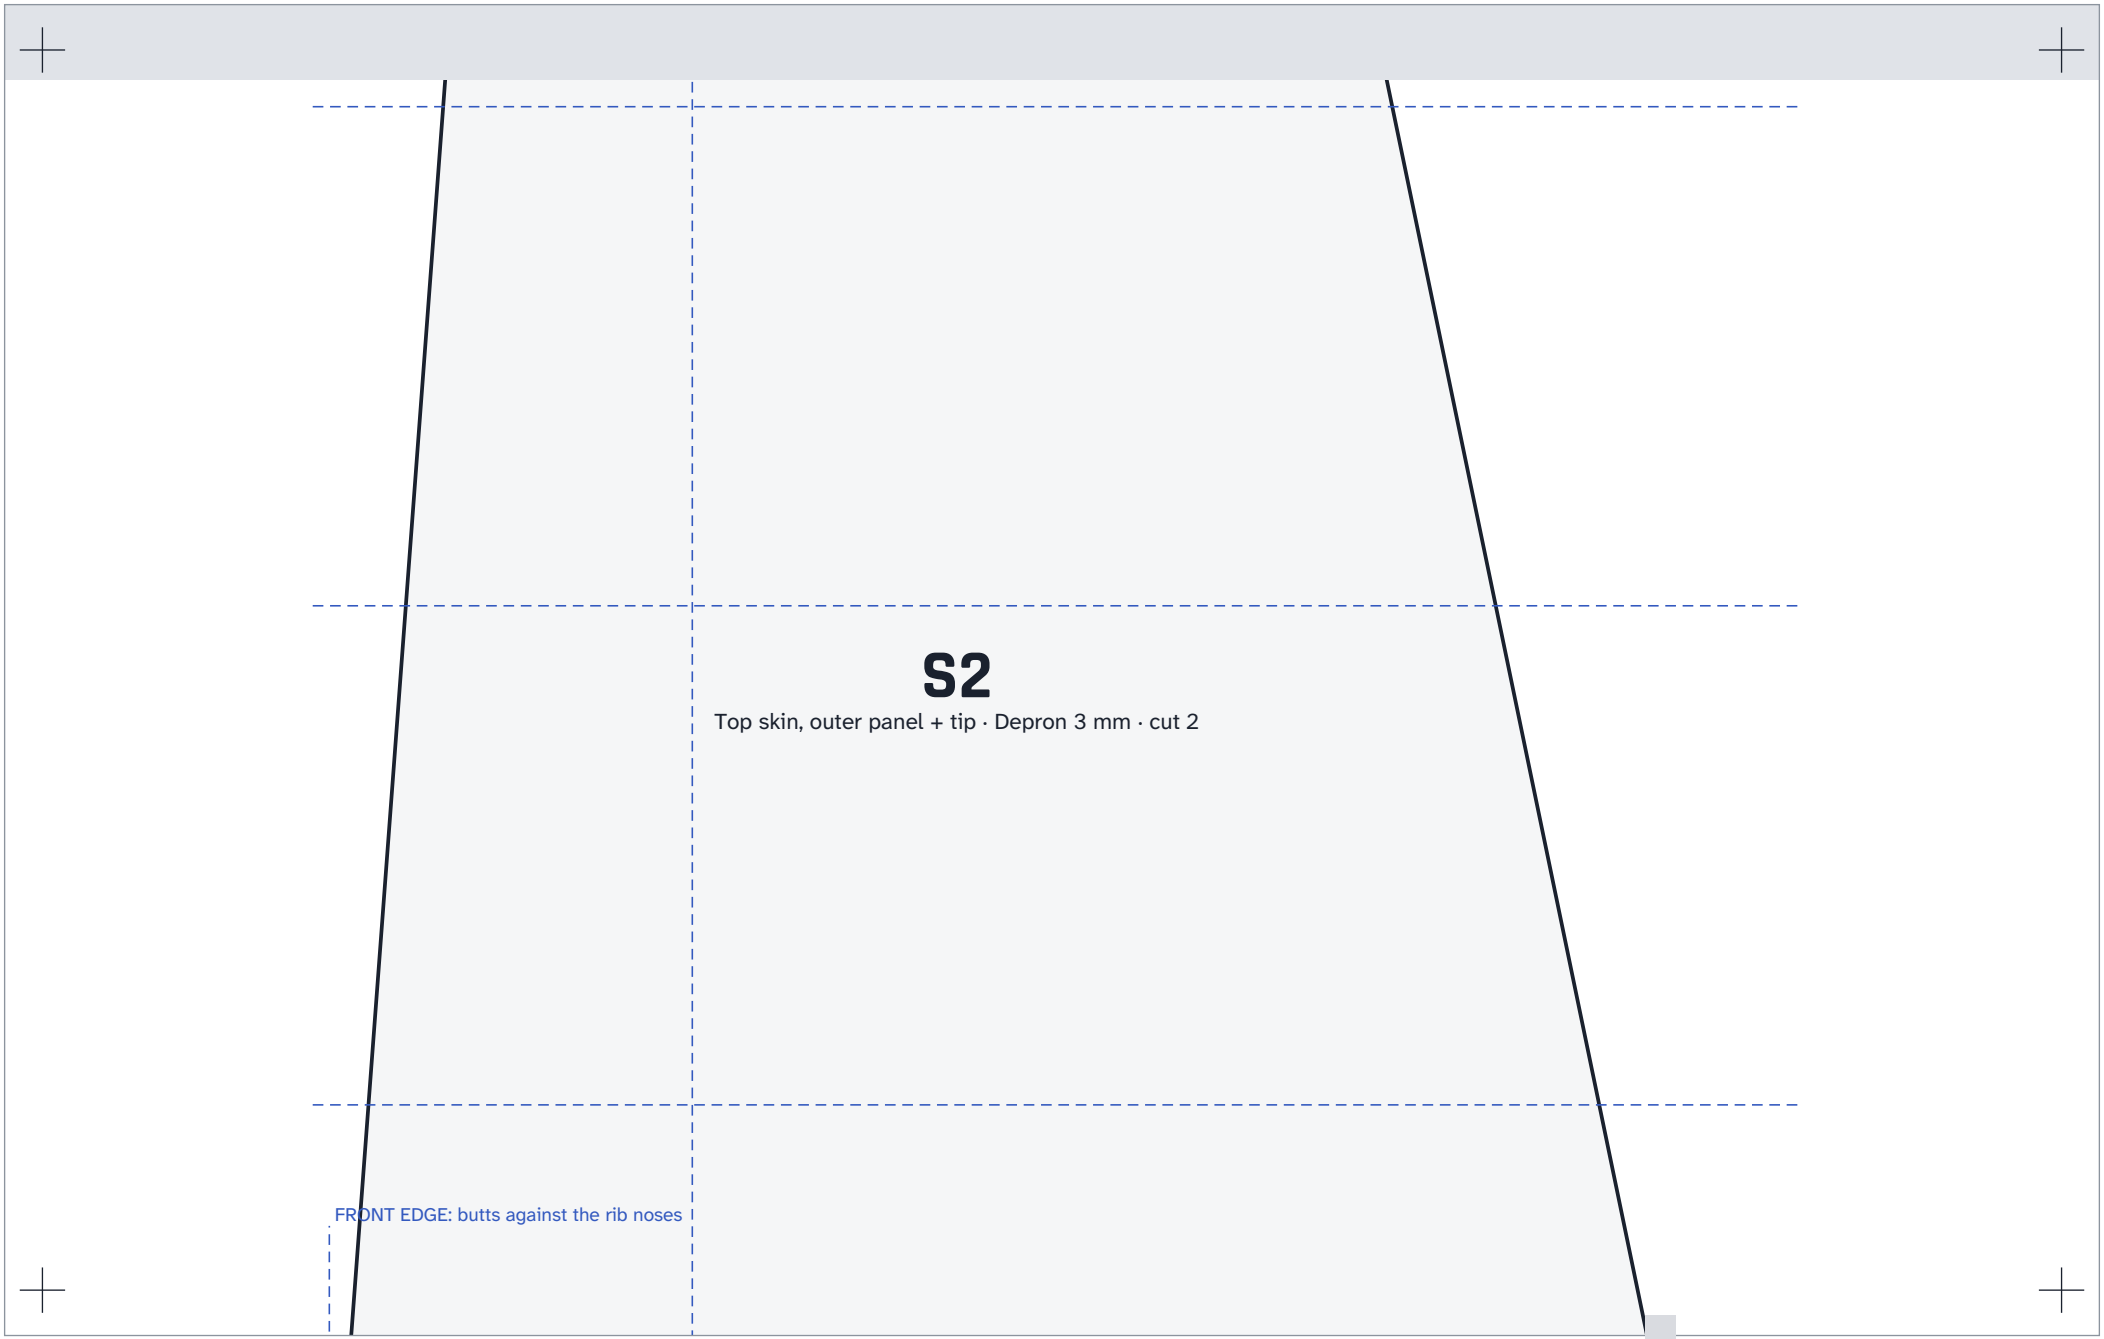

50 mm check: must measure exactly 50 mm

Cut 2, flip one for the left wing · Dashed lines = ribs (glue lines)
Left end = break, right end = tip

S2 2/3

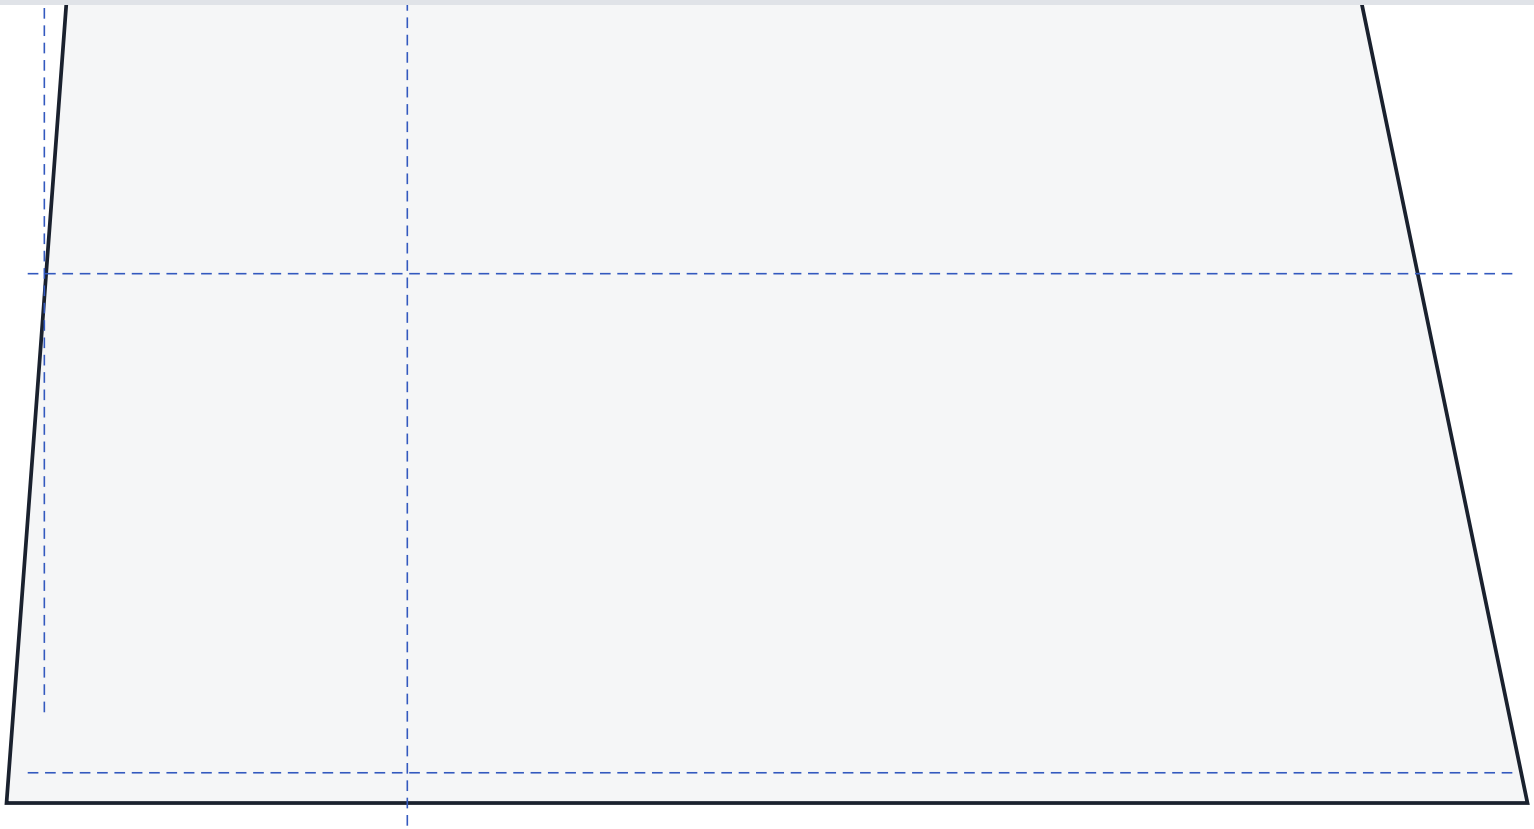

50 mm check: must measure exactly 50 mm

Cut 2, flip one for the left wing · Dashed lines = ribs (glue lines)
Left end = break, right end = tip


S2 3/3



50 mm check: must measure exactly 50 mm

Dashed lines = ribs (glue lines)


S3 1/2

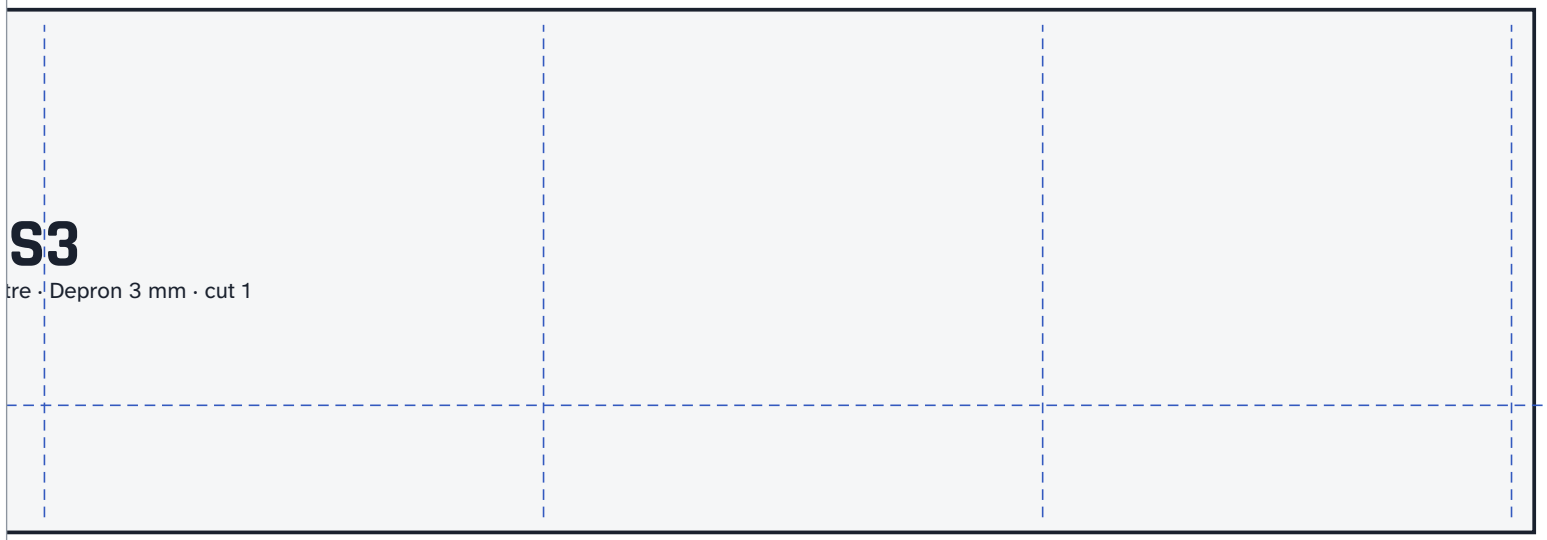

50 mm check: must measure exactly 50 mm

Dashed lines = ribs (glue lines)


S3 2/2

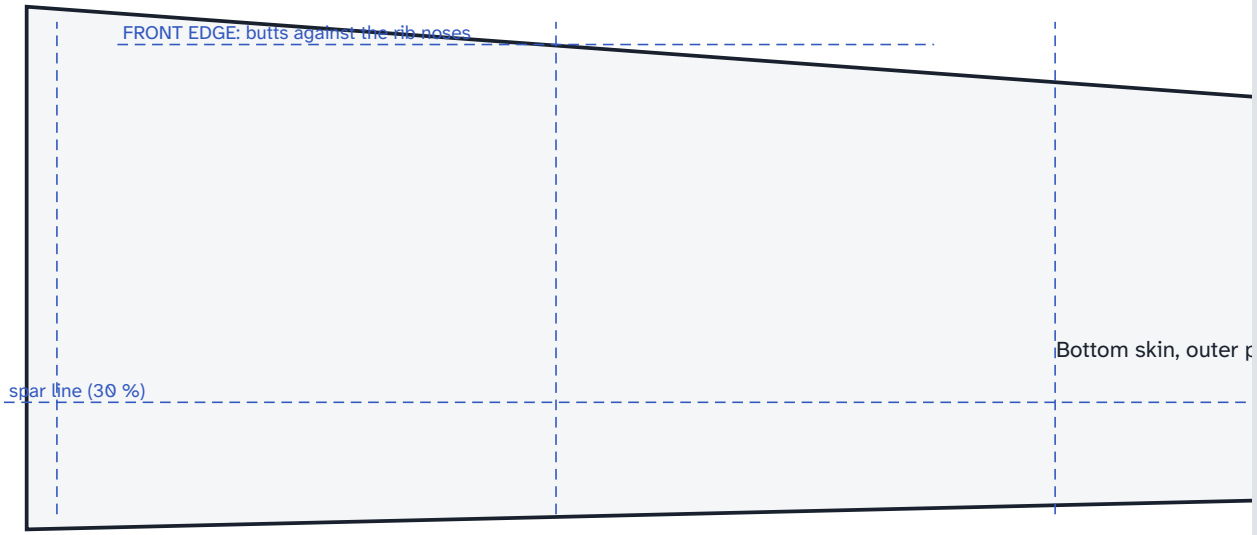

50 mm check: must measure exactly 50 mm

Cut 2, flip one for the left wing · Dashed lines = ribs (glue lines)
Left end = break, right end = tip

S4 1/2

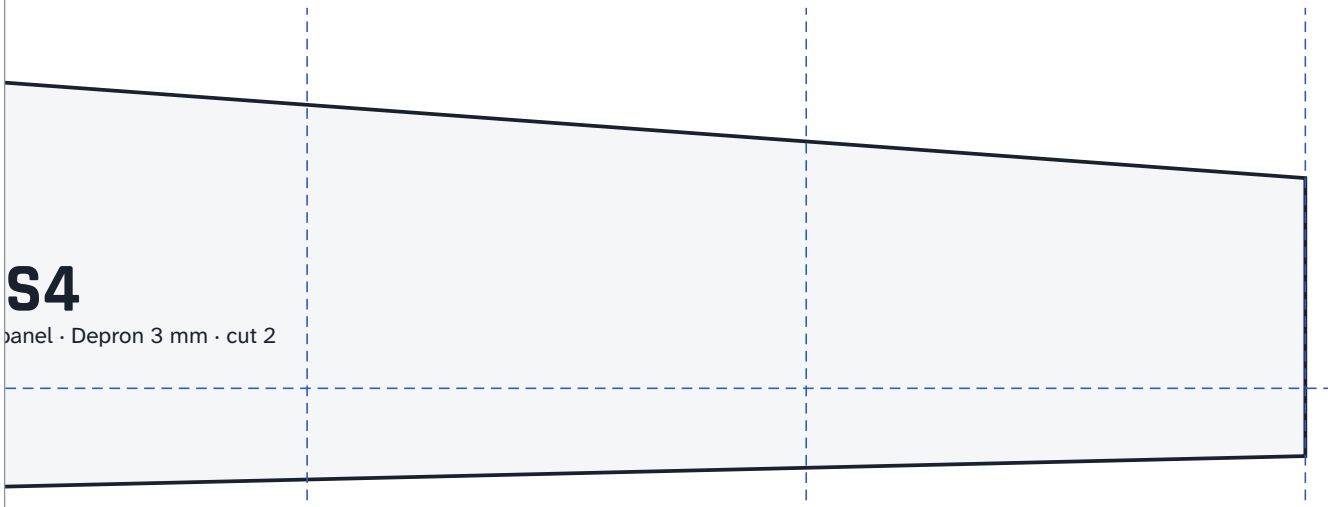

S4

panel · Depron 3 mm · cut 2

50 mm check: must measure exactly 50 mm

Cut 2, flip one for the left wing · Dashed lines = ribs (glue lines)
Left end = break, right end = tip

S4 2/2