
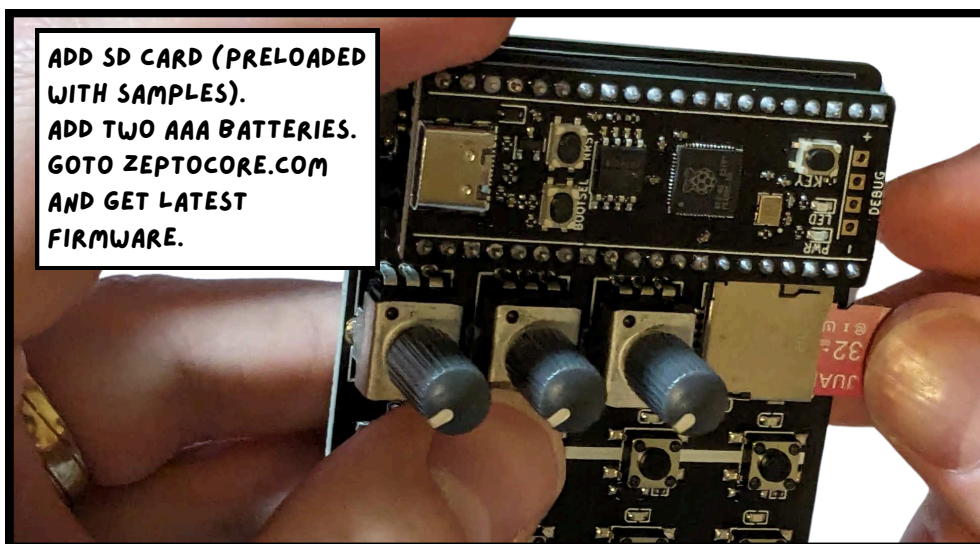
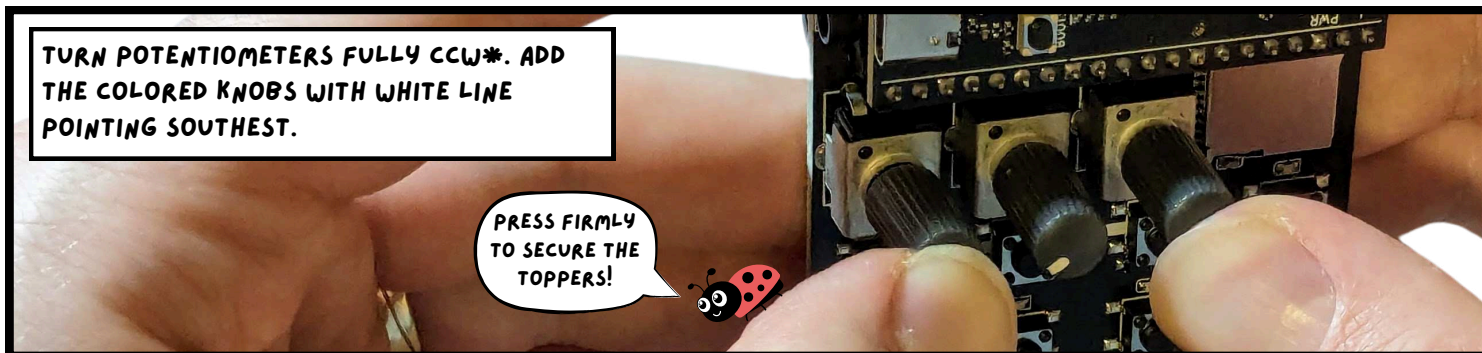
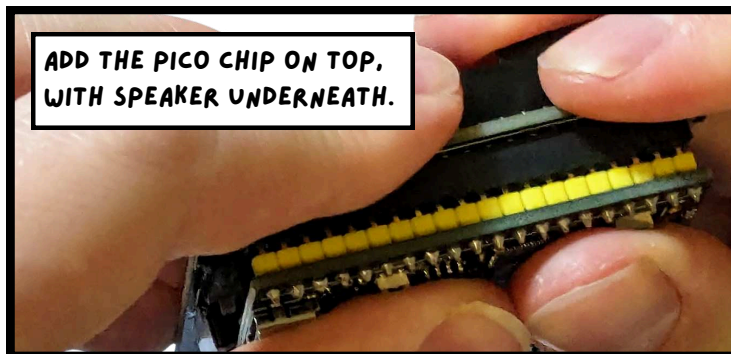



ZEPTOCORE DIY KIT

YOU CAN
DO IT!

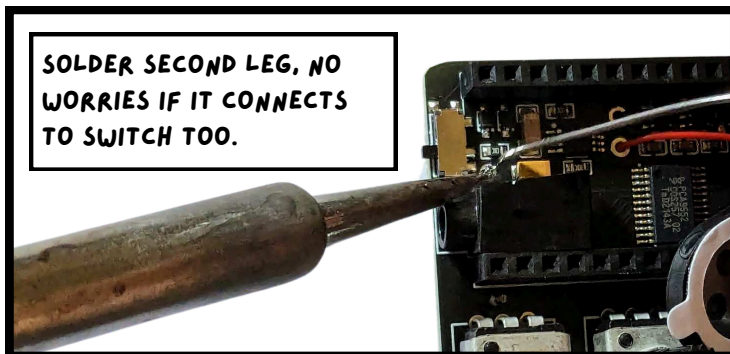


BY
INFINITE
DIGITS

LET'S BUILD THIS:

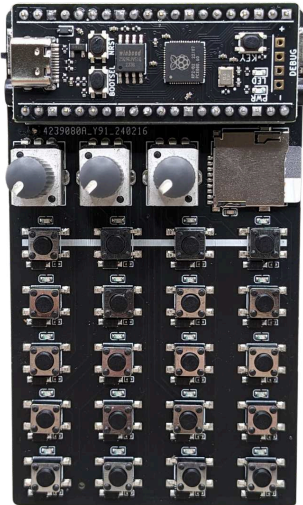

WHAT YOU'LL NEED:


SOLDERING IRON



SOLDER WIRE



ELECTRICAL TAPE

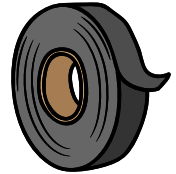


WIRE CUTTER




OPTIONAL: GORILLA EPOXY




WIRE STRIPPERS

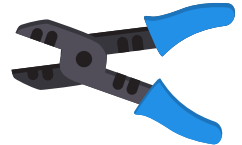

UNWRAP THE ZEPTOCORE BOARD.

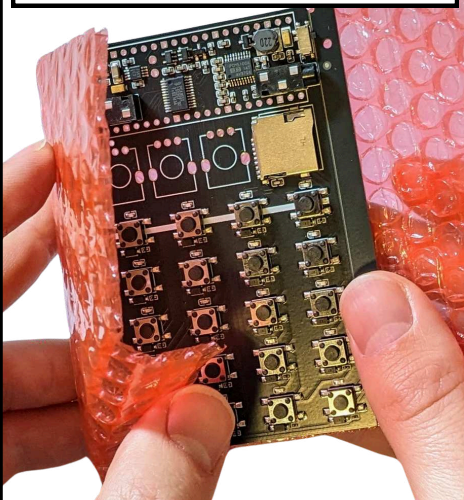

USE WIRE CUTTERS TO
REMOVE THE EDGES.

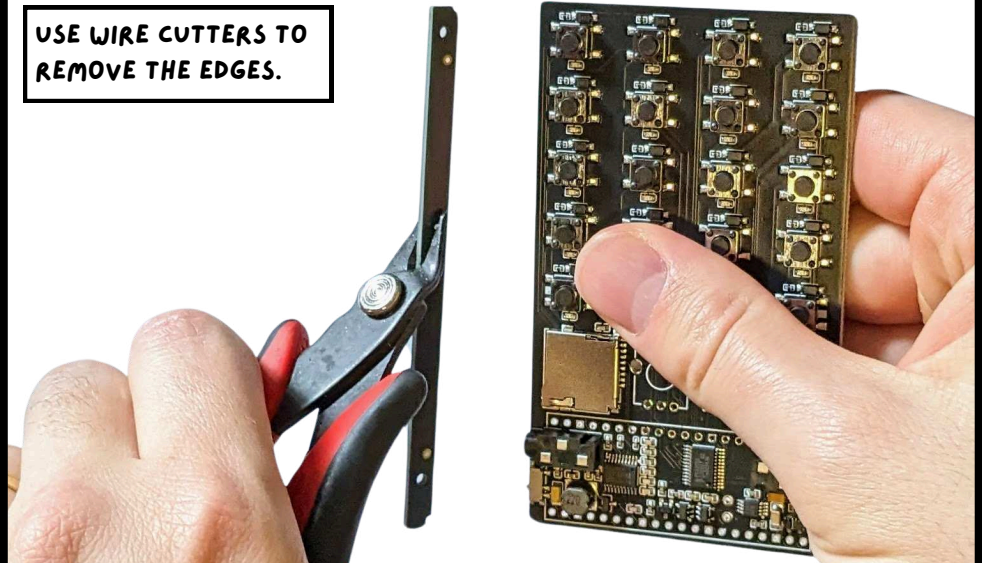











CUT TWO PIECES
OF ELECTRICAL
TAPE TO ABOUT
6 MM X 11 MM.




TAPE WILL
PREVENT SHORT
CIRCUITS

PLACE A PIECE OF
TAPE ON TOP OF
EACH OF THE
HEADPHONE JACKS.

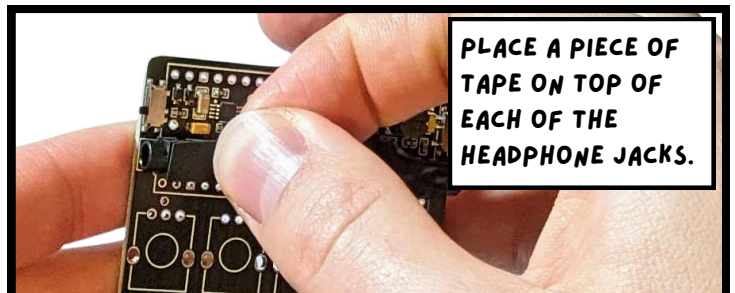


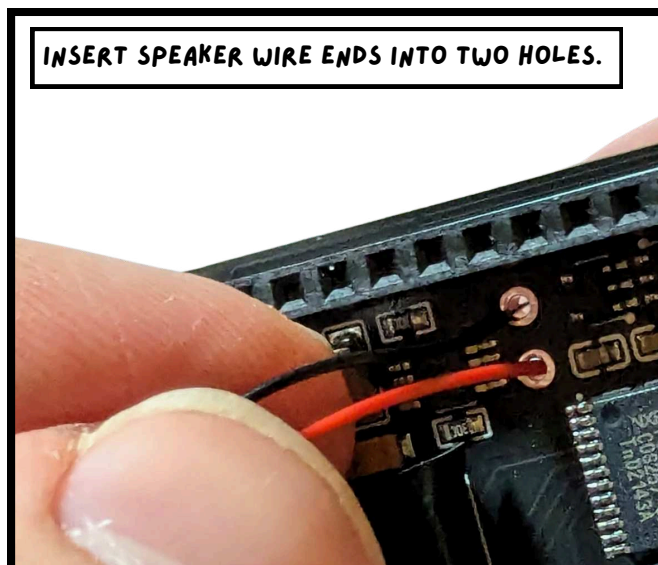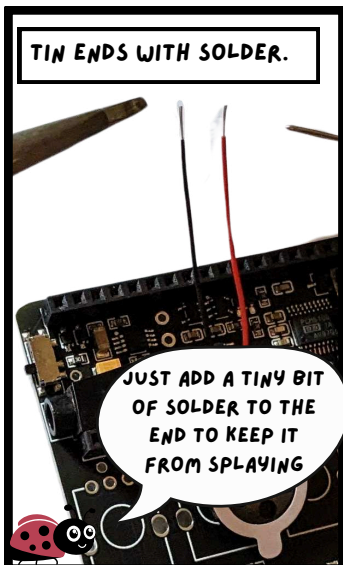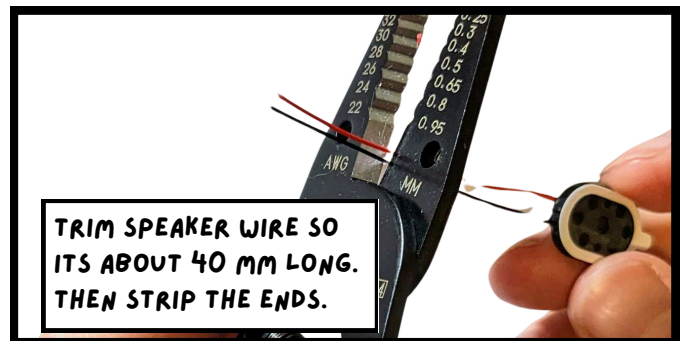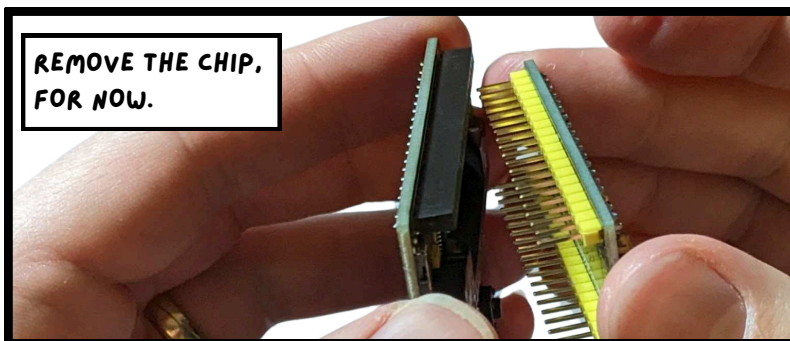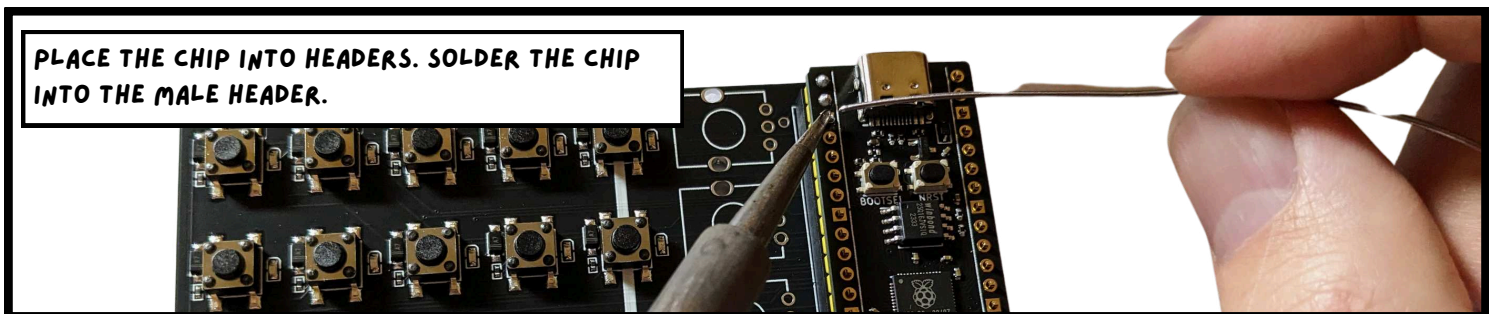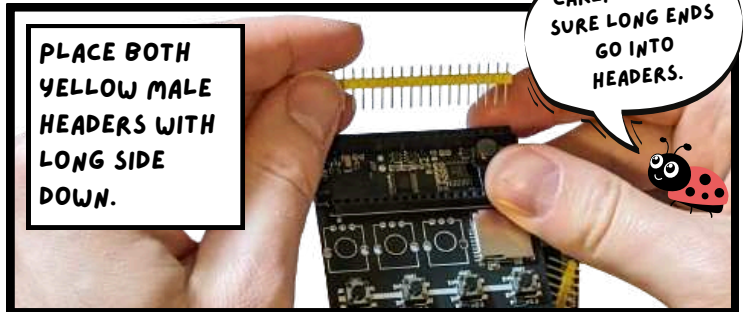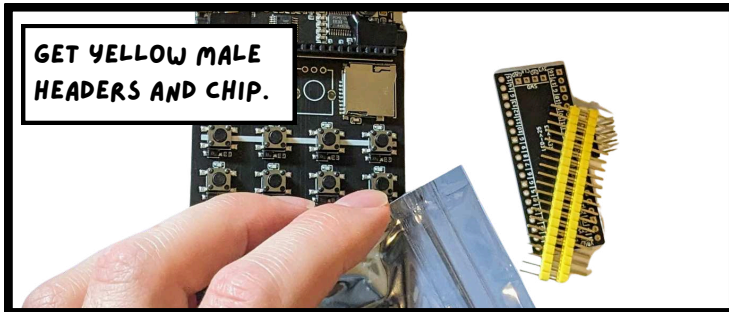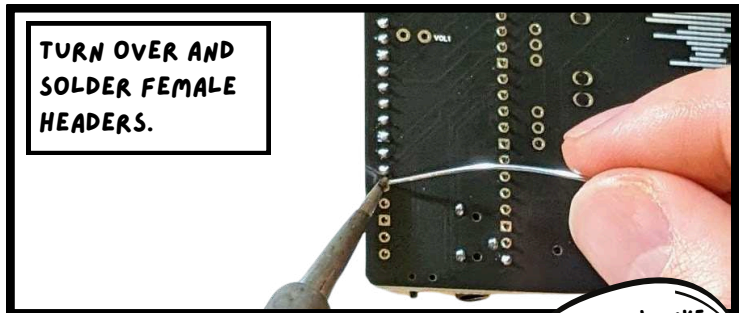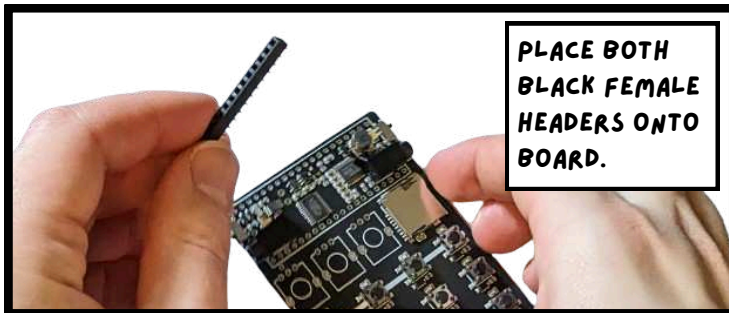


TRIM SPEAKER WIRES.

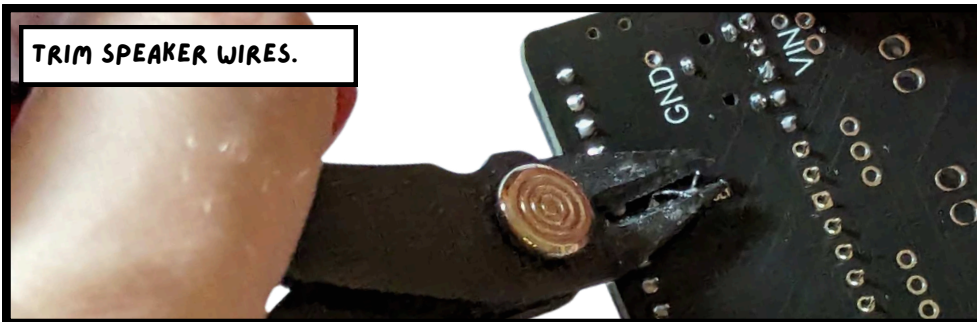


CUT A PIECE OF ELECTRICAL TAPE AND ADD TO BACK OF SPEAKER.

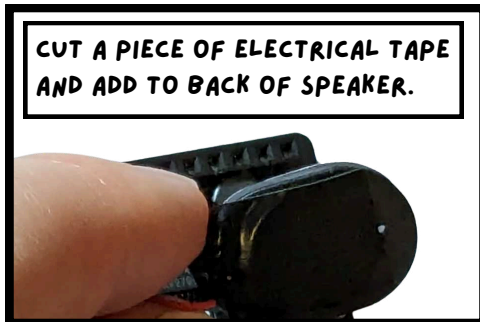

SITUATE SPEAKER IN BETWEEN FEMALE HEADERS.

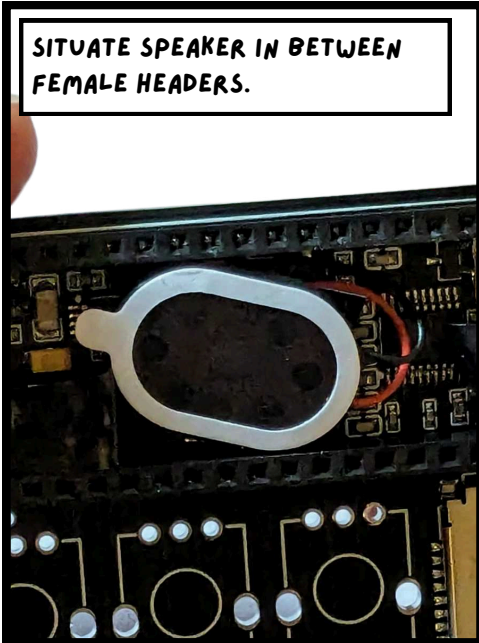


ADD POTENTIOMETERS AND CAREFULLY ALIGN BEFORE SOLDERING.

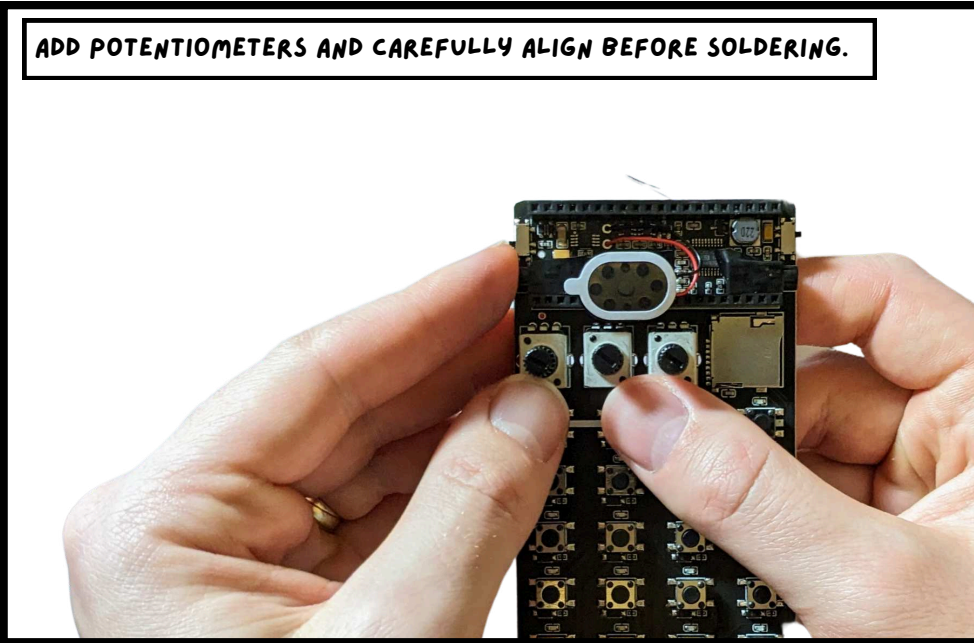


SOLDER THE POTENTIOMETERS FROM THE BACK - ALL THREE POINTS AND THE TWO WINGS AT THE BOTTOM.

IT HELPS TO SOLDER ONE JOINT AT A TIME AND CHECK THAT THEY ARE STILL ALIGNED.

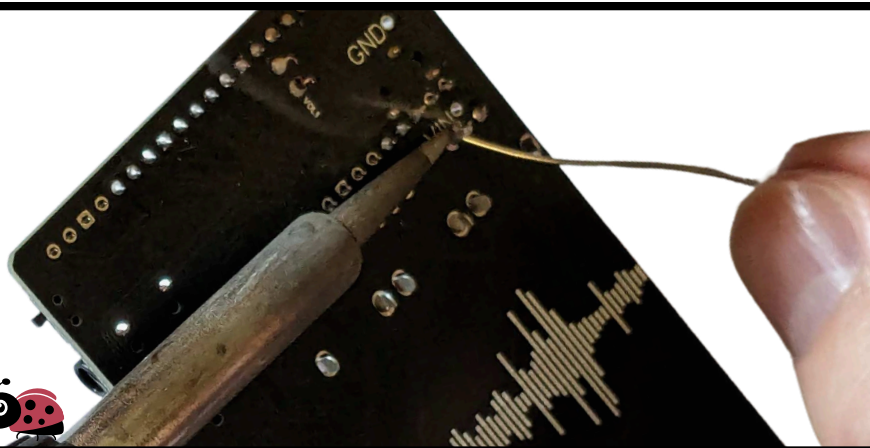

TRIM POTENTIOMETER WINGS WITH WIRE CUTTERS.

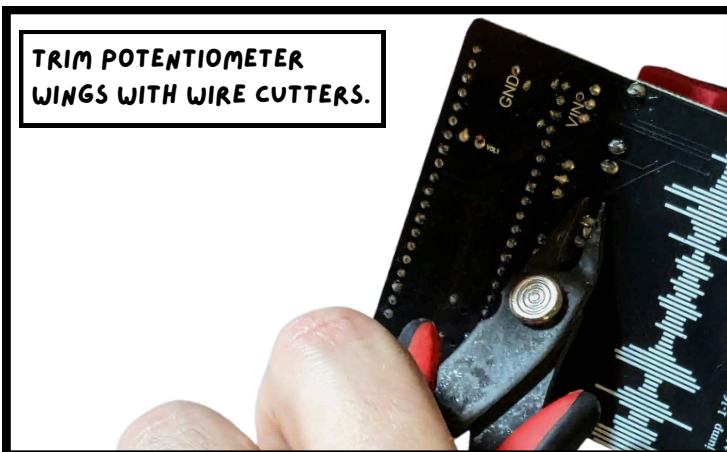

GET BATTERY HOLDER AND TRIM BATTERY HOLDER WIRES TO ABOUT 5 MM LONG.

