Network Working Group Request for Comments: 2494 Category: Standards Track D. Fowler, Editor Newbridge Networks January 1999

# Definitions of Managed Objects for the DSO and DSO Bundle Interface Type

#### Status of this Memo

This document specifies an Internet standards track protocol for the Internet community, and requests discussion and suggestions for improvements. Please refer to the current edition of the "Internet Official Protocol Standards" (STD 1) for the standardization state and status of this protocol. Distribution of this memo is unlimited.

## Copyright Notice

Copyright (C) The Internet Society (1999). All Rights Reserved.

#### Abstract

This memo defines a portion of the Management Information Base (MIB) for use with network management protocols in the Internet community. In particular, it describes objects used for managing DSO and DSO Bundle interfaces. This document is a companion document with Definitions of Managed Objects for the DS1/E1/DS2/E2 (RFC 2495 [17]), DS3/E3 (RFC 2496 [18]), and the work in progress, SONET/SDH Interface Types.

This memo specifies a MIB module in a manner that is both compliant to the SNMPv2 SMI, and semantically identical to the peer SNMPv1 definitions.

#### Table of Contents

L The SNMP Management	Framework			
2 Overview				
2.1 BONDing Terminolog	y			
2.2 Use of ifTable for	DSO Layer .			
2.3 Using ifStackTable				
2.3.1 Usage of Channel	ization for	DS3, DS1,	DS0	
2.3.2 Usağe of ifIndex	Mapping for	DSÓBundĺe	e	
3 Overview of the MIB				
3.1 DS0 MIB				
3.2 DSOBundle MIB				
1 Object Definitions 1	or DSO			
4.1 The DSO Config Gro	up			

Fowler, Ed.

Standards Track

[Page 1]

4.1.1 The DSO Configuration Table	9
4.1.1 The DSO Configuration Table	12
5 UDJECT PETINITIONS TOR PSW BUNGLE	TO
5.1 The DSO Bundle Config Group	15
5.1.1 The DSO Bundle Table	15
5.2 The DSO Bonding Group	18
5.2.1 The DSO Bonding Table	18
6 Intellectual Property	21
7 Acknowledgments	22
8 References	22
9 Security Considerations	23
10 Author's Address	24
11 Full Copyright Statement	25

## 1. The SNMP Management Framework

The SNMP Management Framework presently consists of five major components:

- o An overall architecture, described in RFC 2271 [1].
- o Mechanisms for describing and naming objects and events for the purpose of management. The first version of this Structure of Management Information (SMI) is called SMIv1 and described in STD 16, RFC 1155 [2], STD 16, RFC 1212 [3] and RFC 1215 [4]. The second version, called SMIv2, is described in RFC 1902 [5], RFC 1903 [6] and RFC 1904 [7].
- Message protocols for transferring management information. The first version of the SNMP message protocol is called SNMPv1 and described in STD 15, RFC 1157 [8]. A second version of the SNMP message protocol, which is not an Internet standards track protocol, is called SNMPv2c and described in RFC 1901 [9] and RFC 1906 [10]. The third version of the message protocol is called SNMPv3 and described in RFC 1906 [10], RFC 2272 [11] and RFC 2274 [12].
- o Protocol operations for accessing management information. The first set of protocol operations and associated PDU formats is described in STD 15, RFC 1157 [8]. A second set of protocol operations and associated PDU formats is described in RFC 1905 [13].
- o A set of fundamental applications described in RFC 2273 [14] and the view-based access control mechanism described in RFC 2275 [15]. Managed objects are accessed via a virtual information store, termed the Management Information Base or MIB. Objects in the MIB are defined using the mechanisms defined in the SMI.

This memo specifies a MIB module that is compliant to the SMIv2. A MIB conforming to the SMIv1 can be produced through the appropriate translations. The resulting translated MIB must be semantically equivalent, except where objects or events are omitted because no translation is possible (use of Counter64). Some machine readable information in SMIv2 will be converted into textual descriptions in SMIv1 during the translation process. However, this loss of machine readable information is not considered to change the semantics of the MIB.

#### 2. Overview

These objects are used when the particular media being used to realize an interface is a DSO interface. At present, this applies to these values of the ifType variable in the Internet-standard MIB:

ds0 (81) ds0Bundle (82)

## 2.1. BONDing Terminology

Please reference The BONDing Spec [20] for definitions of terms used to describe bonding modes.

### 2.2. Use of ifTable for DSO Layer

The following items are defined in RFC 2233 [16].

Only the ifGeneralInformationGroup and ifCounterDiscontinuityGroup need to be supported.

ifTable Object	Use for DSO Layer
ifIndex	Interface index.
ifDescr	See interfaces MIB [16].
ifType	ds0(81) or ds0Bundle(82).
ifSpeed	64000 for ds0 (regardless of the setting of robbed bit signalling) or N*64000 for ds0Bundle.
ifPhysAddress	The value of the Circuit Identifier. If no Circuit Identifier has been assigned this object should have an octet string with zero length.

Fowler, Ed.

**Standards Track** 


[Page 3]

ifAdminStatus	See interfaces MIB [16].
ifOperStatus	See interfaces MIB [16].
ifLastChange	See interfaces MIB [16].
ifName	See interfaces MIB [16].
ifLinkUpDownTrapEnable	Set to disabled(2). Supports read-only access.
ifHighSpeed	Set to rounded ifSpeed/1000000.
ifConnectorPresent	Set to false(2).

## 2.3. Using ifStackTable

This section describes by example how to use ifStackTable to represent the relationship of ds0 and ds0Bundles with ds1 interfaces. Implementors of the stack table for ds0 and ds0Bundle interfaces should look at the appropriate RFC for the service being stacked on ds0s and ds0Bundles. Examples given below are for illustration purposes only.

Example: A Frame Relay Service is being carried on 4 ds0s of a ds1.

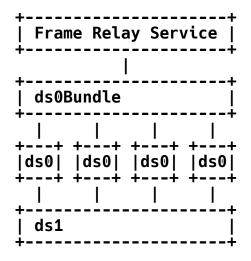

The assignment of the index values could for example be:

ifIndex	Description		
1	FrameRelayService	(type	44)
2	ds0Bundle	(type	
3	ds0 #1	(type	

Fowler, Ed. Standards Track [Page 4]

4	ds0 #2	(type 81)
5	ds0 #3	(type 81)
6	ds0 #4	(type 81)
7	ds1	(type 18)

The ifStackTable is then used to show the relationships between the various interfaces.

#### ifStackTable Entries

HigherLayer 0	LowerLayer 1
1	2
2	3
2	4
2	5
2 3 4	6
3	7
	7
5 6	7
0 7	0
1	U

In the case where the frameRelayService is using a single ds0, then the ds0Bundle is not required.

++   Frame Relay Service
ds0  ++
++
ds1

The assignment of the index values could for example be:

ifIndex	Description		
1	FrameRelayService	(type	44)
2	ds0	(type	81)
3	ds1	(type	18)

The ifStackTable is then used to show the relationships between the various interfaces.

Fowler, Ed.

Standards Track

[Page 5]

### ifStackTable Entries

HigherLayer	LowerLayer
0	1
1	2
2	3
3	0

## 2.3.1. Usage of Channelization for DS3, DS1, DS0

An example is given here to explain the channelization objects in the DS3, DS1, and DS0 MIBs to help the implementor use the objects correctly. Treatment of E3 and E1 would be similar, with the number of DS0s being different depending on the framing of the E1. Timeslot 16 is not created for framing types that do not pass data over it.

Assume that a DS3 (with ifIndex 1) is channelized into DS1s (without DS2s). The object dsx3Channelization is set to enabledDs1. There will be 28 DS1s in the ifTable. Assume the entries in the ifTable for the DS1s are created in channel order and the ifIndex values are 2 through 29. In the DS1 MIB, there will be an entry in the dsx1ChanMappingTable for each ds1. The entries will be as follows:

## dsx1ChanMappingTable Entries

ifIndex 1 1	dsx1Ds1ChannelNumber 1 2	<pre>dsx1ChanMappedIfIndex 2 3</pre>
i	28	29

In addition, the DS1s are channelized into DS0s. The object dsx1Channelization is set to enabledDs0 for each DS1. When this object is set to this value, 24 DS0s are created by the agent. There will be 24 DS0s in the ifTable for each DS1. If the dsx1Channelization is set to disabled, the 24 DS0s are destroyed.

Assume the entries in the ifTable are created in channel order and the ifIndex values for the DSOs in the first DS1 are 30 through 53. In the DSO MIB, there will be an entry in the dsxOChanMappingTable for each DSO. The entries will be as follows:

## dsx0ChanMappingTable Entries

ifIndex	dsx0Ds0ChannelNumber	dsx0ChanMappedIfIndex
2	1	30
2	2	31
2	24	53

## 2.3.2. Usage of ifIndex Mapping for DSOBundle

An example is given here to explain the ifIndex mapping objects in the DSOBundle MIB to help the implementor use the objects correctly.

Assume that a DS1 (with ifIndex 1) is channelized into DS0s. There will be 24 DS0s in the ifTable. Assume the entries in the ifTable for the DS0s are created in channel order and the ifIndex values are 2 through 25. Now, assume that there are two bundles on the DS1. The first one uses channels 1 and 2. The second uses channels 3 and 4. There will be two ifTable entries for these bundles, with values of 26 and 27 for ifIndex. There will be an entry in the dsx0BundleTable for each bundle. The entries will be as follows:

#### dsx0BundleTable Entries

dsx0BundleIndex	dsx0BundleIfIndex
1	26
2	27

There will be an entry in the dsx0ConfigTable for each DS0. The entries will be as follows:

#### dsx0ConfigTable Entries

ifIndex	dsx0Ds0ChannelNumber	dsx0Ds0BundleMappedIfIndex
2	1	26
3	2	26
4	3	27
5	4	27
6	5	0
7	6	0
25	24	0

#### 3. Overview of the MIB

This document contains 2 MIB modules, the DSO MIB and the DSOBundle MIB.

Fowler, Ed.

Standards Track

[Page 7]

#### 3.1. DS0 MIB

The DSO MIB is used to represent individual DSOs in a DS1 or E1. Variables in this MIB would be created for each DSO in the ifTable. This MIB contains the following group:

The DSO Config Group - This group contains configuration information about a particular DSO.

#### 3.2. DSOBundle MIB

The DS0Bundle MIB is used to represent collections of DS0s that are used together to carry data within a DS1/E1 at speeds greater than that of a single DS0. DS0Bundles are created on top of DS0s and are represented that way in the ifStackTable. This MIB contains the following groups:

The DSO Bundle Group - This group contains objects used for creating new dsOBundles. This group is mandatory.

The DSO Bonding Group - This group contains information about bonding for a dsOBundle, if bonding is enabled. This group is optional.

## 4. Object Definitions for DSO

DSO-MIB DEFINITIONS ::= BEGIN

#### **IMPORTS**

MODULE-IDENTITY, OBJECT-TYPE, transmission FROM SNMPv2-SMI MODULE-COMPLIANCE, OBJECT-GROUP FROM SNMPv2-CONF DisplayString, TruthValue FROM SNMPv2-TC ifIndex, InterfaceIndex, InterfaceIndex FROM IF-MIB;

-- This is the MIB module for the DSO Interface objects.

## ds0 MODULE-IDENTITY

LAST-UPDATED "9807161630Z"
ORGANIZATION "IETF Trunk MIB Working Group"
CONTACT-INFO
" David Fowler

Davea Toweer

Postal: Newbridge Networks Corporation

600 March Road

Kanata, Ontario, Canada K2K 2E6

Tel: +1 613 591 3600

```
Fax: +1 613 599 3619
       E-mail: davef@newbridge.com"
    DESCRIPTION
         "The MIB module to describe
          DSO interfaces objects."
    REVISION "9805242010Z"
    DESCRIPTION
         "Initial version of the DSO-MIB."
    ::= { transmission 81 }
-- The DSO Config Group
-- Implementation of this group is mandatory for all -- systems that use a DSO Interface.
-- The DSO Config Group consists of two tables:
      DSO Configuration Table
      DSO Channel Mapping Table
-- The DSO Configuration Table
dsx0ConfigTable OBJECT-TYPE
    SYNTAX SEQUENCE OF Dsx0ConfigEntry
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
            "The DSO Configuration table."
    ::= { ds0 1 }
dsx0ConfigEntry OBJECT-TYPE
    SYNTAX Dsx0ConfigEntry
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
            "An entry in the DSO Configuration table. There
            is an entry in this table for each DSO interface."
            { ifIndex ]
    ::= { dsx0ConfigTable 1 }
Dsx0ConfigEntry ::=
    SEQUENCE {
        dsx0Ds0ChannelNumber
                                      INTEGER,
        dsx0RobbedBitSignalling
                                      TruthValue,
        dsx0CircuitIdentifier
                                      DisplayString,
        dsx0IdleCode
                                      INTEGER,
        dsx0SeizedCode
                                      INTEGER,
```

```
INTEGER,
        dsx0ReceivedCode
        dsx0TransmitCodesEnable
                                     TruthValue,
        dsx0Ds0BundleMappedIfIndex InterfaceIndex0rZero
}
dsx0Ds0ChannelNumber OBJECT-TYPE
    SYNTAX INTEGER(0..31)
    MAX-ACCESS read-only
    STATUS current
    DESCRIPTION
            "This object indicates the channel number of the
            ds0 on its DS1/E1."
    ::= { dsx0ConfigEntry 1 }
dsx0RobbedBitSignalling OBJECT-TYPE
    SYNTAX TruthValue
    MAX-ACCESS read-write
    STATUS
            current
    DESCRIPTION
            "This object indicates if Robbed Bit Signalling is
            turned on or off for a given ds0. This only applies to DS0s on a DS1 link. For E1 links the
            value is always off (false)."
    ::= { dsx0ConfigEntry 2 }
dsx0CircuitIdentifier OBJECT-TYPE
     SYNTAX DisplayString (SIZE (0..255))
                read-write
     MAX-ACCESS
     STATUS current
     DESCRIPTION
            "This object contains the transmission vendor's
            circuit identifier, for the purpose of
            facilitating troubleshooting."
    ::= { dsx0ConfigEntry 3 }
dsx0IdleCode OBJECT-TYPE
     SYNTAX INTEGER(0..15)
     MAX-ACCESS read-write
     STATUS current
     DESCRIPTION
            "This object contains the code transmitted in the
            ABCD bits when the ds0 is not connected and
            dsx0TransmitCodesEnable is enabled. The object is
            a bitmap and the various bit positions are:
                   1
                         D bit
                   2
                         C bit
                   4
                         B bit
                   8
                         A bit"
```

```
::= { dsx0ConfigEntry 4 }
dsx0SeizedCode OBJECT-TYPE
     SYNTAX INTEGER(0..15)
     MAX-ACCESS read-write
     STATUS current
     DESCRIPTION
            "This object contains the code transmitted in the
            ABCD bits when the ds0 is connected and
            dsx0TransmitCodesEnable is enabled.
                                                  The object is
            a bitmap and the various bit positions are:
                  1
                        D bit
                  2
                        C bit
                        B bit
                  4
                        A bit"
                  8
    ::= { dsx0ConfigEntry 5 }
dsx0ReceivedCode OBJECT-TYPE
     SYNTAX INTEGER(0..15)
     MAX-ACCESS read-only
     STATUS current DESCRIPTION
            "This object contains the code being received in
            the ABCD bits. The object is a bitmap and the
            various bit positions are:
                         D bit
                  1
                  2
                         C bit
                         B bit
                  4
                        A bit"
                  8
    ::= { dsx0ConfigEntry 6 }
dsx0TransmitCodesEnable OBJECT-TYPE
     SYNTAX TruthValue
     MAX-ACCESS read-write
     STATUS current DESCRIPTION
            "This object determines if the idle and seized
            codes are transmitted. If the value of this object
            is true then the codes are transmitted."
    ::= { dsx0ConfigEntry 7 }
dsx0Ds0BundleMappedIfIndex OBJECT-TYPE
     SYNTAX InterfaceIndexOrZero
     MAX-ACCESS read-only
     STATUS current
     DESCRIPTION
            "This object indicates the ifIndex value assigned
            by the agent for the ds0Bundle(82) ifEntry to
```

which the given ds0(81) ifEntry may belong.

If the given ds0(81) ifEntry does not belong to any ds0Bundle(82) ifEntry, then this object has a value of zero.

While this object provides information that can also be found in the ifStackTable, it provides this same information with a single table lookup, rather than by walking the ifStackTable to find the possibly non-existent ds0Bundle(82) ifEntry that may be stacked above the given ds0(81) ifTable entry."

::= { dsx0ConfigEntry 8 }

-- The DSO Channel Mapping Table

dsx0ChanMappingTable OBJECT-TYPE
SYNTAX SEQUENCE OF Dsx0ChanMappingEntry
MAX-ACCESS not-accessible
STATUS current
DESCRIPTION

"The DSO Channel Mapping table. This table maps a DSO channel number on a particular DS1/E1 into an ifIndex."

 $::= \{ ds0 3 \}$ 

dsx0ChanMappingEntry OBJECT-TYPE SYNTAX Dsx0ChanMappingEntry MAX-ACCESS not-accessible STATUS current DESCRIPTION

"An entry in the DSO Channel Mapping table. There is an entry in this table corresponding to each dsO ifEntry within any interface that is channelized to the individual dsO ifEntry level.

This table is intended to facilitate mapping from channelized interface / channel number to DSO ifEntry. (e.g. mapping (DS1 ifIndex, DSO Channel Number) -> ifIndex)

While this table provides information that can also be found in the ifStackTable and dsx0ConfigTable, it provides this same information with a single table lookup, rather than by walking the ifStackTable to find the various constituent ds0 ifTable entries, and testing various

```
dsx0ConfigTable entries to check for the entry
             with the applicable DSO channel number.
     INDEX
             { ifIndex, dsx0Ds0ChannelNumber }
     ::= { dsx0ChanMappingTable 1 }
Dsx0ChanMappingEntry ::=
     SEQUENCE {
          dsx0ChanMappedIfIndex InterfaceIndex
}
dsx0ChanMappedIfIndex OBJECT-TYPE
     SYNTAX InterfaceIndex
     MAX-ACCESS read-only
     STATUS current DESCRIPTION
             "This object indicates the ifIndex value assigned
             by the agent for the individual ds0 ifEntry that
             corresponds to the given DSO channel number
             (specified by the INDEX element
             dsx0Ds0ChannelNumber) of the given channelized interface (specified by INDEX element ifIndex)."
     ::= { dsx0ChanMappingEntry 1 }
-- conformance information
dsOConformance OBJECT IDENTIFIER ::= { ds0 2 }
ds0Groups          OBJECT IDENTIFIER ::= { ds0Conformance 1 }
ds0Compliances OBJECT IDENTIFIER ::= { ds0Conformance 2 }
-- compliance statements
ds0Compliance MODULE-COMPLIANCE
    STATUS current
    DESCRIPTION
             "The compliance statement for DSO interfaces."
    MODULE -- this module
        MANDATORY-GROUPS { ds0ConfigGroup }
         OBJECT dsx0RobbedBitSignalling
         MIN-ACCESS read-only
         DESCRIPTION
             "The ability to set RBS is not required."
         OBJECT dsx0CircuitIdentifier
         MIN-ACCESS read-only
         DESCRIPTION
```

"The ability to set the circuit identifier is not

```
required."
        OBJECT dsx0IdleCode
        MIN-ACCESS read-only
        DESCRIPTION
             "The ability to set the idle code is not required."
        OBJECT dsx0SeizedCode
        MIN-ACCESS read-only
        DESCRIPTION
             "The ability to set the seized code is not
             required."
        OBJECT dsxOTransmitCodesEnable
        MIN-ACCESS read-only
        DESCRIPTION
             "The ability to enable and disable the
             transmitting of idle and seized codes is not
             required."
    ::= { ds0Compliances 1 }
-- units of conformance
ds0ConfigGroup OBJECT-GROUP
    OBJECTS { dsx0Ds0ChannelNumber, dsx0RobbedBitSignalling,
               dsx0CircuitIdentifier,
               dsx0IdleCode,
               dsx0SeizedCode.
               dsx0ReceivedCode,
               dsx0TransmitCodesEnable.
               dsx0Ds0BundleMappedIfIndex,
dsx0ChanMappedIfIndex }
    STATUS
             current
    DESCRIPTION
             "A collection of objects providing configuration
             information applicable to all DSO interfaces."
    ::= { ds0Groups 1 }
END
```

5. Object Definitions for DSO Bundle DSOBUNDLE-MIB DEFINITIONS ::= BEGIN **IMPORTS** MODULE-IDENTITY, OBJECT-TYPE, FROM SNMPv2-SMI transmission MODULE-COMPLIANCE, OBJECT-GROUP FROM SNMPv2-CONF DisplayString, RowStatus, FROM SNMPv2-TC TestAndIncr ifIndex, InterfaceIndex FROM IF-MIB; This is the MIB module for the DSOBundle Interface objects. ds0Bundle MODULE-IDENTITY LAST-UPDATED "9807161630Z" ORGANIZATION "IETF Trunk MIB Working Group" CONTACT-INFO David Fowler Postal: Newbridge Networks Corporation 600 March Road Kanata, Ontario, Canada K2K 2E6 Tel: +1 613 591 3600 Fax: +1 613 599 3619 E-mail: davef@newbridge.com" **DESCRIPTION** "The MIB module to describe DSO Bundle interfaces objects." **REVISION "9805242010Z" DESCRIPTION** "Initial version of the DSOBUNDLE-MIB." **::= { transmission 82 }** -- The DSO Bundle Config Group -- Implementation of this group is mandatory for all -- systems that use a DSOBundle Interface. \_\_\_ -- The DSO Bundle Config Group consists of one table: DSO Bundle Table -- The DSO Bundle Table

```
dsx0BundleNextIndex OBJECT-TYPE
    SYNTAX TestAndIncr
    MAX-ACCESS
                  read-write
    STATUS
              current
    DESCRIPTION
              "This object is used to assist the manager in
              selecting a value for dsx0BundleIndex. Because this object is of syntax TestAndIncr (see the SNMPv2-TC document, RFC 1903) it can also be used to avoid race conditions with multiple managers
              trying to create rows in the table.
              If the result of the SET for dsx0BundleNextIndex
              is not success, this means the value has been changed from index (i.e. another manager used the
              value), so a new value is required.
              The algorithm is:
              done = false
              while done == false
                   index = GET (dsx0BundleNextIndex.0)
                   SET (dsx0BundleNextIndex.0=index)
                   if (set failed)
                      done = false
                   else
                      SET(dsx0BundleRowStatus.index=createAndGo)
                      if (set failed)
                        done = false
                      else
                        done = true
                        other error handling"
     ::= { ds0Bundle 2 }
dsx0BundleTable OBJECT-TYPE
    SYNTAX SEQUENCE OF Dsx0BundleEntry
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
              "There is an row in this table for each ds0Bundle
              in the system. This table can be used to
              (indirectly) create rows in the ifTable with
ifType = 'ds0Bundle(82)'."
     ::= { ds0Bundle 3 }
dsx0BundleEntry OBJECT-TYPE
    SYNTAX Dsx0BundleEntry
    MAX-ACCESS not-accessible
    STATUS current
```

```
DESCRIPTION
             "There is a row in entry in this table for each
             ds0Bundle interface.'
            { dsx0BundleIndex }
    ::= { dsx0BundleTable 1 }
Dsx0BundleEntry ::=
    SEQUENCE {
         dsx0BundleIndex
                                          INTEGER,
         dsx0BundleIfIndex
                                          InterfaceIndex,
         dsx0BundleCircuitIdentifier DisplayString,
         dsx0BundleRowStatus
                                          RowStatus
}
dsx0BundleIndex OBJECT-TYPE
    SYNTAX INTEGER (0..2147483647)
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
             "A unique identifier for a ds0Bundle. This is not
the same value as ifIndex. This table is not
indexed by ifIndex because the manager has to
choose the index in a createable row and the agent
             must be allowed to select ifIndex values."
    ::= { dsx0BundleEntry 1 }
dsx0BundleIfIndex OBJECT-TYPE
    SYNTAX InterfaceIndex
    MAX-ACCESS read-only
    STATUS current
    DESCRIPTION
              "The ifIndex value the agent selected for the
              (new) ds0Bundle interface."
    ::= { dsx0BundleEntry 2 }
dsx0BundleCircuitIdentifier OBJECT-TYPE
     SYNTAX DisplayString (SIZE (0..255))
     MAX-ACCESS read-create
     STATUS current
     DESCRIPTION
             "This variable contains the transmission vendor's
             circuit identifier, for the purpose of
             facilitating troubleshooting."
      ::= { dsx0BundleEntry 3 }
dsx0BundleRowStatus OBJECT-TYPE
    SYNTAX RowStatus
    MAX-ACCESS read-create
```

```
STATUS current
    DESCRIPTION
            "This object is used to create and delete rows in
            this table."
    ::= { dsx0BundleEntry 4 }
-- The DSO Bonding Group
-- Implementation of this group is optional for all
-- systems that use a DSOBundle Interface.
-- The DSO Bonding Group consists of one table:
     DSO Bonding Table
-- The DSO Bonding Table
dsx0BondingTable OBJECT-TYPE
    SYNTAX SEQUENCE OF Dsx0BondingEntry
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
            "The DSO Bonding table."
    ::= { ds0Bundle 1 }
dsx0BondingEntry OBJECT-TYPE
    SYNTAX Dsx0BondingEntry
    MAX-ACCESS not-accessible
    STATUS current
    DESCRIPTION
            "An entry in the DSO Bonding table. There is a
            row in this table for each DSOBundle interface."
    INDEX
            { ifIndex }
    ::= { dsx0BondingTable 1 }
Dsx0BondingEntry ::=
    SEQUENCE {
        dsx0BondMode
                                INTEGER,
        dsx0BondStatus
                                INTEGER.
        dsx0BondRowStatus
                                RowStatus
}
dsx0BondMode OBJECT-TYPE
    SYNTAX INTEGER {
                none(1)
                other(2),
                mode0(3),
                mode1(4),
                mode2(5),
```

```
mode3(6)
     MAX-ACCESS read-create
     STATUS current
     DESCRIPTION
               "This object indicates which BONDing mode is used,
               if any, for a ds0Bundle. Mode0 provides parameter and number exchange with no synchronization. Mode
               1 provides parameter and number exchange. Mode 1
               also provides synchronization during
               initialization but does not include inband monitoring. Mode 2 provides all of the above plus
               inband monitoring. Mode 2 also steals 1/64th of
               the bandwidth of each channel (thus not supporting n x 56/64 kbit/s data channels for most values of n). Mode 3 provides all of the above, but also provides n x 56/64 kbit/s data channels. Most
               common implementations of Mode 3 add an extra
               channel to support the inband monitoring overhead.
               ModeNone should be used when the interface is not
               performing bandwidth-on-demand."
     ::= { dsx0BondingEntry 1 }
dsx0BondStatus OBJECT-TYPE
     SYNTAX INTEGER {
                    idle(1),
                    callSetup(2)
                    dataTransfer(3)
     MAX-ACCESS read-only
     STATUS current
     DESCRIPTION
               "This object indicates the current status of the
               bonding call using this ds0Bundle. idle(1) should be used when the bonding mode is set to none(1)."
     ::= { dsx0BondingEntry 2 }
dsx0BondRowStatus OBJECT-TYPE
     SYNTAX RowStatus
     MAX-ACCESS read-create
     STATUS current
     DESCRIPTION
               "This object is used to create new rows in this
               table, modify existing rows, and to delete
               existing rows."
     ::= { dsx0BondingEntry 3 }
```

```
-- conformance information
ds0BundleConformance OBJECT IDENTIFIER ::= { ds0Bundle 4 }
ds0BundleGroups
                      OBJECT IDENTIFIER
    ::= { ds0BundleConformance 1 }
dsOBundleCompliances OBJECT IDENTIFIER
    ::= { ds0BundleConformance 2 }
-- compliance statements
ds0BundleCompliance MODULE-COMPLIANCE
    STATUS current
    DESCRIPTION
             "The compliance statement for DSOBundle
            interfaces."
    MODULE -- this module
        MANDATORY-GROUPS {ds0BundleConfigGroup }
        GROUP
                     ds0BondingGroup
        DESCRIPTION
             "Implementation of this group is optional for all
            systems that attach to a DSOBundle Interface.'
                     dsx0BundleRowStatus
        OBJECT
        SYNTAX
                     INTEGER {
                         active(1)
                         createAndGo(4),
                         destroy(6)
        MIN-ACCESS read-only
        DESCRIPTION
             "The agent is not required to support a SET
            operation to this object, and only three of the six enumerated values for the RowStatus textual
            convention need be supported. Only supporting
            createAndGo for a creation process prevents the
            manager from creating an inactive row in the
            dsOBundleTable. Inactive rows in the
            dsOBundleTable do not make sense.
                     dsx0BundleCircuitIdentifier
        OBJECT
        MIN-ACCESS read-only
        DESCRIPTION
             "The agent is not required to support a SET
```

```
operation to this object."
                 ::= { ds0BundleCompliances 1 }
            -- units of conformance
            ds0BondingGroup OBJECT-GROUP
                OBJECTS { dsx0BondMode,
                           dsx0BondStatus,
                           dsx0BondRowStatus }
                STATUS current
                DESCRIPTION
                         "A collection of objects providing
                         configuration information applicable
                         to all DSO interfaces.'
    ::= { ds0BundleGroups 1 }
ds0BundleConfigGroup
                      OBJECT-GROUP
    OBJECTS { dsx0BundleNextIndex,
              dsx0BundleIfIndex,
dsx0BundleCircuitIdentifier,
              dsx0BundleRowStatus }
    STATUS
            current
    DESCRIPTION
            "A collection of objects providing the ability to
            create a new dsOBundle in the ifTable as well as
            configuration information about the ds0Bundle.'
    ::= { ds0BundleGroups 2 }
END
```

### 6. Intellectual Property

The IETF takes no position regarding the validity or scope of any intellectual property or other rights that might be claimed to pertain to the implementation or use of the technology described in this document or the extent to which any license under such rights might or might not be available; neither does it represent that it has made any effort to identify any such rights. Information on the IETF's procedures with respect to rights in standards-track and standards-related documentation can be found in BCP-11. Copies of claims of rights made available for publication and any assurances of licenses to be made available, or the result of an attempt made to obtain a general license or permission for the use of such proprietary rights by implementors or users of this specification can be obtained from the IETF Secretariat.

The IETF invites any interested party to bring to its attention any copyrights, patents or patent applications, or other proprietary rights which may cover technology that may be required to practice this standard. Please address the information to the IETF Executive Director.

## 7. Acknowledgments

This document was produced by the Trunk MIB Working Group.

#### 8. References

- [1] Harrington, D., Presuhn, R., and B. Wijnen, "An Architecture for Describing SNMP Management Frameworks", RFC 2271, January 1998.
- [2] Rose, M., and K. McCloghrie, "Structure and Identification of Management Information for TCP/IP-based Internets", STD 16, RFC 1155, May 1990.
- [3] Rose, M., and K. McCloghrie, "Concise MIB Definitions", STD 16, RFC 1212, March 1991.
- [4] Rose, M., "A Convention for Defining Traps for use with the SNMP", RFC 1215, March 1991.
- [5] Case, J., McCloghrie, K., Rose, M., and S. Waldbusser, "Structure of Management Information for Version 2 of the Simple Network Management Protocol (SNMPv2)", RFC 1902, January 1996.
- [6] Case, J., McCloghrie, K., Rose, M., and S. Waldbusser, "Textual Conventions for Version 2 of the Simple Network Management Protocol (SNMPv2)", RFC 1903, January 1996.
- [7] Case, J., McCloghrie, K., Rose, M., and S. Waldbusser, "Conformance Statements for Version 2 of the Simple Network Management Protocol (SNMPv2)", RFC 1904, January 1996.
- [8] Case, J., Fedor, M., Schoffstall, M., and J. Davin, "Simple Network Management Protocol", STD 15, RFC 1157, May 1990.
- [9] Case, J., McCloghrie, K., Rose, M., and S. Waldbusser, "Introduction to Community-based SNMPv2", RFC 1901, January 1996.
- [10] Case, J., McCloghrie, K., Rose, M., and S. Waldbusser, "Transport Mappings for Version 2 of the Simple Network Management Protocol (SNMPv2)", RFC 1906, January 1996.

- [11] Case, J., Harrington D., Presuhn R., and B. Wijnen, "Message Processing and Dispatching for the Simple Network Management Protocol (SNMP)", RFC 2272, January 1998.
- [12] Blumenthal, U., and B. Wijnen, "User-based Security Model (USM) for version 3 of the Simple Network Management Protocol (SNMPv3)", RFC 2274, January 1998.
- [13] Case, J., McCloghrie, K., Rose, M., and S. Waldbusser, "Protocol Operations for Version 2 of the Simple Network Management Protocol (SNMPv2)", RFC 1905, January 1996.
- [14] Levi, D., Meyer, P., and B. Stewart, "SNMPv3 Applications", RFC 2273, January 1998.
- [15] Wijnen, B., Presuhn, R., and K. McCloghrie, "View-based Access Control Model (VACM) for the Simple Network Management Protocol (SNMP)", RFC 2275, January 1998.
- [16] McCloghrie, K. and F. Kastenholz, "The Interfaces Group MIB using SMIv2", RFC 2233, November 1997.
- [17] Fowler D., "Definitions of Managed Objects for the DS1, E1, DS2, and E2 Interface Types", RFC 2495, January 1999.
- [18] Fowler, D., "Definitions of Managed Objects for the DS3/E3 Interface Types", RFC 2496, January 1999.
- [19] Brown, T., and K. Tesink, "Definitions of Managed Objects for the SONET/SDH Interface Type", Work in Progress.
- [20] Sharp, H. (Editor), "Interoperability Requirements for Nx56/64
   kbit/s Calls", BONDING Spec Version 1.0, BONDING Consortium,
   Sept 1992.

## 9. Security Considerations

SNMPv1 by itself is such an insecure environment. Even if the network itself is secure (for example by using IPSec), even then, there is no control as to who on the secure network is allowed to access and GET (read) the objects in this MIB.

It is recommended that the implementors consider the security features as provided by the SNMPv3 framework. Specifically, the use of the User-based Security Model RFC 2274 [12] and the View-based Access Control Model RFC 2275 [15] is recommended.

It is then a customer/user responsibility to ensure that the SNMP entity giving access to an instance of this MIB, is properly configured to give access to those objects only to those principals (users) that have legitimate rights to access them.

Setting the following objects to an inappropriate value can cause loss of traffic. In the case of dsx0RobbedBitSignalling, for example, the nature of the traffic flowing on the DSO can be affected.

dsx0RobbedBitSignalling dsx0IdleCode dsx0SeizedCode dsx0TransmitCodesEnable dsx0BundleRowStatus dsx0BondMode dsx0BondRowStatus

Setting the following objects is mischievous, but not harmful to traffic.

dsx0CircuitIdentifier dsx0BundleNextIndex

#### 10. Author's Address

David Fowler Newbridge Networks 600 March Road Kanata, Ontario, Canada K2K 2E6

Phone: (613) 599-3600, ext 6559

EMail: davef@newbridge.com

## 11. Full Copyright Statement

Copyright (C) The Internet Society (1999). All Rights Reserved.

This document and translations of it may be copied and furnished to others, and derivative works that comment on or otherwise explain it or assist in its implementation may be prepared, copied, published and distributed, in whole or in part, without restriction of any kind, provided that the above copyright notice and this paragraph are included on all such copies and derivative works. However, this document itself may not be modified in any way, such as by removing the copyright notice or references to the Internet Society or other Internet organizations, except as needed for the purpose of developing Internet standards in which case the procedures for copyrights defined in the Internet Standards process must be followed, or as required to translate it into languages other than English.

The limited permissions granted above are perpetual and will not be revoked by the Internet Society or its successors or assigns.

This document and the information contained herein is provided on an "AS IS" basis and THE INTERNET SOCIETY AND THE INTERNET ENGINEERING TASK FORCE DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY THAT THE USE OF THE INFORMATION HEREIN WILL NOT INFRINGE ANY RIGHTS OR ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.