Template T0 · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)


T0 Templates · print this page first


> **PRINT AT 100% / ACTUAL SIZE**
> DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

Print every sheet at **100 % / Actual size** on portrait A4; every page is portrait, the T4 strips are printed sideways and read that way. Then lay a steel rule on the ruler below. Use the sheets only if 0 to 100 reads 100.0 mm and the bar reads 50.0 mm. A sheet that is 1 % small puts a hole 0.5 mm off at 50 mm.

The print dialog is the usual culprit. Chromium's default for a PDF is *Fit to printable area* and Firefox's is *Fit to page width*; both shrink to the printer's imageable area (97.3 % on the Brother HL-2140, measured 1 Nov 2026: the ruler read 97.3). A typed scale is ignored until the mode is *Custom* or *Actual size*. The sure way is to send the file to CUPS with scaling off: `lp -d HL-2140-series -o media=A4 -o print-scaling=none -P 1 Drilling-and-Placement-Templates.pdf`, measure the ruler, then `-P 2-25` for the rest. Never add `-o landscape`: CUPS re-fits whatever it rotates. Check the queue's default paper too (`lpoptions -l`): it was Letter.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)





LEGEND

- DRILL ⌀ (bit): circle at the bit size, crosshair and centre dot. Punch the centre through the paper, lift the sheet, drill.
- OPTIONAL DRILL: dashed circle; only where the sheet says so.
- POSITION: centre mark only. Do NOT drill.
- ------ Outline of the part, reference only.
- Datum edge line: trim the paper on it, butt it to the edge.

Sheet	What	Use
T1	Locating ring P10 (+ optional ALEX foot P20)	1:1 check; drilling only for the ALEX feet
T2	Feet plate P09, two pieces	1:1 drilling
T3a	OLOV plate P05 at 100: L2-L6	1:1 drilling
T3b	OLOV plate P05 at 150: L1	1:1 drilling
T4-A	Rail A P06 station strip, 9 sheets (read sideways)	1:1 marking check
T4-B	Rail B P07 station strip, 9 sheets (read sideways)	1:1 marking check
T5	Corner fitting P08 placement	reference 1:2, not for drilling
T6	Clamp pad plate P11 placement	reference 1:4, positioning only
T7	Corner bolt holes P08 on rails A and B (read sideways)	1:1 drilling, on the bench


Using a drilling sheet: trim on the heavy datum line(s), butt the trimmed edge to the named edge, tape, then punch each DRILL centre through the paper with an awl or automatic centre punch, lift the sheet and drill to the depth stated. The printed jigs (P18) are the primary tools; these sheets reproduce their patterns and serve as the check. Top marking is done face down (underside up); every pattern here is used without flipping the sheet.

Template T1 · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T1 Locating ring (P10) · check template 1:1 VERIFIED

PRINT AT 100% / ACTUAL SIZE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CHECK SHEET (chapter G, step 2a). With the top lifted off and before drilling any ring, lay this sheet on each bare ALEX corner: the pencil trace of the pad must lie inside the ⌀52 circle all round. If not, move the cabinet and re-trace. It is a drilling template only for the optional ALEX feet, on the bottom corners.

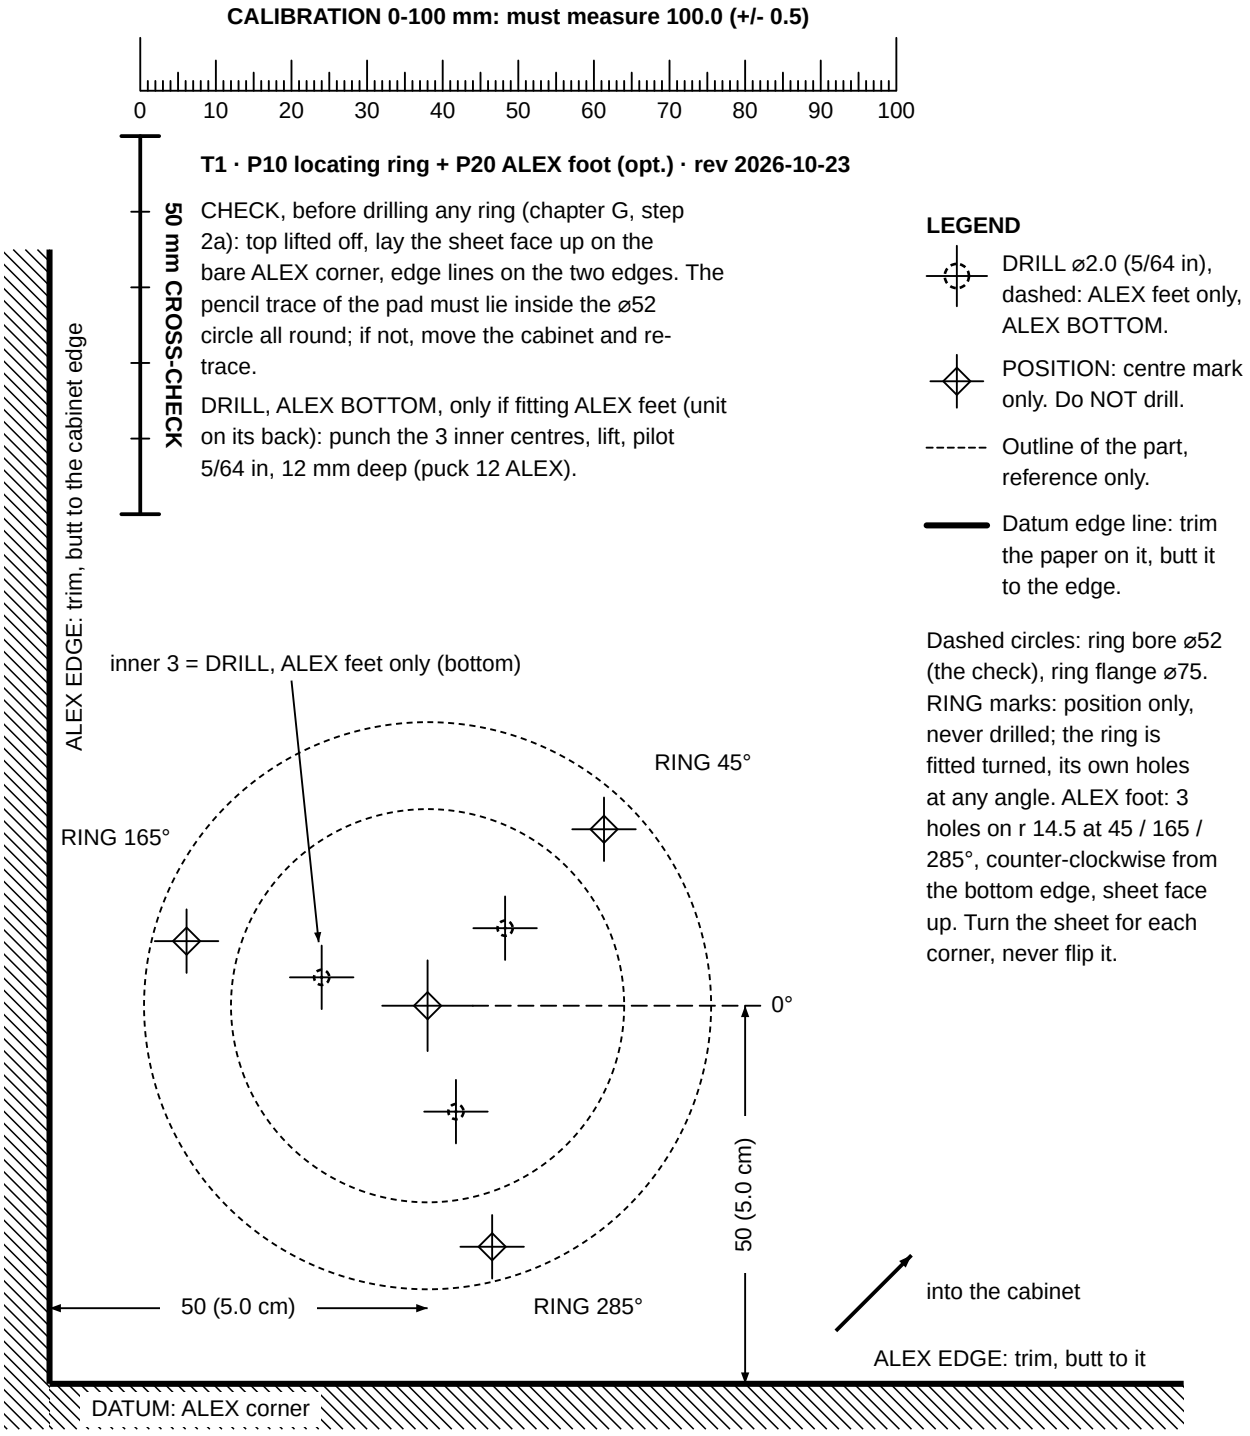


The ring is fitted turned: its own holes may sit at any angle. ALEX top panel 15.9 mm (5/8 in), measured 23 Oct 2026: the #6 × 5/8 in screws go 13.4 mm in and leave 2.5 mm.

Template T2 · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit:
HEAD of https://github.com/scotthowson/desk-setup on 23
Oct 2026 (supersedes a2e99ea with measured facts)


T2 Feet plate (P09) · drilling template 1:1 VERIFIED

PRINT AT 100% / ACTUAL SIZE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint. Verified on the purchased plate 23 Oct 2026: 41.6 between holes (inside jaws), 52.0 across (outside jaws), so 46.8 centres.


CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



T2 · P09 feet plate · piece B · rev 2026-10-23

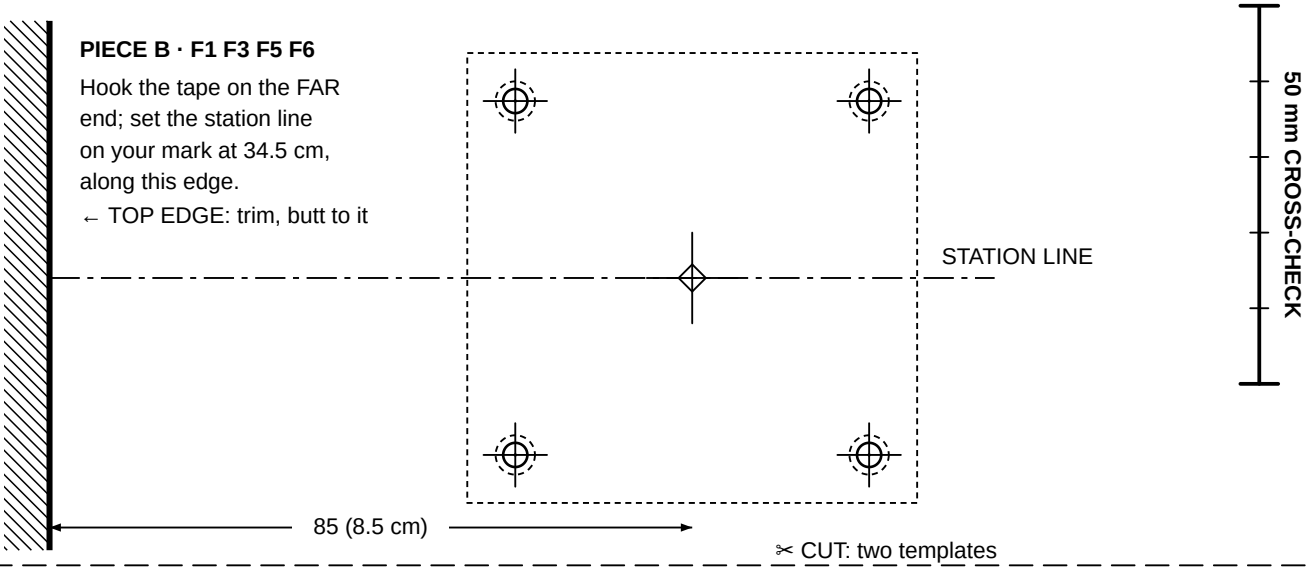

✂ CUT: two templates

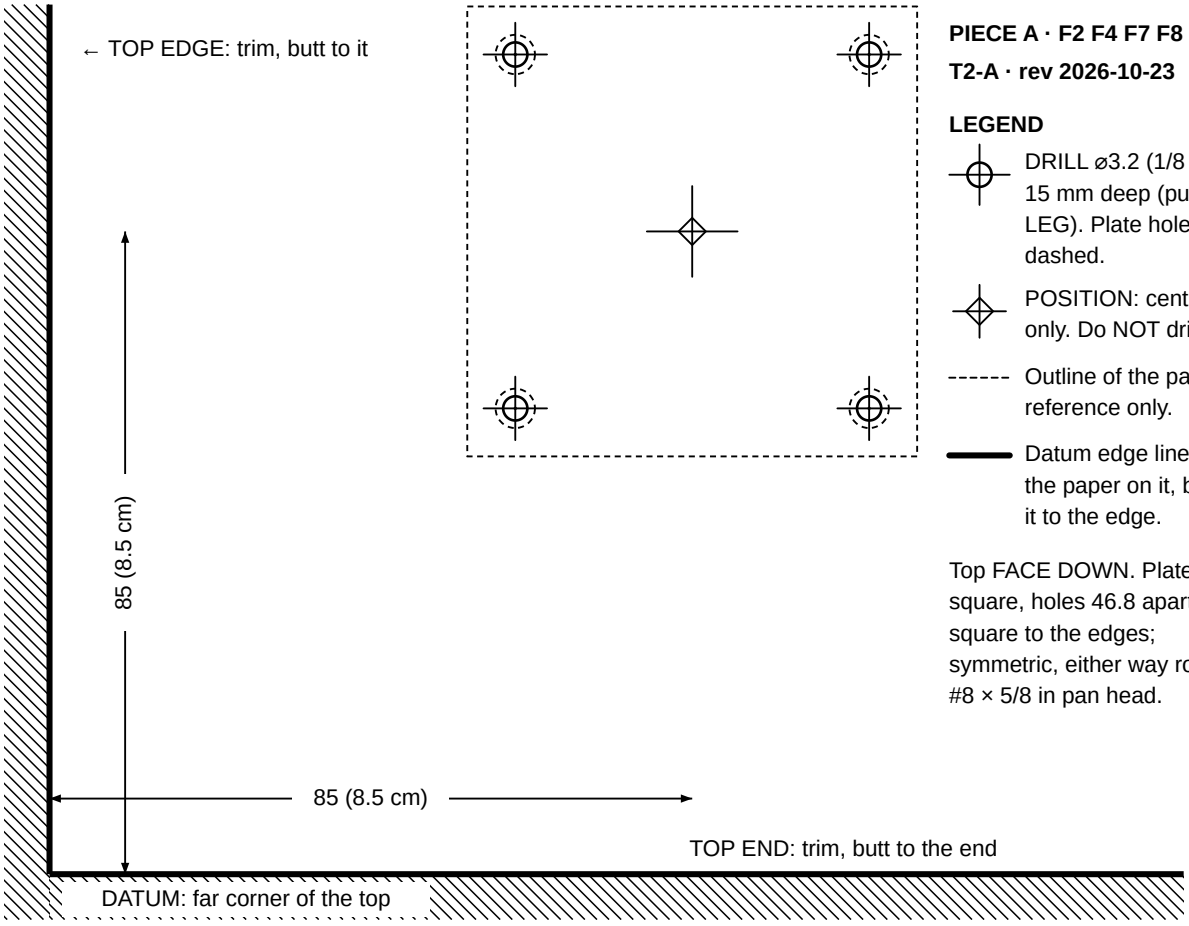

PIECE A · F2 F4 F7 F8

T2-A · rev 2026-10-23

LEGEND


- DRILL ⌀3.2 (1/8 in), 15 mm deep (puck 15 LEG). Plate holes ⌀5.2 dashed.
- POSITION: centre mark only. Do NOT drill.
- Outline of the part, reference only.
- Datum edge line: trim the paper on it, butt it to the edge.

Top FACE DOWN. Plate 59.5 square, holes 46.8 apart, square to the edges; symmetric, either way round. #8 × 5/8 in pan head.

Template T3a · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T3a OLOV plate (P05) · 100 from the edge · 1:1 VERIFIED

PRINT AT 100% / ACTUAL SIZE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

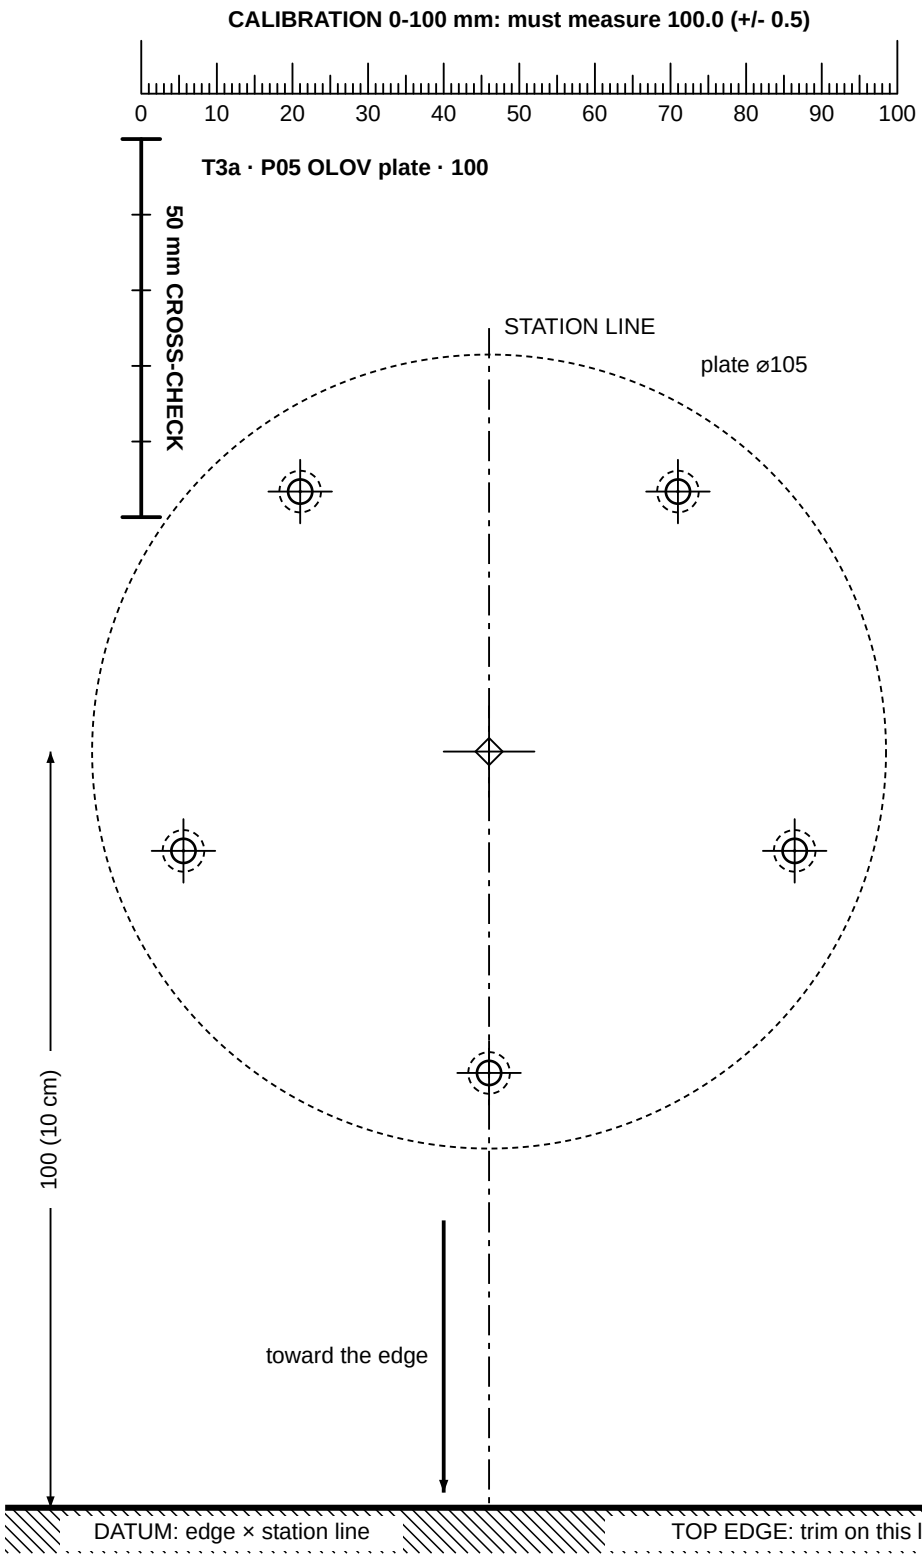

T3a · rev 2026-10-23

The sheet sets 10 cm from the edge. Top A, edge = back edge, tape from the side-wall end: L2 65 cm, L3 140 cm. Top B, edge = side-wall edge, tape from the joint end: L4 20 cm, L5 95 cm, L6 170 cm. One hole points AT the edge.


LEGEND

- DRILL ⌀3.2 (1/8 in), 15 mm deep (puck 15 LEG). OLOV holes ⌀5.5 dashed.
- POSITION: centre mark only. Do NOT drill.
- Outline of the part, reference only.
- Datum edge line: trim the paper on it, butt it to the edge.

Template T3b · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T3b OLOV plate (P05) · 150 from the end · 1:1 VERIFIED

PRINT AT 100% / ACTUAL SIZE
DISABLE FIT TO PAGE / shrink to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

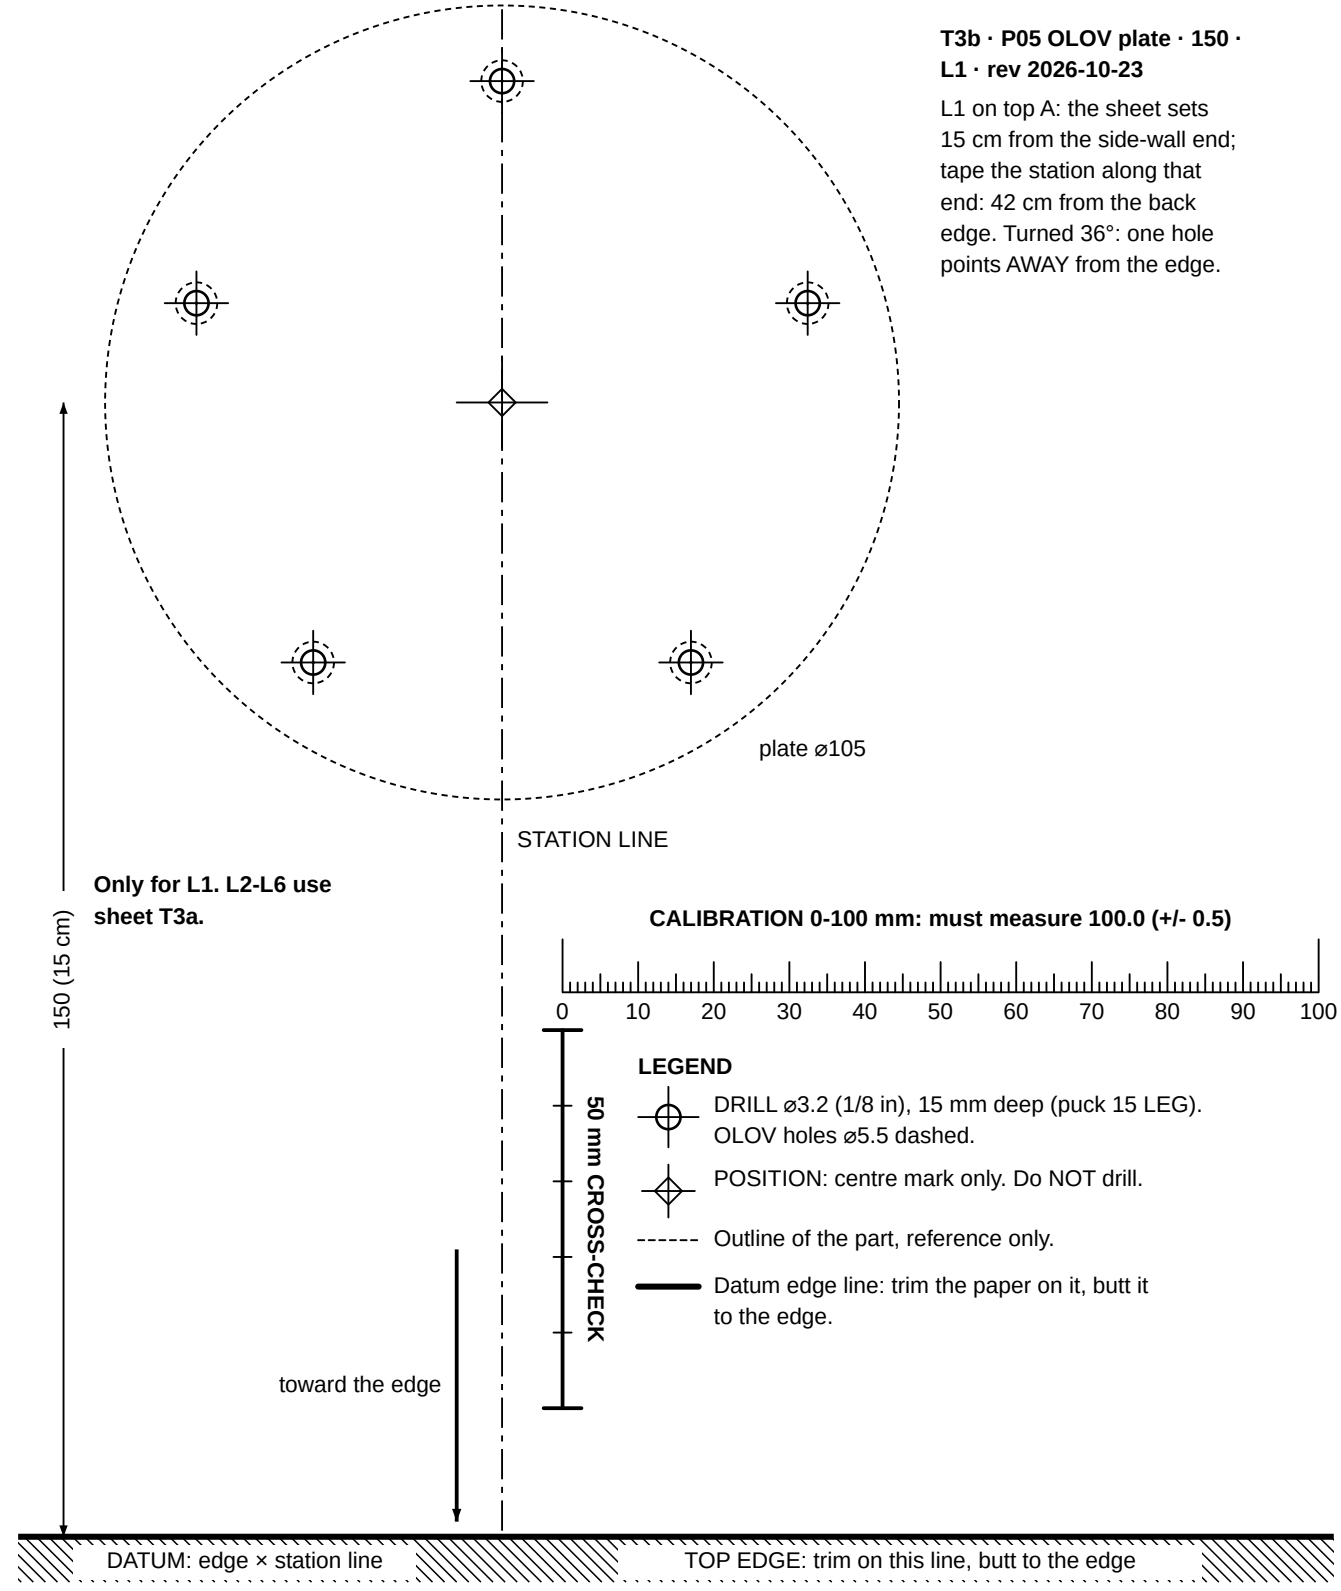


Template T4-A · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-A Rail A (P06) station strip 1/9

SOURCE-DEFINED · MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · READ SIDEWAYS (PORTRAIT A4)
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)





DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.


Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (chapter E), not from the heel.

MEASURE THE DELIVERED RAIL

Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled wall end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

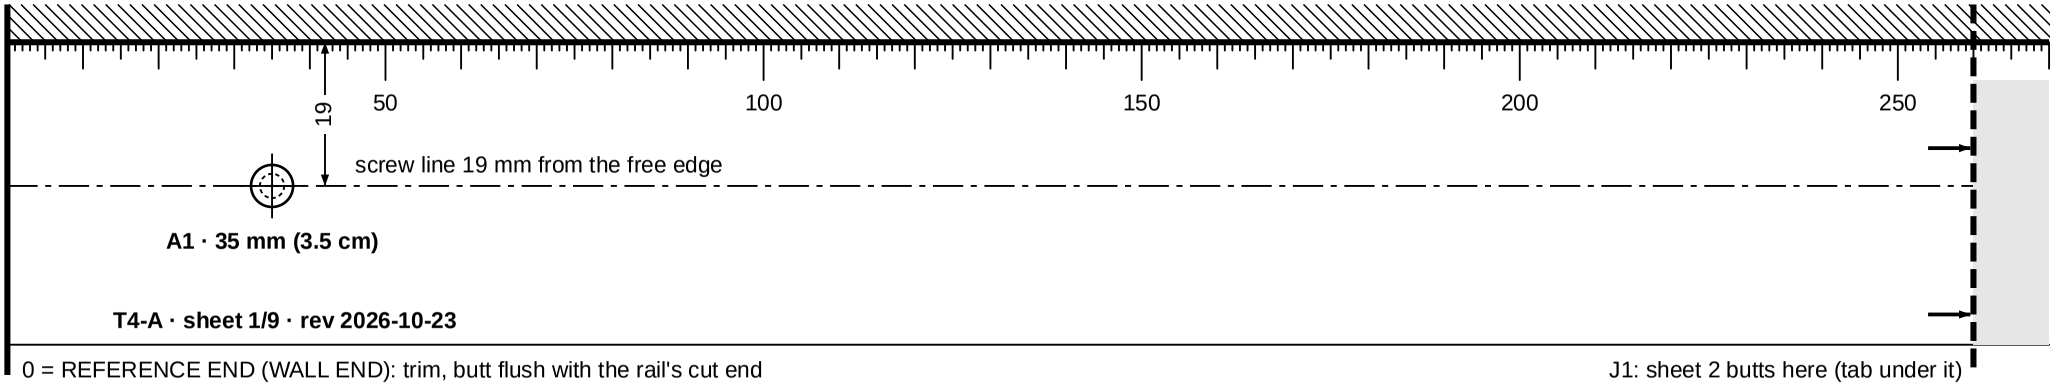

0 = REFERENCE END (WALL END): trim, butt flush with the rail's cut end

J1: sheet 2 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail A holes, cm from the wall end: A1 3.5, A2 28, A3 54, A4 80, A5 106, A6 132, A7 158, A8 184, A9 210.5.


Template T4-A · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-A Rail A (P06) station strip 2/9

SOURCE-DEFINED MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · READ SIDEWAYS (PORTRAIT A4)
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



50 mm CROSS-CHECK


DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (chapter E), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled wall end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

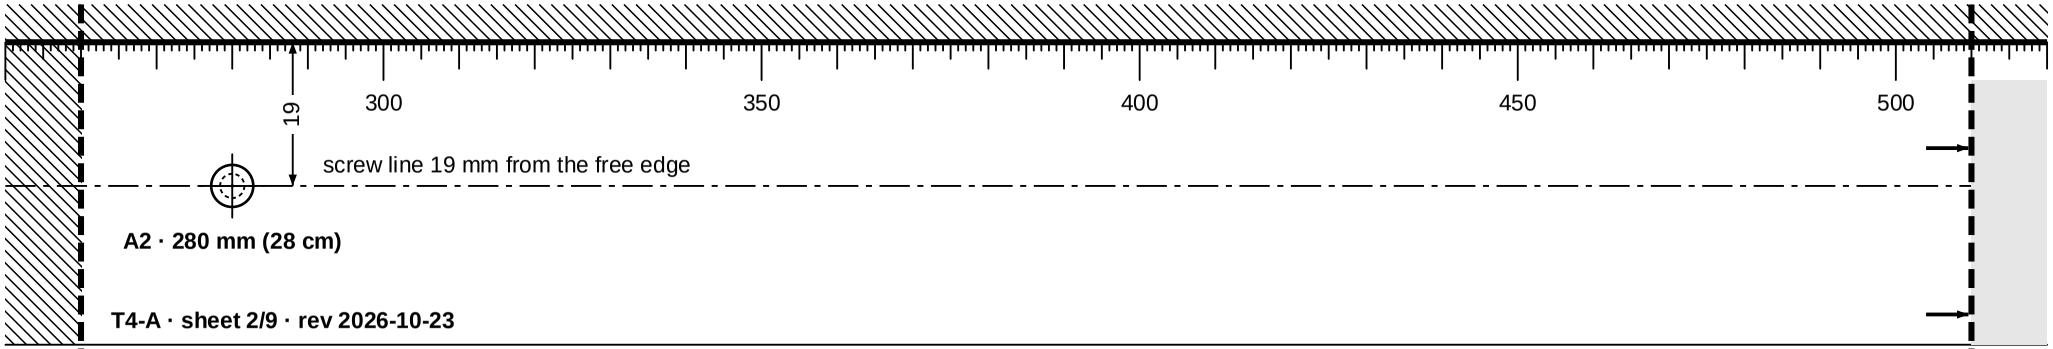

J1: TRIM HERE, lay this edge on sheet 1's J1 line

J2: sheet 3 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail A holes, cm from the wall end: A1 3.5, A2 28, A3 54, A4 80, A5 106, A6 132, A7 158, A8 184, A9 210.5.


Template T4-A · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-A Rail A (P06) station strip 3/9

SOURCE-DEFINED MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · READ SIDEWAYS (PORTRAIT A4)
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



50 mm CROSS-CHECK

DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.


Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (chapter E), not from the heel.

MEASURE THE DELIVERED RAIL

Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled wall end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

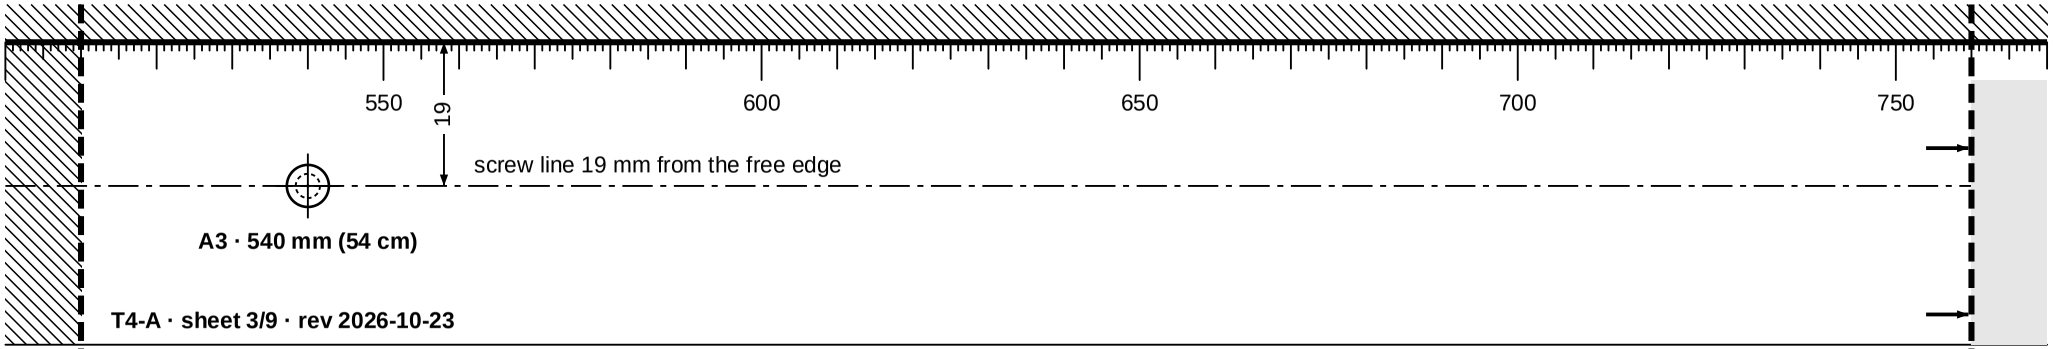

J2: TRIM HERE, lay this edge on sheet 2's J2 line

J3: sheet 4 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail A holes, cm from the wall end: A1 3.5, A2 28, A3 54, A4 80, A5 106, A6 132, A7 158, A8 184, A9 210.5.


Template T4-A · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-A Rail A (P06) station strip 4/9

SOURCE-DEFINED MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · READ SIDEWAYS (PORTRAIT A4)
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)





DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.


Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (chapter E), not from the heel.

MEASURE THE DELIVERED RAIL

Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled wall end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

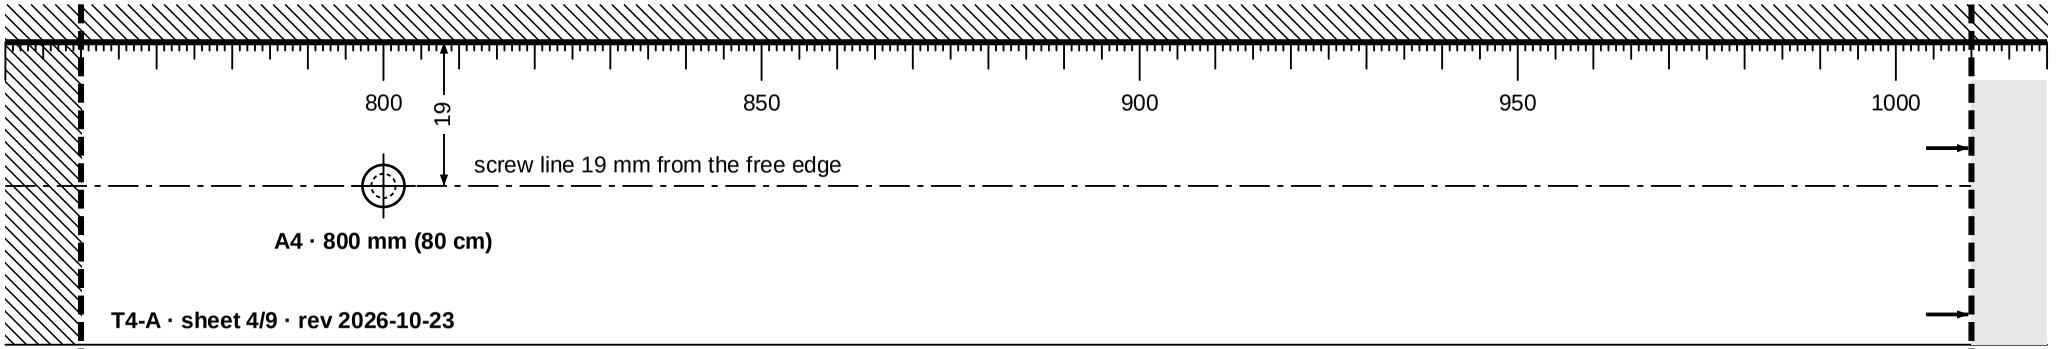

J3: TRIM HERE, lay this edge on sheet 3's J3 line

J4: sheet 5 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail A holes, cm from the wall end: A1 3.5, A2 28, A3 54, A4 80, A5 106, A6 132, A7 158, A8 184, A9 210.5.


Template T4-A · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-A Rail A (P06) station strip 5/9

SOURCE-DEFINED MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · READ SIDEWAYS (PORTRAIT A4)
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)





DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.


Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (chapter E), not from the heel.

MEASURE THE DELIVERED RAIL

Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled wall end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

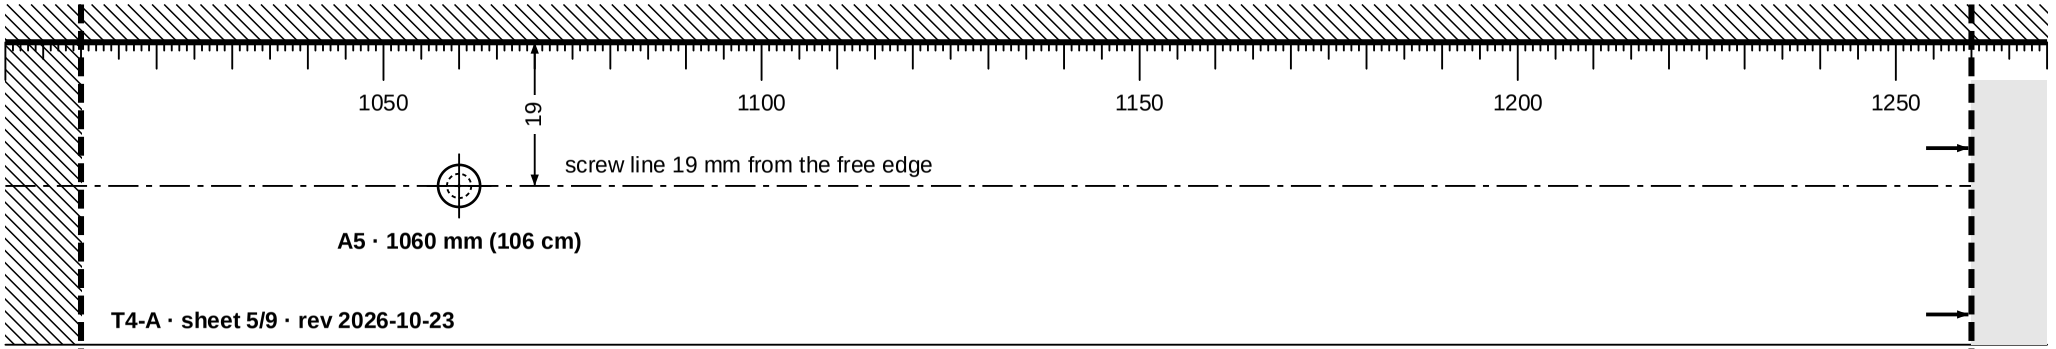

J4: TRIM HERE, lay this edge on sheet 4's J4 line

J5: sheet 6 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail A holes, cm from the wall end: A1 3.5, A2 28, A3 54, A4 80, A5 106, A6 132, A7 158, A8 184, A9 210.5.


Template T4-A · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-A Rail A (P06) station strip 6/9

SOURCE-DEFINED MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · READ SIDEWAYS (PORTRAIT A4)
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)





DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.


Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (chapter E), not from the heel.

MEASURE THE DELIVERED RAIL

Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled wall end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

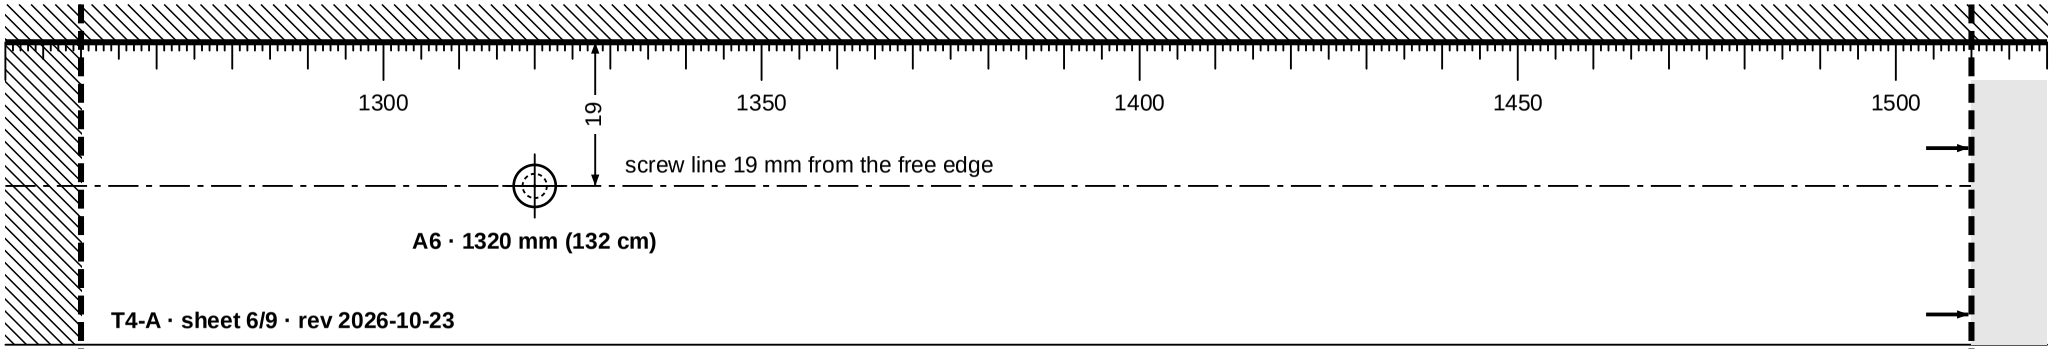

J5: TRIM HERE, lay this edge on sheet 5's J5 line

J6: sheet 7 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail A holes, cm from the wall end: A1 3.5, A2 28, A3 54, A4 80, A5 106, A6 132, A7 158, A8 184, A9 210.5.


Template T4-A · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-A Rail A (P06) station strip 7/9

SOURCE-DEFINED · MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · READ SIDEWAYS (PORTRAIT A4)
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)





DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.


Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (chapter E), not from the heel.

MEASURE THE DELIVERED RAIL

Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled wall end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

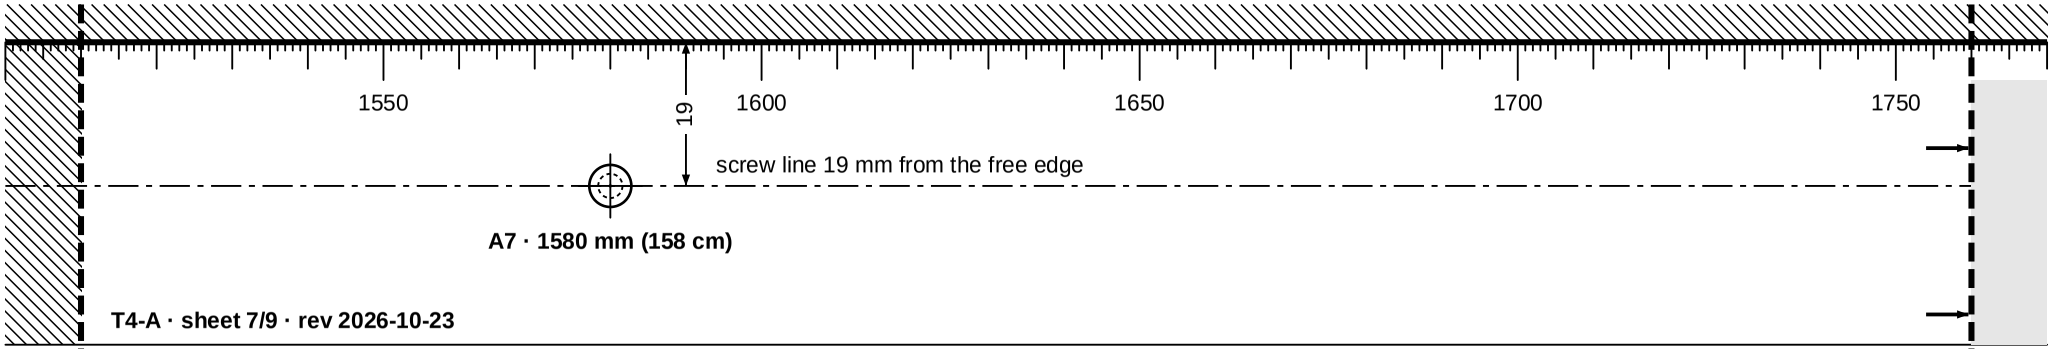

J6: TRIM HERE, lay this edge on sheet 6's J6 line

J7: sheet 8 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail A holes, cm from the wall end: A1 3.5, A2 28, A3 54, A4 80, A5 106, A6 132, A7 158, A8 184, A9 210.5.


Template T4-A · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-A Rail A (P06) station strip 8/9

SOURCE-DEFINED MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · READ SIDEWAYS (PORTRAIT A4)
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



50 mm CROSS-CHECK


DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (chapter E), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled wall end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

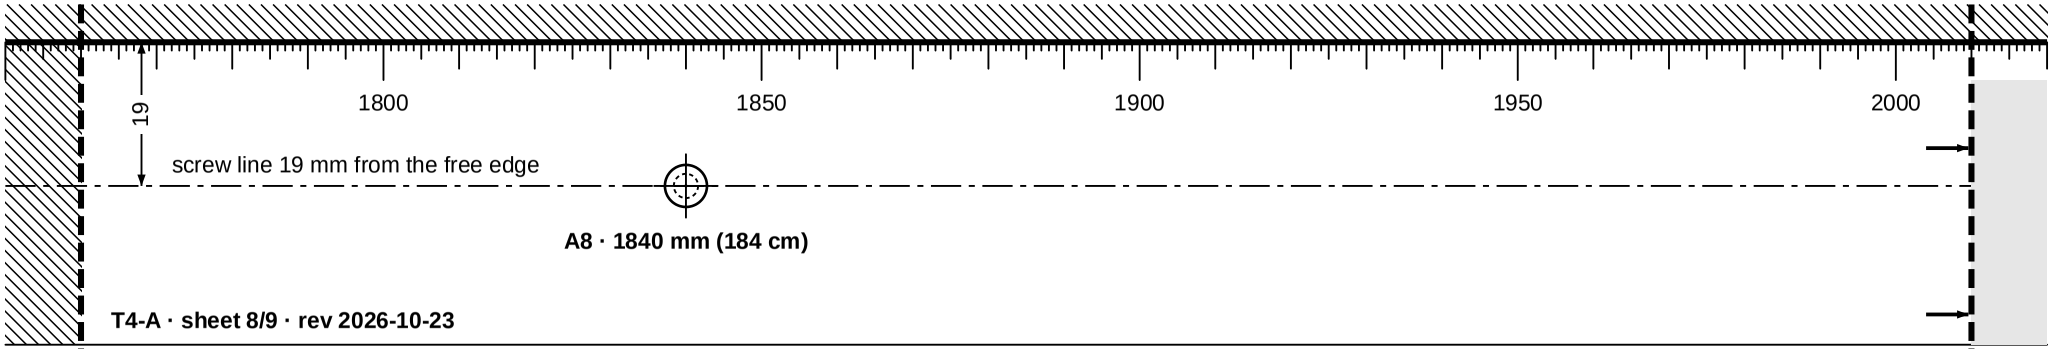

J7: TRIM HERE, lay this edge on sheet 7's J7 line

J8: sheet 9 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail A holes, cm from the wall end: A1 3.5, A2 28, A3 54, A4 80, A5 106, A6 132, A7 158, A8 184, A9 210.5.


Template T4-A · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-A Rail A (P06) station strip 9/9

SOURCE-DEFINED · MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · READ SIDEWAYS (PORTRAIT A4)
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



50 mm CROSS-CHECK


DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (chapter E), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled wall end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

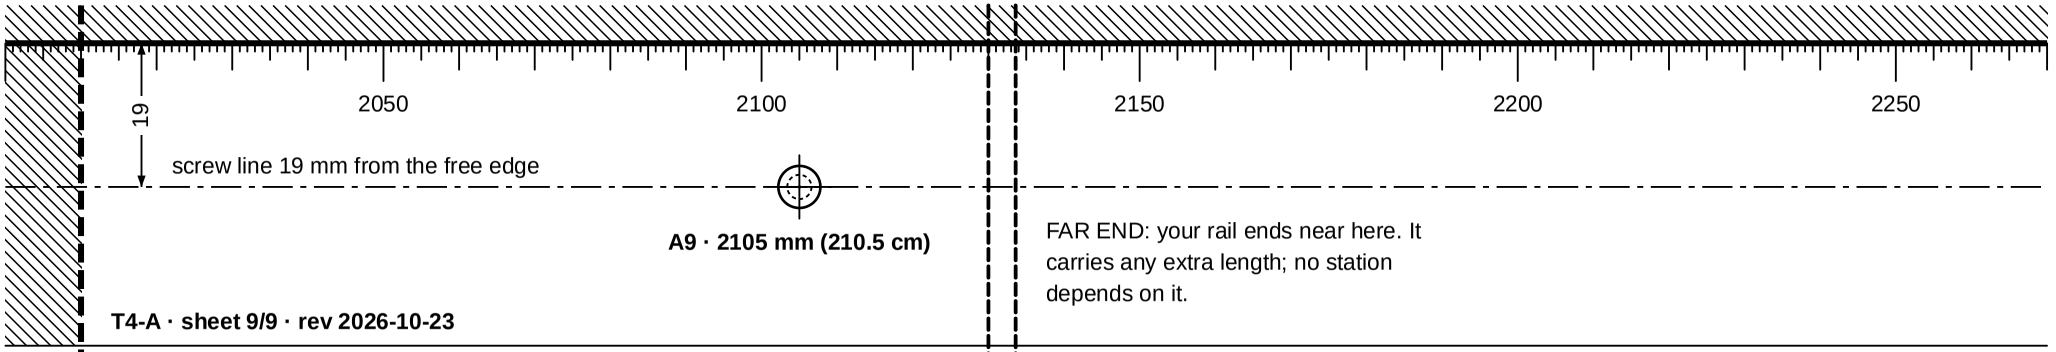

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail A holes, cm from the wall end: A1 3.5, A2 28, A3 54, A4 80, A5 106, A6 132, A7 158, A8 184, A9 210.5.


Template T4-B · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-B Rail B (P07) station strip 1/9

SOURCE-DEFINED MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · READ SIDEWAYS (PORTRAIT A4)
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)





DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.


Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (chapter E), not from the heel.

MEASURE THE DELIVERED RAIL

Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled corner end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

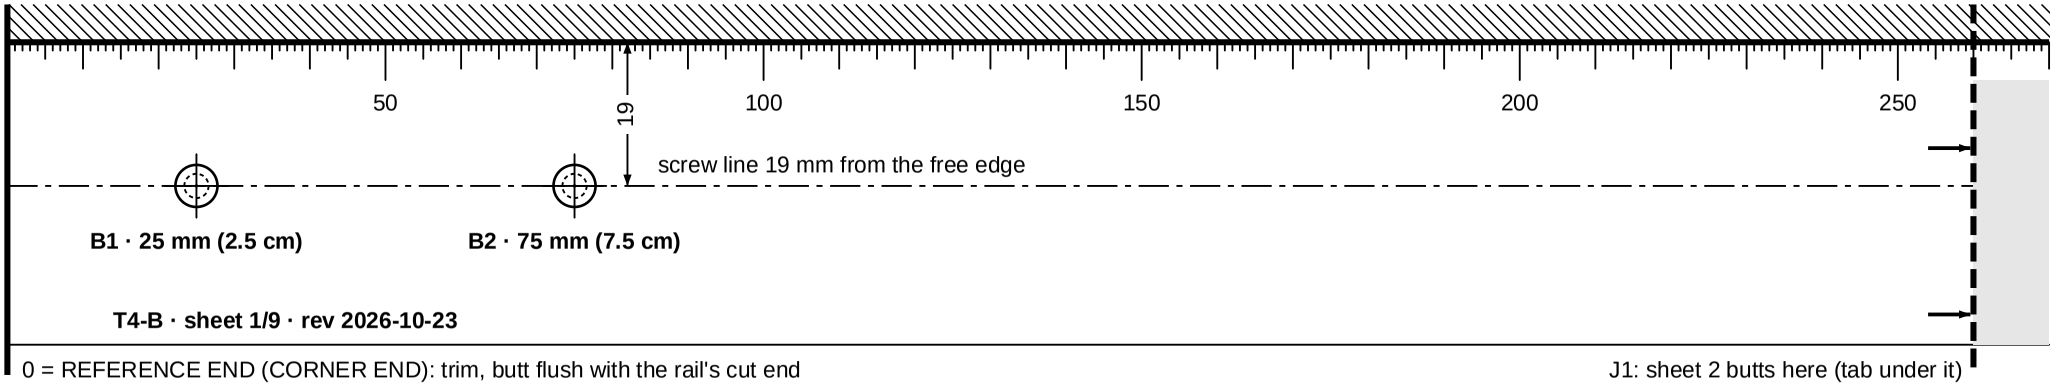

0 = REFERENCE END (CORNER END): trim, butt flush with the rail's cut end

J1: sheet 2 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail B holes, cm from the corner end: B1 2.5, B2 7.5, B3 28, B4 54, B5 80, B6 106, B7 132, B8 158, B9 184, B10 210.5.


Template T4-B · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-B Rail B (P07) station strip 2/9

SOURCE-DEFINED MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · READ SIDEWAYS (PORTRAIT A4)
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



50 mm CROSS-CHECK

DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.


Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (chapter E), not from the heel.

MEASURE THE DELIVERED RAIL

Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled corner end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

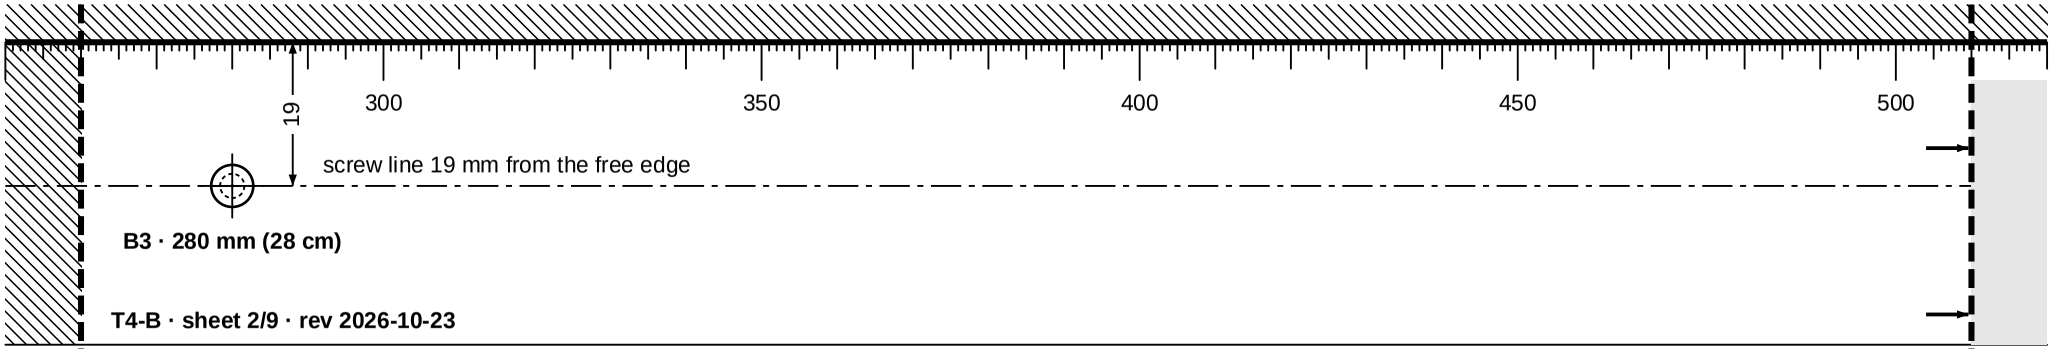

J1: TRIM HERE, lay this edge on sheet 1's J1 line

J2: sheet 3 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail B holes, cm from the corner end: B1 2.5, B2 7.5, B3 28, B4 54, B5 80, B6 106, B7 132, B8 158, B9 184, B10 210.5.


Template T4-B · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-B Rail B (P07) station strip 3/9

SOURCE-DEFINED MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · READ SIDEWAYS (PORTRAIT A4)
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



50 mm CROSS-CHECK


DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (chapter E), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled corner end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

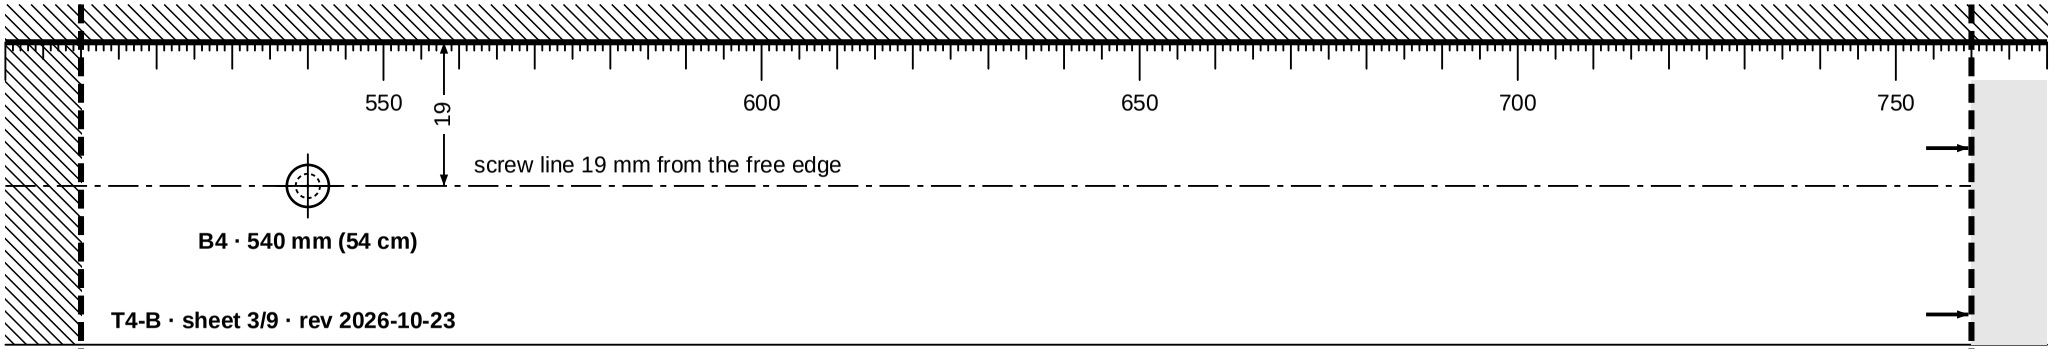

J2: TRIM HERE, lay this edge on sheet 2's J2 line

J3: sheet 4 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail B holes, cm from the corner end: B1 2.5, B2 7.5, B3 28, B4 54, B5 80, B6 106, B7 132, B8 158, B9 184, B10 210.5.


Template T4-B · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-B Rail B (P07) station strip 4/9

SOURCE-DEFINED MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · READ SIDEWAYS (PORTRAIT A4)
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



50 mm CROSS-CHECK


DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (chapter E), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled corner end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

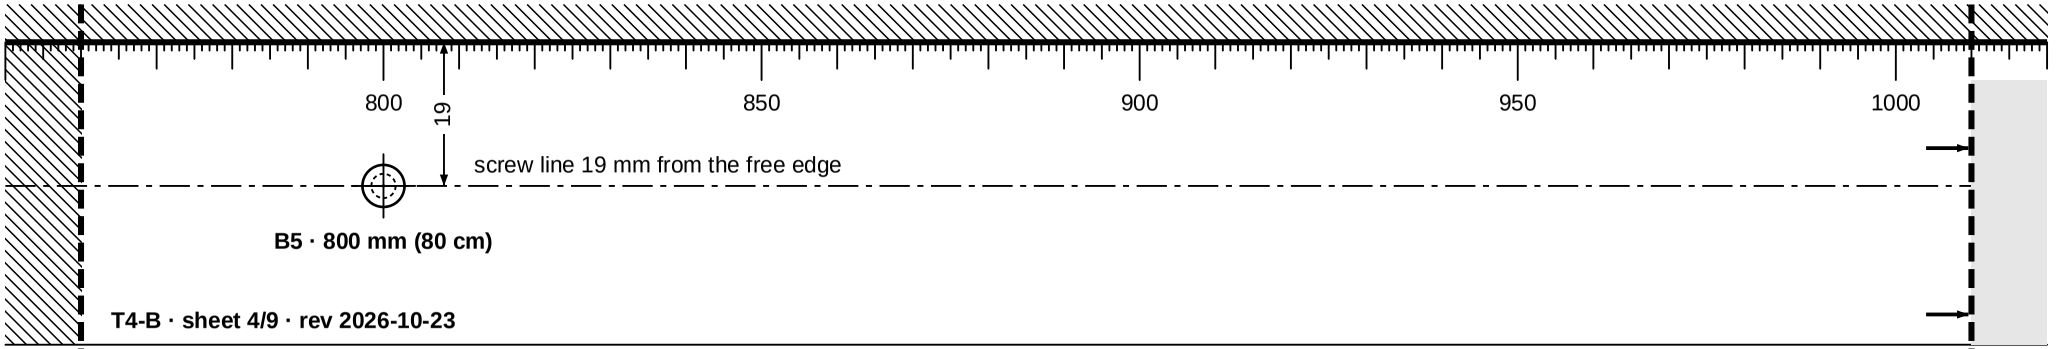

J3: TRIM HERE, lay this edge on sheet 3's J3 line

J4: sheet 5 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail B holes, cm from the corner end: B1 2.5, B2 7.5, B3 28, B4 54, B5 80, B6 106, B7 132, B8 158, B9 184, B10 210.5.


Template T4-B · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-B Rail B (P07) station strip 5/9

SOURCE-DEFINED MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · READ SIDEWAYS (PORTRAIT A4)
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)





DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.


Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (chapter E), not from the heel.

MEASURE THE DELIVERED RAIL

Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled corner end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

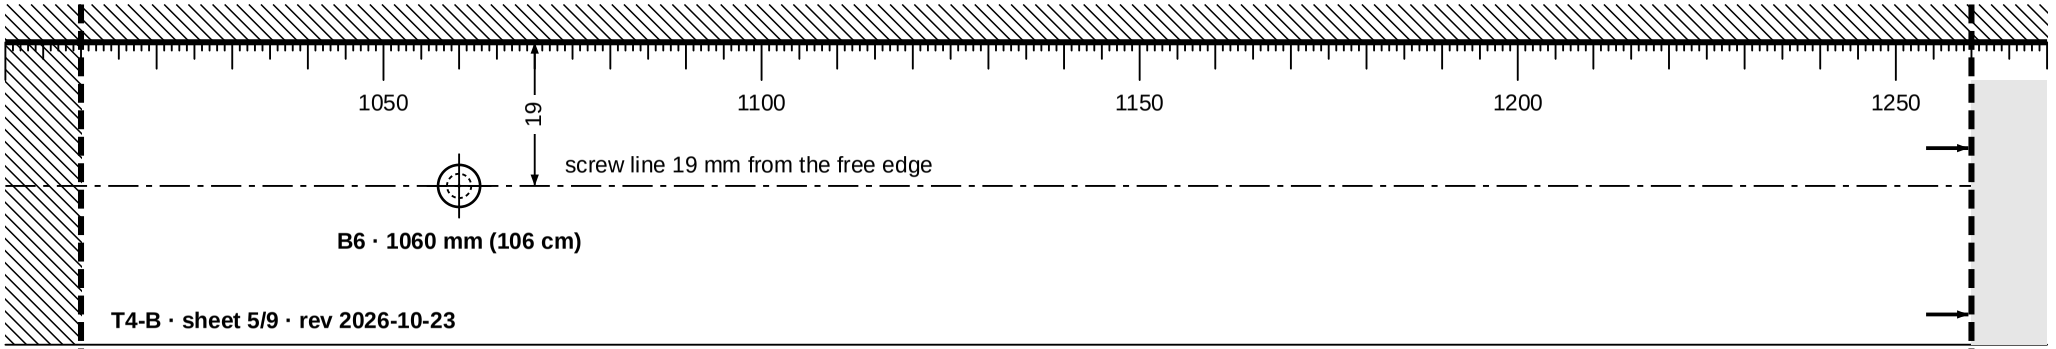

J4: TRIM HERE, lay this edge on sheet 4's J4 line

J5: sheet 6 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail B holes, cm from the corner end: B1 2.5, B2 7.5, B3 28, B4 54, B5 80, B6 106, B7 132, B8 158, B9 184, B10 210.5.


Template T4-B · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-B Rail B (P07) station strip 6/9

SOURCE-DEFINED MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · READ SIDEWAYS (PORTRAIT A4)
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



50 mm CROSS-CHECK


DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (chapter E), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled corner end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

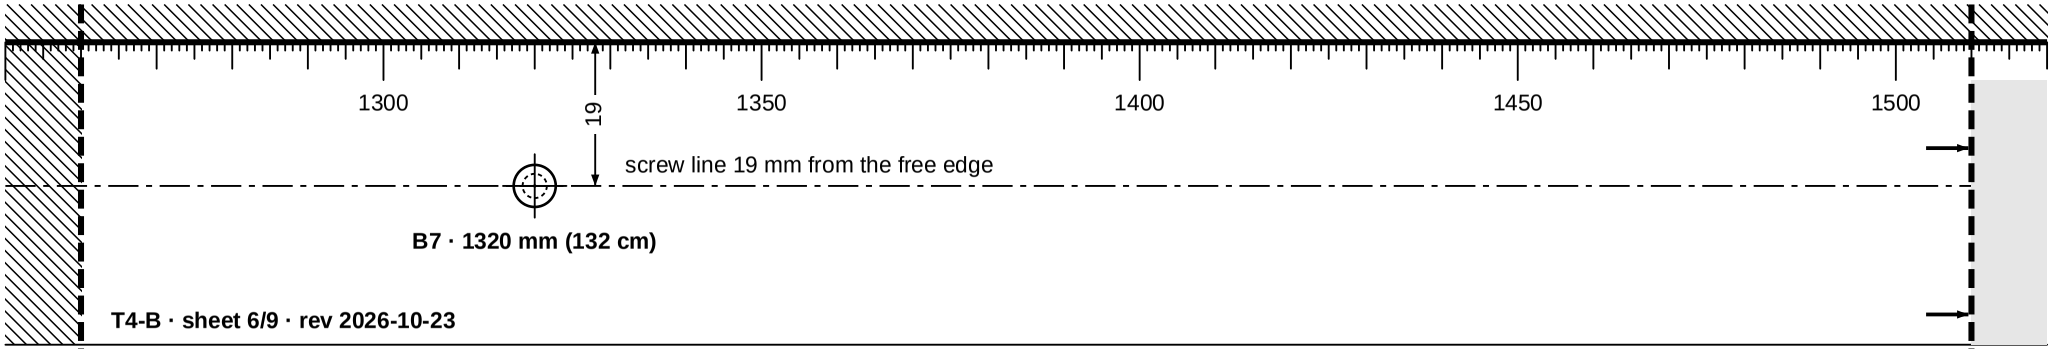

J5: TRIM HERE, lay this edge on sheet 5's J5 line

J6: sheet 7 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail B holes, cm from the corner end: B1 2.5, B2 7.5, B3 28, B4 54, B5 80, B6 106, B7 132, B8 158, B9 184, B10 210.5.


Template T4-B · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-B Rail B (P07) station strip 7/9

SOURCE-DEFINED MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · READ SIDEWAYS (PORTRAIT A4)
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)





DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.


Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (chapter E), not from the heel.

MEASURE THE DELIVERED RAIL

Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled corner end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

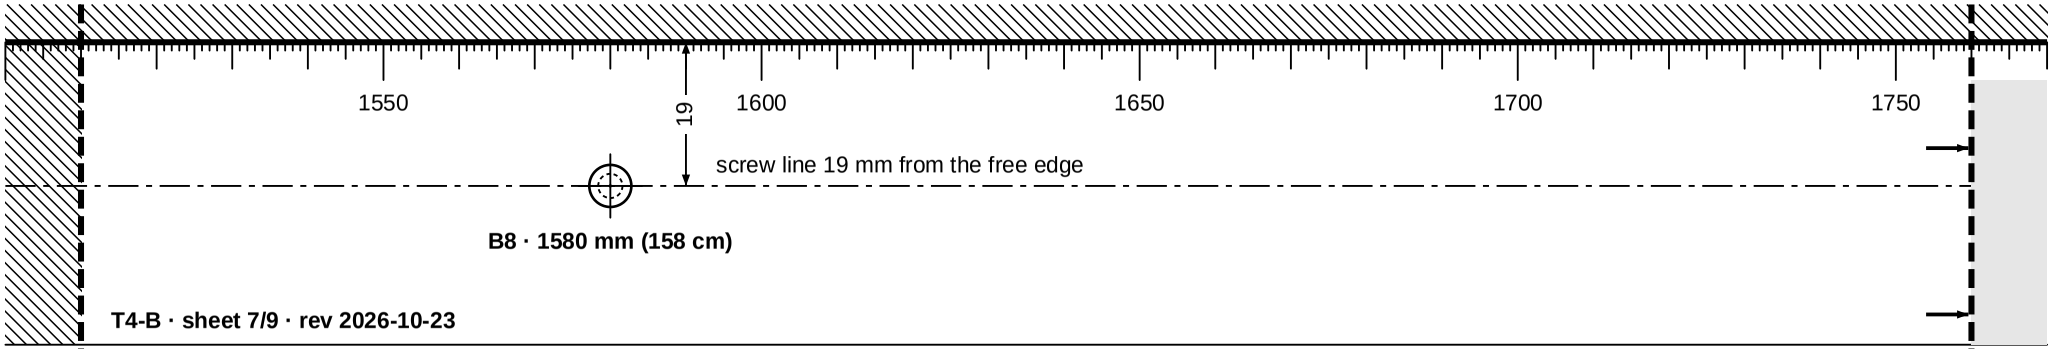

J6: TRIM HERE, lay this edge on sheet 6's J6 line

J7: sheet 8 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail B holes, cm from the corner end: B1 2.5, B2 7.5, B3 28, B4 54, B5 80, B6 106, B7 132, B8 158, B9 184, B10 210.5.


Template T4-B · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-B Rail B (P07) station strip 8/9

SOURCE-DEFINED MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · READ SIDEWAYS (PORTRAIT A4)
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



50 mm CROSS-CHECK


DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (chapter E), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled corner end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

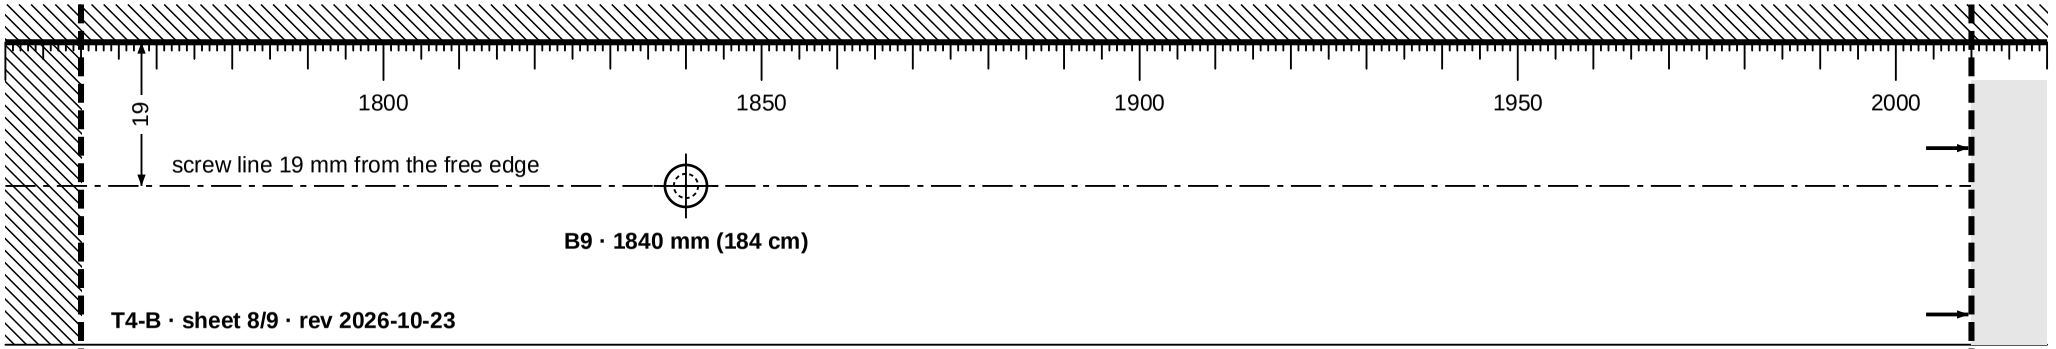

J7: TRIM HERE, lay this edge on sheet 7's J7 line

J8: sheet 9 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail B holes, cm from the corner end: B1 2.5, B2 7.5, B3 28, B4 54, B5 80, B6 106, B7 132, B8 158, B9 184, B10 210.5.


Template T4-B · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-B Rail B (P07) station strip 9/9

SOURCE-DEFINED MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · READ SIDEWAYS (PORTRAIT A4)
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



50 mm CROSS-CHECK


DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (chapter E), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled corner end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

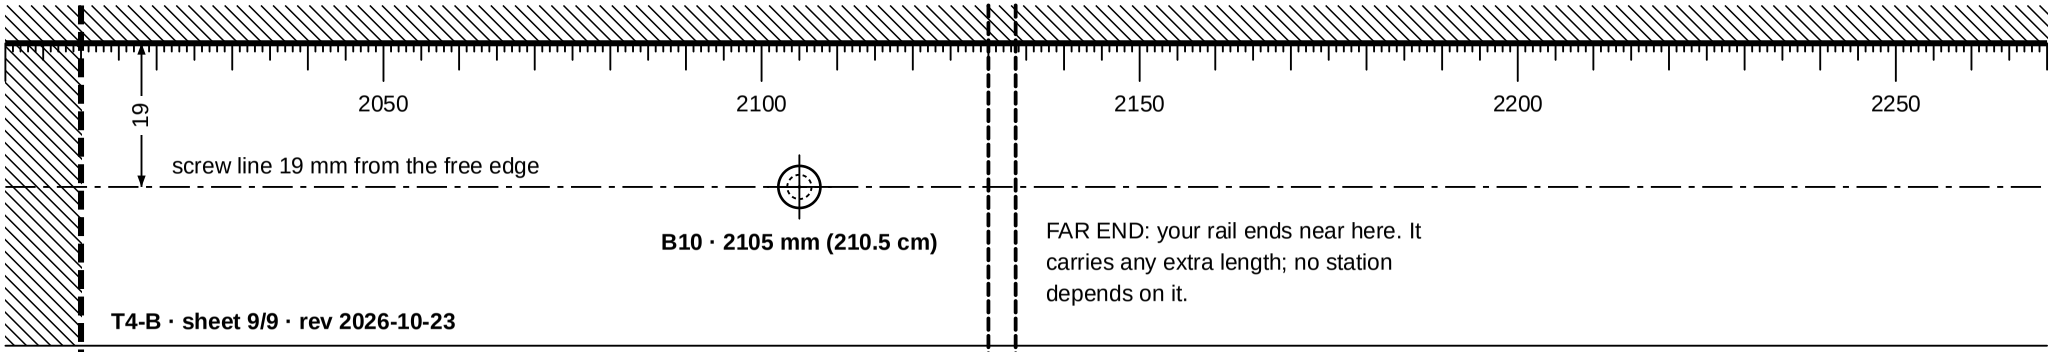

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail B holes, cm from the corner end: B1 2.5, B2 7.5, B3 28, B4 54, B5 80, B6 106, B7 132, B8 158, B9 184, B10 210.5.


Template T5 · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)


T5 Corner fitting (P08) placement · reference

SOURCE-DEFINED VERIFIED

PRINT AT 100% / ACTUAL SIZE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.


CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)






T5 · P08 on P06 / P07 · REFERENCE 1:2, NOT FOR DRILLING · rev 2026-10-23


VIEW 1 · rail A vertical leg, front face (from the knee side), 1:2

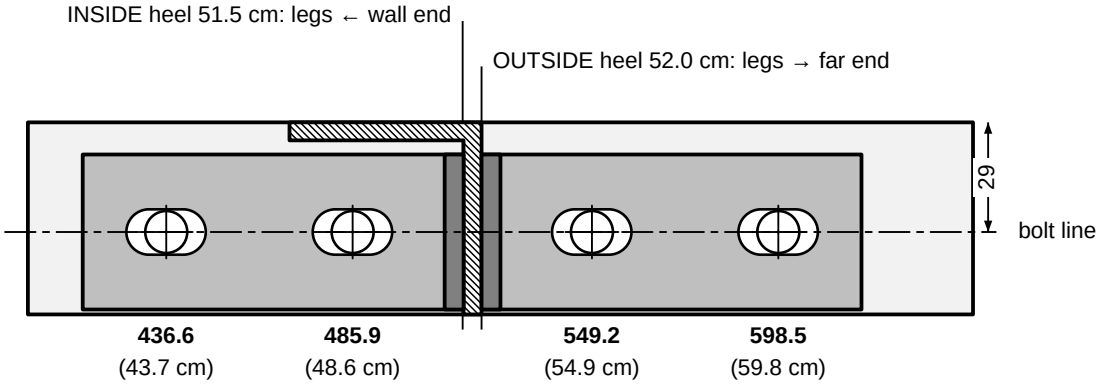

VIEW 2 · rail B vertical leg, outer face, corner end, 1:2

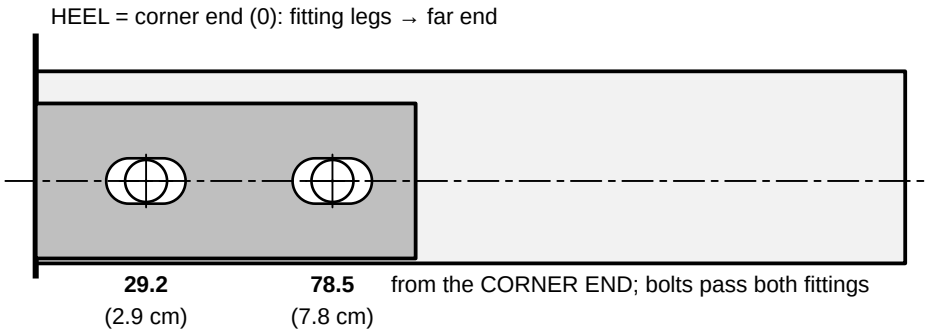

DETAIL 1:1 · one leg, slots 21 × 12

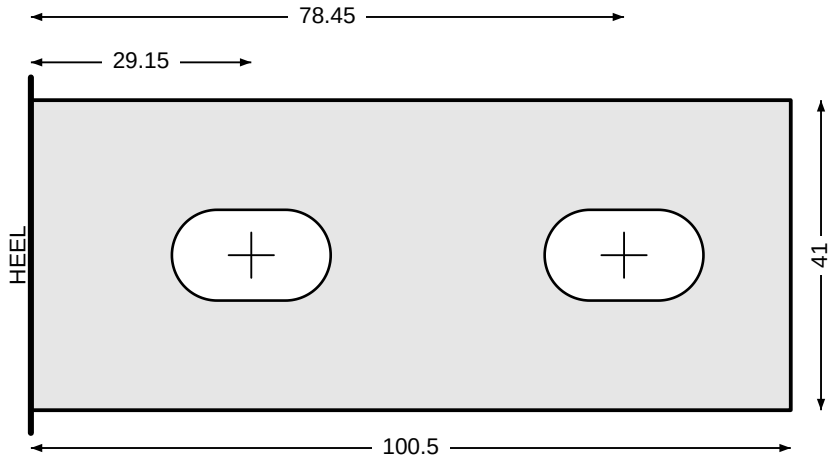

RAIL HOLES · VERIFIED 23 Oct 2026


Rail A, cm from the wall end: 54.9 / 59.8 (outside fitting, heel 52.0), 48.6 / 43.7 (inside, heel 51.5). Rail B, cm from the corner end: 2.9 / 7.8. All on the bolt line, 29 mm below the heel. Drill THROUGH THE FITTING: clamp on the heel mark, printed slot plug in each slot, pilot 1/8 in, open to 7/16 in (11.1 mm). Inside gusset DOWN, outside toward the knee space.

Template T6 · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T6 Clamp pad plate (P11) placement · reference

SOURCE-DEFINED | **VERIFIED** | ASSUMPTION / FIELD CHECK

PRINT AT 100% / ACTUAL SIZE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

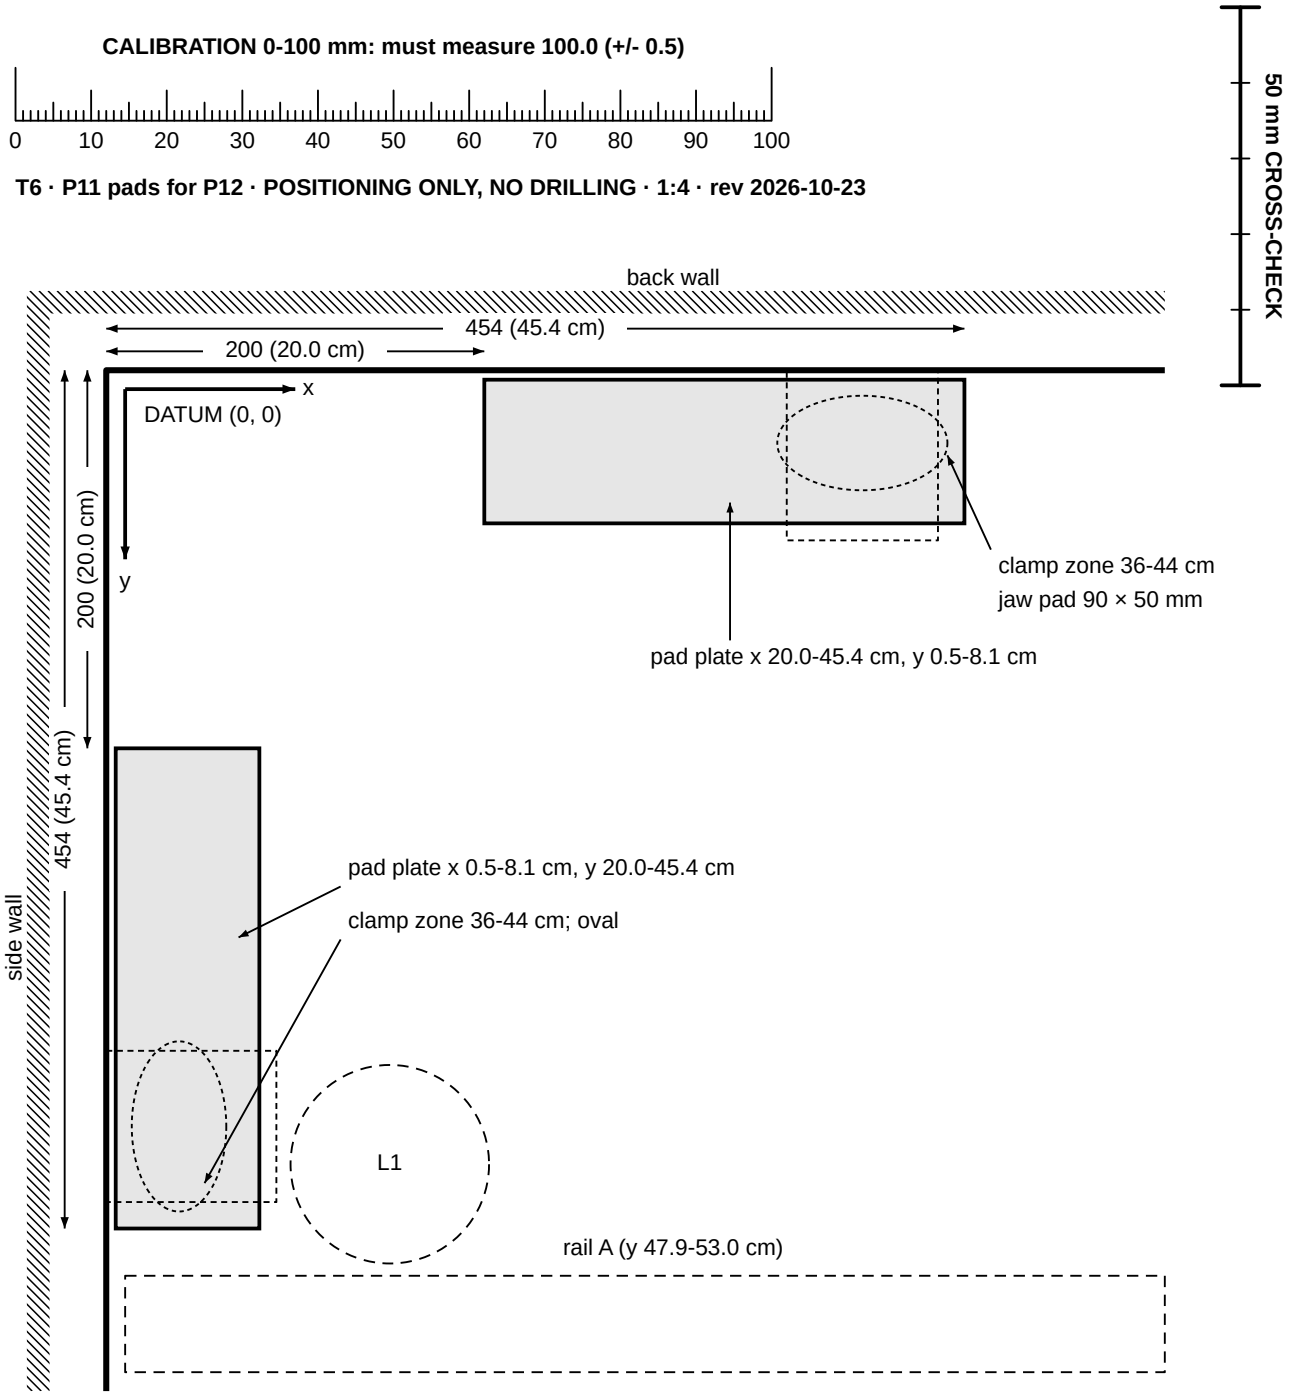

Plan from above, datum top A's back-left corner (x along the back wall, y along the side wall). The plates lie LOOSE on the underside under the VIVO lower jaws (chapter I): with the top face down, draw the outlines measuring from the same two named edges. Jaw pad: oval 90 × 50 mm, 13.5-63.5 mm in from the edge (measured), drawn centred on each clamp.

SOURCE-DEFINED: the pad plate outlines (marking table, chapter D). VERIFIED: the 90 × 50 mm lower-jaw pad, measured 21-23 Oct 2026 (facts.json vivo). ASSUMPTION / FIELD CHECK: the oval drawn centred on the clamp; the clamp back sets the final position (crossbar fitted as the spacing guide).


Template T7 · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit:
HEAD of https://github.com/scotthowson/desk-setup on 23
Oct 2026 (supersedes a2e99ea with measured facts)

T7 Corner bolt holes (P08 on P06 / P07) · drilling template 1:1

VERIFIED SOURCE-DEFINED


PRINT AT 100% / ACTUAL SIZE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)




DRILL ⌀11.11 (7/16 in) through the vertical leg, 29 below the heel: punch through the paper, 1/8 in pilot (dashed), then 7/16, low speed, oil; deburr both faces.
On the bench, before the rails go on the tops. Hatched: rail B's end on rail A. Grey: the fittings' legs and slots, orientation only.

RAIL A (P06) · vertical leg, OUTER face (toward the knee space) · HEEL edge UP · WALL END to the LEFT

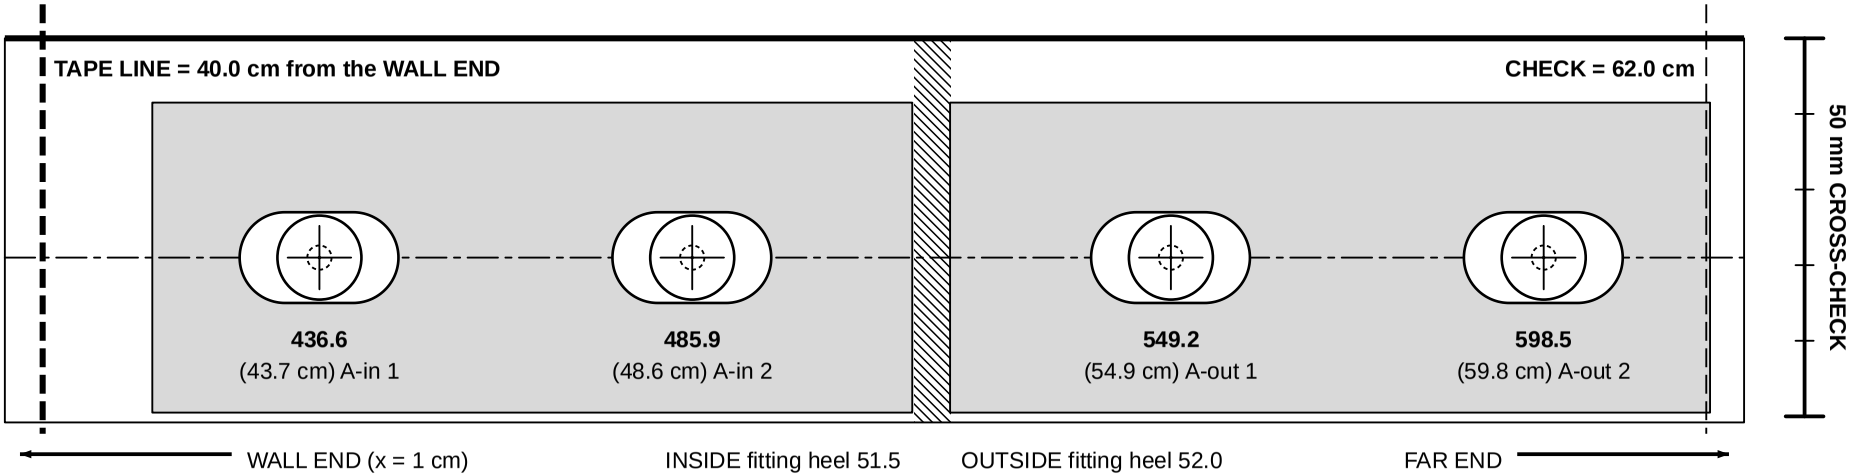

RAIL B (P07) · vertical leg, EITHER face · HEEL edge UP · trim on the heavy END line, butt it flush with the CORNER END

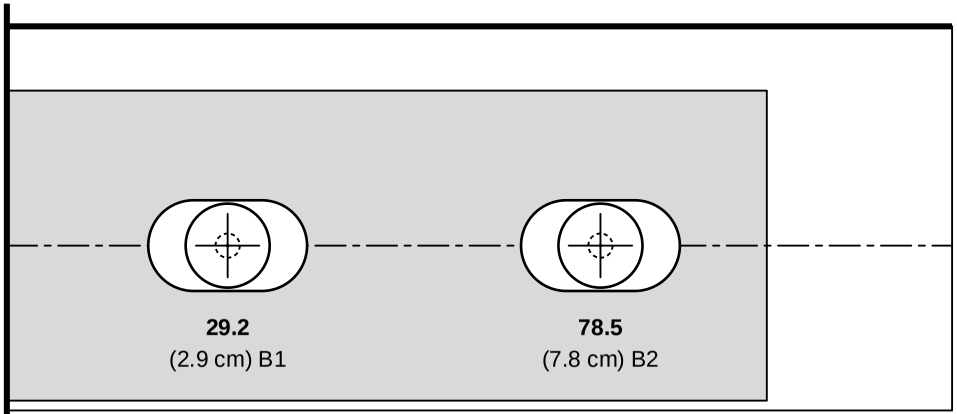

RAIL A: 1. Trim on the heavy HEEL line. 2. Hook the tape on rail A's WALL END (the end that goes 1 cm in from top A's taped end) and mark 40.0 and 62.0 cm on the heel corner. 3. Trimmed edge along the heel, TAPE line on 40.0; the CHECK line must fall on 62.0 (if not, the sheet is scaled: reprint). 4. Tape, punch, drill the four. Assumes rail B's outer face at 53 cm from the wall, butting on rail A (chapter H).

RAIL B: one bolt per hole with a fitting on both sides of the leg, so the pattern is the same from either face. Skip if already drilled. Bolts 3/8-16 x 1-1/2, washers, nylon nuts, 25 N·m by hand; never an impact wrench.

T7 · P08 on P06 / P07 · rev 2026-10-23