
Template T0 · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit:
HEAD of https://github.com/scotthowson/desk-setup on 23
Oct 2026 (supersedes a2e99ea with measured facts)


T0 Templates · print this page first

> **PRINT AT 100% / ACTUAL SIZE**
> DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

Print every sheet from the PDF viewer at **100 % / Actual size**, on A4 (T4 sheets are A4 landscape). Then lay a steel rule on the ruler below. Use the sheets only if 0 to 100 reads 100.0 mm and the bar reads 50.0 mm. A sheet that is 1 % small puts a hole 0.5 mm off at 50 mm.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)





LEGEND

- DRILL ⌀ (bit): circle at the bit size, crosshair and centre dot. Punch the centre through the paper, lift the sheet, drill.
- OPTIONAL DRILL: dashed circle; only where the sheet says so.
- POSITION: centre mark only. Do NOT drill.
- ------ Outline of the part, reference only.
- Datum edge line: trim the paper on it, butt it to the edge.

Sheet	What	Use
T1	Locating ring P10 (+ optional ALEX foot P20)	1:1 drilling
T2	Feet plate P09, two pieces	1:1 drilling
T3a	OLOV plate P05 at 100: L2-L6	1:1 drilling
T3b	OLOV plate P05 at 150: L1	1:1 drilling
T4-A	Rail A P06 station strip, 9 landscape sheets	1:1 marking check
T4-B	Rail B P07 station strip, 9 landscape sheets	1:1 marking check
T5	Corner fitting P08 placement	reference 1:2, not for drilling
T6	Clamp pad plate P11 placement	reference 1:4, positioning only

Using a drilling sheet: trim on the heavy datum line(s), butt the trimmed edge to the named edge, tape, then punch each DRILL centre through the paper with an awl or automatic centre punch, lift the sheet and drill to the depth stated. The printed jigs (P18) are the primary tools; these sheets reproduce their patterns and serve as the check. Top marking is done face down (underside up); every pattern here is used without flipping the sheet.


Template T1 · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T1 Locating ring (P10) · check template 1:1 VERIFIED

PRINT AT 100% / ACTUAL SIZE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CHECK SHEET. The rings are fitted by tracing the pads with the top standing on the bare cabinet (build manual). Lay this sheet on each ALEX corner to check that the ring centre is 5 cm in from both edges. If you prefer the measured method, you can also drill through it.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



T1 · P10 locating ring + P20 ALEX foot (opt.) · rev 2026-10-23

SHEET FACE UP on the ALEX top, the two edge lines on the two edges of one corner. Same sheet for all eight corners: turn it, never flip it.


1 Tape down. 2 Awl or punch each RING centre through the paper. 3 Lift the sheet. 4 Pilot 5/64 in, 12 mm deep (puck 12 ALEX). 5 #6 × 5/8 in flat head, 13.4 mm into the ALEX top.

50 mm CROSS-CHECK

LEGEND

- DRILL ⌀2.0 (5/64 in): ring screws, ALEX TOP.
- OPTIONAL DRILL ⌀2.0 (5/64 in): ALEX feet only, on the ALEX BOTTOM (unit on its back).
- POSITION: centre mark only. Do NOT drill.
- Outline of the part, reference only.
- Datum edge line: trim the paper on it, butt it to the edge.

Ring: bore ⌀52, OD ⌀58, flange ⌀75 (dashed), screws on r 33 at 45 / 165 / 285°, the printed ALEX corner template's holes. ALEX foot: r 14.5 at the same angles. Angles counter-clockwise from the bottom edge, sheet face up. Ring screw holes ⌀3.8 shown dashed.

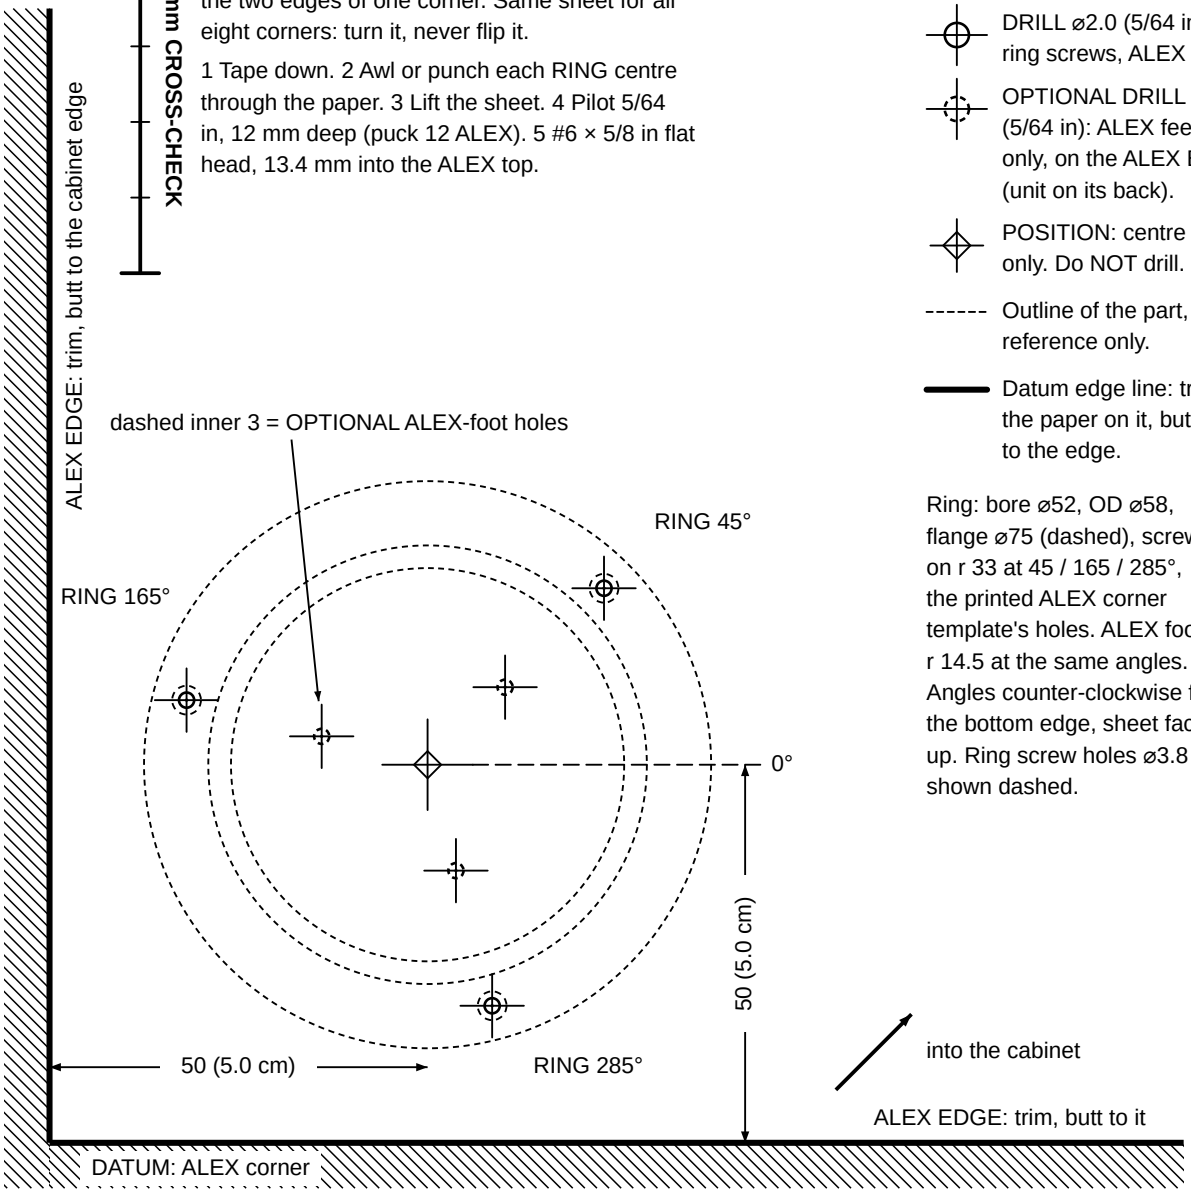


ALEX top panel 15.9 mm (5/8 in), measured 23 Oct 2026: the #6 × 5/8 in screws go 13.4 mm in and leave 2.5 mm. Turn each ring so its three screw holes sit on the marks.

Template T2 · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)


T2 Feet plate (P09) · drilling template 1:1 VERIFIED

PRINT AT 100% / ACTUAL SIZE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint. Verified on the purchased plate 23 Oct 2026: 41.6 between holes (inside jaws), 52.0 across (outside jaws), so 46.8 centres.


CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



T2 · P09 feet plate · piece B · rev 2026-10-23

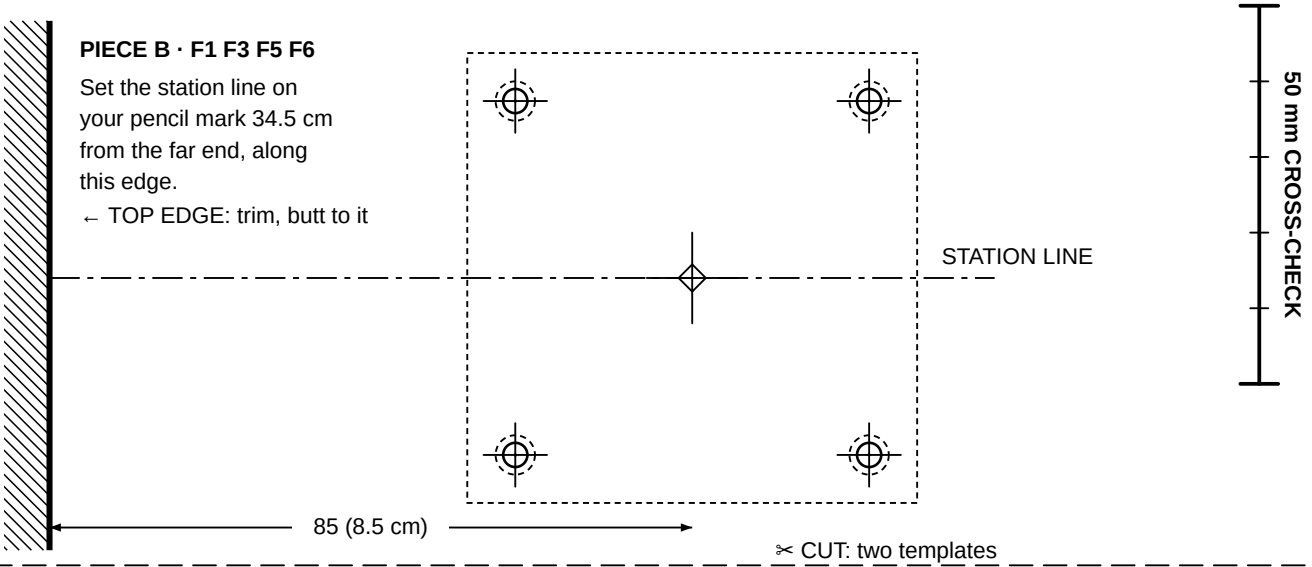

✂ CUT: two templates

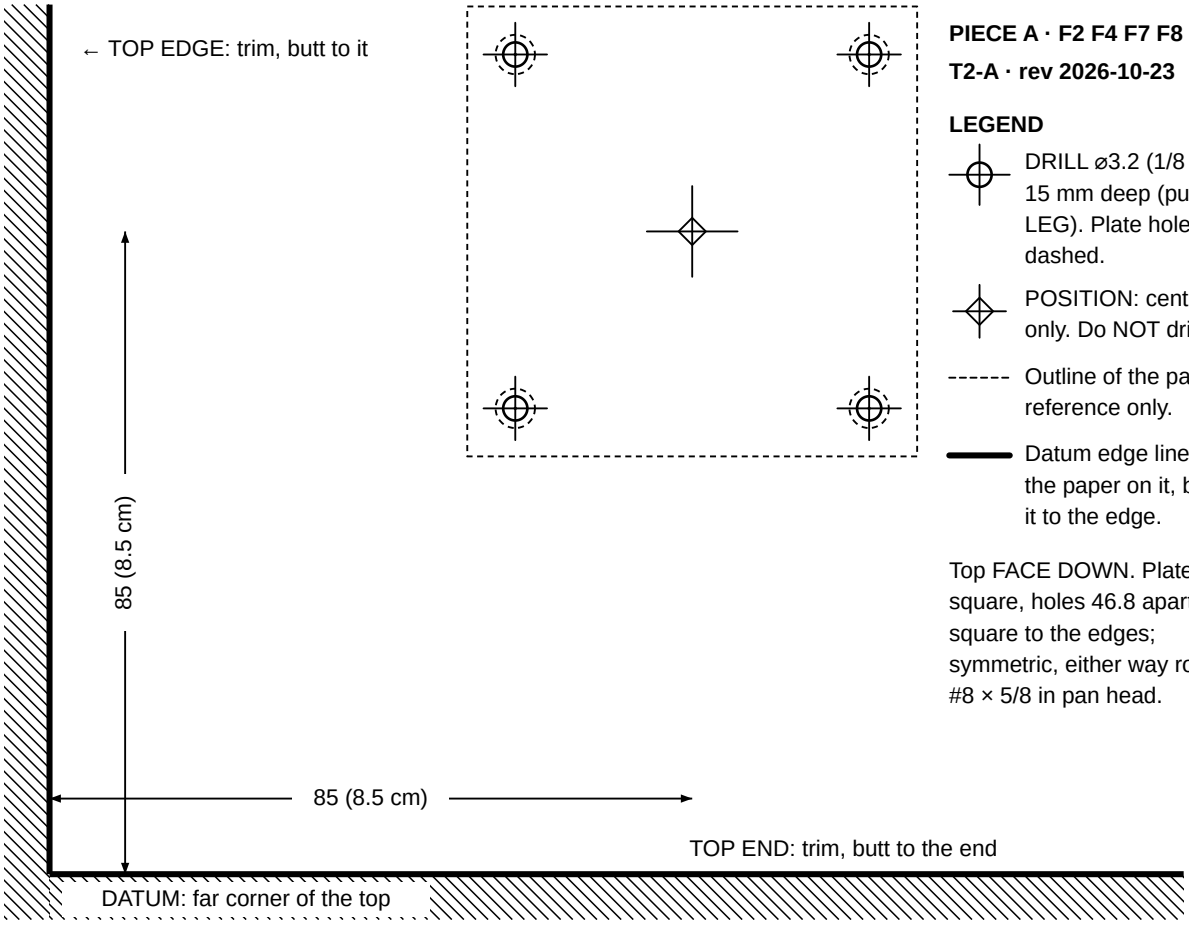

PIECE A · F2 F4 F7 F8

T2-A · rev 2026-10-23

LEGEND


- DRILL ⌀3.2 (1/8 in), 15 mm deep (puck 15 LEG). Plate holes ⌀5.2 dashed.
- POSITION: centre mark only. Do NOT drill.
- Outline of the part, reference only.
- Datum edge line: trim the paper on it, butt it to the edge.

Top FACE DOWN. Plate 59.5 square, holes 46.8 apart, square to the edges; symmetric, either way round. #8 × 5/8 in pan head.

Template T3a · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T3a OLOV plate (P05) · 100 from the edge · 1:1 VERIFIED

PRINT AT 100% / ACTUAL SIZE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

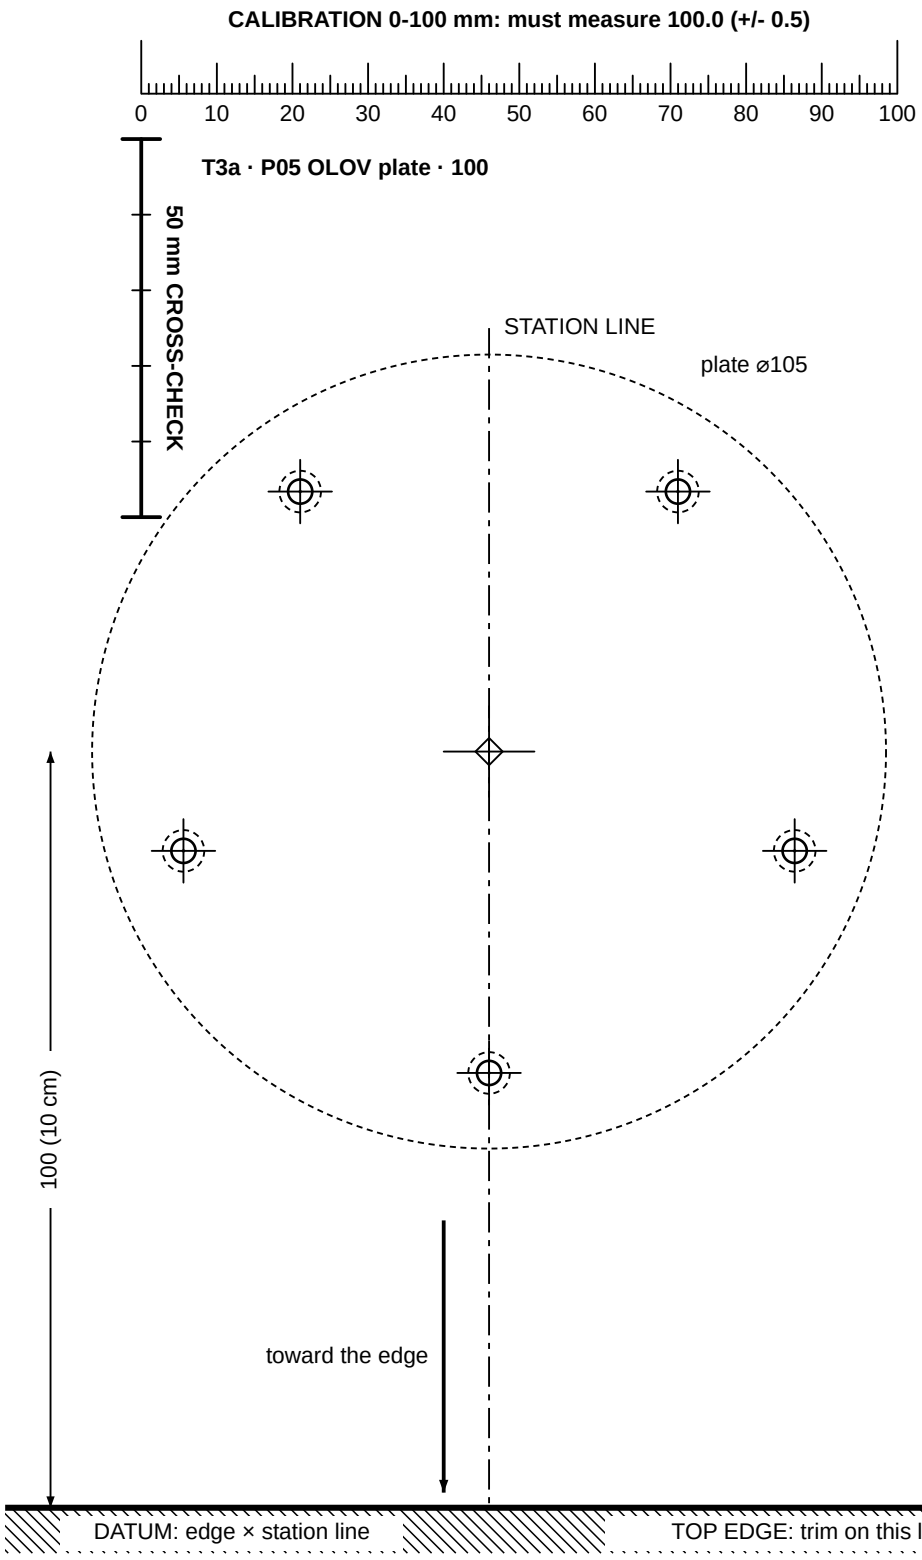

T3a · rev 2026-10-23

The sheet sets 10 cm from the edge. Top A, edge = back edge, tape from the side-wall end: L2 65 cm, L3 140 cm. Top B, edge = side-wall edge, tape from the joint end: L4 20 cm, L5 95 cm, L6 170 cm. One hole points AT the edge.


LEGEND

- DRILL ⌀3.2 (1/8 in), 15 mm deep (puck 15 LEG). OLOV holes ⌀5.5 dashed.
- POSITION: centre mark only. Do NOT drill.
- Outline of the part, reference only.
- Datum edge line: trim the paper on it, butt it to the edge.

Template T3b · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T3b OLOV plate (P05) · 150 from the end · 1:1 VERIFIED

PRINT AT 100% / ACTUAL SIZE
DISABLE FIT TO PAGE / shrink to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

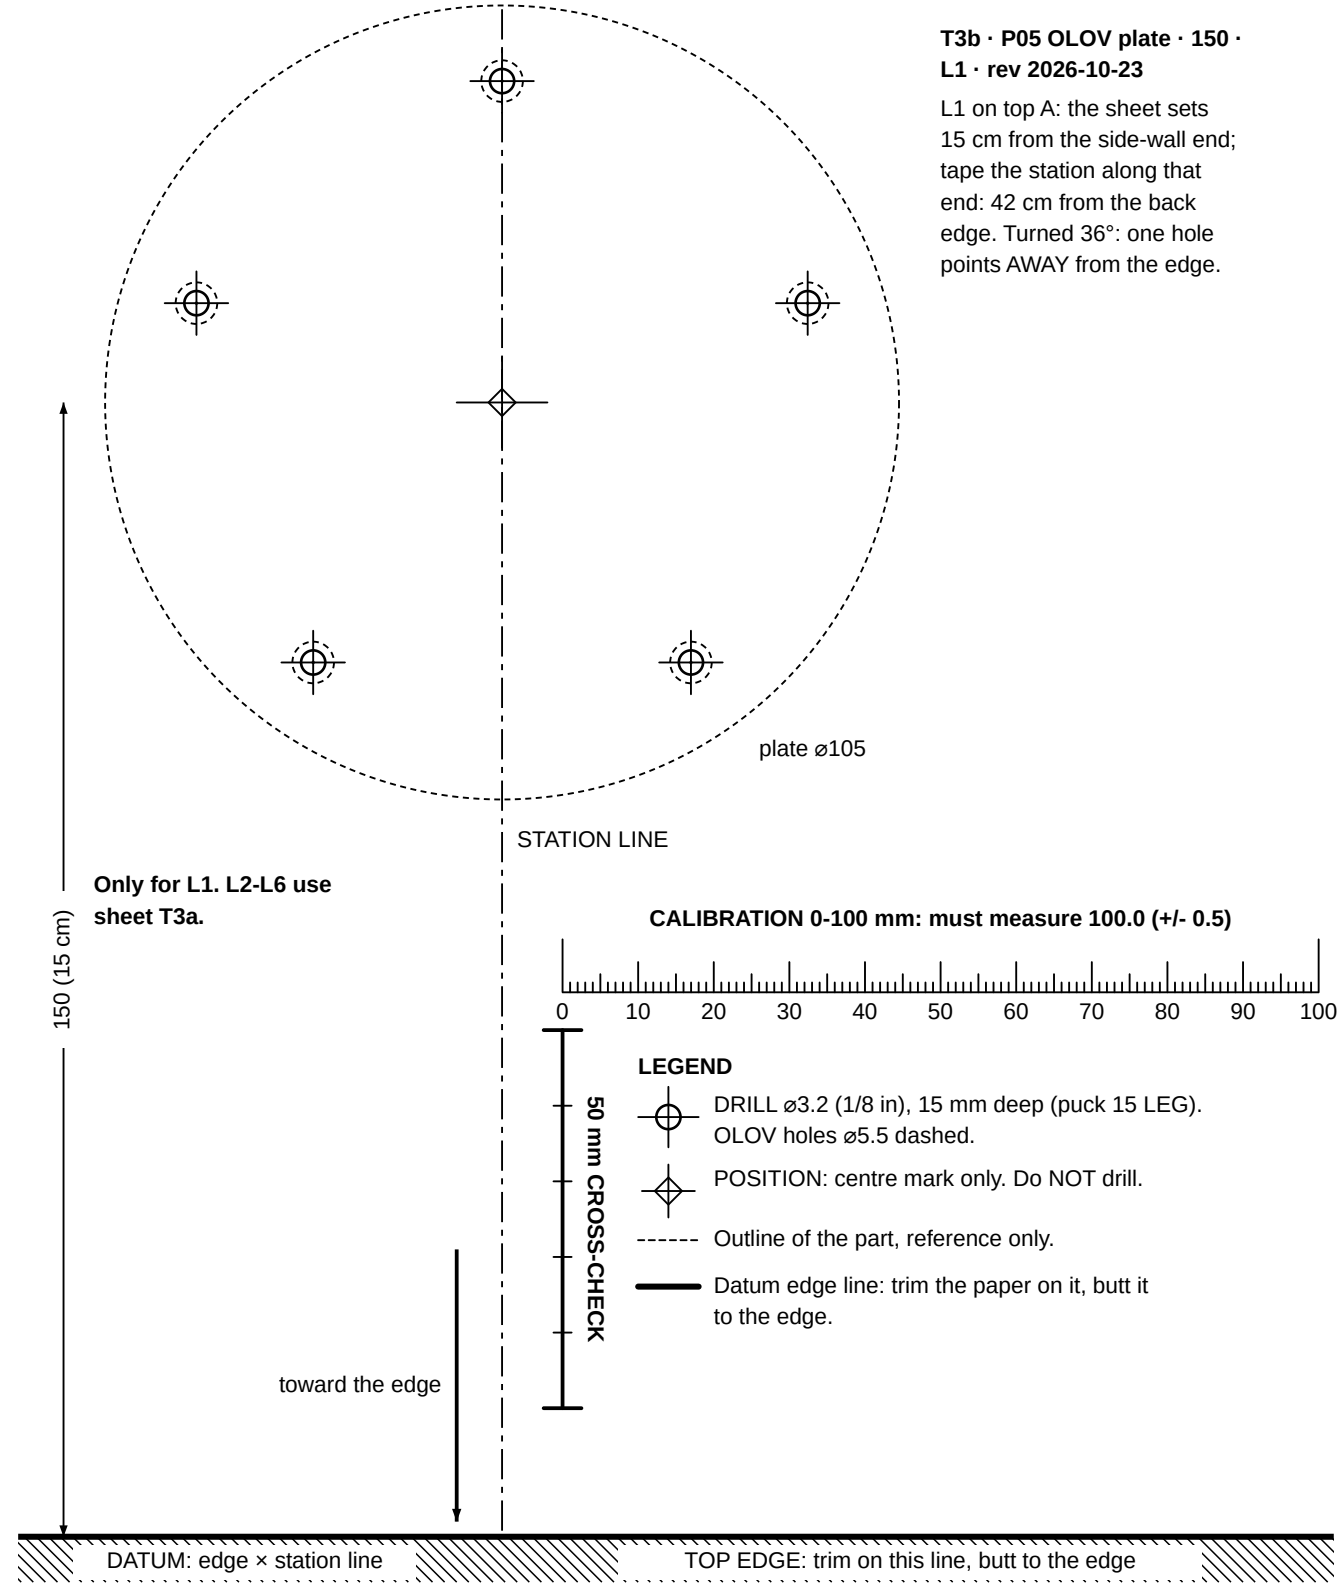


Template T4-A · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)


T4-A Rail A (P06) station strip 1/9

SOURCE-DEFINED · MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · A4 LANDSCAPE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)






DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (build manual step 1), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled wall end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

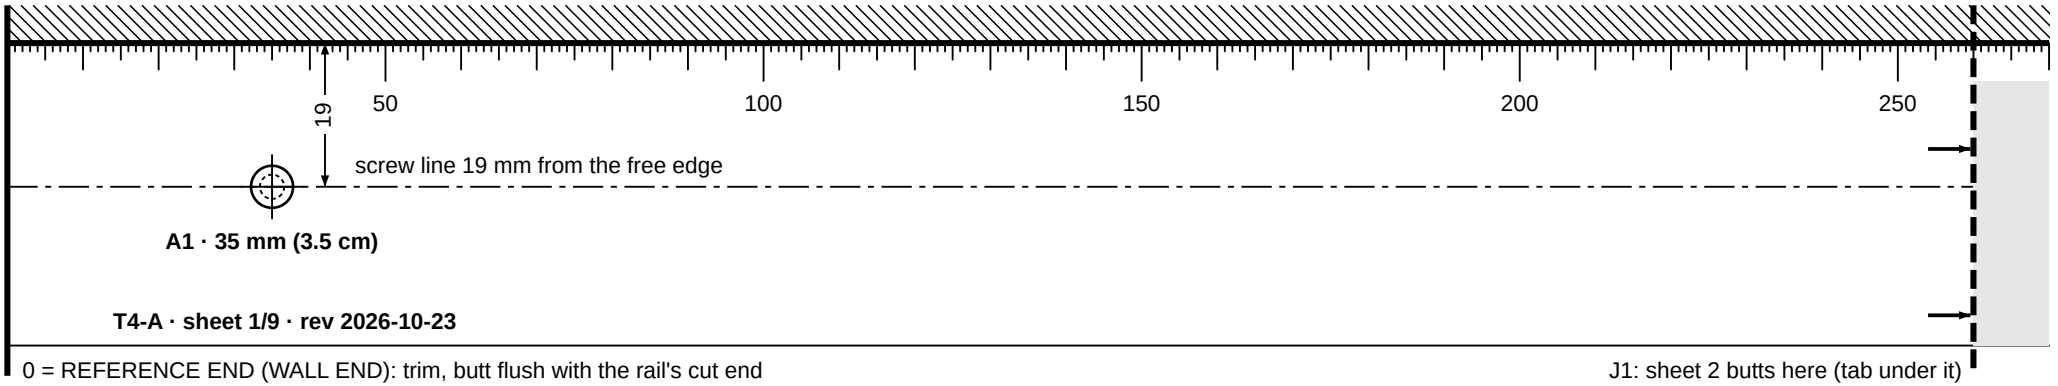

0 = REFERENCE END (WALL END): trim, butt flush with the rail's cut end

J1: sheet 2 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail A holes, cm from the wall end: A1 3.5, A2 28, A3 54, A4 80, A5 106, A6 132, A7 158, A8 184, A9 210.5.


Template T4-A · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-A Rail A (P06) station strip 2/9

SOURCE-DEFINED · MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · A4 LANDSCAPE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



50 mm CROSS-CHECK


DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (build manual step 1), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled wall end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

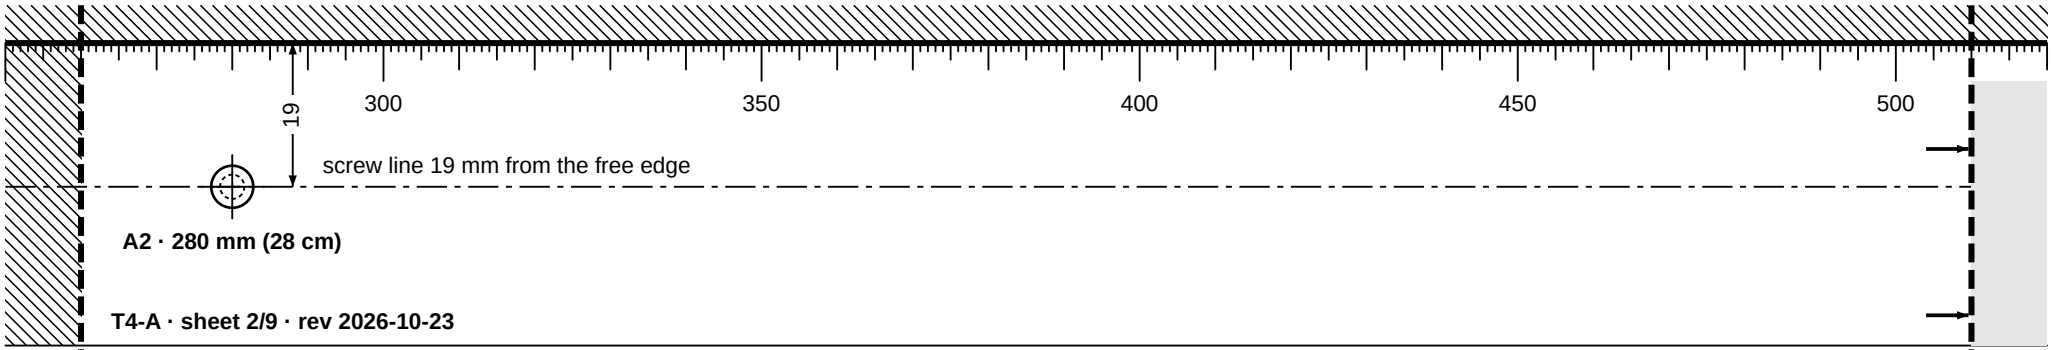

J1: TRIM HERE, lay this edge on sheet 1's J1 line

J2: sheet 3 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail A holes, cm from the wall end: A1 3.5, A2 28, A3 54, A4 80, A5 106, A6 132, A7 158, A8 184, A9 210.5.


Template T4-A · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-A Rail A (P06) station strip 3/9

SOURCE-DEFINED · MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · A4 LANDSCAPE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



50 mm CROSS-CHECK

DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.


Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (build manual step 1), not from the heel.

MEASURE THE DELIVERED RAIL

Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled wall end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

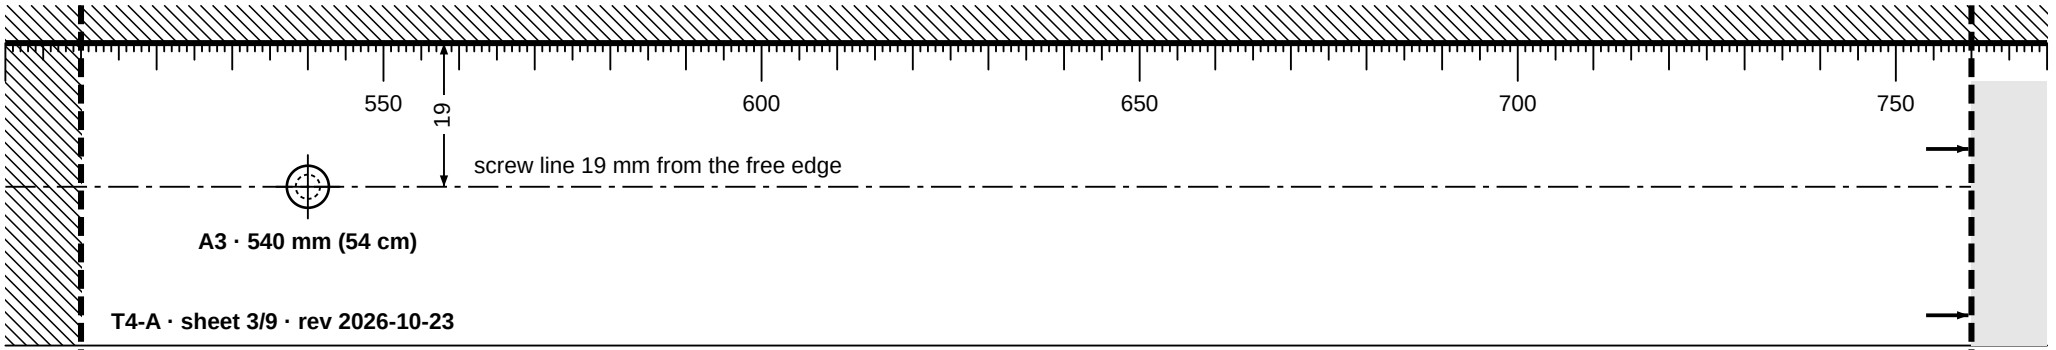

J2: TRIM HERE, lay this edge on sheet 2's J2 line

J3: sheet 4 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail A holes, cm from the wall end: A1 3.5, A2 28, A3 54, A4 80, A5 106, A6 132, A7 158, A8 184, A9 210.5.


Template T4-A · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-A Rail A (P06) station strip 4/9

SOURCE-DEFINED · MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · A4 LANDSCAPE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



50 mm CROSS-CHECK


DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (build manual step 1), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled wall end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

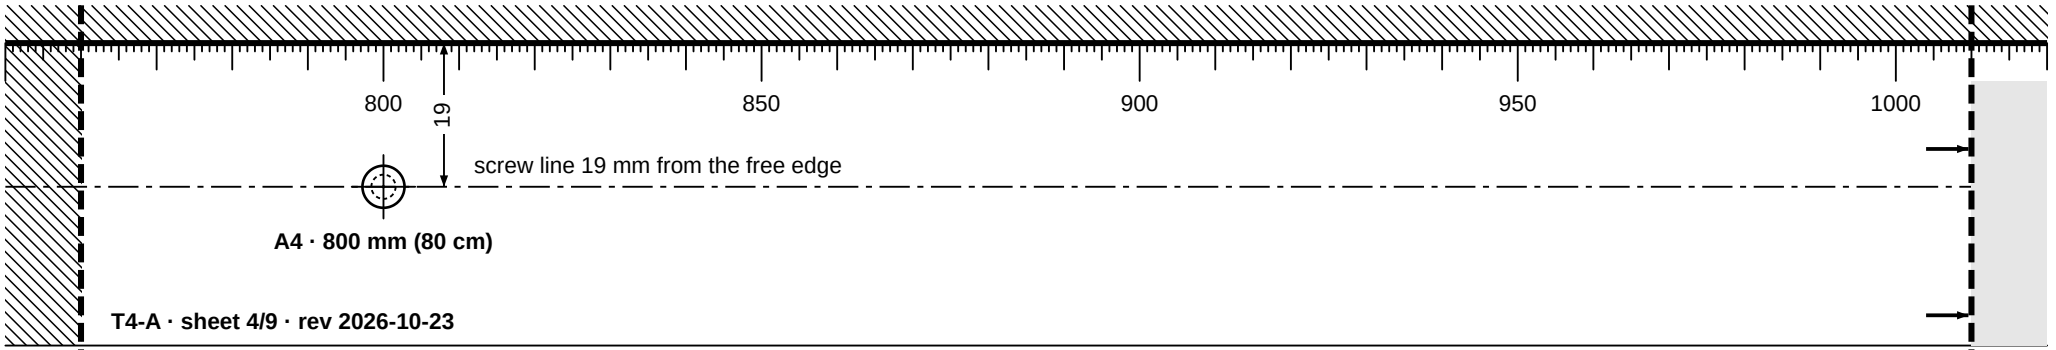

J3: TRIM HERE, lay this edge on sheet 3's J3 line

J4: sheet 5 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail A holes, cm from the wall end: A1 3.5, A2 28, A3 54, A4 80, A5 106, A6 132, A7 158, A8 184, A9 210.5.


Template T4-A · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)


T4-A Rail A (P06) station strip 5/9

SOURCE-DEFINED · MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · A4 LANDSCAPE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)






DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (build manual step 1), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled wall end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

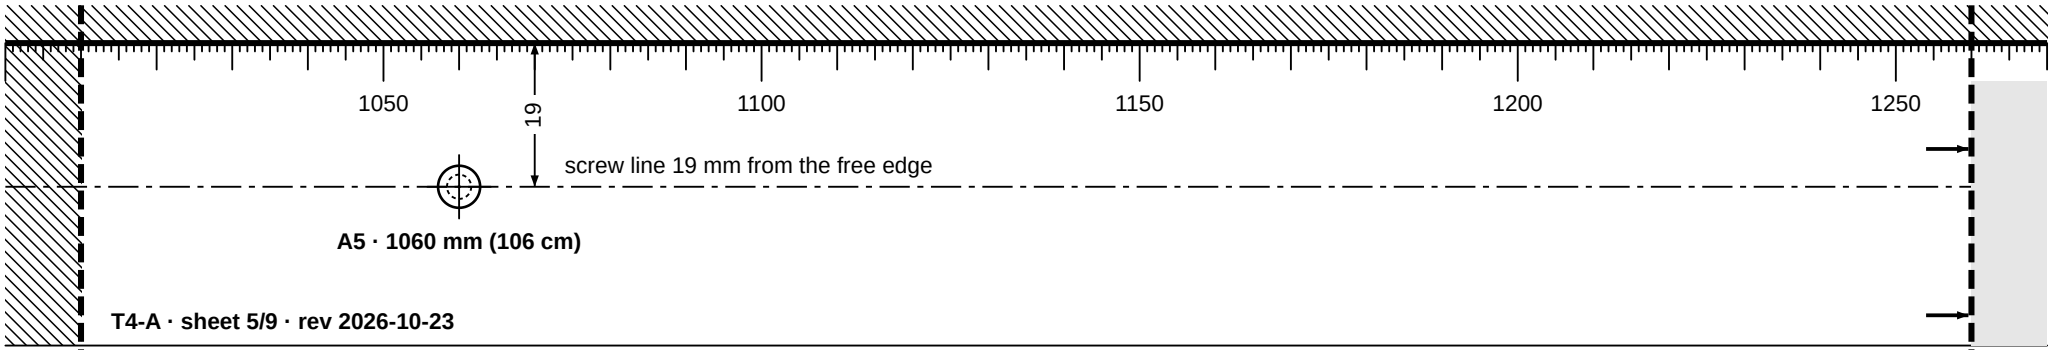

J4: TRIM HERE, lay this edge on sheet 4's J4 line

J5: sheet 6 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail A holes, cm from the wall end: A1 3.5, A2 28, A3 54, A4 80, A5 106, A6 132, A7 158, A8 184, A9 210.5.


Template T4-A · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-A Rail A (P06) station strip 6/9

SOURCE-DEFINED · MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · A4 LANDSCAPE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



50 mm CROSS-CHECK


DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (build manual step 1), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled wall end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

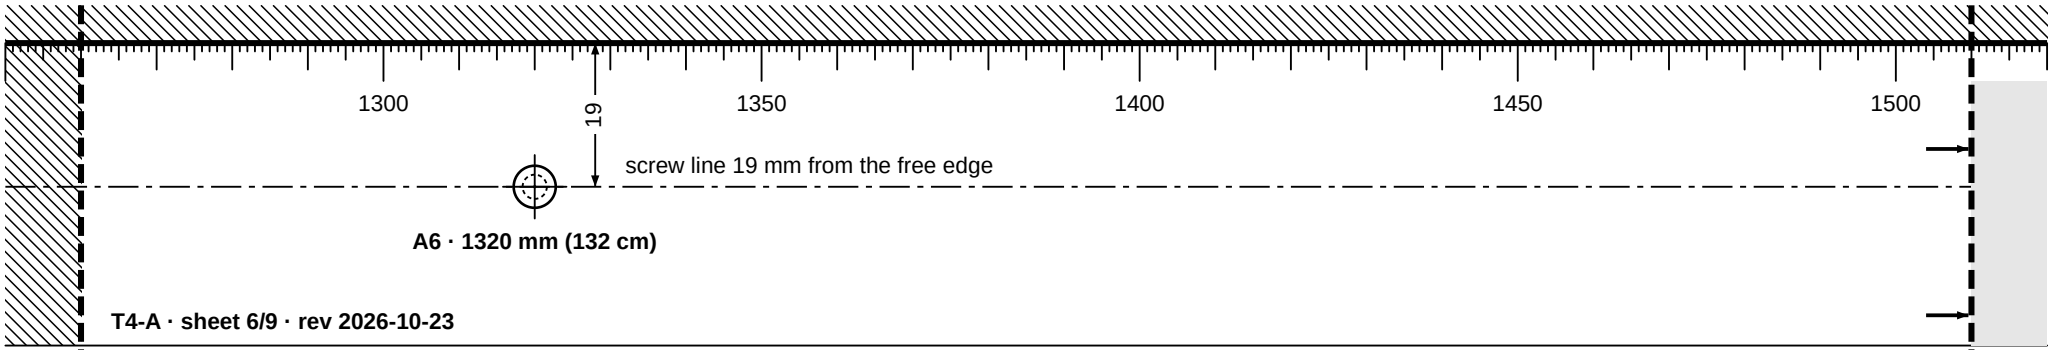

J5: TRIM HERE, lay this edge on sheet 5's J5 line

J6: sheet 7 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail A holes, cm from the wall end: A1 3.5, A2 28, A3 54, A4 80, A5 106, A6 132, A7 158, A8 184, A9 210.5.


Template T4-A · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-A Rail A (P06) station strip 7/9

SOURCE-DEFINED · MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · A4 LANDSCAPE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



50 mm CROSS-CHECK


DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (build manual step 1), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled wall end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

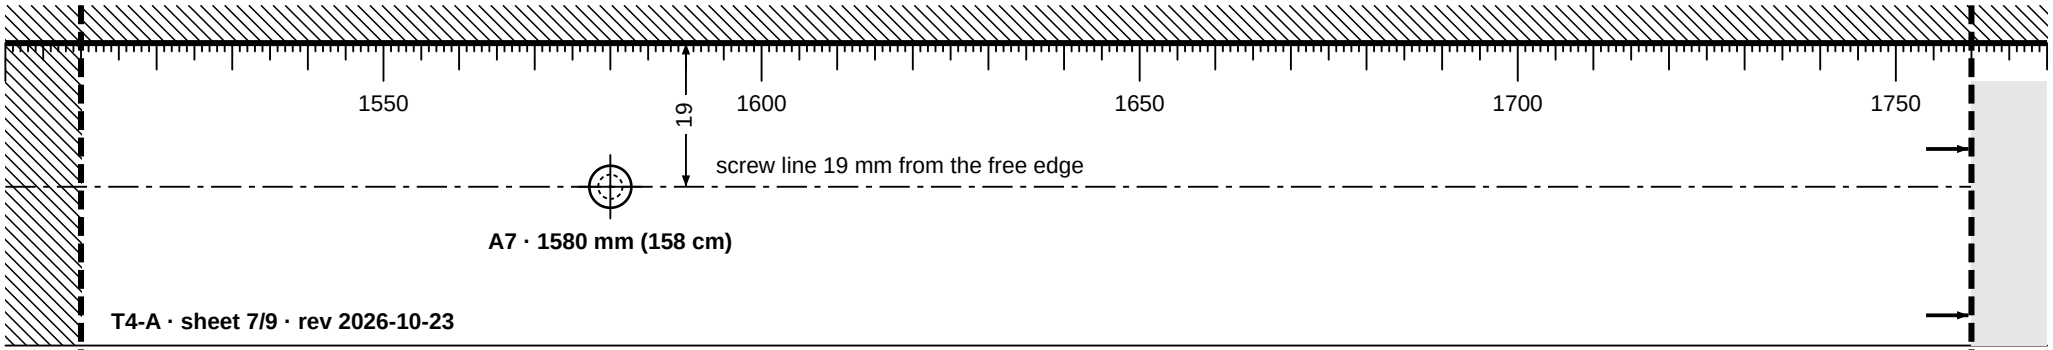

J6: TRIM HERE, lay this edge on sheet 6's J6 line

J7: sheet 8 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail A holes, cm from the wall end: A1 3.5, A2 28, A3 54, A4 80, A5 106, A6 132, A7 158, A8 184, A9 210.5.


Template T4-A · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-A Rail A (P06) station strip 8/9

SOURCE-DEFINED · MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · A4 LANDSCAPE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



50 mm CROSS-CHECK


DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (build manual step 1), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled wall end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

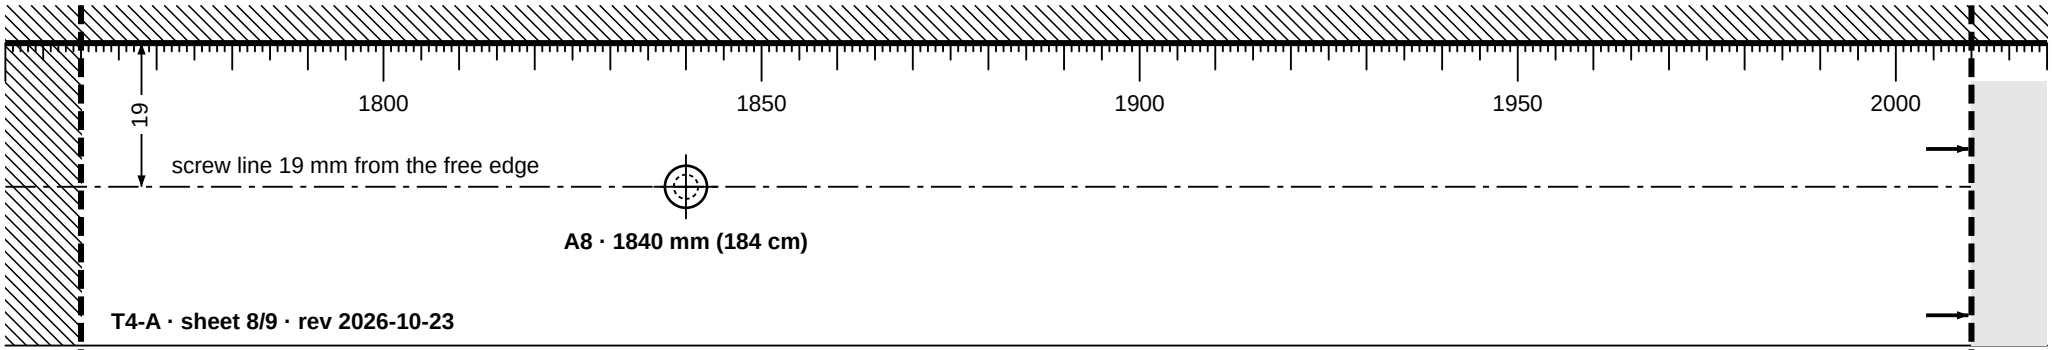

J7: TRIM HERE, lay this edge on sheet 7's J7 line

J8: sheet 9 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail A holes, cm from the wall end: A1 3.5, A2 28, A3 54, A4 80, A5 106, A6 132, A7 158, A8 184, A9 210.5.


Template T4-A · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-A Rail A (P06) station strip 9/9

SOURCE-DEFINED · MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · A4 LANDSCAPE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



50 mm CROSS-CHECK


DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (build manual step 1), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled wall end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

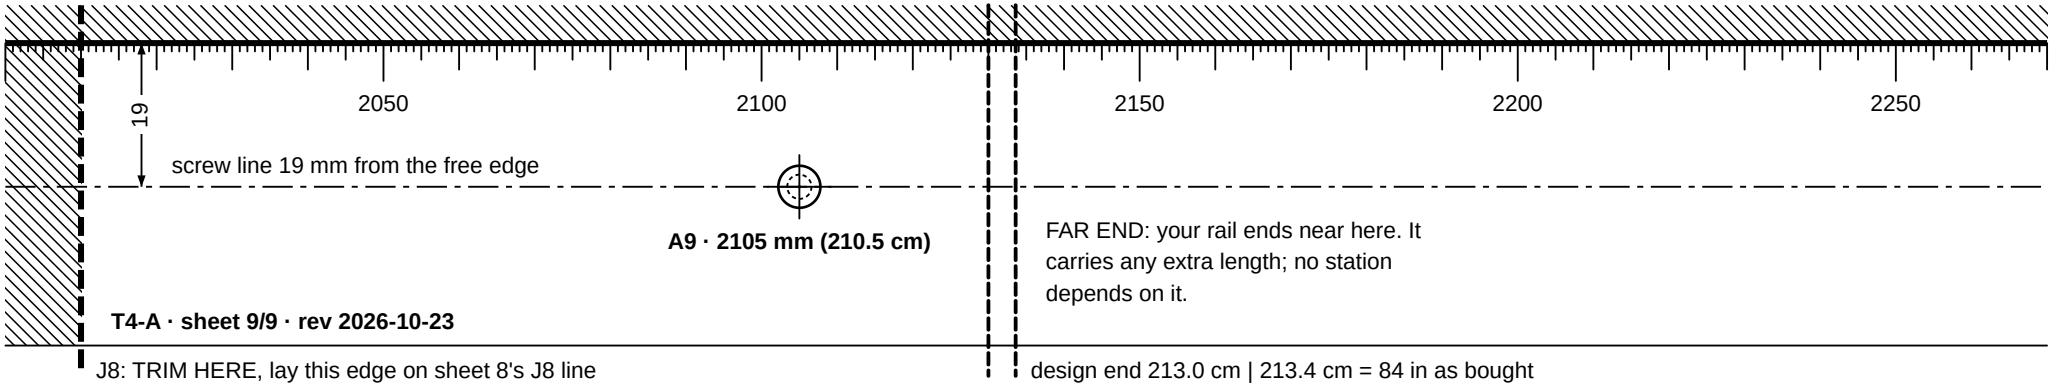

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail A holes, cm from the wall end: A1 3.5, A2 28, A3 54, A4 80, A5 106, A6 132, A7 158, A8 184, A9 210.5.


Template T4-B · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)


T4-B Rail B (P07) station strip 1/9

SOURCE-DEFINED · MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · A4 LANDSCAPE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)






DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (build manual step 1), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled corner end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

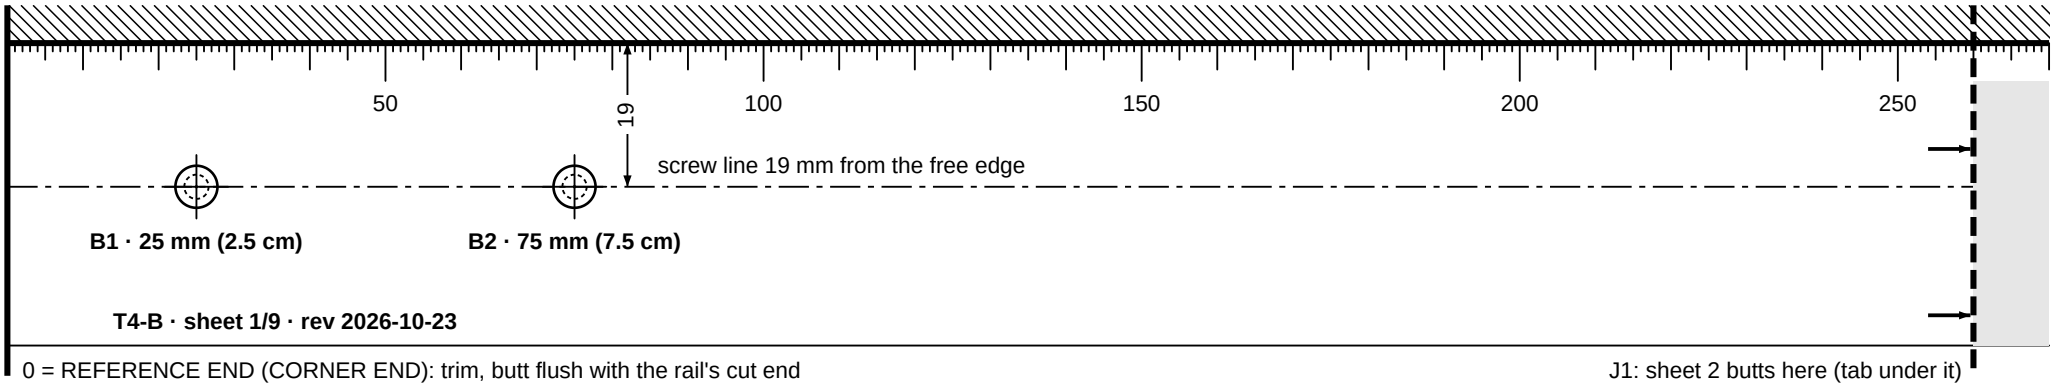

0 = REFERENCE END (CORNER END): trim, butt flush with the rail's cut end

J1: sheet 2 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail B holes, cm from the corner end: B1 2.5, B2 7.5, B3 28, B4 54, B5 80, B6 106, B7 132, B8 158, B9 184, B10 210.5.


Template T4-B · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-B Rail B (P07) station strip 2/9

SOURCE-DEFINED MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · A4 LANDSCAPE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



50 mm CROSS-CHECK


DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (build manual step 1), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled corner end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

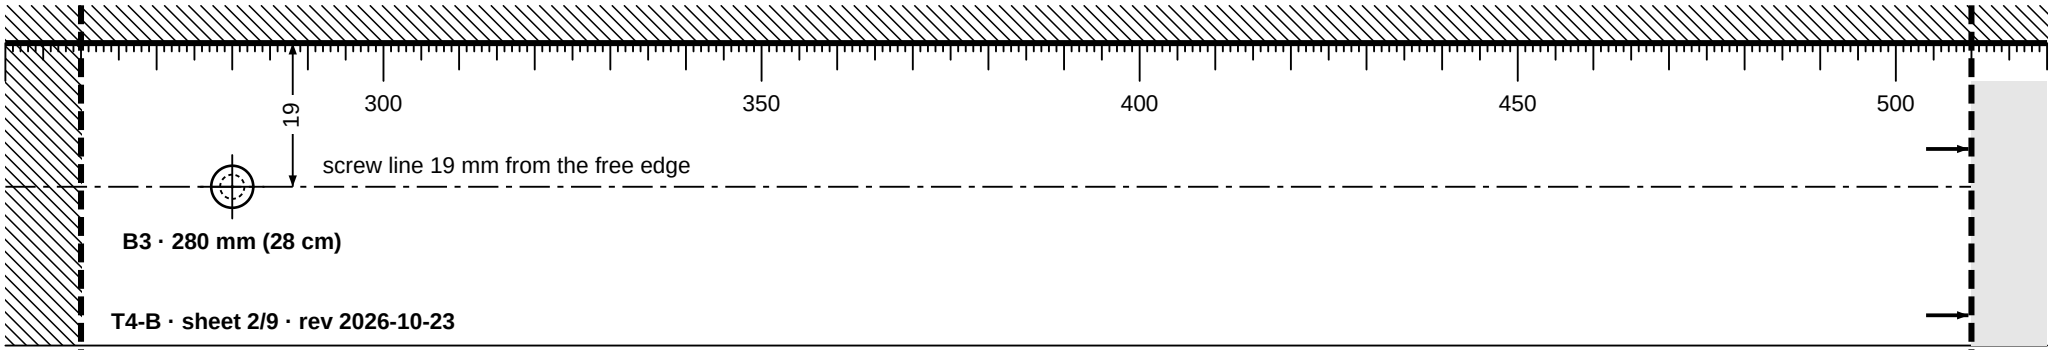

J1: TRIM HERE, lay this edge on sheet 1's J1 line

J2: sheet 3 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail B holes, cm from the corner end: B1 2.5, B2 7.5, B3 28, B4 54, B5 80, B6 106, B7 132, B8 158, B9 184, B10 210.5.


Template T4-B · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T4-B Rail B (P07) station strip 3/9

SOURCE-DEFINED MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · A4 LANDSCAPE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)



50 mm CROSS-CHECK


DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (build manual step 1), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled corner end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

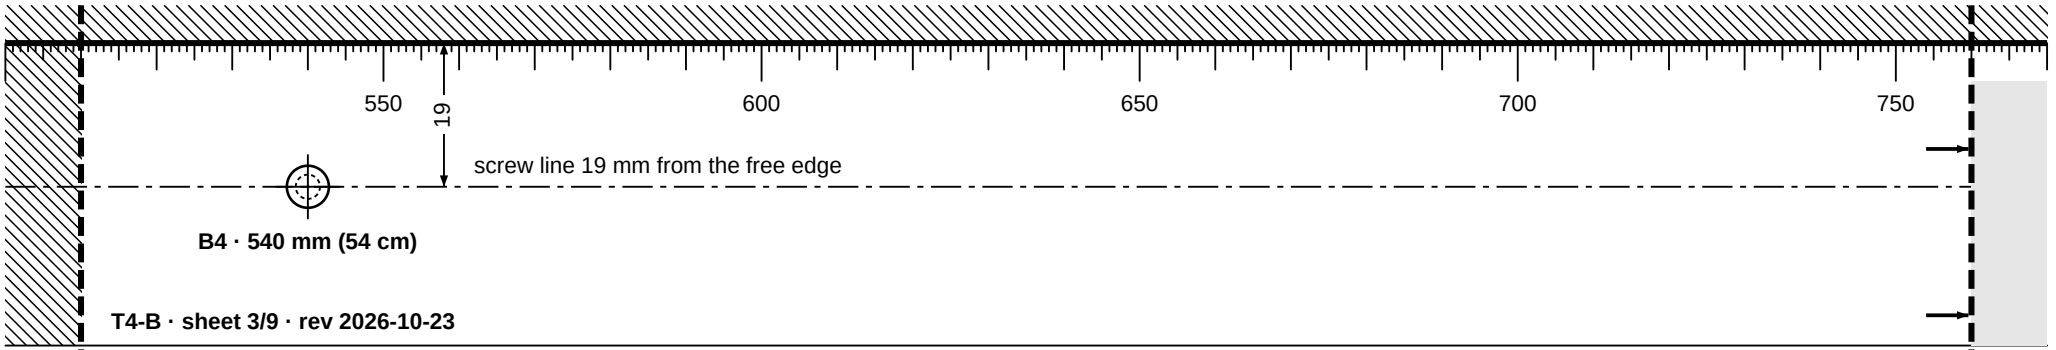

J2: TRIM HERE, lay this edge on sheet 2's J2 line

J3: sheet 4 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail B holes, cm from the corner end: B1 2.5, B2 7.5, B3 28, B4 54, B5 80, B6 106, B7 132, B8 158, B9 184, B10 210.5.


Template T4-B · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)


T4-B Rail B (P07) station strip 4/9

SOURCE-DEFINED · MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · A4 LANDSCAPE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)






DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (build manual step 1), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled corner end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

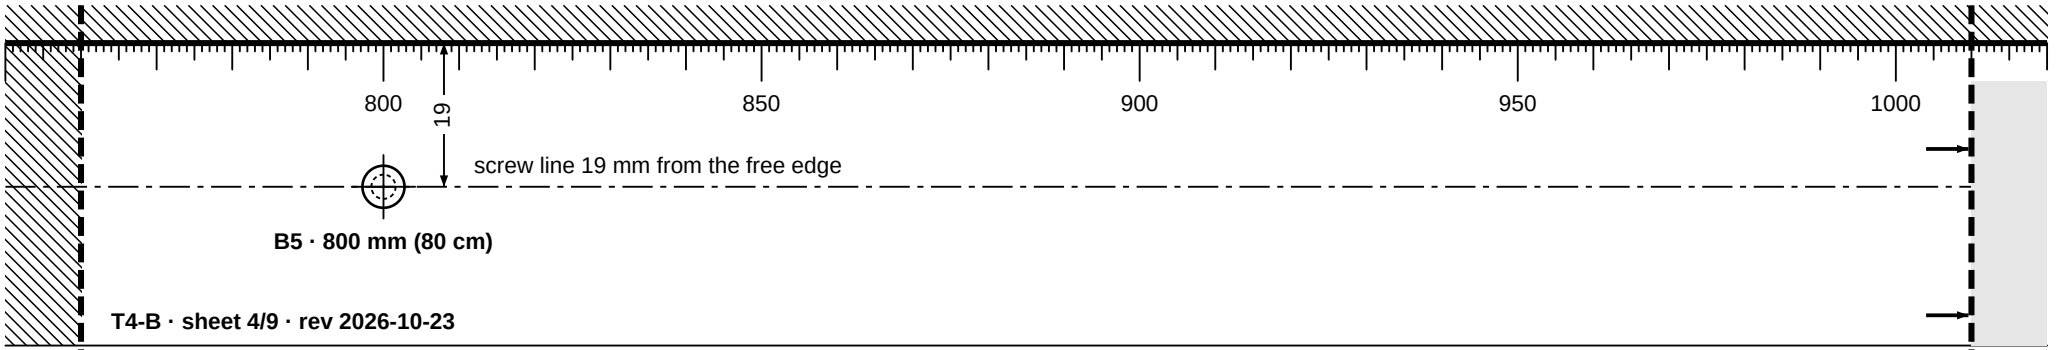

J3: TRIM HERE, lay this edge on sheet 3's J3 line

J4: sheet 5 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail B holes, cm from the corner end: B1 2.5, B2 7.5, B3 28, B4 54, B5 80, B6 106, B7 132, B8 158, B9 184, B10 210.5.


Template T4-B · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)


T4-B Rail B (P07) station strip 5/9

SOURCE-DEFINED · MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · A4 LANDSCAPE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)






DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (build manual step 1), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled corner end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

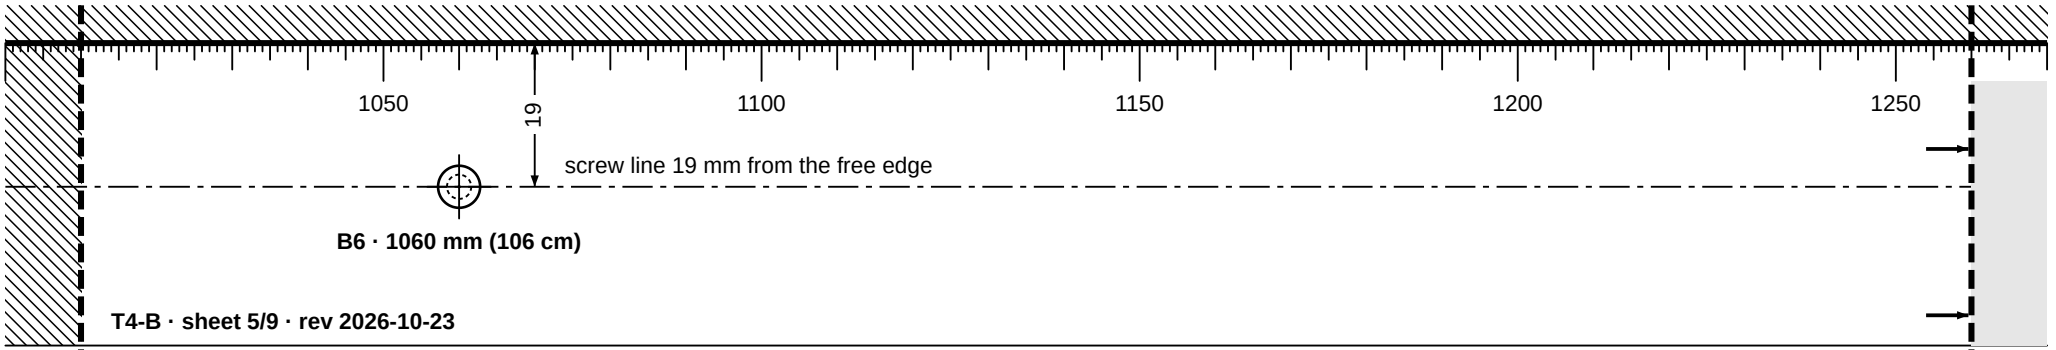

J4: TRIM HERE, lay this edge on sheet 4's J4 line

J5: sheet 6 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail B holes, cm from the corner end: B1 2.5, B2 7.5, B3 28, B4 54, B5 80, B6 106, B7 132, B8 158, B9 184, B10 210.5.


Template T4-B · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)


T4-B Rail B (P07) station strip 6/9

SOURCE-DEFINED · MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · A4 LANDSCAPE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)






DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (build manual step 1), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled corner end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

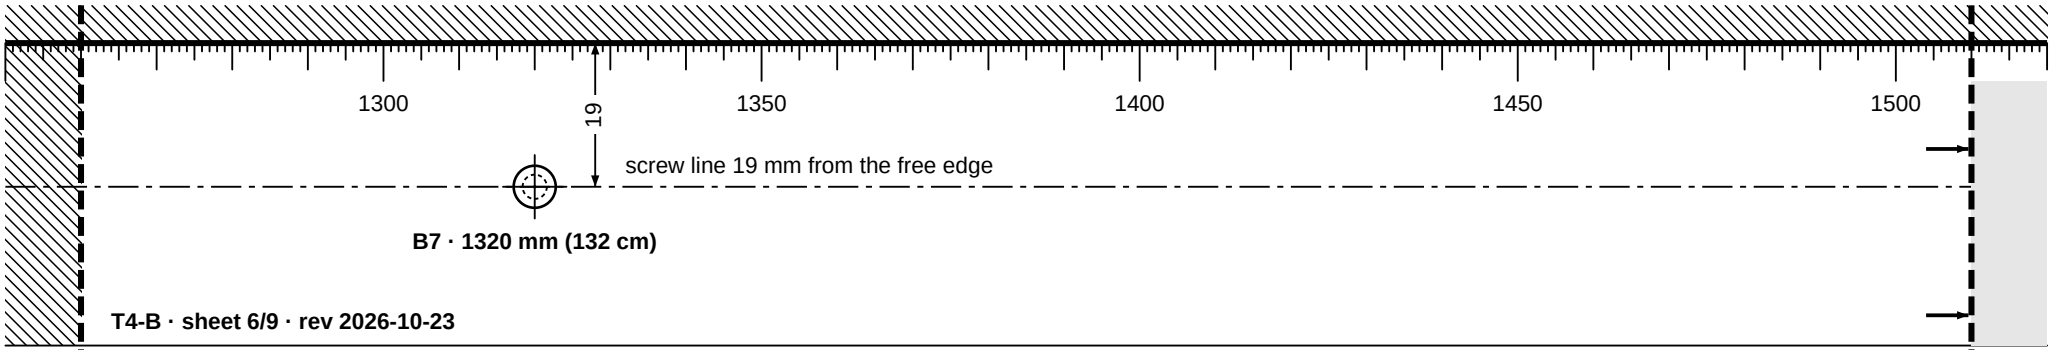

J5: TRIM HERE, lay this edge on sheet 5's J5 line

J6: sheet 7 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail B holes, cm from the corner end: B1 2.5, B2 7.5, B3 28, B4 54, B5 80, B6 106, B7 132, B8 158, B9 184, B10 210.5.


Template T4-B · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)


T4-B Rail B (P07) station strip 7/9

SOURCE-DEFINED · MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · A4 LANDSCAPE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)






DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (build manual step 1), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled corner end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

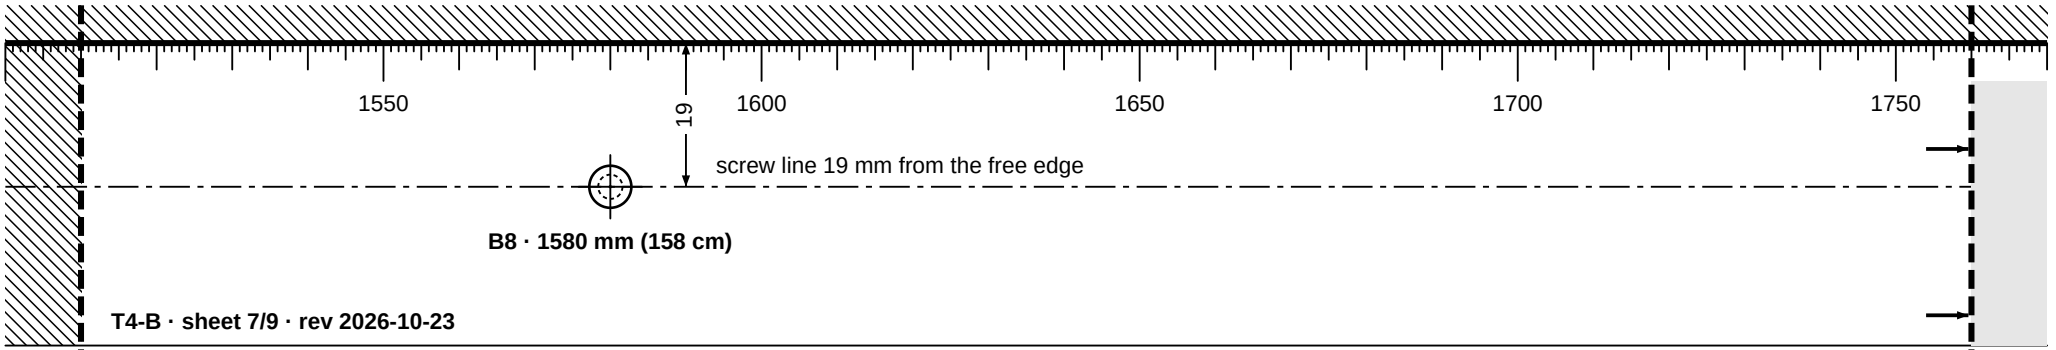

J6: TRIM HERE, lay this edge on sheet 6's J6 line

J7: sheet 8 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail B holes, cm from the corner end: B1 2.5, B2 7.5, B3 28, B4 54, B5 80, B6 106, B7 132, B8 158, B9 184, B10 210.5.


Template T4-B · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)


T4-B Rail B (P07) station strip 8/9

SOURCE-DEFINED · MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · A4 LANDSCAPE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)






DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (build manual step 1), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled corner end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

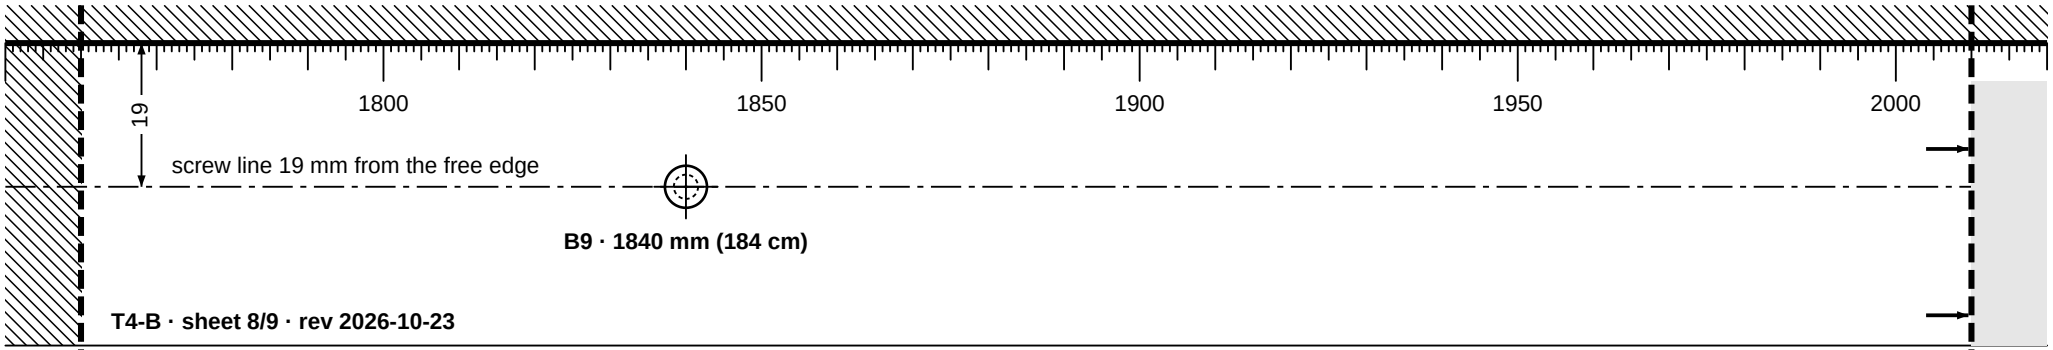

J7: TRIM HERE, lay this edge on sheet 7's J7 line

J8: sheet 9 butts here (tab under it)

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail B holes, cm from the corner end: B1 2.5, B2 7.5, B3 28, B4 54, B5 80, B6 106, B7 132, B8 158, B9 184, B10 210.5.


Template T4-B · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)


T4-B Rail B (P07) station strip 9/9

SOURCE-DEFINED · MEASURE ON HARDWARE

PRINT AT 100% / ACTUAL SIZE · A4 LANDSCAPE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)






DRILL ⌀5.56 (7/32 in) through the steel; 1/8 in pilot first (dashed). Centre-punch through the paper, low speed, cutting oil.

Ticks and numbers: position only, never drilled.

Preferred method: the printed rail drill jig on the 19 line, with a tape from the reference end. This strip is the check. Tape it to either face of the flat leg. 19 is from the FREE edge (build manual step 1), not from the heel.

MEASURE THE DELIVERED RAIL
Design 213.0 cm (2130 mm); bought as 84 in = 213.4 cm (2133.6 mm). Every station runs from the labelled corner end; the far end carries any extra. Tape-check each station from that end.

FREE EDGE of the flat leg: trim on the heavy line, set it flush with the leg's free edge

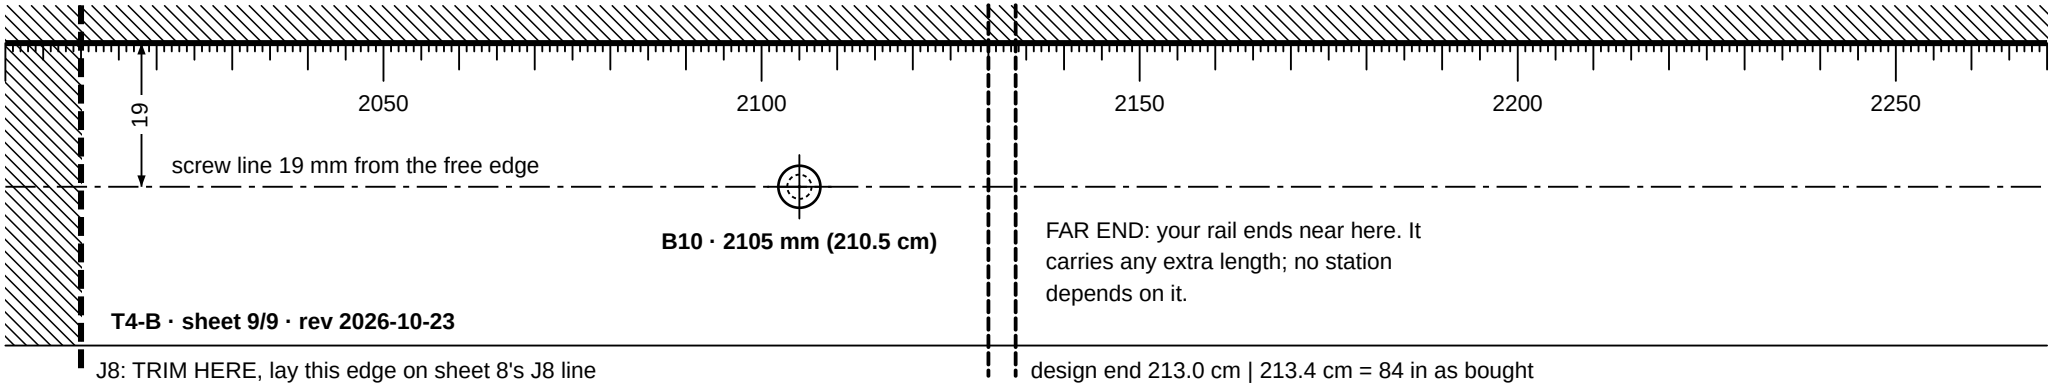

Joins: trim each later sheet on its start J line and lay it on the previous sheet's J line so ticks, numbers and the screw line run on; tape. Rail B holes, cm from the corner end: B1 2.5, B2 7.5, B3 28, B4 54, B5 80, B6 106, B7 132, B8 158, B9 184, B10 210.5.


Template T5 · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)


T5 Corner fitting (P08) placement · reference

SOURCE-DEFINED **VERIFIED**

PRINT AT 100% / ACTUAL SIZE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.


CALIBRATION 0-100 mm: must measure 100.0 (+/- 0.5)






T5 · P08 on P06 / P07 · REFERENCE 1:2, NOT FOR DRILLING · rev 2026-10-23


VIEW 1 · rail A vertical leg, front face (from the knee side), 1:2

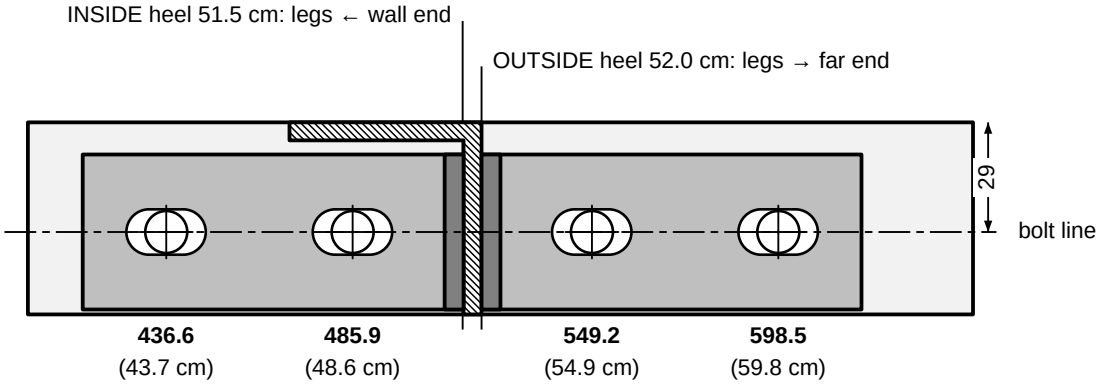

VIEW 2 · rail B vertical leg, outer face, corner end, 1:2

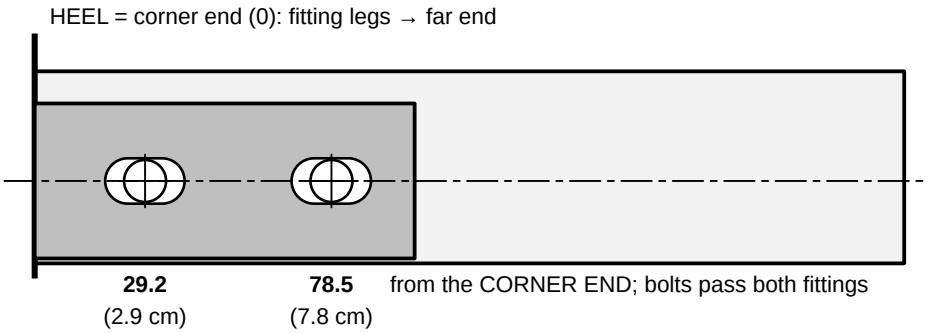

DETAIL 1:1 · one leg, slots 21 × 12

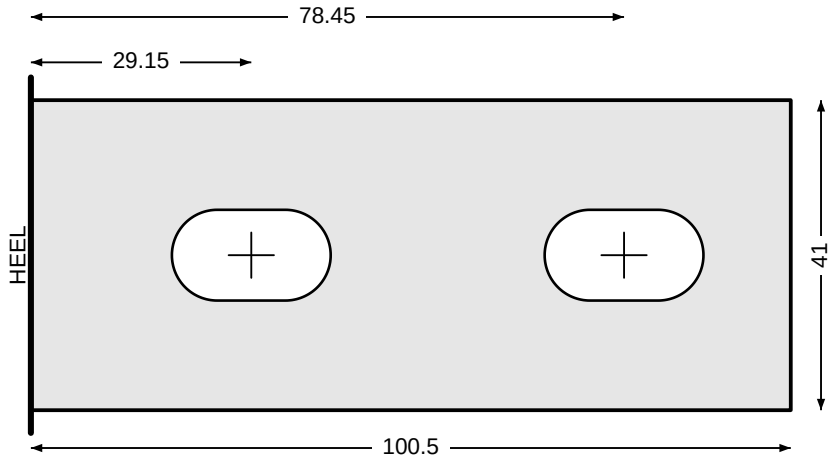

RAIL HOLES · VERIFIED 23 Oct 2026

Rail A, cm from the wall end: 54.9 / 59.8 (outside fitting, heel 52.0), 48.6 / 43.7 (inside, heel 51.5). Rail B, cm from the corner end: 2.9 / 7.8. All on the bolt line, 29 mm below the heel. Drill THROUGH THE FITTING: clamp on the heel mark, printed slot plug in each slot, pilot 1/8 in, open to 7/16 in (11.1 mm). Inside gusset DOWN, outside toward the knee space.


Template T6 · rev 2026-10-23
units: mm; tape stations also in cm
numbers: manual/facts.json + data.json, source_commit: HEAD of https://github.com/scotthowson/desk-setup on 23 Oct 2026 (supersedes a2e99ea with measured facts)

T6 Clamp pad plate (P11) placement · reference

VERIFIED

ASSUMPTION / FIELD CHECK

PRINT AT 100% / ACTUAL SIZE
DISABLE FIT TO PAGE / shrink to fit / scale to fit. Measure the ruler before use: 0 to 100 must read 100.0 mm and the cross-check bar 50.0 mm (±0.5). If either is off, do not use the sheet: reprint.

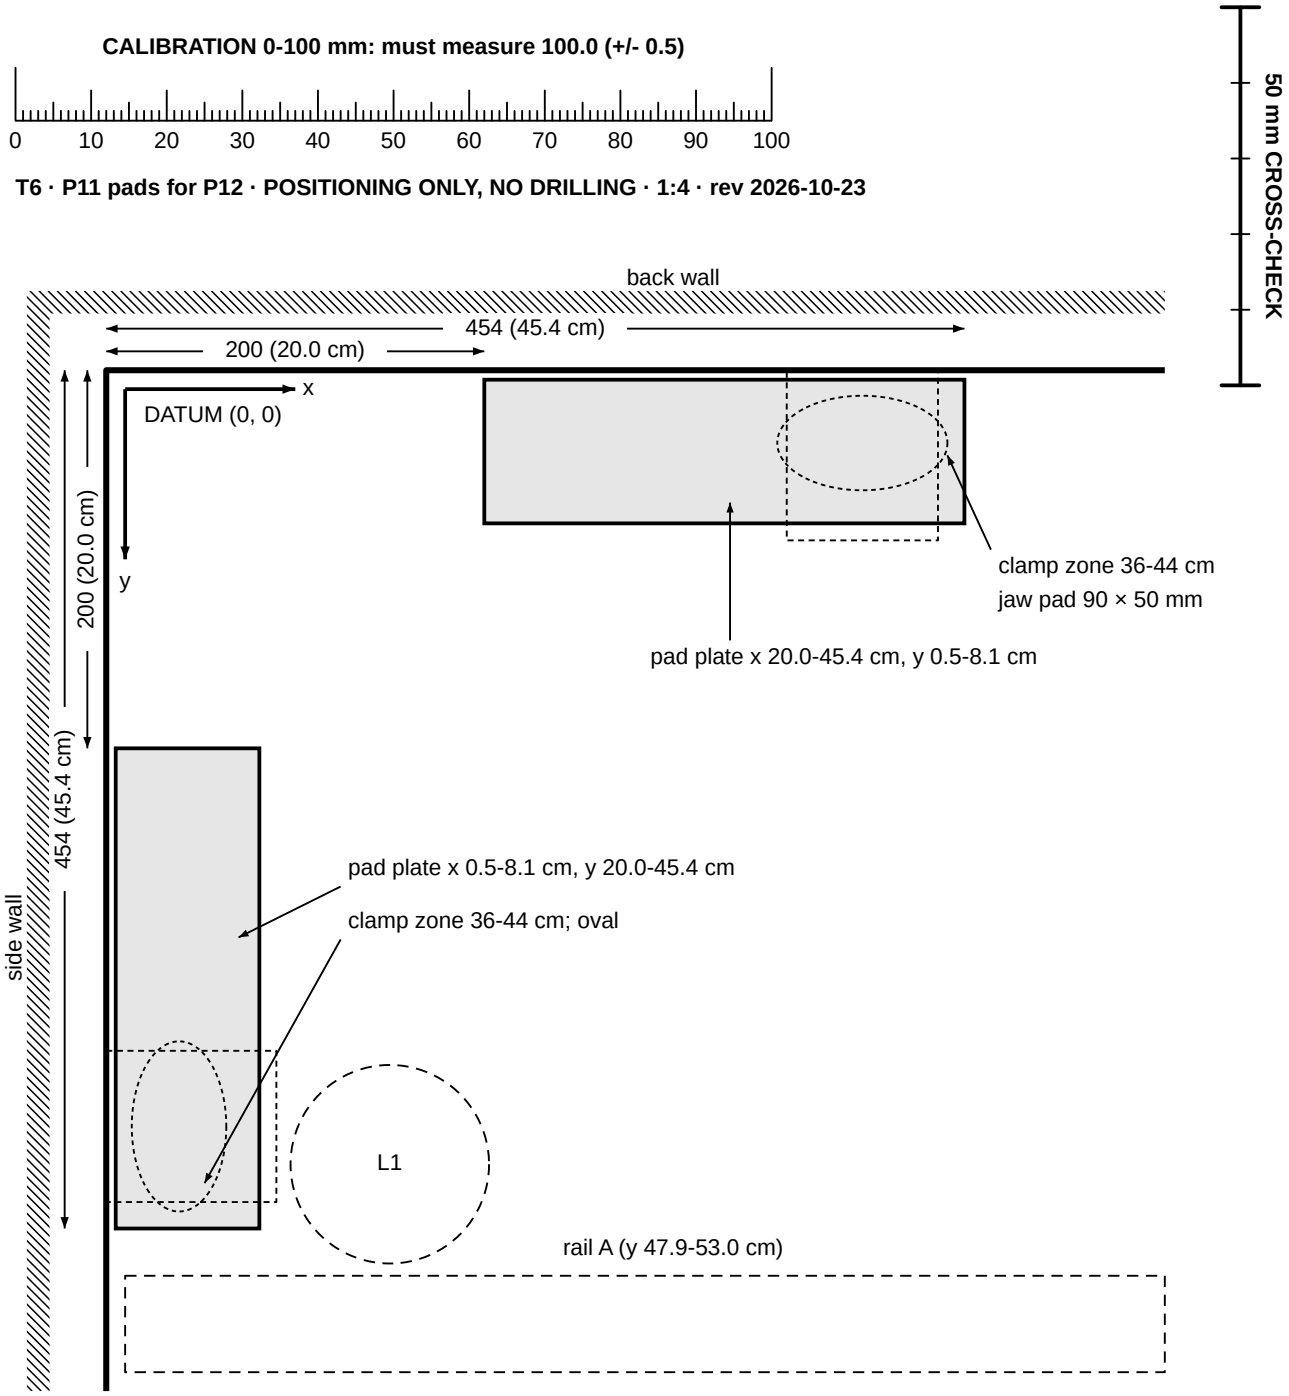

Plan from above, datum top A's back-left corner (x along the back wall, y along the side wall). The plates lie LOOSE on the underside under the VIVO lower jaws (build manual step 8): with the top face down, draw the outlines measuring from the same two named edges. Jaw pad: oval 90 × 50 mm, 13.5-63.5 mm in from the edge (measured), drawn centred on each clamp.

VERIFIED: pad plate outlines and the 90 × 50 lower-jaw pad, measured 21-23 Oct 2026 (facts.json vivo). ASSUMPTION / FIELD CHECK: the oval drawn centred on the clamp; the clamp back sets the final position (crossbar fitted as the spacing guide).