HOW TO USE THE 3D PRINTED DRAWER PULL DRILLING JIG

Bambu Stand 3D Printer Storage Workbench • 5" (128mm) Center-to-Center Bar Pulls • 3/4" Walnut Drawer Faces

100% SUPPORT-FREE

1. SIDE CROSS-SECTION (HOW JIG HOOKS OVER WOOD)

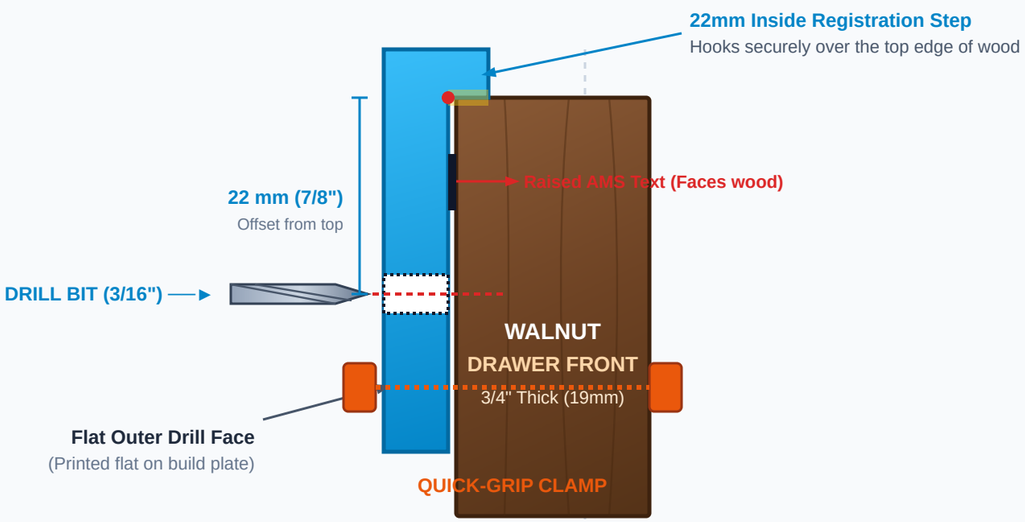

2. FRONT VIEW (PENCIL CENTERLINE & HOLE SPACING)

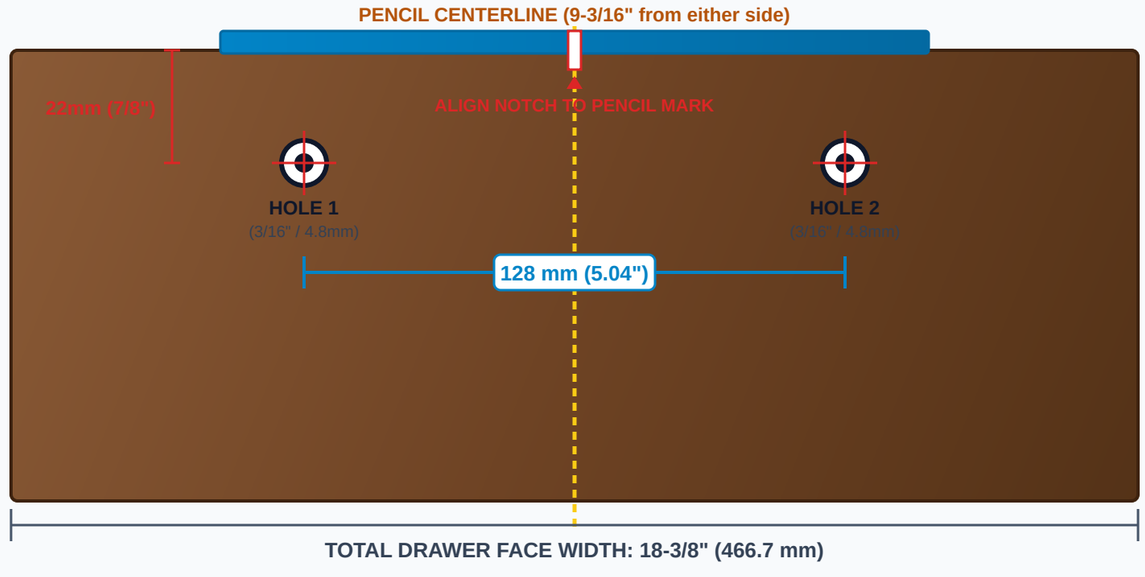

3. FOUR-STEP DRILLING INSTRUCTIONS & WOODWORKING PRO TIPS

1 Mark Centerline

- Drawer width is **18-3/8" (466.7mm)**.
- Measure **9-3/16" (233.4mm)** from either side edge.
- Make a crisp, sharp pencil tick mark on the **top edge** of the drawer.

2 Hook Over Top Edge

- Take the printed blue jig.
- Place the **22mm inside step** over the top edge of the walnut face.
- The flat drilling plate hangs down the front face of the drawer.
- **Note:** The black text faces the wood.

3 Align Center Notch

- Slide the jig left or right until the **center alignment notch** splits your pencil mark dead-center.
- Firmly secure the jig using a **Quick-Grip clamp** so it cannot shift while drilling.

4 Drill Guide Holes

- Chuck a **3/16" (4.8mm)** wood drill bit.
- Drill through both guide holes.
- **Anti-Blowout Tip:** Clamp a scrap wood block behind the drawer face to prevent veneer blowout on exit.
- Fasten your 5" pulls with #8 screws.