
DRAWER INSTALLATION JIGS: PART IDENTIFICATION & FEATURE GUIDE

Bambu Stand 3D Printer Storage Workbench • Match each printed piece and discover what every cavity & notch does

1 JIG 1: SLIDE SETBACK CRADLE (1 Piece)


THE "WEIRD SHAPE" BLOCK

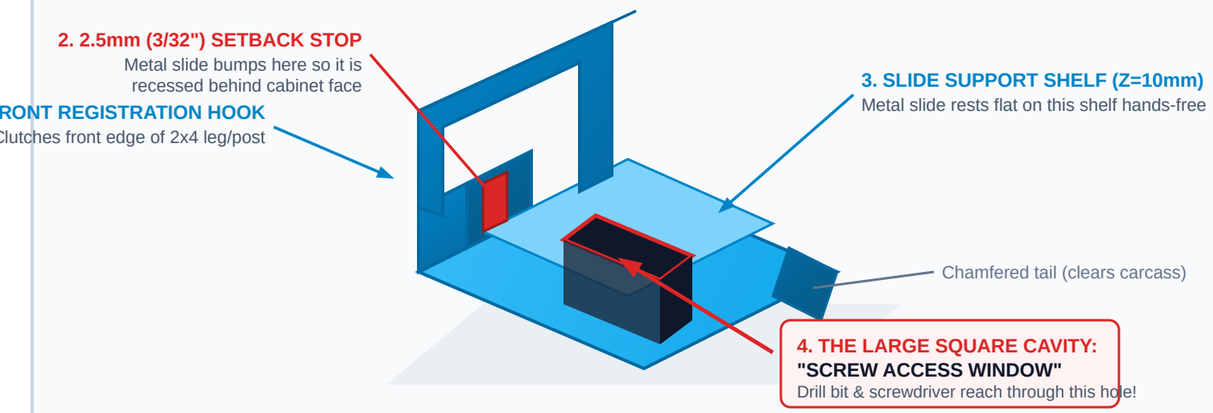

PURPOSE: Holds the heavy 18" metal carcass slides dead-level against the inside 2x4 posts, automatically sets the 2.5mm setback, and lets you screw into the wood through the big center window.

2 JIG 2: DRAWER BOX MOUNTING BLOCKS (Pair)


THE "TWO L-SHAPED JIGS"

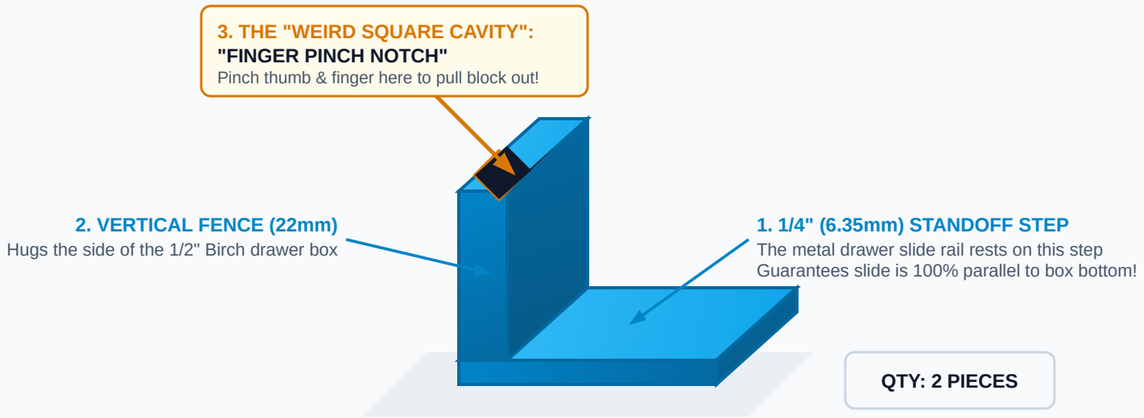

PURPOSE: Used on your workbench under the drawer box (one at the front, one at the rear). Lifts the slide rail 1/4" off the bench so screws never rub, then you pinch the notch to pull them out.


JIG 3: 1/8" REVEAL SHIMS & BAMBU PRINT BED MATCHING MAP

3 JIG 3: 1/8" REVEAL SHIMS (Set of 4)

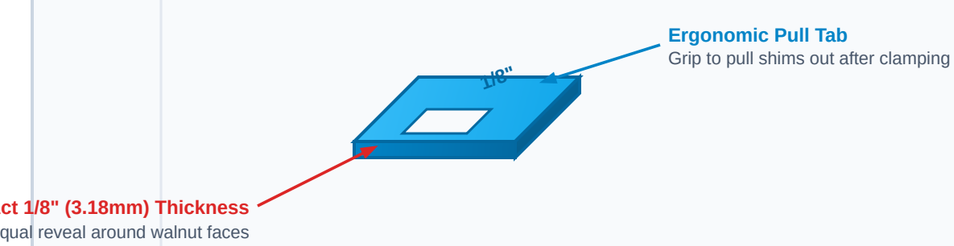

How to use: Place one shim on each of the 4 sides of the drawer front while clamping from inside.

PRINT BED MAP (Matching What You Sliced on your Bambu)

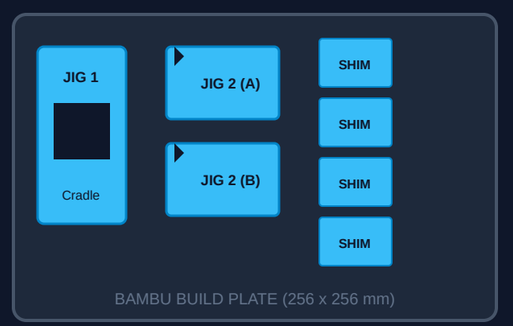


- **JIG 1: Setback Cradle**
  1 pc with big center window
- **JIG 2: Box Mount Spacers**
  2 identical L-shaped pieces with 45° diamond pinch notch
- **JIG 3: Reveal Shims**
  4 flat U-shims labeled "1/8""

HOW TO USE THE 3-IN-1 DRAWER INSTALLATION JIGS


Bambu Stand 3D Printer Storage Workbench • 18" Full-Extension Slides • 1/2" Birch Boxes • 3/4" Walnut Faces

COMPLETE 3-JIG SYSTEM

JIG 1: SLIDE SETBACK CRADLE (CABINET CARCASS MOUNTING)

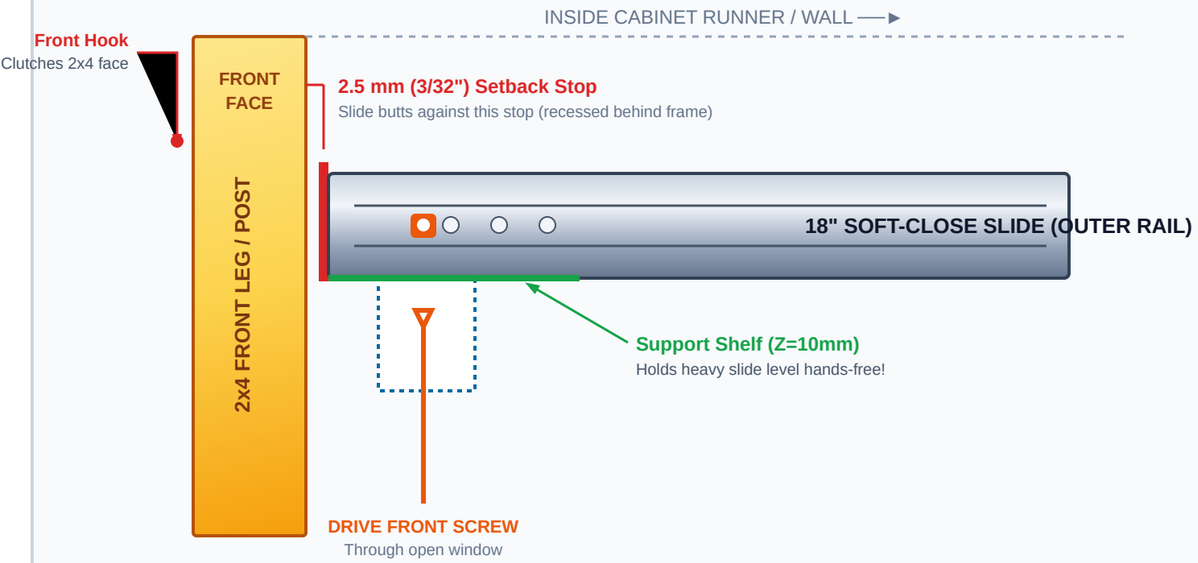


JIG 2: DRAWER BOX MOUNTING BLOCKS (BENCH ASSEMBLY)

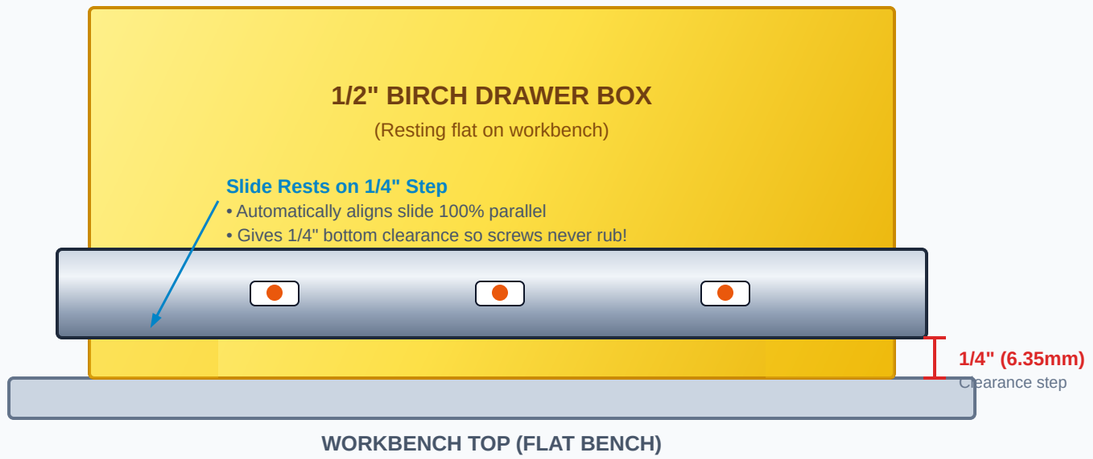

USE BOTH BLOCKS: One at front, one at rear of drawer box

JIG 3: 1/8" REVEAL SHIMS (DRAWER FRONT INSTALLATION)

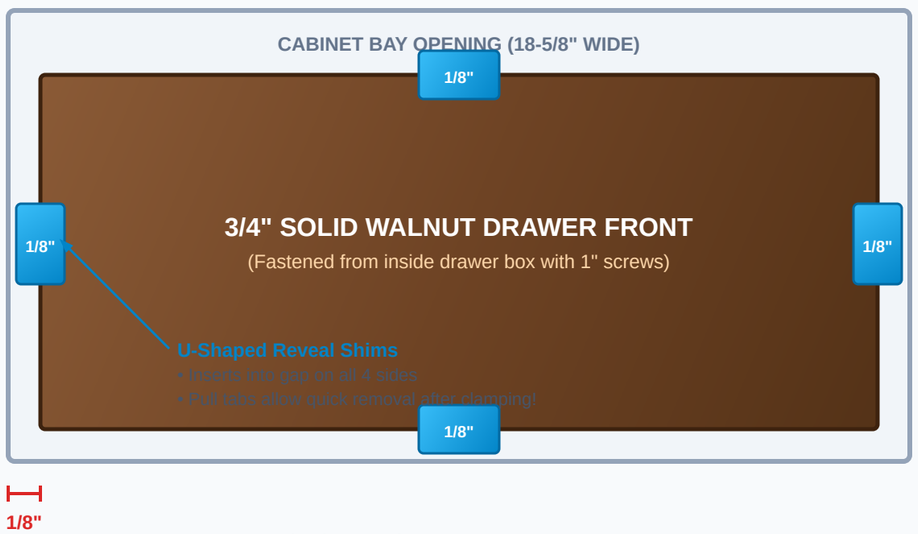

PERFECT 1/8" (3.18mm) GAP AROUND ENTIRE PERIMETER

COMPLETE 4-STEP DRAWER INSTALLATION WORKFLOW

1. **Install Cabinet Carcass Slides (Jig 1)**
   Hook the **Setback Cradle** over front 2x4 leg. Rest 18" outer slide on shelf against the 2.5mm stop. Drive front screw through open window, level slide to the rear, and drive rear mounting screws.
2. **Mount Slide Rails to Drawer Boxes (Jig 2)**
   Set 1/2" Birch drawer box on the bench. Place the pair of **Mounting Blocks** under the slide rail. Drive screws into the side of the box. Automatically sets exact 1/4" bottom clearance so slide hardware never rubs.
3. **Click Drawer Box into Cabinet & Test Glide**
   Align drawer box rails into cabinet slide tracks and push firmly until the soft-close mechanism clicks. Test the full 18" extension to verify buttery-smooth, parallel movement across all tiers.
4. **Mount 3/4" Walnut Faces with 1/8" Reveals (Jig 3)**
   Insert four **1/8" Reveal Shims** into perimeter gaps. Clamp Walnut face to drawer box with Quick-Grip clamps. Drive 1" wood screws from **inside the drawer box** into the back of Walnut face. Pull out shims!

PRO TIP: Pre-drill drawer face screw holes from inside the box with a 1/8" bit and depth tape flag (set to 1" total depth) to ensure screws never poke through Walnut!