

CPE 323 Intro to Embedded Computer Systems Serial Communication (UART)

Aleksandar Milenkovic milenka@uah.edu





Admin

- -> Qu'12.05 -> Semal comm.

UART





MSP430F5529 Block Diagram

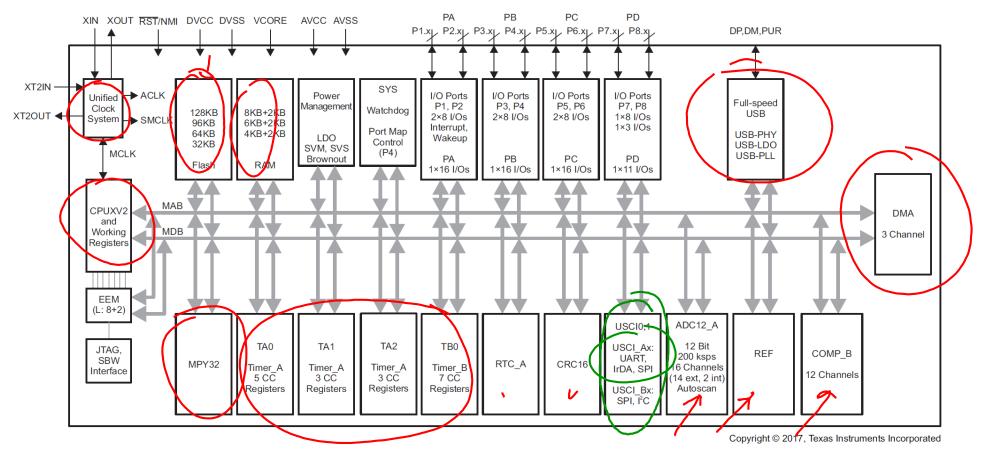


Figure 1-1. Functional Block Diagram – MSP430F5529IPN, MSP430F5527IPN, MSP430F5525IPN, MSP430F5521IPN





Communication


- Part of big 4
 - sense
 - process (compute)
 - store (memory)
 - communicate (UI, networks, ...)
- Communication in embedded systems
 - Between integrated circuits on PCB (e.g., μ C \leftrightarrow sensors)
 - Between development platform and a workstation
 - Between embedded systems






Types of Communication


• Wired vs. wireless

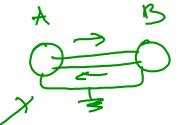



Serial vs. parallel

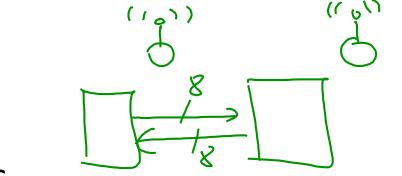

- Synchronous vs. asynchronous
- Unidirectional (simplex) vs.
 bidirectional (half-duplex and full-duplex)

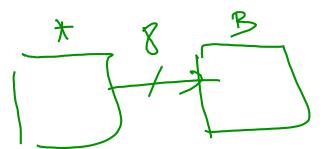

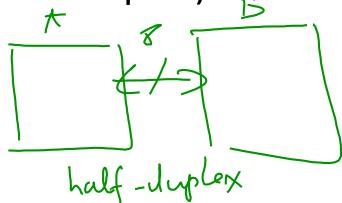

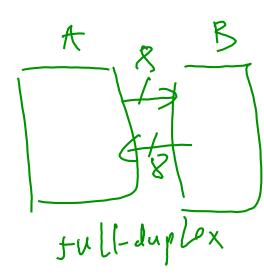





Serial Communication in MSP430

Communication protocols

```
- UART (Universal Asynchronous Receiver/Transmitter)

- SPI (Serial Parallel Interface) - Synchronous, bidirectional

- I<sup>2</sup>C (Inter Integrated Circuit) - Synchronous, bidirectional

- Infrared
```

Peripheral devices

```
- USCI - Universal Serial Communication Interface
```

—(USI) Universal Serial Interface

— (USART) — Universal Synchronous/Asynchronous Receiver/Transmitter





UART


TxD-transmit duta RxD-receive duty


asynchronous communication

Character-oriented

7 TX BUF

1 PX BUF

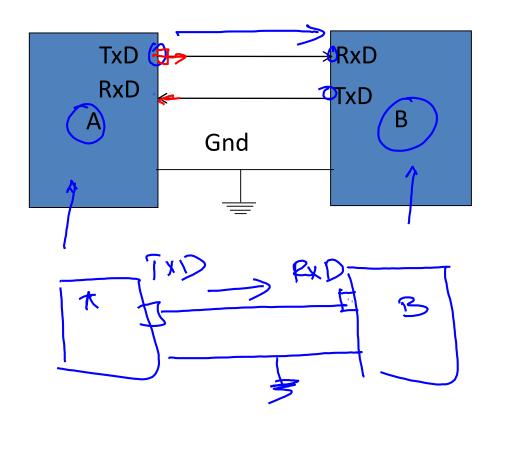


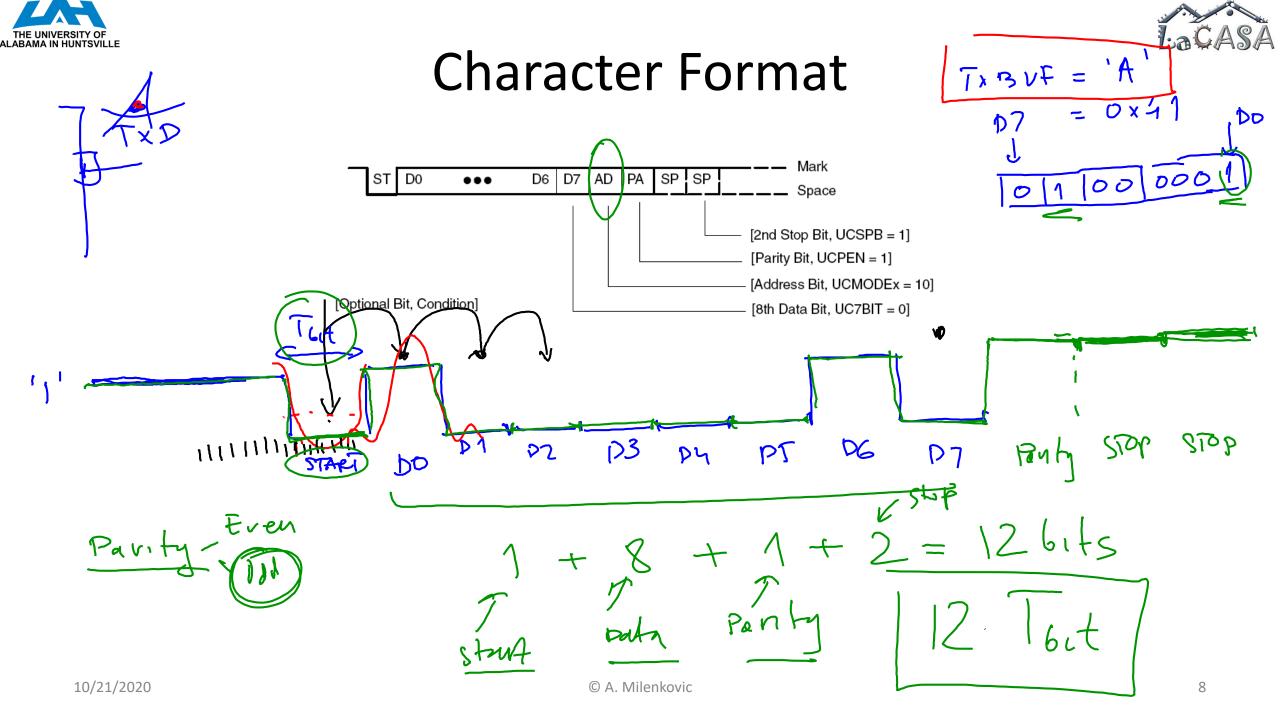





ALABAMA IN Figure 19–1. USCI_Ax Block Diagram: UART Mode (UCSYNC = 0)

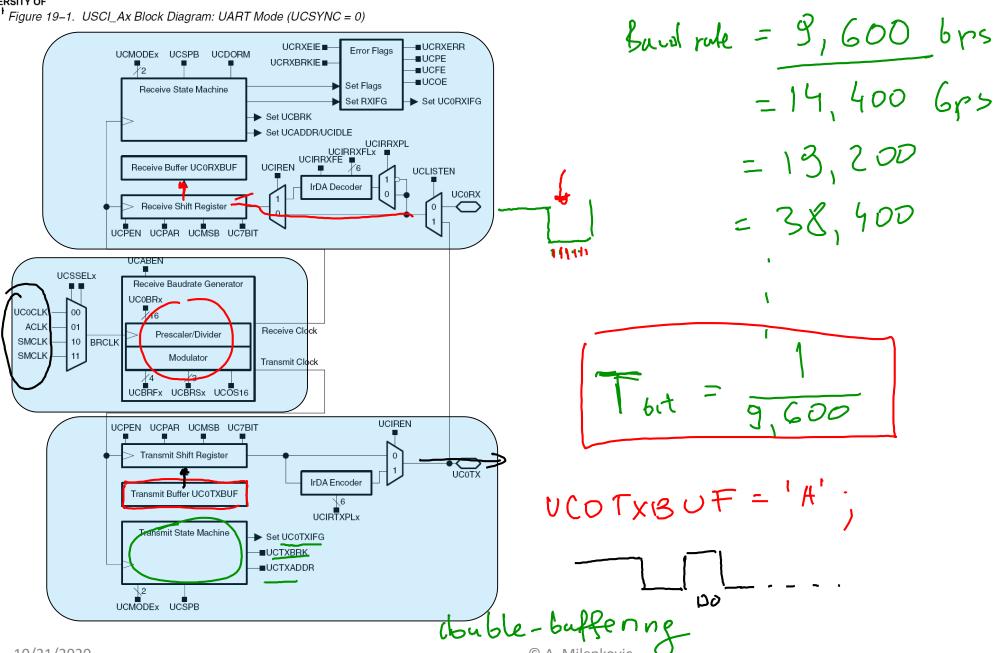



USCI_A0 Registers [8-64 perphrent]




Table 19-6. USCI_A0 Control and Status Registers

	Register	Short Form	Register Type	Address	Initial State
{	USCI_A0 control register 0	UCA0CTL0	Read/write	060h	Reset with PUC
	USCI_A0 control register 1	UCA0CTI 1	Read/write	061h	001h with PUC
(USCI_A0 Baud rate control register 0	UCA0BR0	Read/write	062h	Reset with PUC
ろ	USCI_A0 Baud rate control register 1	UCA0BR1	Read/write	063h	Reset with PUC
7	USCI_A0 modulation control register	UCA0MCTL	Read/write	064h	Reset with PUC
	USCI_A0 status register	UCA0STAT	Read/write	065h	Reset with PUC
ŀ	USCI_A0 Receive buffer register	UCA0RXBUF	Read	066h	Reset with PUC
- (USCI_A0 Transmit buffer register	UCA0TXBUF	Read/write	067h	Reset with PUC
	USCI_A0 Auto Baud control register	UCA0ABCTL	Read/write	05Dh	Reset with PUC
	USCI_A0 IrDA Transmit control register	UCA0IRTCTL	Read/write	05Eh	Reset with PUC
	USCI_A0 IrDA Receive control register	UCA0IRRCTL	Read/write	05Fh	Reset with PUC
	SFR interrupt enable register 2	IE2	Read/write	001h	Reset with PUC
	SFR interrupt flag register 2	IFG2	Read/write	003h	00Ah with PUC


STR. ITG


10/21/2020 © A. Milenkovic 10





Error Conditions

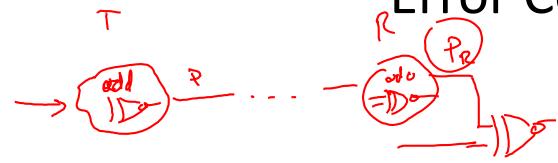

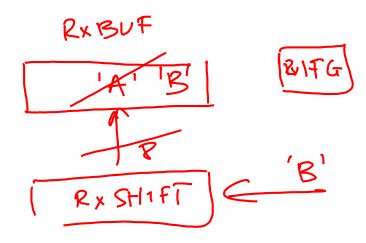

Error Condition	Error Flag	Description
Framing error	UCFE	A framing error occurs when a low stop bit is detected. When two stop bits are used, both stop bits are checked for framing error. When a framing error is detected, the UCFE bit is set.
Parity error	UCPE	A parity error is a mismatch between the number of 1s in a character and the value of the parity bit. When an address bit is included in the character, it is included in the parity calculation. When a parity error is detected, the UCPE bit is set.
Receive overrun	UCOE	An overrun error occurs when a character is loaded into UCAxRXBUF before the prior character has been read. When an overrun occurs, the UCOE bit is set.
Break condition	JCBRK	When not using automatic baud rate detection, a break is detected when all data, parity, and stop bits are low. When a break condition is detected, the UCBRK bit is set. A break condition can also set the interrupt flag UCAxRXIFG if the break interrupt enable UCBRKIE bit is set.



Transmit sile

Institulize USCI for

VART COMM.

Frand = 38,400 bps

8-6it Slata

LSB FrA

P even

Read TXIFG

if TXBUF is empty (1F6=1)

TXBUF = mychar,



Leceive side

Initialize USCI for

UART Common

Fland = 38,400 bps

8-64

LSB first

went for RXIFG to be cet;

received char = RXBUT; reading

the d

received char

Clear RXIFG





TBITCLK = 38,400 S

Baud Rate Generation

Definitions

- BRCLK is input clock (ACLK, SMCLK, UCLK)
- $F_{BITCLK16}$ = F_{BAUD} is bit clocks (e.g., 38,400 bps) $F_{BITCLK16}$ = F_{BITCLK

- Oversampling mode (UCOS16=1)
 - BRCLK is divided to give BITCLK16, which is further divided by 16 to give BITCLK
- Low Frequency mode (UCOS16=0)
 - BRCLK is divided to give BITCLK






Baud Rate Generation

• Oversampling: $f_{baud} = 9600 \text{ Hz}$, $f_{BRCLK} \neq 2^{20} \text{ Hz}$



10/21/2020

$$\frac{N}{16} = 6.83$$

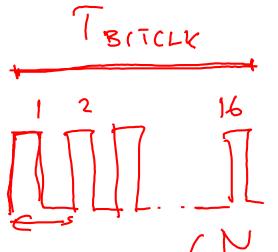

$$UCBRx = INT(\frac{N}{16}) = 6$$

$$UCBRFx = round(\frac{N}{16} - INT(\frac{N}{16})) \times 16$$





Baud Rate Generation

- Low frequency is used when f_{BRCLK} < 16*f_{baud}

•
$$f_{baud} = 9600 \text{ Hz}, f_{BRCLK} = 2^{15} \text{ Hz (ACLK)}$$

$$N - \frac{2^{15}}{9,600} = 3.41 < 15$$





Echo a character using Polling

```
* File:
                  Lab8 D1.c
* Function:
                 Echo a received character, using polling.
* Description:
                 This program echos the character received from UART back to UART.
                  Toggle LED1 with every received character.
                 Baud rate: low-frequency (UCOS16=0);
                 1048576/115200 = \sim 9.1 (0 \times 0009 \mid 0 \times 01)
* Clocks:
                  ACLK = LFXT1 = 32768Hz, MCLK = SMCLK = default DCO
* Board:
                 MSP-EXP430F5529
* Instructions: Set the following parameters in putty
* Port: COMx
* Baud rate: 115200
* Data bits: 8
* Parity: None
* Stop bits: 1
* Flow Control: None
* Note:
              If you are using Adafruit USBtoTTL cable, look for COM port
               in the Windows Device Manager with the following text:
              Silicon Labs CP210x USB to UART Bridge (COM<x>).
               Connecting Adafruit USB to TTL:
               GND - black wire - connect to the GND pin (on the board or
BoosterPack)
               Vcc - red wire - leave disconnected
                     white wire (receive into USB, connect on TxD of the board P3.3)
                Tx - green wire (transmit from USB, connect to RxD of the board
P3.4)
         MSP430F5529
                    XIN -
                        32kHz
                        115200 - 8N1
           P3.4/UCA0RXD <-----
                  P1.0 ----> LED1
* Input:
              None (Type characters in putty/MobaXterm/hyperterminal)
             Character echoed at UART
* Output:
* Author:
             A. Milenkovic, milenkovic@computer.org
* Date:
             October 2018, modified August 2020
```

```
#include <msp430.h>
void UART_setup(void) {
   P3SEL |= BIT3 + BIT4;
                           // Set USCI A0 RXD/TXD to receive/transmit data
                            // Set software reset during initialization
UCA0CTL1 = UCSWRST;
    UCA0CTL0 = 0;
                            // USCI A0 control register
    UCA0CTL1 |= UCSSEL 2;
                            // Clock source SMCLK
    UCAOBRO = 0x09:
                            // 1048576 Hz / 115200 lower byte
 → UCA0BR1 = 0x00;
                            // upper byte
                            // Modulation (UCBRS0=0x01, UCOS16=0)
    UCAOMCTL |= UCBRSO;
    UCA0CTL1 &= ~UCSWRST;
                            // Clear software reset to initialize USCI state machine
void main(void) {
    WDTCTL = WDTPW + WDTHOLD;
                                    // Stop WDT
→ P1DIR |= BIT0;
                                    // Set P1.0 to be output
  JUART setup();
                                    // Initialize UART
    while (1) {
       while(!(UCA0IFG&UCRXIFG));
                                    // Wait for a new character
       // New character is here in UCAORXBUF
   while(!(UCA0IFG&UCTXIFG));
                                    // Wait until TXBUF is free
       UCAOTXBUF = UCAORXBUF;
                                    // TXBUF <= RXBUF (echo)</pre>
       P10UT ^= BIT0;
                                    // Toggle LED1
```

© A. Milenkovic





Echo a character using ISR

```
#include <msp430.h>
    // Initialize USCI A0 module to UART mode
    void UART setup(void) {
        P3SEL |= BIT3 + BIT4; // Set USCI A0 RXD/TXD to receive/transmit data
        UCA0CTL1 |= UCSWRST;  // Set software reset during initialization
        UCA0CTL0 = 0;
                               // USCI A0 control register
        UCA0CTL1 |= UCSSEL_2; // Clock source SMCLK
        UCAOBRO = 0x09;
                               // 1048576 Hz / 115200 lower byte
        UCAOBR1 = 0x00;
                               // upper byte
        UCA0MCTL |= UCBRS0;
                               // Modulation (UCBRS0=0x01, UCOS16=0)
        UCA0CTL1 &= ~UCSWRST;
                               // Clear software reset to initialize USCI state machine
        UCA0IE |= UCRXIE;
                               // Enable USCI A0 RX interrupt
    void main(void) {
        WDTCTL = WDTPW + WDTHOLD; // Stop WDT
        P1DIR |= BIT0;
                                // Set P1.0 to be output
        UART setup();
                                // InitiAlize USCI A0 in UART mode
         BIS SR(LPM0 bits + GIE);
                                  // Enter LPM0, interrupts enabled
    // Echo back RXed character, confirm TX buffer is ready first
    #pragma vector = USCI_A0_VECTOR
interrupt void USCIAORX ISR (void) {
      ▶while(!(UCA0IFG&UCTXIFG)); // Wait until can transmit
       UCAOTXBUF = UCAORXBUF;
                               // TXBUF <-- RXBUF
        P10UT ^= BIT0;
                                   // Toggle LED1
```





Display Real-Time Clock

```
* File:
                 Lab8 D3.c
                 Displays real-time clock in serial communication client.
* Function:
                 This program maintains real-time clock and sends time
* Description:
                 (10 times a second) to the workstation through
                 a serial asynchronous link (UART).
                 The time is displayed as follows: "sssss:tsec".
                 Baud rate divider with 1048576hz = 1048576/(16*9600) = \sim 6.8 [16
from UCOS16]
                 ACLK = LFXT1 = 32768Hz, MCLK = SMCLK = default DCO = 1048576Hz
* Clocks:
* Instructions: Set the following parameters in putty/hyperterminal
* Port: COMx
* Baud rate: 19200
* Data bits: 8
* Parity: None
* Stop bits: 1
 * Flow Control: None
         MSP430F5529
                   XIN -
                        32kHz
    | - - | RST
                  XOUT | -
          P3.3/UCA0TXD ----->
                        9600 - 8N1
          P3.4/UCA0RXD <-----
                  P1.0 ---> LED1
* Author:
               A. Milenkovic, milenkovic@computer.org
 * Date:
               October 2018
```

```
#include <msp430.h>
#include <stdio.h>
// Current time variables
unsigned int sec = 0; ✓
                                // Seconds
unsigned int tsec = 0; ✔
                                 // 1/10 second
char Time[8];
                                 // String to keep current time
void UART_setup(void) {
    P3SEL = BIT3+BIT4;
                                            // P3.4,5 = USCI A0 TXD/RXD
    UCA0CTL1 |= UCSWRST;
                                            // **Put state machine in reset**
   UCA0CTL1 |= UCSSEL 2;
                                            // SMCLK
                                            // 1MHz 9600 (see User's Guide)
   UCAOBRO = 6;
   UCAOBR1 = 0;
                                            // 1MHz 9600
   UCAOMCTL = UCBRS 0 + UCBRF 13 + UCOS16;
                                            // Mod. UCBRSx=0, UCBRFx=0,
                                            // over sampling
    UCA0CTL1 &= ~UCSWRST:
                                            // **Initialize USCI state machine**
void TimerA setup(void) {
    TAOCTL = TASSEL 2 + MC 1 + ID 3; // Select SMCLK/8 and up mode
    TAOCCRO = 13107;
                                   // 100ms interval 🗸
                                   // Capture/compare interrupt enable
    TAOCCTLO = CCIE;
```





Display Real-Time Clock (cont'd)

```
void UART_putCharacter(char c) {
   while (!(UCA0IFG&UCTXIFG));
                                 // Wait for previous character to transmit
                                                                             void main(void) {
   UCA0TXBUF = c;
                                 // Put character into tx buffer
                                                                                 WDTCTL = WDTPW + WDTHOLD;
                                                                                                               // Stop watchdog timer
                                                                                                               // Initialize UART
                                                                                 UART setup();
                                                                                 TimerA_setup();
                                                                                                               // Initialize Timer B
void SetTime(void)
                                                                                 P1DIR |= BIT0;
                                                                                                               // P1.0 is output;
    tsec++;
   if (tsec == 10){
                                                                                 while (1) {
                                                                                  BIS SR(LPM0 bits + GIE);
                                                                                                               // Enter LPM0 w/ interrupts
       tsec = 0;
                                                                                     SendTime():
                                                                                                               // Send Time to HyperTerminal/putty
       sec++;
                                  // Toggle LED1
       P10UT ^= BIT0;
                                                                             #pragma vector = TIMER0 A0 VECTOR
void SendTime(void) {
                                                                             interrupt void TIMERA ISA(void) {
                                                                              -->SetTime();
    int i;
                                                                                                                 // Update time
   sprintf(Time, "%05d:%01d", sec,(tsed);// Prints time to a string
                                                                                 BIC SR IRQ(LPM0 bits)
                                                                                                                    lear LPM0 bits from 0(SR)
   for (i = 0; i < sizeof(Time); i++) { // Send character by character</pre>
      UART putCharacter(Time[i]);
   UART putCharacter('\r');
                                 // Carriage Return
                                        8 Miss x 10 = 80 drars x 10 = 200
```

10/21/2020 © A. Milenkovic 19