CPE 325: Embedded Systems Laboratory Laboratory #8 Tutorial UART Serial Communications

Aleksandar Milenković

Email: milenka@uah.edu

Web: http://www.ece.uah.edu/~milenka

Objective

This tutorial will introduce communication protocols used with MSP430 and other devices. Specifically, it will cover asynchronous serial communication using USCI peripheral. You will learn the following topics:

Configuration of the USCI peripheral device for UART mode
Utilization of the USCI in UART mode for serial communication with a workstation
Understanding of workstation clients interfacing serial communication ports (putty) and
UAH serial communication application

Notes

All previous tutorials are required for successful completion of this lab. Read CPE323 lecture discussing <u>UART Communication</u>.

Contents

| 1 | Serial Communication | 2 |
|---|-------------------------|---|
| 2 | Real-Time Clock | 6 |
| 3 | Putty versus Serial App | 9 |
| | References | |

1 Serial Communication

An MSP430-based platform can communicate with another system, such as a personal computer, using either the synchronous or asynchronous communication mode. For two devices to communicate synchronously, they must share a common clock source. In this lab, we are going to interface a MSP430 with a personal computer using an asynchronous communication mode. Since the two devices do not share a clock signal, there should be an agreement between the devices on the speed of the communication before the actual interface starts.

To configure the MSP430 in UART mode, the internal divider and the modulation register should be initialized appropriately. The internal divider is calculated by dividing the clock by the baud rate. But, the division of the clock by the baud rate is usually not a whole number. Therefore, to take account of the fraction part of the division, we use the modulation register. The value in the modulation register is calculated in such a way that the time it takes to receive/transmit each bit is as close as possible to the exact time given by the baud rate. If the appropriate modulation value is not used, the fraction part of the division of clock frequency by the baud rate will accumulate and eventually make the two devices unable to communicate. An MSP430-based platform can be connected to a PC machine using the HyperTerminal application in Windows.

Let us consider a program that sends a character from the PC to the MSP430F5529 microcontroller and echoes the character back to the PC (Figure 1). Since we cannot connect the two systems (our PC and the microcontroller) to the same clock source, we should use the UART mode. The USCI peripheral can be utilized for that purpose. The communication speed is 115,200 bits/s (one-bit period is thus 1/115,200 or ~8.68 us). The USCI clock, UCLK, is connected to SMCLK running at 1,048,576 Hz. To achieve the baud rate of 115,200 bits per second, the internal divider registers are initialized to UCA0BR0=0x09, and UCABR1=0x00, because 1,048,576/115,200 = 9.1 ~ 9. Additionally, the modulation register, UCAOMCTL, is set to 0x02 (bit 0 of the field UCBRSx is set to 1). See the reference manual (Table 36.4 https://www.ti.com/lit/ug/slau208q/slau208q.pdf) for more common combinations of clock source and baud rate and values for baud rate control registers. Also, the reference manual gives details on how the right value in UCAOMCTL is determined (the idea is to continuously minimize probability of erroneous detection at the receiver side).

Figure 1 shows an implementation using polling. The function UART_setup() is configuring USCI in UART mode: 8-bit characters, no parity, 1 stop bit, and the baud rate is set as described above. Please note that we follow recommended sequence of steps for USCI initialization — the SWRST bit in the control register remains set during initialization and it is cleared once the initialization is over. The main program loop is an infinite loop where we use polling to detect whether a new character is received. The program is waiting in line 71 for new character to be received. When a character is received in the UCAORXBUF register, the UCAORXIFG bit is set. Before the character is echoed back through the serial interface, we first check whether the USCI's transmit data buffer is empty (line 73). When the transmit buffer is empty, we proceed with copying the received character that is in UCAORXBUF into UCAOTXBUF. The LED1 is toggled before we go back to the main loop.

```
1
 2
        File:
                       Lab8_D1.c
 3
 4
        Function:
                        Echo a received character, using polling.
 5
 6
        Description:
                        This program echos the character received from UART back to UART.
 7
                        Toggle LED1 with every received character.
 8
                        Baud rate: low-frequency (UCOS16=0);
 9
                        1048576/115200 = \sim 9.1 (0x0009|0x01)
10
11
      * Clocks:
                        ACLK = LFXT1 = 32768Hz, MCLK = SMCLK = default DCO
12
13
      * Board:
                        MSP-EXP430F5529
14
15
      * Instructions: Set the following parameters in putty
16
      * Port: COMx
17
       * Baud rate: 115200
18
      * Data bits: 8
19
      * Parity: None
20
       * Stop bits: 1
21
       * Flow Control: None
22
23
                     If you are using Adafruit USBtoTTL cable, look for COM port
       * Note:
24
                     in the Windows Device Manager with the following text:
25
                     Silicon Labs CP210x USB to UART Bridge (COM<x>).
26
                     Connecting Adafruit USB to TTL:
27
                      GND - black wire - connect to the GND pin (on the board or
28
     BoosterPack)
29
                      Vcc - red wire - leave disconnected
30
                            white wire (receive into USB, connect on TxD of the board P3.3)
                            green wire (transmit from USB, connect to RxD of the board
31
32
     P3.4)
               MSP430F5529
33
34
35
        / | \
                         XIN -
36
                               32kHz
37
          |--|RST
                         XOUT | -
38
39
                 P3.3/UCA0TXD | ---->
40
                             | 115200 - 8N1
                P3.4/UCA0RXD | <-----
41
42
                         P1.0 ---> LED1
43
44
       * Input:
                   None (Type characters in putty/MobaXterm/hyperterminal)
45
      * Output:
                   Character echoed at UART
       * Author:
46
                    A. Milenkovic, milenkovic@computer.org
47
                    October 2018, modified August 2020
48
49
     #include <msp430.h>
50
51
     void UART_setup(void) {
52
```

```
53
         P3SEL |= BIT3 + BIT4;
                                 // Set USCI A0 RXD/TXD to receive/transmit data
         UCA0CTL1 |= UCSWRST;
54
                                 // Set software reset during initialization
55
         UCA0CTL0 = 0;
                                 // USCI A0 control register
56
         UCA0CTL1 |= UCSSEL 2;
                                 // Clock source SMCLK
57
58
         UCA0BR0 = 0x09;
                                 // 1048576 Hz / 115200 lower byte
59
         UCAOBR1 = 0x00;
                                 // upper byte
60
         UCA0MCTL |= UCBRS0;
                                 // Modulation (UCBRS0=0x01, UCOS16=0)
61
62
         UCAOCTL1 &= ~UCSWRST; // Clear software reset to initialize USCI state machine
63
     }
64
65
     void main(void) {
66
         WDTCTL = WDTPW + WDTHOLD;
                                         // Stop WDT
67
         P1DIR |= BIT0;
                                          // Set P1.0 to be output
                                         // Initialize UART
68
         UART setup();
69
70
         while (1) {
71
            while(!(UCA0IFG&UCRXIFG)); // Wait for a new character
72
            // New character is here in UCA0RXBUF
73
            while(!(UCA0IFG&UCTXIFG)); // Wait until TXBUF is free
74
            UCA0TXBUF = UCA0RXBUF;
                                         // TXBUF <= RXBUF (echo)</pre>
75
            P10UT ^= BIT0;
                                         // Toggle LED1
76
77
     }
78
```

Figure 1. Echoing a Character Using the USCI in UART Mode and Polling

Figure 2 shows the program that performs the same task, but this time an interrupt service routine tied to the USCI receiver is used. In the main program the USCI is configured to generate an interrupt request when a new character is received. Whenever a character is received and loaded into UCAORXBUF, the interrupt flag UCAORXIFG is set and interrupt request is raised. The main program does nothing beyond initialization — the processor is in a low-power mode 0 (LPM0). What clock signals are down in this mode?

All actions in this implementation occurs inside the service routine. The processor wakes up when a new character is received, and we find ourselves inside the service routine. In the ISR before writing the new character to UCAOTXBUF to transmit back to the workstation, we need to make sure that it is indeed empty to avoid loss of data. The UCAOTXIFG interrupt flag is set by the transmitter when the UCAOTXBUF is ready to accept a new character. Note: here we do polling on transmit buffer inside the receiver ISR. When the UCAOTXBUF is ready (UCAOTXIFG flag is set), the content from UCAORXBUF is copied into the UCAOTXBUF. The LED4 is toggled. When exiting the ISR, the original PC and SR are retrieved bringing the processor back in the LPM0.

```
7
                        Baud rate: low-frequency (UCOS16=0);
 8
                       1048576/115200 = \sim 9.1 (0x0009 | 0x01)
 9
                       ACLK = LFXT1 = 32768Hz, MCLK = SMCLK = default DCO
      * Clocks:
10
11
      * Instructions: Set the following parameters in putty
12
      * Port: COM1
13
      * Baud rate: 115200
14
      * Data bits: 8
15
      * Parity: None
16
      * Stop bits: 1
17
      * Flow Control: None
18
19
               MSP430f5529
20
21
                         XIN -
22
                              32kHz
23
          |--|RST
                        XOUT | -
24
25
                P3.3/UCA0TXD ----->
26
                              115200 - 8N1
27
                P3.4/UCA0RXD <-----
28
                        P1.0 ----> LED1
29
30
                   None (Type characters in putty/MobaXterm/hyperterminal)
      * Input:
31
      * Output:
                   Character echoed at UART
32
      * Author:
                   A. Milenkovic, milenkovic@computer.org
33
      * Date:
                   October 2018
34
35
     #include <msp430.h>
36
37
     // Initialize USCI_A0 module to UART mode
38
     void UART_setup(void) {
39
                                 // Set USCI A0 RXD/TXD to receive/transmit data
40
         P3SEL |= BIT3 + BIT4;
41
         UCAOCTL1 |= UCSWRST;
                                 // Set software reset during initialization
42
         UCA0CTL0 = 0;
                                 // USCI A0 control register
43
         UCA0CTL1 |= UCSSEL_2;
                                 // Clock source SMCLK
44
45
         UCA0BR0 = 0x09;
                                 // 1048576 Hz / 115200 lower byte
46
         UCAOBR1 = 0x00;
                                 // upper byte
47
         UCA0MCTL |= UCBRS0;
                                 // Modulation (UCBRS0=0x01, UCOS16=0)
48
49
         UCA0CTL1 &= ~UCSWRST;
                                 // Clear software reset to initialize USCI state machine
50
         UCA0IE |= UCRXIE;
                                 // Enable USCI_A0 RX interrupt
51
     }
52
53
     void main(void) {
54
         WDTCTL = WDTPW + WDTHOLD; // Stop WDT
55
                                  // Set P1.0 to be output
         P1DIR |= BIT0;
56
         UART_setup();
                                  // InitiAlize USCI A0 in UART mode
57
58
         _BIS_SR(LPM0_bits + GIE); // Enter LPM0, interrupts enabled
59
     }
60
     // Echo back RXed character, confirm TX buffer is ready first
```

Figure 2. Echoing a Character Using the USCI Device

2 Real-Time Clock

In this section we will describe a program that implements a real-time clock on the MSP430 platform (Figure 3). The time is measured from the beginning of the application with a resolution of 100 milliseconds (one tenth of a second). The time is maintained in two variables, unsigned int sec (for seconds) and unsigned char tsec for tenths of a second. What is the maximum time you can have in this case? To observe the clock we can display it either on the LCD or send it serially to a workstation using a serial communication interface. In our example we send time through a serial asynchronous link using the MSP430's USCI (Universal Serial Communication Interface) device. This device is connected to a RS232 interface (see MSP EXP430F5529LP schematic) that connects through a serial cable to a PC. On the PC side we can open putty application and observe real-time clock that is sent from our development platform.

The first step is to initialize the USCI device in UART mode for communication using a baud rate 9,600 bits/sec. The next step is to initialize Timer_A to measure time and update the real-time clock variables. The Timer_A ISR is used to maintain the clock and wake up the processor. In the main program, the local variables are taken and converted into a readable string that is then sent to the USCI device.

```
1
 2
 3
      * File:
                        Lab8 D3.c
 4
      * Function:
                        Displays real-time clock in serial communication client.
 5
      * Description:
                        This program maintains real-time clock and sends time
6
                        (10 times a second) to the workstation through
7
                        a serial asynchronous link (UART).
8
                        The time is displayed as follows: "sssss:tsec".
9
10
                        Baud rate divider with 1048576hz = 1048576/(16*9600) = \sim 6.8 [16
11
     from UCOS16]
12
                        ACLK = LFXT1 = 32768Hz, MCLK = SMCLK = default DCO = 1048576Hz
      * Clocks:
13
       * Instructions: Set the following parameters in putty/hyperterminal
14
      * Port: COMx
15
      * Baud rate: 9600
16
      * Data bits: 8
17
      * Parity: None
18
      * Stop bits: 1
19
      * Flow Control: None
20
21
                MSP430F5529
22
```

```
23
                        XIN -
24
                              32kHz
25
          -- | RST
                        XOUT | -
26
27
                P3.3/UCA0TXD ---->
28
                     9600 - 8N1
29
                P3.4/UCA0RXD <-----
30
                        P1.0 ---> LED1
31
32
      * Author:
                    A. Milenkovic, milenkovic@computer.org
33
                    October 2018
34
35
     #include <msp430.h>
36
     #include <stdio.h>
37
38
     // Current time variables
39
     unsigned int sec = 0;
                                       // Seconds
     unsigned int tsec = 0;
40
                                       // 1/10 second
41
     char Time[8];
                                       // String to keep current time
42
43
     void UART_setup(void) {
44
         P3SEL = BIT3+BIT4;
                                                   // P3.4,5 = USCI_A0 TXD/RXD
45
         UCA0CTL1 |= UCSWRST;
                                                   // **Put state machine in reset**
         UCA0CTL1 |= UCSSEL_2;
46
                                                   // SMCLK
                                                   // 1MHz 9600 (see User's Guide)
47
         UCAOBRO = 6;
48
         UCAOBR1 = 0;
                                                   // 1MHz 9600
49
         UCA0MCTL = UCBRS_0 + UCBRF_13 + UCOS16;
                                                  // Mod. UCBRSx=0, UCBRFx=0,
50
                                                   // over sampling
                                                   // **Initialize USCI state machine**
51
         UCA0CTL1 &= ~UCSWRST;
52
     }
53
54
     void TimerA setup(void) {
         TAOCTL = TASSEL_2 + MC_1 + ID_3; // Select SMCLK/8 and up mode
55
                                         // 100ms interval
56
         TAOCCRO = 13107;
57
         TAOCCTLO = CCIE;
                                          // Capture/compare interrupt enable
58
     }
59
60
     void UART_putCharacter(char c) {
61
         while (!(UCA0IFG&UCTXIFG));
                                       // Wait for previous character to transmit
62
         UCA0TXBUF = c;
                                       // Put character into tx buffer
63
     }
64
65
     void SetTime(void) {
66
         tsec++;
67
         if (tsec == 10){
68
             tsec = 0;
69
             sec++;
70
             P10UT ^= BIT0;
                                   // Toggle LED1
71
         }
72
     }
73
74
     void SendTime(void) {
75
         int i;
76
         sprintf(Time, "%05d:%01d", sec, tsec);// Prints time to a string
77
```

```
78
          for (i = 0; i < sizeof(Time); i++) { // Send character by character</pre>
79
              UART putCharacter(Time[i]);
80
81
          UART_putCharacter('\r');
                                        // Carriage Return
82
      }
83
84
      void main(void) {
 85
          WDTCTL = WDTPW + WDTHOLD;
                                           // Stop watchdog timer
86
          UART_setup();
                                           // Initialize UART
87
          TimerA_setup();
                                           // Initialize Timer B
          P1DIR |= BIT0;
88
                                           // P1.0 is output;
89
90
          while (1) {
91
               _BIS_SR(LPM0_bits + GIE);
                                         // Enter LPM0 w/ interrupts
92
                                           // Send Time to HyperTerminal/putty
              SendTime();
93
          }
94
      }
 95
96
      #pragma vector = TIMER0_A0_VECTOR
97
      __interrupt void TIMERA_ISA(void) {
98
          SetTime();
                                            // Update time
99
                                            // Clear LPM0 bits from 0(SR)
          _BIC_SR_IRQ(LPM0_bits);
100
      }
101
```

Figure 3. Display Real-Time Clock Through UART

Please note that sprintf with modifiers requires full printf support. This should have been already set by you when creating the project. If you did not, it is under MSP430 Compiler->Advanced Options->Language Options as shown in Figure 4.

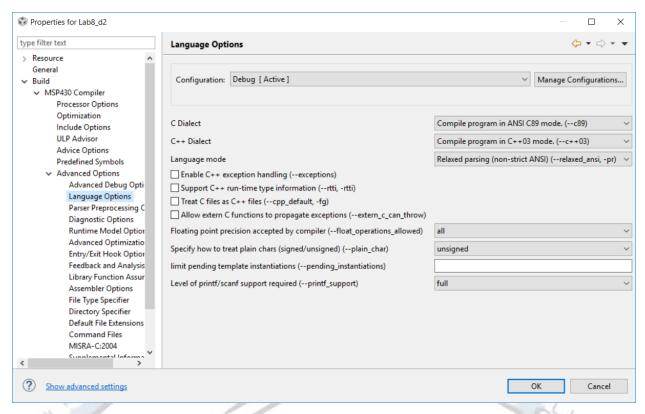


Figure 4. Setting Code Composer to Support sprintf

3 Putty versus Serial App

As a final note, it's important to keep in mind how information is being sent through the UART connection. As we begin this lab, we will generally use the Putty application (available for download at http://portal.mhealth.uah.edu/public/index.php/serial-port-application). The Putty application can only display ASCII characters. Since the UART communication protocol sends 8-bit chunks of information, the USCI peripheral has buffers that are best suited to sending or receiving 1-byte size data (with the added stop bits, etc.). It is simplest, therefore, to send and receive ASCII characters as they are a convenient 8-bit size. Putty can only handle character data types. If it receives non-character information, it will be interpreted as characters and gibberish will appear on the screen.

However, we do not always want to send characters – we often want to send and view data of different types (ints, floats, etc.). To view this type of information, we can use the convenient UAH Serial Application developed by our former student Mladen Milosevic. This application translates serial packets that are sent to it, and it can graphically represent the data versus time. Being able to construct packets with the MSP430 and read them with a software application is an important part of communication.

Because the UART protocol specifies that data is sent in 1-byte chunks, we must create a larger structure of information that we'll send. This is called a packet. The packet consists of predetermined bytes that we construct and tell the receiving software application how to

interpret. The UAH Serial Application expects a packet that has a 1-byte header followed by the data followed by an optional checksum. The software must be told how many bytes of information to expect as well as the type and number of data was sending and how it's ordered. To send the data from the MSP430, we first send our header byte followed by our data that has been broken up into 1-byte chunks. The USCI UART buffer will then be fed each byte at a time. It is important in this process to ensure that the packet that you are sending has the same structure that the receiving device is expecting.

Figure 5 shows a demo program for sending a floating-point variable through UART. The 4-byte float variable is sent in a 5-byte packet: header (1-byte) and 4-byte data (LSB byte is sent first). The variable is increased by 0.1 every second with modulus 10.0 and reported through UART as shown in the WDTISR.

```
1
 2
      * File:
                     Lab08 D4.c
 3
      * Function:
                     Send floating data to Serial port
 4
      * Description: UAH serial app expects lower byte first so send each byte at a
 5
                      time sending lowest byte first. Serial App can be downloaded at
6
                      portal.mhealth.uah.edu/public/index.php/serial-port-application
7
8
                      FOR PROPER OPERATION:
9
                      In the UAH serial app, please do the following:
                      1. In the "Active Session" tab, select the appropriate Com Port.
10
11
                      2. Check the box that says "Enable Chart"
12
                      3. In "Settings" tab,
13
                         a. Number of Channels = 1
14
                            i. We are sending a single floating point number to plot
15
                         b. Packet Size = 5 bytes
16
                            i. 1 byte header and 4 bytes for the floating point number
17
                         c. Header = 85 or 0x55
18
                            i. Header byte we are sending at the beginning of each
19
                               packet from our program
20
                         d. In CHO, select Type = Single 32bit
21
                         e. Set the position to 1
22
                         f. Check Show on Graph
23
      * Instruction: Set the following parameters in <a href="mailto:putty/hyperterminal">putty/hyperterminal</a>
24
      * Port:
                     COMx
25
                     115200
      * Baud rate:
26
      * Data bits:
                     8
27
      * Parity:
                     None
28
      * Stop bits:
29
      * Flow Ctrl:
                     None
30
      * Clocks:
                     ACLK = LFXT1 = 32768Hz, MCLK = SMCLK = default DCO
31
                             MSP-EXP430F5529LP
32
33
                                             XIN -
34
                                                  32kHz
                            -- | RST
35
                                           XOUT | -
36
37
                                    P3.3/UCA0TXD ---->
38
                                                  115200 - 8N1
39
                                    P3.4/UCA0RXD <-----
```

```
40
                                            P1.0 ---> LED1
41
      * Input:
                     None
42
      * Output:
                     Ramp signal in UAH Serial app
43
                     Prawar Poudel, prawar.poudel@uah.edu
      * Author(s):
44
      * Date:
                     October 2018
45
46
     #include <msp430.h>
47
     #include <stdint.h>
48
49
     volatile float myData;
50
51
     void UART_setup(void)
52
53
54
         P3SEL |= BIT3 + BIT4; // Set USCI_A0 RXD/TXD to receive/transmit data
55
         UCA0CTL1 |= UCSWRST; // Set software reset during initialization
56
                                // USCI_A0 control register
         UCA0CTL0 = 0;
57
         UCA0CTL1 |= UCSSEL 2; // Clock source SMCLK
58
59
                                  // 1048576 Hz / 115200 lower byte
         UCAOBRO = 0x09;
60
         UCA0BR1 = 0 \times 00;
                                  // upper byte
61
         UCA0MCTL = 0x02;
                                  // Modulation (UCBRS0=0x01, UCOS16=0)
62
63
                                  // Clear software reset to initialize USCI state machine
         UCA0CTL1 &= ~UCSWRST;
64
     }
65
66
     void UART putCharacter(char c)
67
         while (!(UCA0IFG&UCTXIFG)); // Wait for previous character to transmit
68
69
         UCA0TXBUF = c;
                                       // Put character into tx buffer
70
71
72
     int main()
73
         WDTCTL = WDT_ADLY_1000;
74
75
         UART_setup();
                                       // Initialize USCI A0 module in UART mode
76
         SFRIE1 |= WDTIE;
                                          // Enable watchdog interrupts
77
78
         myData = 0.0;
79
         __bis_SR_register(LPM0_bits + GIE);
80
     }
81
82
     // Sends a ramp signal; amplitude of one period ranges from 0.0 to 9.9
83
     #pragma vector = WDT_VECTOR
84
      interrupt void watchdog timer(void)
85
86
         char index = 0;
87
         // Use character pointers to send one byte at a time
88
         char *myPointer = (char* )&myData;
89
90
         UART_putCharacter(0x55);
                                                  // Send header
91
         for(index = 0; index < 4; index++)</pre>
92
              // Send 4-bytes of myData
93
             UART_putCharacter(myPointer[index]);
94
         }
```

```
95
96
          // Update myData for next transmission
97
          myData = (myData + 0.1);
98
          if(myData >= 10.0)
99
          {
100
               myData = 0.0;
101
          }
102
      }
103
```

Figure 5. MSP430 Program for Sending Floating-Point Data (UAH Serial App)

Figure 6 shows how to properly configure UAH Serial App for viewing the RAMP signal. We are using a single channel, the size of the packet is 5 bytes, we are plotting one sample at a time (they are arriving rather slowly in this example). Figure 7 shows the RAMP signal in the UAH Serial App sent by the program from Figure 5.

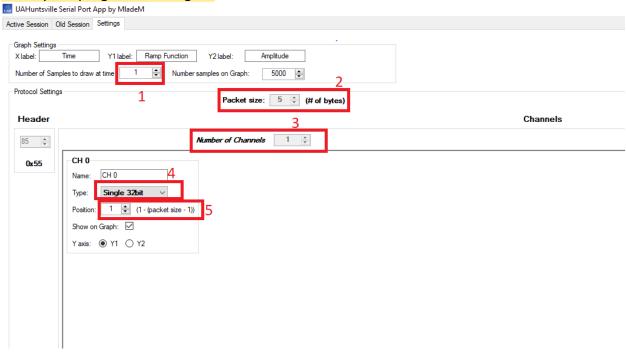


Figure 6. Configuring UAH Serial App for Viewing Ramp Signal

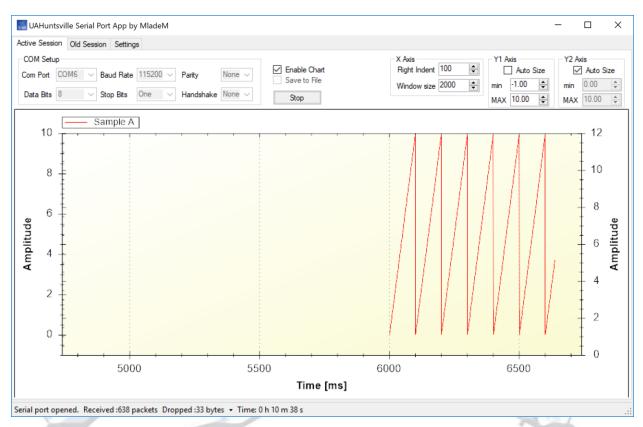


Figure 7. The RAMP signal in UAH Serial App

4 References

To understand more about UART communication and the USCI peripheral device, please read the following references:

- Davies' MSP430 Microcontroller Basics, pages 493 497 and pages 574 590
- MSP430 User's Guide, Chapter 36, pages 937–966