



RTL Design Sherpa

RTL AMBA AXI4 Module Reference — Rev 0.90

July 2026

Table of Contents

1 AXI4 (Advanced eXtensible Interface) Modules.....	32
1.1 Overview.....	32
1.1.1 Key Features.....	32
1.1.2 Module Categories.....	32
1.2 Functional Description.....	34
1.2.1 Channel Architecture.....	34
1.2.2 Key Signals.....	34
1.3 Timing.....	35
1.3.1 Throughput.....	35
1.3.2 Latency.....	35
1.3.3 Resource Usage.....	35
1.4 Usage Example.....	37
1.4.1 Basic Read Master.....	37
1.4.2 Basic Write Slave.....	37
1.4.3 Monitor Integration.....	38
1.5 Design Notes.....	39
1.5.1 Design Patterns.....	39
1.5.2 ID Width Selection.....	39
1.5.3 Buffer Depth Guidelines.....	40
1.5.4 Burst Optimization.....	40
1.6 Related Modules.....	40
1.6.1 RTL Design Sherpa Documentation.....	40

1.6.2 Configuration and Integration.....	40
1.6.3 Source Code.....	40
1.7 Testing.....	41
1.8 References.....	41
1.8.1 Protocol Specifications.....	41
1.9 Navigation.....	41
2 axi4_cdc_wr / axi4_cdc_rd.....	42
2.1 What it is.....	42
2.2 Parameters.....	42
2.3 Reset.....	43
2.4 Throughput and latency.....	43
2.5 Verification.....	43
3 AXI4 Clock-Gated Variants Guide.....	44
3.1 Overview.....	44
3.1.1 Available Clock-Gated Modules.....	44
3.1.2 Key Features.....	44
3.2 Parameters.....	45
3.3 Ports.....	45
3.3.1 Clock Gating Configuration Inputs.....	45
3.3.2 Clock Gating Status Outputs.....	45
3.4 Functional Description.....	46
3.4.1 Gating Conditions (All Must Be True).....	46
3.4.2 Ungating Conditions (Any Triggers Ungating).....	46
3.5 Timing.....	47

3.5.1 Ungating Latency.....	47
3.5.2 Throughput Impact.....	47
3.5.3 Sustained Throughput.....	47
3.6 Usage Example.....	48
3.6.1 Basic Clock Gating (Master Read).....	48
3.6.2 Dynamic Configuration (Runtime Adjustment).....	48
3.6.3 System-Level Power Monitoring.....	49
3.7 Design Notes.....	50
3.7.1 Idle Count Selection.....	50
3.7.2 When to Use Clock Gating.....	50
3.7.3 Traffic Pattern Analysis.....	50
3.7.4 Power Savings Estimates.....	51
3.7.5 Measuring Power Savings.....	51
3.7.6 Test Mode Support.....	52
3.7.7 Simulation Considerations.....	52
3.7.8 Synthesis Considerations.....	52
3.8 Related Modules.....	52
3.8.1 Base Module Documentation.....	52
3.8.2 Architecture.....	53
3.9 Navigation.....	53
4 axi4_dwidth_converter.....	53
4.1 Overview.....	53
4.1.1 Key Features.....	54
4.2 Parameters.....	54

4.2.1 Width Configuration.....	54
4.2.2 Buffer Depths.....	55
4.2.3 Calculated Parameters (Auto).....	55
4.3 Ports.....	56
4.3.1 AXI4 Slave Interface.....	56
4.3.2 AXI4 Master Interface.....	56
4.3.3 Status/Debug Outputs.....	56
4.4 Functional Description.....	57
4.4.1 Conversion Mechanics.....	59
4.5 Timing Characteristics.....	60
4.5.1 Performance Characteristics.....	60
4.6 Usage Examples.....	61
4.6.1 Basic Upsize Converter (32-bit → 128-bit).....	61
4.6.2 Basic Downsize Converter (128-bit → 32-bit).....	62
4.7 Design Notes.....	63
4.7.1 WIDTH_RATIO Constraints.....	63
4.7.2 Address Alignment.....	63
4.7.3 Burst Length Calculation.....	63
4.7.4 Buffer Depth Guidelines.....	64
4.8 Related Modules.....	65
4.8.1 Specialized Converters.....	65
4.8.2 Core Modules.....	65
4.8.3 Used Components.....	65
4.9 References.....	65

4.9.1 Specifications.....	65
4.9.2 Source Code.....	65
4.9.3 Documentation.....	65
4.10 Navigation.....	66
5 axi4_master_rd.....	66
5.1 Overview.....	66
5.2 Parameters.....	66
5.3 Ports.....	67
5.3.1 Module Declaration.....	67
5.3.2 Clock and Reset.....	68
5.3.3 Slave AXI Interface (Input Side - FUB).....	69
5.3.4 Master AXI Interface (Output Side).....	70
5.3.5 Status Interface.....	71
5.4 Functional Description.....	72
5.4.1 Dual Buffer Design.....	72
5.4.2 Key Features.....	73
5.4.3 Address Channel Processing.....	73
5.4.4 Data Channel Processing.....	73
5.4.5 Busy Signal Generation.....	73
5.5 Timing Characteristics.....	73
5.5.1 Buffer Latency.....	73
5.5.2 Performance Metrics.....	74
5.5.3 Transaction Latency.....	74
5.6 Usage Examples.....	74

5.7 Design Notes.....	75
5.7.1 Buffer Depth Selection.....	75
5.7.2 Burst Optimization.....	76
5.7.3 Quality of Service (QoS).....	76
5.7.4 Transaction Monitoring.....	77
5.7.5 Error Handling and Recovery.....	77
5.7.6 Synthesis Considerations.....	77
5.8 Related Modules.....	78
5.9 Testing.....	78
5.9.1 Protocol Compliance.....	78
5.9.2 Buffer Verification.....	78
5.9.3 Performance Verification.....	78
5.10 Navigation.....	78
6 axi4_master_rd_cg.....	79
6.1 Overview.....	79
6.2 Parameters.....	79
6.2.1 Derived Parameters (do not override).....	80
6.3 Ports.....	80
6.4 Functional Description.....	82
6.5 Timing Characteristics.....	83
6.6 Usage Examples.....	83
6.7 Design Notes.....	83
6.8 Related Modules.....	84
6.9 Testing.....	84

6.10 Navigation.....	84
7 axi4_master_rd_mon.....	85
7.1 Overview.....	85
7.1.1 Key Features.....	85
7.2 Parameters.....	85
7.2.1 AXI4 Master Parameters.....	86
7.2.2 Monitor Parameters.....	86
7.2.3 Synthesis-Cone Parameters.....	88
7.2.4 Derived Parameters (do not override).....	89
7.3 Ports.....	89
7.3.1 AXI4 Interfaces.....	89
7.3.2 Monitor Configuration.....	90
7.3.3 Monitor Bus Output.....	92
7.3.4 Status Outputs.....	93
7.3.5 Packet filters.....	93
7.4 Functional Description.....	95
7.4.1 Monitor Backpressure (block_ready).....	95
7.4.2 Address-Range Checker.....	96
7.4.3 Performance Monitoring.....	96
7.4.4 Monitor Packet Format.....	99
7.5 Timing Characteristics.....	100
7.6 Waveforms.....	100
7.6.1 Scenario 1: Single-Beat Read Transaction.....	100
7.6.2 Scenario 2: AR Channel Handshake Detail.....	100

7.6.3 Scenario 3: R Response Channel Detail.....	101
7.6.4 Scenario 4: Complete AXI4 Read Transaction.....	101
7.6.5 Scenario 5: Monitor Bus Packet Generation.....	102
7.6.6 Scenario 6: Simple ARVALID Transaction.....	102
7.6.7 Scenario 7: Alternative Single-Beat Read.....	102
7.7 Usage Examples.....	103
7.8 Design Notes.....	105
7.8.1 Filtering Hierarchy.....	105
7.8.2 Configuration Conflicts.....	105
7.8.3 Performance Considerations.....	106
7.8.4 Transaction Table.....	106
7.9 Related Modules.....	106
7.9.1 Companion Monitors.....	106
7.9.2 Base Modules.....	106
7.9.3 Used Components.....	106
7.10 Testing.....	106
7.11 References.....	107
7.11.1 Specifications.....	107
7.11.2 Source Code.....	107
7.11.3 Documentation.....	107
7.12 Navigation.....	107
8 axi4_master_rd_mon_cg.....	107
8.1 Overview.....	108
8.1.1 Key Differences from Base Module.....	108

8.1.2 When to Use the Clock-Gated Variant.....	108
8.2 Parameters.....	108
8.2.1 Clock Gating Parameters.....	108
8.2.2 Base Module Parameters.....	110
8.2.3 Filter configuration (forwarded).....	112
8.2.4 Parameter Relationships.....	112
8.2.5 Derived Parameters (do not override).....	113
8.3 Ports.....	113
8.4 Functional Description.....	118
8.4.1 Clock Gating Architecture.....	118
8.4.2 Gating State Machine.....	118
8.4.3 Performance Monitoring.....	119
8.5 Timing Characteristics.....	119
8.5.1 Wake-Up and Gating Latency.....	119
8.6 Usage Examples.....	120
8.6.1 Example 1: Maximum Power Savings (Burst Traffic).....	120
8.6.2 Example 2: Balanced Performance and Power.....	120
8.6.3 Example 3: Clock Gating Disabled (Functional Verification).....	121
8.7 Design Notes.....	121
8.7.1 Power Savings Analysis.....	121
8.7.2 Power Monitoring Signals.....	122
8.7.3 Verification Considerations.....	122
8.7.4 Synthesis Considerations.....	123
8.8 Related Modules.....	123

8.8.1 See Also.....	123
8.9 Testing.....	123
8.10 Navigation.....	124
9 AXI4 Master Read with Lite Monitor.....	124
9.1 Overview.....	124
9.1.1 What is not here.....	124
9.1.2 Key Features.....	124
9.2 Parameters.....	125
9.2.1 Monitor Parameters.....	125
9.2.2 Core Parameters (passed through to axi4_master_rd).....	126
9.3 Ports.....	127
9.3.1 Monitor Control, Bus and Status.....	127
9.3.2 Core Ports (as on axi4_master_rd).....	128
9.4 Functional Description.....	130
9.5 Timing Characteristics.....	131
9.6 Usage Examples.....	131
9.7 Design Notes.....	132
9.8 Related Modules.....	132
9.9 Testing.....	132
9.10 Navigation.....	132
10 AXI4 Master Read Stub.....	133
10.1 Overview.....	133
10.1.1 Key Features.....	133
10.2 Parameters.....	133

10.3 Ports.....	134
10.3.1 Clock and Reset.....	134
10.3.2 AXI4 Read Address Channel (AR).....	134
10.3.3 AXI4 Read Data Channel (R).....	135
10.3.4 AR Packet Interface.....	135
10.3.5 R Packet Interface.....	136
10.4 Functional Description.....	136
10.4.1 Packet Formats.....	137
10.5 Timing Characteristics.....	139
10.6 Usage Examples.....	139
10.7 Design Notes.....	141
10.7.1 Skid Buffer Operation.....	141
10.7.2 Packet Packing Order.....	141
10.7.3 Internal Architecture.....	141
10.8 Related Modules.....	141
10.9 Testing.....	142
10.10 Navigation.....	142
11 AXI4 Master Stub.....	142
11.1 Overview.....	142
11.1.1 Key Features.....	142
11.2 Parameters.....	143
11.3 Ports.....	144
11.3.1 Clock and Reset.....	144
11.3.2 AXI4 Write Channels.....	144

11.3.3 AXI4 Read Channels.....	145
11.3.4 Write Packet Interfaces.....	146
11.3.5 Read Packet Interfaces.....	147
11.4 Functional Description.....	149
11.4.1 Packet Formats.....	150
11.4.2 Transaction Flow.....	150
11.5 Timing Characteristics.....	151
11.6 Usage Examples.....	152
11.7 Design Notes.....	155
11.7.1 Internal Architecture.....	155
11.7.2 Read/Write Independence.....	155
11.7.3 Skid Buffer Depths.....	155
11.8 Related Modules.....	156
11.9 Testing.....	156
11.10 Navigation.....	156
12 AXI4 Master Write.....	156
12.1 Overview.....	156
12.1.1 Key Features.....	157
12.2 Parameters.....	157
12.2.1 Derived Parameters (do not override).....	157
12.3 Ports.....	158
12.3.1 Clock and Reset.....	160
12.3.2 Frontend AXI Interface (fub_axi_*)......	160
12.3.3 Master AXI Interface (m_axi_*)......	161

12.3.4 Status Outputs.....	162
12.4 Functional Description.....	162
12.4.1 Architecture.....	162
12.4.2 Channel Operations.....	164
12.4.3 Busy Signal.....	164
12.5 Timing Characteristics.....	164
12.6 Usage Examples.....	165
12.7 Design Notes.....	166
12.7.1 Buffer Depth Selection.....	166
12.7.2 Recommended Configurations.....	167
12.7.3 Buffer Independence.....	167
12.7.4 Packet Preservation.....	167
12.7.5 Backpressure Handling.....	167
12.7.6 Reset Behavior.....	167
12.8 Related Modules.....	168
12.8.1 Companion Modules.....	168
12.8.2 Used Components.....	168
12.8.3 Related Infrastructure.....	168
12.9 Testing.....	168
12.10 References.....	168
12.10.1 Specifications.....	168
12.10.2 Source Code.....	168
12.10.3 Documentation.....	168
12.11 Navigation.....	169

13 AXI4 Master Write Interface (Clock-Gated).....	169
13.1 Overview.....	169
13.2 Parameters.....	169
13.2.1 Derived Parameters (do not override).....	170
13.3 Ports.....	171
13.4 Functional Description.....	173
13.5 Timing Characteristics.....	173
13.6 Usage Examples.....	174
13.7 Design Notes.....	174
13.8 Related Modules.....	175
13.9 Testing.....	175
13.10 Navigation.....	175
14 AXI4 Master Write Monitor.....	175
14.1 Overview.....	175
14.1.1 Key Features.....	176
14.2 Parameters.....	176
14.2.1 AXI4 Master Parameters.....	176
14.2.2 Monitor Parameters.....	177
14.2.3 Synthesis-Cone Parameters.....	179
14.2.4 Derived Parameters (do not override).....	180
14.3 Ports.....	180
14.3.1 AXI4 Write Channels.....	180
14.3.2 Monitor Configuration.....	180
14.3.3 Monitor Bus Output.....	181

14.3.4 Status Outputs.....	181
14.3.5 Packet filters.....	182
14.4 Functional Description.....	184
14.4.1 Monitor Backpressure (block_ready).....	184
14.4.2 Address-Range Checker.....	185
14.4.3 Performance Monitoring.....	185
14.4.4 Monitor Packet Format.....	188
14.5 Timing Characteristics.....	189
14.6 Waveforms.....	189
14.6.1 Scenario 1: Single-Beat Write Transaction.....	189
14.6.2 Scenario 2: Alternative Single-Beat Write.....	190
14.7 Usage Examples.....	190
14.7.1 Configuration Strategies.....	190
14.7.2 Basic Integration.....	191
14.8 Design Notes.....	193
14.8.1 Write-Specific Monitoring.....	193
14.8.2 Performance Considerations.....	193
14.8.3 Buffer Depth Guidelines.....	193
14.9 Related Modules.....	193
14.9.1 Companion Monitors.....	193
14.9.2 Base Modules.....	193
14.9.3 Used Components.....	194
14.10 Testing.....	194
14.11 References.....	194

14.11.1 Specifications.....	194
14.11.2 Source Code.....	194
14.11.3 Documentation.....	194
14.12 Navigation.....	194
15 AXI4 Master Write Monitor (Clock-Gated).....	195
15.1 Overview.....	195
15.2 Parameters.....	195
15.2.1 Filter configuration (forwarded).....	198
15.2.2 Derived Parameters (do not override).....	199
15.3 Ports.....	199
15.4 Functional Description.....	204
15.4.1 Performance Monitoring.....	204
15.5 Timing Characteristics.....	205
15.6 Usage Examples.....	206
15.7 Design Notes.....	206
15.8 Related Modules.....	206
15.9 Testing.....	207
15.10 Navigation.....	207
16 AXI4 Master Write with Lite Monitor.....	207
16.1 Overview.....	207
16.1.1 What is not here.....	208
16.1.2 Key Features.....	208
16.2 Parameters.....	208
16.2.1 Monitor Parameters.....	208

16.2.2 Core Parameters (passed through to axi4_master_wr).....	209
16.3 Ports.....	210
16.3.1 Monitor Control, Bus and Status.....	210
16.3.2 Core Ports (as on axi4_master_wr).....	212
16.4 Functional Description.....	214
16.5 Timing Characteristics.....	214
16.6 Usage Examples.....	215
16.7 Design Notes.....	215
16.8 Related Modules.....	216
16.9 Testing.....	216
16.10 Navigation.....	216
17 AXI4 Master Write Stub.....	216
17.1 Overview.....	216
17.1.1 Key Features.....	217
17.2 Parameters.....	217
17.3 Ports.....	218
17.3.1 Clock and Reset.....	218
17.3.2 AXI4 Write Address Channel (AW).....	218
17.3.3 AXI4 Write Data Channel (W).....	219
17.3.4 AXI4 Write Response Channel (B).....	219
17.3.5 AW Packet Interface.....	219
17.3.6 W Packet Interface.....	220
17.3.7 B Packet Interface.....	220
17.4 Functional Description.....	221

17.4.1 Packet Formats.....	222
17.5 Timing Characteristics.....	224
17.6 Usage Examples.....	224
17.7 Design Notes.....	226
17.7.1 Skid Buffer Operation.....	226
17.7.2 Channel Independence.....	226
17.7.3 Packet Packing Order.....	226
17.7.4 Internal Architecture.....	226
17.8 Related Modules.....	227
17.9 Testing.....	227
17.10 Navigation.....	227
18 AXI4 Slave Read.....	227
18.1 Overview.....	227
18.1.1 Key Features.....	228
18.2 Parameters.....	228
18.2.1 Derived Parameters (do not override).....	228
18.3 Ports.....	229
18.3.1 Clock and Reset.....	230
18.3.2 Slave AXI Interface (s_axi_*)......	231
18.3.3 Backend Interface (fub_axi_*)......	232
18.3.4 Status Outputs.....	232
18.4 Functional Description.....	232
18.4.1 Architecture.....	232
18.4.2 Channel Operations.....	233

18.4.3 Busy Signal.....	234
18.5 Timing Characteristics.....	234
18.6 Usage Examples.....	234
18.7 Design Notes.....	236
18.7.1 Buffer Depth Selection.....	236
18.7.2 Recommended Configurations.....	236
18.7.3 Buffer Independence.....	236
18.7.4 Packet Preservation.....	237
18.7.5 Backpressure Handling.....	237
18.7.6 ID and Burst Handling.....	237
18.7.7 Reset Behavior.....	237
18.8 Related Modules.....	237
18.8.1 Companion Modules.....	237
18.8.2 Used Components.....	237
18.8.3 Related Infrastructure.....	237
18.9 Testing.....	238
18.10 References.....	238
18.10.1 Specifications.....	238
18.10.2 Source Code.....	238
18.10.3 Documentation.....	238
18.11 Navigation.....	238
19 AXI4 Slave Read Interface (Clock-Gated).....	238
19.1 Overview.....	239
19.2 Parameters.....	239

19.2.1 Derived Parameters (do not override).....	240
19.3 Ports.....	240
19.4 Functional Description.....	242
19.5 Timing Characteristics.....	242
19.6 Usage Examples.....	243
19.7 Design Notes.....	243
19.8 Related Modules.....	244
19.9 Testing.....	244
19.10 Navigation.....	244
20 AXI4 Slave Read Monitor.....	244
20.1 Overview.....	244
20.1.1 Key Features.....	245
20.2 Parameters.....	245
20.2.1 AXI4 Slave Parameters.....	245
20.2.2 Monitor Parameters.....	246
20.2.3 Synthesis-Cone Parameters.....	248
20.2.4 Derived Parameters (do not override).....	249
20.3 Ports.....	249
20.3.1 AXI4 Read Channels.....	249
20.3.2 Monitor Configuration.....	249
20.3.3 Monitor Bus Output.....	250
20.3.4 Status Outputs.....	250
20.3.5 Packet filters.....	251
20.4 Functional Description.....	252

20.4.1 Monitor Backpressure (block_ready).....	253
20.4.2 Address-Range Checker.....	253
20.4.3 Performance Monitoring.....	254
20.4.4 Monitor Packet Format.....	257
20.5 Timing Characteristics.....	257
20.6 Waveforms.....	257
20.6.1 Scenario 1: Single-Beat Read (Slave View).....	257
20.6.2 Scenario 2: Alternative Single-Beat Read (Slave View).....	258
20.7 Usage Examples.....	258
20.8 Design Notes.....	260
20.8.1 Slave-Side Monitoring.....	260
20.8.2 Performance Considerations.....	261
20.8.3 Buffer Depth Guidelines.....	261
20.9 Related Modules.....	261
20.9.1 Companion Monitors.....	261
20.9.2 Base Modules.....	261
20.9.3 Used Components.....	261
20.10 Testing.....	262
20.11 References.....	262
20.11.1 Specifications.....	262
20.11.2 Source Code.....	262
20.11.3 Documentation.....	262
20.12 Navigation.....	262
21 AXI4 Slave Read Monitor (Clock-Gated).....	263

21.1 Overview.....	263
21.2 Parameters.....	263
21.2.1 Filter configuration (forwarded).....	265
21.2.2 Derived Parameters (do not override).....	266
21.3 Ports.....	266
21.4 Functional Description.....	271
21.4.1 Performance Monitoring.....	271
21.5 Timing Characteristics.....	272
21.6 Usage Examples.....	272
21.7 Design Notes.....	273
21.8 Related Modules.....	273
21.9 Testing.....	274
21.10 Navigation.....	274
22 AXI4 Slave Read with Lite Monitor.....	274
22.1 Overview.....	274
22.1.1 What is not here.....	274
22.1.2 Key Features.....	275
22.2 Parameters.....	275
22.2.1 Monitor Parameters.....	275
22.2.2 Core Parameters (passed through to axi4_slave_rd).....	276
22.3 Ports.....	277
22.3.1 Monitor Control, Bus and Status.....	277
22.3.2 Core Ports (as on axi4_slave_rd).....	278
22.4 Functional Description.....	281

22.5 Timing Characteristics.....	281
22.6 Usage Examples.....	281
22.7 Design Notes.....	282
22.8 Related Modules.....	282
22.9 Testing.....	282
22.10 Navigation.....	283
23 AXI4 Slave Read Stub.....	283
23.1 Overview.....	283
23.1.1 Key Features.....	283
23.2 Parameters.....	283
23.3 Ports.....	284
23.3.1 Clock and Reset.....	284
23.3.2 AXI4 Read Address Channel (AR).....	284
23.3.3 AXI4 Read Data Channel (R).....	285
23.3.4 AR Packet Interface.....	286
23.3.5 R Packet Interface.....	286
23.4 Functional Description.....	287
23.4.1 Packet Formats.....	287
23.5 Timing Characteristics.....	289
23.6 Usage Examples.....	289
23.7 Design Notes.....	290
23.7.1 Skid Buffer Operation.....	290
23.7.2 Packet Packing Order.....	291
23.7.3 Internal Architecture.....	291

23.8 Related Modules.....	291
23.9 Testing.....	291
23.10 Navigation.....	291
24 AXI4 Slave Stub.....	292
24.1 Overview.....	292
24.1.1 Key Features.....	292
24.2 Parameters.....	292
24.3 Ports.....	293
24.3.1 Clock and Reset.....	293
24.3.2 AXI4 Write Channels.....	294
24.3.3 AXI4 Read Channels.....	295
24.3.4 Write Packet Interfaces.....	296
24.3.5 Read Packet Interfaces.....	297
24.4 Functional Description.....	297
24.4.1 Architecture.....	297
24.4.2 Packet Formats.....	299
24.4.3 Transaction Flow.....	299
24.5 Timing Characteristics.....	300
24.6 Usage Examples.....	301
24.7 Design Notes.....	304
24.7.1 Internal Architecture.....	304
24.7.2 Read/Write Independence.....	304
24.7.3 Skid Buffer Depths.....	304
24.7.4 Memory Model Integration.....	304

24.8 Related Modules.....	305
24.9 Testing.....	305
24.10 Navigation.....	305
25 AXI4 Slave Write.....	305
25.1 Overview.....	306
25.1.1 Key Features.....	306
25.2 Parameters.....	306
25.3 Ports.....	307
25.3.1 Clock and Reset.....	309
25.3.2 Slave AXI Interface (s_axi_*).	309
25.3.3 Backend Interface (fub_axi_*).	311
25.3.4 Status Outputs.....	311
25.4 Functional Description.....	311
25.4.1 Architecture.....	311
25.4.2 Channel Operations.....	313
25.4.3 Busy Signal.....	313
25.5 Timing Characteristics.....	313
25.6 Usage Examples.....	314
25.7 Design Notes.....	315
25.7.1 Buffer Depth Selection.....	315
25.7.2 Recommended Configurations.....	316
25.7.3 Buffer Independence.....	316
25.7.4 Packet Preservation.....	316
25.7.5 Backpressure Handling.....	316

25.7.6 ID and Burst Handling.....	316
25.7.7 Reset Behavior.....	317
25.8 Related Modules.....	317
25.8.1 Companion Modules.....	317
25.8.2 Used Components.....	317
25.8.3 Related Infrastructure.....	317
25.9 Testing.....	317
25.10 References.....	317
25.10.1 Specifications.....	317
25.10.2 Source Code.....	317
25.10.3 Documentation.....	317
25.11 Navigation.....	318
26 AXI4 Slave Write Interface (Clock-Gated).....	318
26.1 Overview.....	318
26.2 Parameters.....	318
26.2.1 Derived Parameters (do not override).....	319
26.3 Ports.....	320
26.4 Functional Description.....	322
26.5 Timing Characteristics.....	322
26.6 Usage Examples.....	323
26.7 Design Notes.....	323
26.8 Related Modules.....	324
26.9 Testing.....	324
26.10 Navigation.....	324

27 AXI4 Slave Write Monitor.....	324
27.1 Overview.....	324
27.1.1 Key Features.....	325
27.2 Parameters.....	325
27.2.1 AXI4 Slave Parameters.....	325
27.2.2 Monitor Parameters.....	326
27.2.3 Synthesis-Cone Parameters.....	328
27.2.4 Derived Parameters (do not override).....	329
27.3 Ports.....	329
27.3.1 AXI4 Write Channels.....	329
27.3.2 Monitor Configuration.....	329
27.3.3 Monitor Bus Output.....	330
27.3.4 Status Outputs.....	330
27.3.5 Packet filters.....	331
27.4 Functional Description.....	333
27.4.1 Monitor Backpressure (block_ready).....	333
27.4.2 Address-Range Checker.....	334
27.4.3 Performance Monitoring.....	334
27.4.4 Monitor Packet Format.....	337
27.5 Timing Characteristics.....	337
27.6 Waveforms.....	338
27.6.1 Scenario 1: Single-Beat Write (Slave View).....	338
27.6.2 Scenario 2: Alternative Single-Beat Write (Slave View).....	338
27.7 Usage Examples.....	339

27.8 Design Notes.....	341
27.8.1 Configuration Strategies.....	341
27.8.2 Slave-Side Monitoring.....	342
27.8.3 Performance Considerations.....	342
27.8.4 Buffer Depth Guidelines.....	343
27.8.5 Write Transaction Characteristics.....	343
27.9 Related Modules.....	343
27.9.1 Companion Monitors.....	343
27.9.2 Base Modules.....	343
27.9.3 Used Components.....	343
27.10 Testing.....	344
27.11 References.....	344
27.11.1 Specifications.....	344
27.11.2 Source Code.....	344
27.11.3 Documentation.....	344
27.12 Navigation.....	344
28 AXI4 Slave Write Monitor (Clock-Gated).....	344
28.1 Overview.....	345
28.2 Parameters.....	345
28.2.1 Filter configuration (forwarded).....	347
28.2.2 Derived Parameters (do not override).....	348
28.3 Ports.....	348
28.4 Functional Description.....	354
28.4.1 Performance Monitoring.....	354

28.5 Timing Characteristics.....	354
28.6 Usage Examples.....	355
28.7 Design Notes.....	355
28.8 Related Modules.....	356
28.9 Testing.....	356
28.10 Navigation.....	356
29 AXI4 Slave Write with Lite Monitor.....	356
29.1 Overview.....	356
29.1.1 What is not here.....	357
29.1.2 Key Features.....	357
29.2 Parameters.....	357
29.2.1 Monitor Parameters.....	357
29.2.2 Core Parameters (passed through to axi4_slave_wr).....	358
29.3 Ports.....	359
29.3.1 Monitor Control, Bus and Status.....	359
29.3.2 Core Ports (as on axi4_slave_wr).....	361
29.4 Functional Description.....	363
29.5 Timing Characteristics.....	363
29.6 Usage Examples.....	364
29.7 Design Notes.....	364
29.8 Related Modules.....	365
29.9 Testing.....	365
29.10 Navigation.....	365
30 AXI4 Slave Write Stub.....	365

30.1 Overview.....	366
30.1.1 Key Features.....	366
30.2 Parameters.....	366
30.3 Ports.....	367
30.3.1 Clock and Reset.....	367
30.3.2 AXI4 Write Address Channel (AW).....	367
30.3.3 AXI4 Write Data Channel (W).....	368
30.3.4 AXI4 Write Response Channel (B).....	368
30.3.5 AW Packet Interface.....	368
30.3.6 W Packet Interface.....	369
30.3.7 B Packet Interface.....	369
30.4 Functional Description.....	369
30.4.1 Architecture.....	369
30.4.2 Packet Formats.....	371
30.5 Timing Characteristics.....	372
30.6 Usage Examples.....	373
30.7 Design Notes.....	375
30.7.1 Skid Buffer Operation.....	375
30.7.2 Channel Independence.....	375
30.7.3 Packet Packing Order.....	375
30.7.4 Internal Architecture.....	375
30.8 Related Modules.....	375
30.9 Testing.....	375
30.10 Navigation.....	376

1 AXI4 (Advanced eXtensible Interface) Modules

Location: rtl/amba/axi4/ **Test Location:** val/amba/ **Status:** Production Ready

1.1 Overview

The AXI4 subsystem is a complete implementation of the ARM AMBA AXI4 protocol: masters, slaves, monitors, data width converters, and interconnect components. AXI4 is the high-performance, high-frequency protocol in the AMBA family, designed for multi-master, multi-slave systems with out-of-order transaction support. This page is the map — what exists, where it lives, and how the pieces fit together.

1.1.1 Key Features

- **Full AXI4 Protocol Support:** Complete implementation of read and write channels
- **Burst Transactions:** Support for fixed, incrementing, and wrapping bursts
- **Out-of-Order Transparent:** AxID/RID/BID are carried end-to-end, so out-of-order slaves are supported; the buffer modules themselves are ID-agnostic pass-throughs and do not reorder or track transactions
- **Quality of Service (QoS):** Priority-based arbitration support
- **Monitoring Infrastructure:** Comprehensive verification and debug capabilities
- **Data Width Conversion:** Automatic upsizing and downsizing
- **Clock Gating Variants:** Power-optimized versions with dynamic gating

1.1.2 Module Categories

1.1.2.1 Core Master/Slave Modules

Module	Description	Documentation	Status
axi4_master_rd	AXI4 read master with buffered channels	axi4_master_rd.md	Documented
axi4_master_wr	AXI4 write master with buffered channels	axi4_master_wr.md	Documented
axi4_cdc_wr /	AXI4 channels across a clock-domain	axi4_cdc.md	Documented

Module	Description	Documentation	Status
axi4_cdc_rd	boundary, one async FIFO per channel		
axi4_slave_rd	AXI4 read slave with buffered channels	axi4_slave_rd.md	Documented
axi4_slave_wr	AXI4 write slave with buffered channels	axi4_slave_wr.md	Documented

1.1.2.2 Monitor Modules (Verification)

Module	Description	Documentation	Status
axi4_master_rd_mon	Read master with integrated monitoring	axi4_master_rd_mon.md	Documented
axi4_master_wr_mon	Write master with integrated monitoring	axi4_master_wr_mon.md	Documented
axi4_slave_rd_mon	Read slave with integrated monitoring	axi4_slave_rd_mon.md	Documented
axi4_slave_wr_mon	Write slave with integrated monitoring	axi4_slave_wr_mon.md	Documented

1.1.2.3 Data Width Converters

Module	Description	Documentation	Status
axi4_dwidth_h_converter	Bidirectional data width conversion	axi4_dwidth_converter.md	Planned - no RTL
axi4_dwidth_h_converter_rd	Read-only data width conversion	converters MAS 2.6	Not in rtl/amba — converters component
axi4_dwidth_h_converter_wr	Write-only data width conversion	converters MAS 2.5	Not in rtl/amba — converters component

The converters live in projects/components/converters/rtl/, not rtl/amba/axi4/.

1.1.2.4 Clock-Gated Variants

All clock-gated variants documented in: [axi4_clock_gating_guide.md](#)

Module	Base Module	Status
axi4_master_rd_cg	axi4_master_rd	Documented
axi4_master_wr_cg	axi4_master_wr	Documented
axi4_slave_rd_cg	axi4_slave_rd	Documented
axi4_slave_wr_cg	axi4_slave_wr	Documented
axi4_master_rd_m on_cg	axi4_master_rd_mon	Documented
axi4_master_wr_m on_cg	axi4_master_wr_mon	Documented
axi4_slave_rd_mon _cg	axi4_slave_rd_mon	Documented
axi4_slave_wr_mon _cg	axi4_slave_wr_mon	Documented

1.2 Functional Description

1.2.1 Channel Architecture

AXI4 uses five independent channels for read and write transactions:

Write Transaction: 1. **AW (Write Address)** - Master → Slave: Address and control 2. **W (Write Data)** - Master → Slave: Data and strobes 3. **B (Write Response)** - Slave → Master: Completion status

Read Transaction: 1. **AR (Read Address)** - Master → Slave: Address and control 2. **R (Read Data)** - Slave → Master: Data and response

1.2.2 Key Signals

Address Channels (AR/AW): - ARID/AWID - Transaction ID for reordering - ARADDR/AWADDR - Byte address - ARLEN/AWLEN - Burst length (1-256 beats) - ARSIZE/AWSIZE - Transfer size (1, 2, 4, 8, 16, ... 128 bytes) - ARBURST/AWBURST - Burst type (FIXED, INCR, WRAP) - ARCACHE/AWCACHE - Cache attributes - ARPROT/AWPROT - Protection attributes - ARQOS/AWQOS - Quality of Service

Data Channels (R/W): - RID - Read data transaction ID - RDATA/WDATA - Transfer data - RRESP/BRESP - Response (OKAY, EXOKAY, SLVERR, DECERR) - RLAST/WLAST - Last transfer in burst - WSTRB - Write strobes (byte lane enables)

AXI4 vs AXI3 note: AXI4 removed WID. Write data beats are matched to their address by ordering alone, so write bursts from a single master cannot be interleaved. None of the modules here implement or expect WID.

Exclusive access: EXOKAY appears in the RRESP/BRESP encodings because it is part of the AXI4 protocol, but no module in this subsystem implements an exclusive monitor. AxLOCK and any EXOKAY response are carried through untouched; exclusive-access semantics must be provided by the endpoint slave.

1.3 Timing

1.3.1 Throughput

Configuration	Address CH	Data CH	Notes
Single transaction	1 txn/cycle	1 beat/cycle	When buffers not stalled
Burst (len=16)	1 txn/16 cycles	1 beat/cycle	Sustained
Multiple outstanding	Up to MAX_TRANS	1 beat/cycle	Out-of-order

1.3.2 Latency

Path	Cycles	Notes
AR → R (single)	2-3	Minimum read latency
AW → B (single)	2-3	Minimum write latency
Buffer overhead	+1 per channel	Skid buffer latency

1.3.3 Resource Usage

Module Type	LUTs	FFs	BRAM	Notes
Master/Slave (32-bit)	~500	~330	0	Per direction (rd/wr). FFs are the SKID payloads: AR 70 b x 2 + R 44 b x 4 + control
Monitor (+mon)	thousands	>10,000	0	At the default MAX_TRANSAC

Module Type	LUTs	FFs	BRAM	Notes
				CTIONS = 16. See below – this is NOT a small addition
Clock-gated (+cg)	not measured	+5	0	Counted from the RTL: r_wakeup (1 FF, amba_clock_ gate_ctrl) + r_idle_coun ter (IDLE_CNTR_W IDTH, default 4, clock_gate_ ctrl). Scales as 1 + CG_IDLE_COU NT_WIDTH. The ICG is a latch/BUFGC E, not a fabric flop

The monitor row deserves the emphasis. It is a structural floor, counted from the RTL rather than estimated, so synthesis can only add to it:

Contributor	FFs	Where
Transaction table	4,560	bus_transaction_t is 285 bits x MAX_TRANSACTIONS = 16
Reporter's local copy	4,560	r_trans_table_local – a second full snapshot
Timeout timers	768	3 phases x 16 slots x 16 bits

Contributor	FFs	Where
Threshold latency	512	16 slots x 32 bits
Floor	>10,000	plus the interrupt FIFO and the CAM compare/priority- encoder LUTs

This table previously said “+800 FFs”, which is roughly **13x low**. Budget a monitored interface accordingly: four monitors is tens of thousands of flops, not a few thousand. MAX_TRANSACTIONS is the knob – the cost is linear in it, and NUM_BANKS exists because 40 slots did not close timing where 16 did.

1.4 Usage Example

1.4.1 Basic Read Master

```
axi4_master_rd #(
    .SKID_DEPTH_AR(2),
    .SKID_DEPTH_R(4),
    .AXI_ID_WIDTH(4),
    .AXI_ADDR_WIDTH(32),
    .AXI_DATA_WIDTH(64)
) u_rd_master (
    .aclk          (axi_clk),
    .aresetn       (axi_resetn),

    // Frontend interface
    .fub_axi_arid   (cpu_arid),
    .fub_axi_araddr (cpu_araddr),
    .fub_axi_arlen  (cpu_arlen),
    // ... rest of AR/R signals

    // Master interface
    .m_axi_arid     (m_axi_arid),
    .m_axi_araddr   (m_axi_araddr),
    // ... rest of AR/R signals

    .busy           (rd_busy)
);
```

1.4.2 Basic Write Slave

```
axi4_slave_wr #(
    .SKID_DEPTH_AW(2),
```

```

        .SKID_DEPTH_W(4),
        .SKID_DEPTH_B(2),
        .AXI_ID_WIDTH(4),
        .AXI_ADDR_WIDTH(32),
        .AXI_DATA_WIDTH(64)
    ) u_wr_slave (
        .aclk                (axi_clk),
        .aresetn              (axi_resetn),

        // Slave interface (from interconnect)
        .s_axi_awid           (s_axi_awid),
        .s_axi_awaddr         (s_axi_awaddr),
        // ... rest of AW/W/B signals

        // Backend interface (to memory/logic)
        .fub_axi_awid         (mem_awid),
        .fub_axi_awaddr       (mem_awaddr),
        // ... rest of AW/W/B signals

        .busy                  (wr_busy)
    );

```

1.4.3 Monitor Integration

```

axi4_master_rd_mon #(
    .SKID_DEPTH_AR(2),
    .SKID_DEPTH_R(4),
    .AXI_ID_WIDTH(4),
    .AXI_ADDR_WIDTH(32),
    .AXI_DATA_WIDTH(64),
    .UNIT_ID(1),
    .AGENT_ID(10),
    .MAX_TRANSACTIONS(16),
    .ENABLE_FILTERING(1)
) u_rd_mon (
    .aclk                (axi_clk),
    .aresetn              (axi_resetn),

    // AXI interfaces
    .fub_axi_*(frontend_axi_*),
    .m_axi_*(master_axi_*),

    // Monitor configuration
    .cfg_monitor_enable   (1'b1),
    .cfg_error_enable     (1'b1),
    .cfg_timeout_enable   (1'b1),
    .cfg_perf_enable      (1'b0),
    .cfg_timeout_cycles   (16'd1000),

```

```

// Filtering configuration
.cfg_axi_pkt_mask      (16'b1111_1111_0000_0011),
.cfg_axi_error_mask    (16'h0000),
// ... rest of mask signals

// Monitor bus output
.monbus_valid          (mon_valid),
.monbus_ready          (mon_ready),
.monbus_packet         (mon_packet),

// Status
.busy                  (rd_busy),
.active_transactions   (rd_active),
.error_count           (rd_errors)
);

```

1.5 Design Notes

1.5.1 Design Patterns

1.5.1.1 Pattern 1: Buffered Master/Slave

All core modules use `gaxi_skid_buffer` for elastic buffering: - Decouples frontend and backend timing - Configurable depth per channel - Minimal latency overhead (1 cycle) - Full backpressure handling

1.5.1.2 Pattern 2: Monitor Integration

Monitor modules combine functional core with verification: - Non-invasive monitoring (tap signals) - 2-Level Filtering: packet-type drop masks + per-event masks (`err_select` is reserved – no routing) - 128-bit standardized monitor bus + 64-bit side-band timestamp (`monitor_common_pkg::monitor_packet_t / monbus_timestamp_t`; field layout is documented in the [monitor bus group reference](#)) - Real-time error detection

1.5.1.3 Pattern 3: Clock Gating

Clock-gated variants (`*_cg`) add power management: - Dynamic clock gating based on busy signal - Test mode support for scan insertion - Minimal area overhead

1.5.2 ID Width Selection

Choose ID width based on system requirements: - **4 bits (16 IDs)**: Single master systems, simple slaves - **8 bits (256 IDs)**: Multi-master systems, reordering support - **12+ bits**: Large systems, extensive out-of-order capability

1.5.3 Buffer Depth Guidelines

SKID_DEPTH_* is an entry count, not a log2 exponent: SKID_DEPTH_AR = 2 gives a 2-entry buffer, not 4. The underlying gaxi_skid_buffer allocates one register slot per entry and tracks occupancy with a 4-bit counter; legal values are 2..8 inclusive (any integer – odd depths are legal). Values above 8 fail elaboration (the guard errors rather than overflowing); place a gaxi_fifo_sync stage ahead of the module when deeper elasticity is required.

Address Channels (AR/AW): - Default: 2 entries - sufficient for most cases - Increase for high-latency address decode or frequent backpressure

Data Channels (R/W): - Default: 4 entries - accommodates moderate bursts - Increase for large bursts (AWLEN/ARLEN > 8) - Use 8 entries for variable latency backends

Response Channel (B): - Default: 2 entries - responses are single-beat - Increase for many concurrent outstanding writes

1.5.4 Burst Optimization

Optimize burst parameters for efficiency:

```
// Cache line burst (64 bytes, 8x 64-bit)
.ARLEN      = 8'd7,           // 8 beats
.ARSIZE     = 3'b011,        // 8 bytes per beat
.ARBURST    = 2'b01          // INCR
```

1.6 Related Modules

1.6.1 RTL Design Sherpa Documentation

- [rtl-amba Overview](#) - Complete AMBA subsystem architecture
- [APB Modules](#) - Advanced Peripheral Bus
- [AXIL4 Modules](#) - AXI4-Lite (simplified protocol)
- [AXIS4 Modules](#) - AXI4-Stream (streaming data)
- [GAXI Modules](#) - Generic AXI utilities (buffers, FIFOs)

1.6.2 Configuration and Integration

- [AXI Monitor Configuration Guide](#) - Monitor setup strategies
- [Monitor Packet Specification](#) - 128-bit packet format (+ 64-bit side-band timestamp)

1.6.3 Source Code

- RTL: rtl/amba/axi4/

- Tests: val/amba/test_axi4*.py
 - Framework: bin/TBClasses/components/axi4/
 - Shared Infrastructure: rtl/amba/shared/ (monitor base, transaction manager)
-

1.7 Testing

All AXI4 modules are verified using CocoTB-based testbenches:

Run all AXI4 tests

```
pytest val/amba/test_axi4*.py -v
```

Run specific module tests

```
pytest val/amba/test_axi4_master_rd.py -v
```

```
pytest val/amba/test_axi4_slave_wr.py -v
```

```
pytest val/amba/test_axi4_master_rd_mon.py -v
```

Run data width converter tests

```
pytest val/amba/test_axi4_dwidth_converter*.py -v
```

Run with waveforms

```
pytest val/amba/test_axi4_master_rd.py --vcd=waves.vcd -v
```

1.8 References

1.8.1 Protocol Specifications

- ARM IHI 0022E: AMBA AXI Protocol Specification (AXI4)
 - ARM IHI 0022D: AMBA AXI and ACE Protocol Specification (AXI3/AXI4/AXI5)
-

Last Updated: 2025-10-20

1.9 Navigation

- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

2 axi4_cdc_wr / axi4_cdc_rd

Files: rtl/amba/axi4/axi4_cdc_wr.sv, rtl/amba/axi4/axi4_cdc_rd.sv **Filelists:** rtl/amba/filelists/axi4_cdc_wr.f, axi4_cdc_rd.f (each -f's
rtl/cdc/filelists/gaxi_fifo_async.f) **Test:** val/amba/test_axi4_cdc.py
(bin/TBClasses/amba/axi4_cdc_tb.py)

2.1 What it is

AXI4 channels carried across a clock-domain boundary: s_axi_* on s_aclk/s_aresetn, m_axi_* on m_aclk/m_aresetn. One gaxi_fifo_async per channel, each crossing in the channel's own direction – AW, W and AR from the requester's domain into the completer's, B and R back. There is no protocol state, no ID logic and no reordering: each channel is an in-order FIFO, so what a channel accepts on one side it presents on the other, later. AW and W cross independently, as AXI permits.

Built for the bridge generator's CDC slave ports (BRIDGE-017): a slave port declared `cdc = true` gets these between the crossbar-side wrapper and its boundary, and its own `<slave>_aclk / <slave>_aresetn` pins on the bridge top. The pair stands on its own as an AXI4 clock converter.

2.2 Parameters

Parameter	Default	Description
AXI_ID_WIDTH, AXI_ADDR_WIDTH, AXI_DATA_WIDTH, AXI_USER_WIDTH	8, 32, 32, 1	port widths, both sides
CDC_DEPTH	8	entries per channel FIFO; also the beats a channel can have in flight across the boundary. Power of 2 under Gray pointers. 8 is the floor for full throughput: the pointer synchronizers make the FIFO's full/empty view about seven cycles stale round trip, and a 4-deep FIFO streams at 4/7 of a beat per cycle (measured

Parameter	Default	Description
USE_JOHNSON	0	0.58) 0 = Gray pointers (default), 1 = Johnson (any depth). Hoisted per the CDC handbook rule – a conscious choice, never the FIFO’s own default
N_FLOP_CROSS	2	synchronizer depth for the crossed pointers

2.3 Reset

Both domains reset each FIFO’s own pointer and its crossed copy of the remote pointer from that domain’s reset. With both resets asserted together the crossing starts consistent. A **one-sided reset is not safe**: within N_FLOP_CROSS clocks of deassertion the crossed copy re-converges on a remote pointer that kept moving, so a requester-side-only reset fabricates entries and a completer-side-only reset replays them. Quiesce the bus before resetting one side – the same contract as `apb4_slave_cdc`, spelled out in `vault/handbook/design/cdc.md`.

2.4 Throughput and latency

One beat per clock of the slower domain per channel, once the FIFO has something to offer, provided CDC_DEPTH covers the pointer round trip: each side’s view of the other’s pointer is N_FLOP_CROSS plus a register stale, so a FIFO shallower than that round trip (about seven cycles with the defaults) stalls on a full or empty flag that is already out of date. At depth 4 the crossing streams at 0.58 beat per cycle with equal clocks; at the default 8 it streams at one. `test_axi4_cdc` asserts the streaming rate at three clock ratios, so a depth that cannot keep up fails the unit test before it reaches a bridge. Latency per crossing is the synchronizer depth plus the FIFO’s registered flags, N_FLOP_CROSS + 1 clocks of the destination domain, each way.

2.5 Verification

`test_axi4_cdc.py` runs each module with the requester and completer at equal, requester-fast (10/3 ns) and requester-slow (3/10 ns) periods, 32- and 64-bit at FULL: sequential bursts of up to 16 beats (data straight out of the completer’s memory, W beats contiguous and in order at the completer, WLAST on the last crossed beat, R beats in order at the requester), many bursts in flight at once with rotating IDs, and an out-of-range access whose SLVERR must come back through the response crossing with nothing written.

3 AXI4 Clock-Gated Variants Guide

Location: rtl/amba/axi4/*_cg.sv **Status:** Production Ready

3.1 Overview

Every AXI4 module in this subsystem ships with a clock-gated (`_cg`) variant that adds power management through dynamic clock gating. The idea is simple: when the interfaces go idle for a configurable stretch, the clock stops, and the dynamic power goes with it. When traffic shows up again, the clock restarts on its own.

3.1.1 Available Clock-Gated Modules

Module	Base Module	Description
<code>axi4_master_rd_cg</code>	<code>axi4_master_rd</code>	Clock-gated read master
<code>axi4_master_wr_cg</code>	<code>axi4_master_wr</code>	Clock-gated write master
<code>axi4_slave_rd_cg</code>	<code>axi4_slave_rd</code>	Clock-gated read slave
<code>axi4_slave_wr_cg</code>	<code>axi4_slave_wr</code>	Clock-gated write slave
<code>axi4_master_rd_mon_cg</code>	<code>axi4_master_rd_mon</code>	Clock-gated read master with monitoring
<code>axi4_master_wr_mon_cg</code>	<code>axi4_master_wr_mon</code>	Clock-gated write master with monitoring
<code>axi4_slave_rd_mon_cg</code>	<code>axi4_slave_rd_mon</code>	Clock-gated read slave with monitoring
<code>axi4_slave_wr_mon_cg</code>	<code>axi4_slave_wr_mon</code>	Clock-gated write slave with monitoring

3.1.2 Key Features

- **Dynamic Clock Gating:** Automatic clock disable during idle periods
- **Configurable Idle Threshold:** Programmable idle count before gating
- **Functional Equivalence** for the plain `_cg` wrappers (minus the un-exported busy); the `_mon_cg` wrappers forward every base parameter except `ACTIVE_TRANS_THRESHOLD` (harmless – its inner default is derived

from the forwarded MAX_TRANSACTION) and tie off debug_block_ready – see their pages

- **Status Monitoring:** Real-time gating and idle status outputs
 - **Test Mode Support:** Bypass capability for scan testing
 - **Low Ungating Overhead:** One register stage on the wake-up path; the first usable gated-clock edge arrives 2 cycles after activity is seen
-

3.2 Parameters

Parameter	Type	Default	Description
CG_IDLE_COUNT_WIDTH	int	4	Width of idle counter (max idle = 2^N-1 cycles)

All other parameters are identical to the base module.

3.3 Ports

3.3.1 Clock Gating Configuration Inputs

Port	Direction	Width	Description
cfg_cg_enable	Input	1	Enable clock gating (0=disabled, 1=enabled)
cfg_cg_idle_count	Input	CG_IDLE_COUNT_WIDTH	Idle cycles before gating; the clock gates $\text{cfg_cg_idle_count} + 1$ cycles after the internal wakeup deasserts, which is $\text{cfg_cg_idle_count} + 2$ cycles after the last bus activity on AXI4 (one extra for the r_wakeup flop)

3.3.2 Clock Gating Status Outputs

Port	Direction	Width	Description
cg_gating	Output	1	Clock currently gated (1=gated, 0=running)

Port	Direction	Width	Description
cg_idle	Output	1	All internal buffers empty (1=idle, 0=active)

The `_cg` wrappers expose gating state only. They do not implement a cumulative gated-cycle counter; accumulate `cg_gating` externally if a power metric is needed.

All other ports are identical to the base module, with two exceptions: the plain `_cg` wrappers do NOT re-export the base busy output (it is consumed internally as a wake term), and the `_mon_cg` wrappers tie off `debug_block_ready` rather than forwarding it. Connect either of those and elaboration fails – use the base module when you need them.

3.4 Functional Description

3.4.1 Gating Conditions (All Must Be True)

1. **Interface Idle:** No valid/ready handshakes on any AXI channel
2. **Idle Duration:** Idle for `cfg_cg_idle_count + 1` consecutive cycles measured from the internal wakeup deassertion, which is `cfg_cg_idle_count + 2` cycles from the last bus activity
3. **Gating Enabled:** `cfg_cg_enable = 1`

3.4.2 Ungating Conditions (Any Triggers Ungating)

1. Any `*valid` signal asserted on any channel
2. `cfg_cg_enable` deasserted (opens the clock immediately). NOTE: `cfg_cg_idle_count` is NOT a wake trigger – while gated, changing it has no effect until bus activity wakes the block (the counter only reloads on wakeup or !enable)

Ungating Latency: activity is registered once (AXI4, AXI5, AXI4-Lite, AXI4-Stream) or twice (APB, APB5, AXI5-Stream) before reaching the ICG enable, which is combinational. The AXI4 `_cg` wrappers drive `user_valid/axi_valid` combinational, so there is exactly **1 register stage** — `r_wakeup` inside `amba_clock_gate_ctrl` — and the first gated-clock rising edge available to the block arrives **2 cycles** after activity asserts.

stateDiagram-v2

```
[*] --> RUNNING
```

```

RUNNING --> IDLE : activity = 0<br/>(no valid signals)
IDLE --> RUNNING : wakeup (activity) or !cfg_cg_enable
IDLE --> GATED : count >= threshold<br/>&& cg_enable
GATED --> RUNNING : activity detected<br/>(any valid signal)

```

```

state RUNNING {
    note right of RUNNING : Clock running normally
}

state IDLE {
    note right of IDLE : Counting idle cycles
}

state GATED {
    note right of GATED : Clock stopped
}

```

3.5 Timing

3.5.1 Ungating Latency

One register stage on the wake-up path; the first usable gated-clock edge arrives 2 cycles after activity asserts. `clock_gate_ctrl` adds no flop of its own — `w_gate_enable` is combinational from wakeup into the ICG enable, and its header comment “Wakeup: 1 clock from wakeup assertion to clock restoration” describes the resulting clock edge rather than a register stage.

Cycle N: Interface idle, clock gated. `ARVALID` asserted; `user_valid = 1`

combinationally, `ARREADY` forced low so no handshake occurs.

Cycle N+1: `r_wakeup = 1` -> ICG enable released combinationaly, `cg_gating = 0`.

Cycle N+2: First usable gated-clock edge; transaction proceeds normally.

3.5.2 Throughput Impact

- Two cycles of added latency on the first transfer out of a gated period
- No penalty on subsequent transfers while the interface stays active
- Functionally equivalent to the non-gated module (AXI handshakes are not dropped, only delayed by the wake-up cycles)

3.5.3 Sustained Throughput

Identical to base module: - Gating only occurs during idle - Active transactions unaffected

3.6 Usage Example

3.6.1 Basic Clock Gating (Master Read)

```
axi4_master_rd_cg #(
    // Base parameters
    .SKID_DEPTH_AR      (2),
    .SKID_DEPTH_R       (4),
    .AXI_ID_WIDTH       (4),
    .AXI_ADDR_WIDTH     (32),
    .AXI_DATA_WIDTH     (64),

    // Clock gating parameters
    .CG_IDLE_COUNT_WIDTH(4) // Up to 15 idle cycles
) u_rd_master_cg (
    .aclk                (axi_clk),
    .aresetn              (axi_resetn),

    // Clock gating configuration
    .cfg_cg_enable       (1'b1), // Enable gating
    .cfg_cg_idle_count   (4'd5), // Gate after 5 idle cycles

    // AXI signals (identical to base module)
    .fub_axi_arid        (cpu_arid),
    .fub_axi_araddr      (cpu_araddr),
    // ... rest of AR/R signals ...

    .m_axi_arid          (mem_arid),
    .m_axi_araddr        (mem_araddr),
    // ... rest of AR/R signals ...

    // Clock gating status
    .cg_gating           (rd_clk_gated),
    .cg_idle              (rd_idle)
);

// Monitor power savings
always_ff @(posedge axi_clk) begin
    if (rd_clk_gated) begin
        $display("Read master clock gated - saving power");
    end
end
```

3.6.2 Dynamic Configuration (Runtime Adjustment)

```
// Power management controller
logic [3:0] idle_threshold;
```

```

always_comb begin
    case (power_mode)
        POWER_HIGH_PERF: idle_threshold = 4'd15; // Conservative
gating
        POWER_BALANCED: idle_threshold = 4'd5;  // Moderate gating
gating
        POWER_LOW:      idle_threshold = 4'd1;  // Aggressive
        default:        idle_threshold = 4'd5;
    endcase
end

axi4_master_wr_cg #(
    // ... parameters ...
) u_wr_master_cg (
    // ... ports ...

    // Dynamic clock gating control
    .cfg_cg_enable      (power_mgmt_enable),
    .cfg_cg_idle_count  (idle_threshold),

    .cg_gating          (wr_clk_gated),
    .cg_idle            (wr_idle)
);

```

3.6.3 System-Level Power Monitoring

```

// Aggregate power metrics from all interfaces
wire master_rd_gated, master_wr_gated;
wire slave_rd_gated, slave_wr_gated;

// The _cg wrappers do not count gated cycles. Accumulate each
cg_gating
// output locally (see "Measuring Power Savings" below) to obtain
these.
logic [31:0] master_rd_gated_cycles;
logic [31:0] master_wr_gated_cycles;
logic [31:0] slave_rd_gated_cycles;
logic [31:0] slave_wr_gated_cycles;

// Total gated cycles (power savings metric)
wire [31:0] total_gated_cycles = master_rd_gated_cycles +
                                master_wr_gated_cycles +
                                slave_rd_gated_cycles +
                                slave_wr_gated_cycles;

// Instantaneous gating status

```

```

wire any_gating = master_rd_gated | master_wr_gated |
                  slave_rd_gated | slave_wr_gated;

// Power savings estimate (assuming 50% power reduction when gated)
wire [31:0] power_savings_percent = (total_gated_cycles * 50) /
total_cycles;

```

3.7 Design Notes

3.7.1 Idle Count Selection

Aggressive Gating (High Idle Time):

```

.cfg_cg_idle_count(4'd1)    // Gate after 1 idle cycle
// Use when: Burst traffic, low duty cycle, max power savings

```

Moderate Gating (Balanced):

```

.cfg_cg_idle_count(4'd5)    // Gate after 5 idle cycles
// Use when: Mixed traffic, balanced power/performance

```

Conservative Gating (Low Latency):

```

.cfg_cg_idle_count(4'd10)   // Gate after 10 idle cycles
// Use when: High throughput, latency-sensitive, minimal power
overhead

```

Disable Gating:

```

.cfg_cg_enable(1'b0)        // Clock gating disabled
// Use when: 100% utilization, ultra-low latency, debug/test

```

3.7.2 When to Use Clock Gating

Recommended for: - Burst traffic patterns (idle periods between bursts) - Low-duty-cycle interfaces (< 50% utilization) - Power-constrained systems (battery, thermal limits) - Variable workloads (idle states common)

Not recommended for: - 100% utilization scenarios (no idle time = no power benefit) - Ultra-low-latency requirements (gating overhead unacceptable) - Continuous streaming (no natural idle points)

3.7.3 Traffic Pattern Analysis

Burst Traffic (Good for Clock Gating):

```

Time:    |----BURST----|idle|----BURST----|idle|----BURST----|
Gating:  |              |GG|              |GG|              |
Savings: ~30-40% depending on burst duty cycle

```

Continuous Traffic (Poor for Clock Gating):

```

Time:    |----DATA----DATA----DATA----DATA----DATA----|
Gating:  |
Savings: ~0% (never idle long enough to gate)

```

3.7.4 Power Savings Estimates

Illustrative, not measured. No power characterization has been run on this library; `axi4_master_rd_cg.md` says so explicitly. These rows also disagree with the per-module tables at comparable duty cycles (this table: 30 % duty -> 25-40 %; `axi4_master_rd_mon_cg.md`: 25 % utilization -> 45-55 %), which is itself evidence that neither is a measurement. Use them for the trend, never in a power budget.

Traffic Pattern	Duty Cycle	Idle Count	Power Savings
Burst (aggressive)	30%	1	35-40%
Burst (moderate)	30%	5	30-35%
Burst (conservative)	30%	10	25-30%
Mixed workload	50%	5	20-25%
Low activity	10%	1	40-45%
High activity	80%	5	5-10%
Continuous	100%	any	0%

Note: Actual savings depend on: - Process technology (clock tree power) - Traffic patterns (idle duration distribution) - Configuration (idle count threshold) - Logic behind clock gate (amount of logic gated)

3.7.5 Measuring Power Savings

```

// Calculate power savings percentage
logic [31:0] total_cycles;
logic [31:0] gated_cycles;

always_ff @(posedge axi_clk or negedge aresetn) begin
    if (!aresetn) begin
        total_cycles <= '0;

```

```

        gated_cycles <= '0;
    end else begin
        total_cycles <= total_cycles + 1;
        if (cg_gating) begin
            gated_cycles <= gated_cycles + 1;
        end
    end
end

// Power savings = (gated_cycles / total_cycles) × 100%
assign power_savings_pct = (gated_cycles * 100) / total_cycles;

```

3.7.6 Test Mode Support

For scan testing, disable clock gating:

```
.cfg_cg_enable(~scan_mode) // Disable during DFT scan
```

3.7.7 Simulation Considerations

Waveform Analysis: - cg_gating=1: Clock gated (idle) - cg_gating=0: Clock running (active)

Power Estimation:

```

initial begin
    $monitor("Time %0t: Gating=%b, Idle=%b",
             $time, cg_gating, cg_idle);
end

```

3.7.8 Synthesis Considerations

Clock Gating Cell: - Uses standard cell library clock gate (GTECH_AND, ICG, etc.) - Synthesis tool automatically inserts appropriate cell - No vendor-specific primitives required

Timing: - Clock gating logic adds minimal delay - The ICG enable is combinational from r_wakeup, so the ungating path must close in a single cycle - Gating path is non-critical

3.8 Related Modules

3.8.1 Base Module Documentation

- [axi4_master_rd](#) - Base read master
- [axi4_master_wr](#) - Base write master
- [axi4_slave_rd](#) - Base read slave
- [axi4_slave_wr](#) - Base write slave
- [axi4_master_rd_mon](#) - Base master read monitor

- [axi4_master_wr_mon](#) - Base master write monitor
- [axi4_slave_rd_mon](#) - Base slave read monitor
- [axi4_slave_wr_mon](#) - Base slave write monitor

3.8.2 Architecture

- [rtl-amba Overview](#) - Complete AMBA subsystem
 - [AXI4 Index](#) - AXI4 module index
-

Last Updated: 2025-10-20

3.9 Navigation

- [← Back to AXI4 Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

4 axi4_dwidth_converter

Module: `axi4_dwidth_converter.sv` **Location:** Not implemented **Status:** Planned - no RTL in this repository

The read-only and write-only converters DO exist, but they belong to the converters component, not to `rtl/amba/axi4`, and they are documented in its micro-architecture spec: `axi4_dwidth_converter_rd` and `axi4_dwidth_converter_wr`. This book carried a second copy of both until 2026-08-31; a module's docs live with the component that owns the module.

4.1 Overview

Implementation status: There is no `axi4_dwidth_converter.sv` in the repository. This page describes a planned bidirectional converter and its intended parameterization (`AW_FIFO_DEPTH`, `W_FIFO_DEPTH`, `B_FIFO_DEPTH`, `AR_FIFO_DEPTH`, `R_FIFO_DEPTH`); none of those parameters exist in RTL today. The shipping converters are the read-only and write-only variants in `projects/components/converters/rtl/`, which use `SKID_DEPTH_*` skid buffers rather than channel FIFOs:

- [axi4_dwidth_converter_rd](#)
- [axi4_dwidth_converter_wr](#)

Instantiate a `_rd` and a `_wr` converter side by side to obtain full-duplex width conversion.

Read the blockquote above before you read anything else on this page — this module is a plan, not silicon. With that said, the design is worth documenting: the AXI4 Data Width Converter provides bidirectional data width conversion between AXI4 interfaces of different data widths while maintaining full protocol compliance. A single parameterized module handles both upsizing (narrow→wide) and downsizing (wide→narrow), automatically recalculating burst parameters and managing data packing/unpacking.

4.1.1 Key Features

- **Bidirectional Conversion:** Single module supports both upsize and downsize
- **Full AXI4 Protocol:** All 5 channels (AW, W, B, AR, R) with complete signal support
- **Burst Preservation:** Maintains burst semantics across width conversion
- **Auto Burst Recalculation:** Adjusts AWLEN/ARLEN and AWSIZE/ARSIZE automatically
- **Error Propagation:** Correctly forwards SLVERR/DECERR responses
- **Elastic Buffering:** Configurable FIFO depths for each channel
- **Status Outputs:** Busy signal and pending transaction counters
- **Parameter Validation:** Compile-time checks for valid configurations

4.2 Parameters

4.2.1 Width Configuration

Parameter	Type	Default	Range	Description
S_AXI_DATA_WIDTH	int	32	8-1024	Slave interface data width (power of 2)
M_AXI_DATA_WIDTH	int	128	8-1024	Master interface data width (power of 2)
AXI_ID_WIDTH	int	8	1-16	Transaction ID width
AXI_ADDR_WIDTH	int	32	12-64	Address bus width

Parameter	Type	Default	Range	Description
AXI_USER_WIDTH	int	1	0-1024	User signal width

4.2.2 Buffer Depths

Parameter	Type	Default	Description
AW_FIFO_DEPTH	int	4	Write address FIFO depth (power of 2)
W_FIFO_DEPTH	int	8	Write data FIFO depth (power of 2)
B_FIFO_DEPTH	int	4	Write response FIFO depth (power of 2)
AR_FIFO_DEPTH	int	4	Read address FIFO depth (power of 2)
R_FIFO_DEPTH	int	8	Read data FIFO depth (power of 2)

4.2.3 Calculated Parameters (Auto)

Parameter	Calculation	Description
S_STRB_WIDTH	$S_AXI_DATA_WIDTH / 8$	Slave write strobe width
M_STRB_WIDTH	$M_AXI_DATA_WIDTH / 8$	Master write strobe width
WIDTH_RATIO	MAX / MIN	Data width ratio (2-16)
UPSIZE	$S < M$	1 if upsizing, 0 if downsizing
DOWNSIZE	$S > M$	1 if downsizing, 0 if upsizing
PTR_WIDTH	$\$clog2(WIDTH_RATIO)$	Beat pointer width

4.3 Ports

4.3.1 AXI4 Slave Interface

Write Channels: - AW channel: `s_axi_awid`, `s_axi_awaddr`, `s_axi_awlen`, `s_axi_awsz`, `s_axi_awburst`, `s_axi_awlock`, `s_axi_awcache`, `s_axi_awprot`, `s_axi_awqos`, `s_axi_awregion`, `s_axi_awuser`, `s_axi_awvalid`, `s_axi_awready` - W channel: `s_axi_wdata[S_AXI_DATA_WIDTH]`, `s_axi_wstrb[S_STRB_WIDTH]`, `s_axi_wlast`, `s_axi_wuser`, `s_axi_wvalid`, `s_axi_wready` - B channel: `s_axi_bid`, `s_axi_bresp`, `s_axi_buser`, `s_axi_bvalid`, `s_axi_bready`

Read Channels: - AR channel: `s_axi_arid`, `s_axi_araddr`, `s_axi_arlen`, `s_axi_arsz`, `s_axi_arburst`, `s_axi_arlock`, `s_axi_arcache`, `s_axi_arprot`, `s_axi_arqos`, `s_axi_arregion`, `s_axi_aruser`, `s_axi_arvalid`, `s_axi_arready` - R channel: `s_axi_rid`, `s_axi_rdata[S_AXI_DATA_WIDTH]`, `s_axi_rresp`, `s_axi_rlast`, `s_axi_ruser`, `s_axi_rvalid`, `s_axi_rready`

4.3.2 AXI4 Master Interface


Write Channels: - AW channel: `m_axi_awid`, `m_axi_awaddr`, `m_axi_awlen`, `m_axi_awsz`, `m_axi_awburst`, `m_axi_awlock`, `m_axi_awcache`, `m_axi_awprot`, `m_axi_awqos`, `m_axi_awregion`, `m_axi_awuser`, `m_axi_awvalid`, `m_axi_awready` - W channel: `m_axi_wdata[M_AXI_DATA_WIDTH]`, `m_axi_wstrb[M_STRB_WIDTH]`, `m_axi_wlast`, `m_axi_wuser`, `m_axi_wvalid`, `m_axi_wready` - B channel: `m_axi_bid`, `m_axi_bresp`, `m_axi_buser`, `m_axi_bvalid`, `m_axi_bready`

Read Channels: - AR channel: `m_axi_arid`, `m_axi_araddr`, `m_axi_arlen`, `m_axi_arsz`, `m_axi_arburst`, `m_axi_arlock`, `m_axi_arcache`, `m_axi_arprot`, `m_axi_arqos`, `m_axi_arregion`, `m_axi_aruser`, `m_axi_arvalid`, `m_axi_arready` - R channel: `m_axi_rid`, `m_axi_rdata[M_AXI_DATA_WIDTH]`, `m_axi_rresp`, `m_axi_rlast`, `m_axi_ruser`, `m_axi_rvalid`, `m_axi_rready`

4.3.3 Status/Debug Outputs


Port	Direction	Width	Description
<code>busy</code>	Output	1	Indicates active conversions in progress
<code>wr_transactions_pending</code>	Output	16	Number of pending write transactions
<code>rd_transactions_pending</code>	Output	16	Number of pending read transactions

4.4 Functional Description

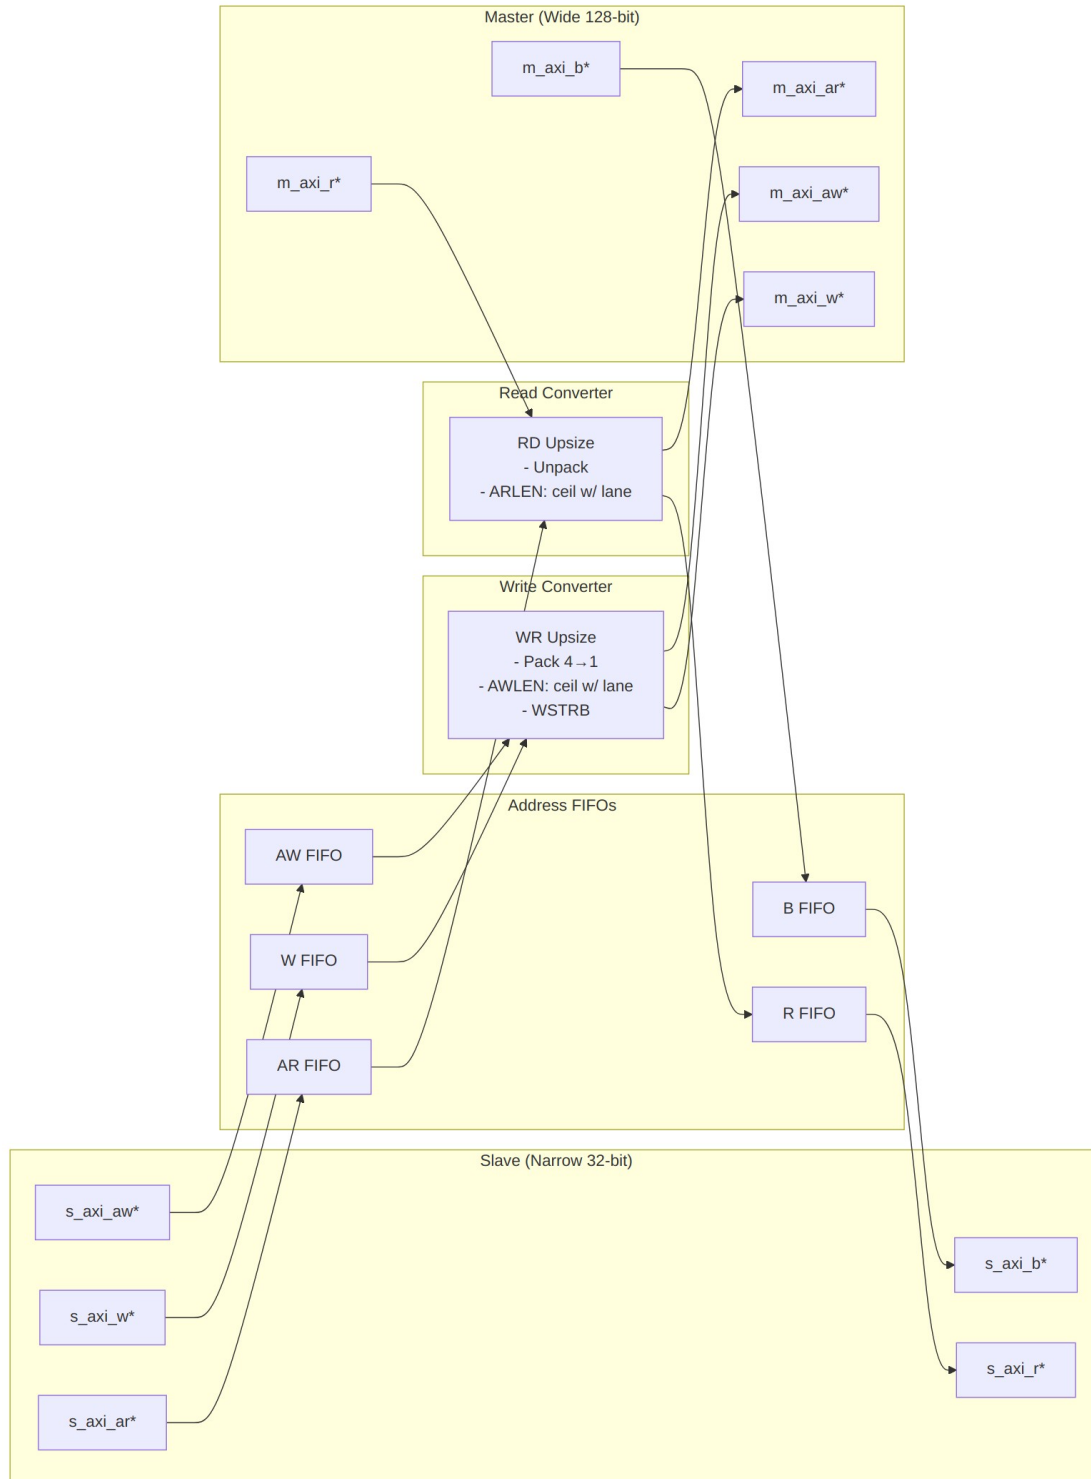

Upsize Mode (Narrow → Wide)

WIDTH_RATIO = 4 (128/32): Burst 16 beats @ 32-bit → 4 beats @ 128-bit

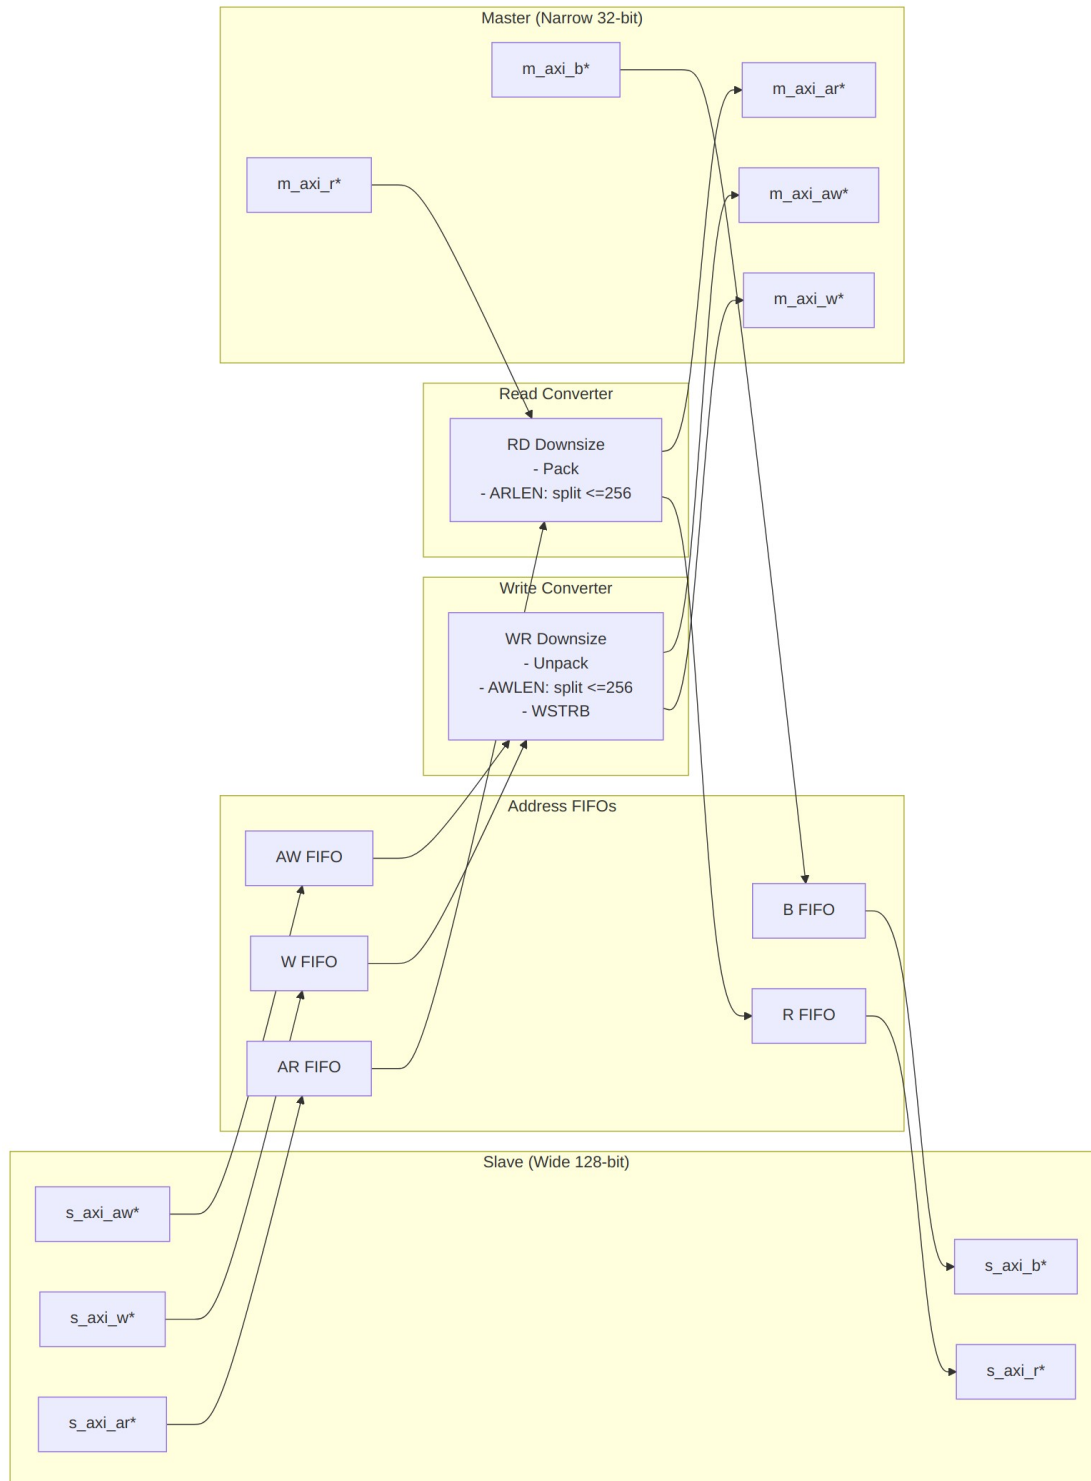

Downsize Mode (Wide → Narrow)

WIDTH_RATIO = 4 (128/32): Burst 4 beats @ 128-bit → 16 beats @ 32-bit

4.4.1 Conversion Mechanics

4.4.1.1 Upsize Conversion (Narrow → Wide)

Write Path:

Example: 32-bit → 128-bit (**WIDTH_RATIO** = 4)

Slave Write:	Master Write:
AWLEN = 15 (16 beats)	AWLEN = 3 (4 beats)
AWSIZE = 3'b010 (4 bytes)	AWSIZE = 3'b100 (16 bytes)
AWADDR = 0x1000	AWADDR = 0x1000 (aligned)

W beats (32-bit):	W beats (128-bit):
Beat 0: wdata[31:0]	
Beat 1: wdata[31:0]	
Beat 2: wdata[31:0]	Beat 0: {beat3, beat2, beat1, beat0}
Beat 3: wdata[31:0]	
Beat 4: wdata[31:0]	
Beat 5: wdata[31:0]	
Beat 6: wdata[31:0]	Beat 1: {beat7, beat6, beat5, beat4}
Beat 7: wdata[31:0]	
... (16 beats total)	... (4 beats total)

Read Path:

Slave Read:	Master Read:
ARLEN = 15 (16 beats)	ARLEN = 3 (4 beats)
ARSIZE = 3'b010 (4 bytes)	ARSIZE = 3'b100 (16 bytes)
ARADDR = 0x2000	ARADDR = 0x2000 (aligned)

R beats (128-bit):	R beats (32-bit):
Beat 0: {127:0}	Beat 0: rdata[31:0] (bits [31:0])
	Beat 1: rdata[31:0] (bits [63:32])
	Beat 2: rdata[31:0] (bits [95:64])
	Beat 3: rdata[31:0] (bits [127:96])
Beat 1: {127:0}	Beat 4-7: ...
... (4 beats total)	... (16 beats total)

4.4.1.2 Downsize Conversion (Wide → Narrow)

Write Path:

Example: 128-bit → 32-bit (**WIDTH_RATIO** = 4)

Slave Write:	Master Write:
AWLEN = 3 (4 beats)	AWLEN = 15 (16 beats)

AWSIZE = 3'b100 (16 bytes) AWSIZE = 3'b010 (4 bytes)
 AWADDR = 0x3000 AWADDR = 0x3000 (aligned)

W beats (128-bit):	W beats (32-bit):
Beat 0: wdata[127:0]	Beat 0: [31:0]
	Beat 1: [63:32]
	Beat 2: [95:64]
	Beat 3: [127:96]
Beat 1: wdata[127:0]	Beat 4-7: ...
... (4 beats total)	... (16 beats total)

Read Path:

Slave Read:	Master Read:
ARLEN = 3 (4 beats)	ARLEN = 15 (16 beats)
ARSIZE = 3'b100 (16 bytes)	ARSIZE = 3'b010 (4 bytes)
ARADDR = 0x4000	ARADDR = 0x4000 (aligned)

R beats (32-bit):	R beats (128-bit):
Beat 0: rdata[31:0]	
Beat 1: rdata[31:0]	
Beat 2: rdata[31:0]	Beat 0: {beat3, beat2, beat1, beat0}
Beat 3: rdata[31:0]	
... (16 beats total)	... (4 beats total)

4.4.1.3 WSTRB Handling

Upsize: Packs narrow WSTRB beats into wide WSTRB

32-bit WSTRB:	4'b1111, 4'b1111, 4'b1111, 4'b1111
	↓ ↓ ↓ ↓
128-bit WSTRB:	16'b1111_1111_1111_1111

Downsize: Unpacks wide WSTRB into narrow WSTRB beats

128-bit WSTRB:	16'b1111_0000_1111_0000
	↓
32-bit WSTRB:	4'b0000, 4'b1111, 4'b0000, 4'b1111

4.5 Timing Characteristics

4.5.1 Performance Characteristics

Throughput (Upsize): - Accumulation latency: WIDTH_RATIO-1 cycles per wide beat - Example (WIDTH_RATIO=4): 3-cycle latency to accumulate first wide beat

Throughput (Downsize): - Unpacking latency: 1 cycle per narrow beat - Full wide beat can be unpacked in consecutive cycles

Backpressure Handling: - FIFOs provide elastic buffering - Prevents deadlock during width mismatch scenarios - Slave can stall independently of master

4.6 Usage Examples

4.6.1 Basic Upsize Converter (32-bit → 128-bit)

```
axi4_dwidth_converter #(
    // Width configuration
    .S_AXI_DATA_WIDTH    (32),      // Narrow slave
    .M_AXI_DATA_WIDTH    (128),     // Wide master
    .AXI_ID_WIDTH        (4),
    .AXI_ADDR_WIDTH      (32),
    .AXI_USER_WIDTH      (1),

    // Buffer depths
    .AW_FIFO_DEPTH       (4),
    .W_FIFO_DEPTH        (16),     // Deeper for burst accumulation
    .B_FIFO_DEPTH        (4),
    .AR_FIFO_DEPTH       (4),
    .R_FIFO_DEPTH        (16)     // Deeper for burst unpacking
) u_upsize_conv (
    .aclk                 (axi_clk),
    .aresetn              (axi_resetn),

    // Slave (narrow) interface
    .s_axi_awid           (narrow_awid),
    .s_axi_awaddr         (narrow_awaddr),
    .s_axi_awlen          (narrow_awlen),      // e.g., 15 (16 beats)
    .s_axi_awsz           (narrow_awsz),      // e.g., 3'b010 (4 bytes)
    .s_axi_awvalid        (narrow_awvalid),
    .s_axi_awready        (narrow_awready),
    // ... rest of slave AW/W/B/AR/R signals

    // Master (wide) interface
    .m_axi_awid           (wide_awid),
    .m_axi_awaddr         (wide_awaddr),
    .m_axi_awlen          (wide_awlen),      // e.g., 3 (4 beats)
    .m_axi_awsz           (wide_awsz),      // e.g., 3'b100 (16 bytes)
    .m_axi_awvalid        (wide_awvalid),
    .m_axi_awready        (wide_awready),
    // ... rest of master AW/W/B/AR/R signals
```

```

    // Status
    .busy                (conv_busy),
    .wr_transactions_pending(wr_pend),
    .rd_transactions_pending(rd_pend)
);

// Typical upsize scenario: CPU (32-bit) → Memory controller (128-bit)

4.6.2 Basic Downsize Converter (128-bit → 32-bit)
axi4_dwidth_converter #(
    // Width configuration
    .S_AXI_DATA_WIDTH  (128),    // Wide slave
    .M_AXI_DATA_WIDTH  (32),     // Narrow master
    .AXI_ID_WIDTH      (4),
    .AXI_ADDR_WIDTH    (32),

    // Buffer depths
    .AW_FIFO_DEPTH     (4),
    .W_FIFO_DEPTH      (8),     // Moderate depth for unpacking
    .B_FIFO_DEPTH      (4),
    .AR_FIFO_DEPTH     (4),
    .R_FIFO_DEPTH      (32)     // Deeper for burst packing
) u_downsize_conv (
    .aclk                (axi_clk),
    .aresetn              (axi_resetn),

    // Slave (wide) interface
    .s_axi_awid           (wide_awid),
    .s_axi_awaddr         (wide_awaddr),
    .s_axi_awlen          (wide_awlen),    // e.g., 3 (4 beats)
    .s_axi_awsz           (wide_awsz),     // e.g., 3'b100 (16 bytes)
    // ... rest of slave signals

    // Master (narrow) interface
    .m_axi_awid           (narrow_awid),
    .m_axi_awaddr         (narrow_awaddr),
    .m_axi_awlen          (narrow_awlen),   // e.g., 15 (16 beats)
    .m_axi_awsz           (narrow_awsz),    // e.g., 3'b010 (4 bytes)
    // ... rest of master signals

    // Status
    .busy                (conv_busy),
    .wr_transactions_pending(wr_pend),
    .rd_transactions_pending(rd_pend)
);

```

```
// Typical downsize scenario: Interconnect (128-bit) → Peripheral (32-bit)
```

4.7 Design Notes

4.7.1 WIDTH_RATIO Constraints

Supported Ratios: 2, 4, 8, 16 - WIDTH_RATIO = 2: e.g., 32→64, 64→128, 128→256 - WIDTH_RATIO = 4: e.g., 32→128, 64→256 - WIDTH_RATIO = 8: e.g., 32→256, 64→512 - WIDTH_RATIO = 16: e.g., 32→512, 64→1024

Why Limited to 16? - Larger ratios require excessive buffering (512+ beats) - Address alignment becomes complex - Performance degrades significantly - Rare in real designs (use multi-stage conversion instead)

4.7.2 Address Alignment

Critical: Slave addresses must be aligned to master data width in upsize mode

```
// Upsize 32→128 (WIDTH_RATIO=4, M_STRB_WIDTH=16)
// Slave addresses must be 16-byte aligned (bottom 4 bits = 0)
```

```
VALID:   AWADDR = 0x1000 (aligned to 16 bytes)
VALID:   AWADDR = 0x2000
INVALID: AWADDR = 0x1004 (not 16-byte aligned)
INVALID: AWADDR = 0x2008 (not 16-byte aligned)
```

Downsize: No alignment restrictions (master can access any byte)

4.7.3 Burst Length Calculation

Upsize: the start address matters. A burst that begins part-way into a wide word fills fewer narrow lanes in its first beat, so the lane offset is part of the count – omit it and an unaligned burst is short by one beat.

```
lane          = AWADDR[clog2(M_STRB_WIDTH)-1 : 0] >>
clog2(S_STRB_WIDTH)
Master AWLEN = ceil((lane + Slave AWLEN + WIDTH_RATIO) / WIDTH_RATIO)
- 1
Master AWSIZE = $clog2(M_STRB_WIDTH)           // the full wide size,
not a delta
```

Example: 32→128 (WIDTH_RATIO=4), aligned

Slave: AWLEN=15, AWSIZE=2 (4 bytes) -> 16 beats x 4 bytes = 64 bytes

Master: AWLEN=3, AWSIZE=4 (16 bytes) -> 4 beats x 16 bytes = 64 bytes

Same burst starting at lane 2 (AWADDR = 0x8):

Master: AWLEN=4 -- five wide beats, the first and last partial

axi4_dwidth_converter_wr.sv computes this on a 10-bit intermediate so that lane + 255 + WIDTH_RATIO cannot wrap before the divide.

Downsize: there is no single-burst formula, because there cannot be one. One wide beat becomes WIDTH_RATIO narrow beats, so a full 256-beat slave burst would need up to $256 * \text{WIDTH_RATIO}$ narrow beats – not expressible in an 8-bit AWLEN and not legal AXI4.

Master AWSIZE = $\$clog2(\text{M_STRB_WIDTH})$

Master AWLEN = one burst per ≤ 256 narrow beats, issued back to back

The converter therefore **splits** one slave burst into as many master bursts of ≤ 256 beats as it takes, recording each in a split queue so the W framing and the B fold stay consistent. WRAP never reaches this path: AXI4 caps WRAP at 16 beats, and $16 * \text{WIDTH_RATIO} \leq 256$ for every supported ratio.

Ordering constraint on the split fold. The split records live in a single FIFO (splitq_*), and the B fold pops one entry per downstream response, forwarding a B to the slave only on the record marked final. That is correct while downstream B responses arrive in the order the split AWs were issued – guaranteed by AXI4 within one ID, since the pieces of a split burst all carry the AWID of the burst they came from. It is NOT guaranteed across IDs: AXI4 permits a downstream to return B responses for different IDs in any order, and a single FIFO cannot tell them apart, so an interleaved response would be folded against the wrong record. Drive this converter from a single ID, or from a master that does not interleave write responses, until the fold is made ID-aware (tracked as CONV-010).

The naive $(\text{Slave AWLEN} + 1) * \text{WIDTH_RATIO} - 1$ this section used to give is the bug the split logic replaced: computed into the 8-bit field it wrapped, turning 511 into 255 (half the burst silently lost), and at 4:1 a 128-beat slave burst asked for 515 beats and got 3.

4.7.4 Buffer Depth Guidelines

Address Channels (AW/AR): - Default: 4 entries (sufficient for most cases) - Increase if high address command rate

Data Channels (W/R): - **Upsize:** Deeper buffers needed to accumulate narrow beats -

$\text{W_FIFO_DEPTH} \geq \text{WIDTH_RATIO} * \text{max_burst_length}$ - $\text{R_FIFO_DEPTH} \geq \text{WIDTH_RATIO} * \text{max_burst_length}$ -

Downsize: Moderate buffers for unpacking wide beats - $\text{W_FIFO_DEPTH} \geq \text{max_burst_length}$ (wide side) - $\text{R_FIFO_DEPTH} \geq \text{WIDTH_RATIO} * \text{max_burst_length}$ (for packing)

Example (32→128, max burst=16 narrow beats):

```
.W_FIFO_DEPTH (16), // Accumulate 16 narrow beats → 4 wide beats
.R_FIFO_DEPTH (16)  // Unpack 4 wide beats → 16 narrow beats
```

4.8 Related Modules

4.8.1 Specialized Converters

- [axi4_dwidth_converter_rd](#) - Read-only data width conversion
- [axi4_dwidth_converter_wr](#) - Write-only data width conversion

4.8.2 Core Modules

- [axi4_master_rd](#) - AXI4 read master
- [axi4_master_wr](#) - AXI4 write master
- [axi4_slave_rd](#) - AXI4 read slave
- [axi4_slave_wr](#) - AXI4 write slave

4.8.3 Used Components

- [gaxi_skid_buffer](#) - Elastic buffering
 - [gaxi_fifo_sync](#) - Synchronous FIFOs
-

4.9 References

4.9.1 Specifications

- ARM IHI 0022E: AMBA AXI Protocol Specification (AXI4)
- Chapter 11: Data Width Conversion

4.9.2 Source Code

- RTL: none – this page describes a PLANNED combined converter; the real modules are
`projects/components/converters/rtl/axi4_dwidth_converter_{rd,wr}.sv`
- Tests:
`projects/components/converters/dv/tests/test_axi4_dwidth_converter_wr.py`
- Framework: `bin/TBClasses/components/axi4/`

4.9.3 Documentation

- Architecture: [rtl-amba Overview](#)
- AXI4 Index: [README.md](#)

4.10 Navigation

- [← Back to AXI4 Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

5 axi4_master_rd

An AXI4 read master module that provides high-performance read transaction processing with dual skid buffer architecture for optimal throughput and pipeline efficiency in AXI4 memory-mapped systems.

5.1 Overview

The `axi4_master_rd` module implements a complete AXI4 read master interface with integrated address and data channel buffering using GAXI skid buffers. It acts as a bridge between upstream AXI4 read requestors and downstream AXI4 memory interfaces, providing transaction buffering, pipeline optimization, and flow control to maximize memory subsystem performance. It's a complete, high-performance read-master solution: advanced buffering, full protocol compliance, and the system integration hooks (busy status for clock gating, full sideband support) you'd expect.

5.2 Parameters

Parameter	Type	Default	Description
SKID_DEPTH_AR	int	2	Address channel skid buffer depth in entries (2..8 inclusive, any integer)
SKID_DEPTH_R	int	4	Read data channel skid buffer depth in entries (2..8 inclusive, any integer)
AXI_ID_WIDTH	int	8	AXI transaction ID width
AXI_ADDR_WIDTH	int	32	AXI address bus width

Parameter	Type	Default	Description
AXI_DATA_WIDTH	int	32	AXI data bus width
AXI_USER_WIDTH	int	1	AXI user signal width
AXI_WSTRB_WIDTH	int	AXI_DATA_WIDTH / 8	AXI write strobe width (calculated)

5.3 Ports

5.3.1 Module Declaration

```

module axi4_master_rd #(
    parameter int SKID_DEPTH_AR = 2,
    parameter int SKID_DEPTH_R = 4,
    parameter int AXI_ID_WIDTH = 8,
    parameter int AXI_ADDR_WIDTH = 32,
    parameter int AXI_DATA_WIDTH = 32,
    parameter int AXI_USER_WIDTH = 1,
    parameter int AXI_WSTRB_WIDTH = AXI_DATA_WIDTH / 8,
    // Short and calculated params
    parameter int AW = AXI_ADDR_WIDTH,
    parameter int DW = AXI_DATA_WIDTH,
    parameter int IW = AXI_ID_WIDTH,
    parameter int SW = AXI_WSTRB_WIDTH,
    parameter int UW = AXI_USER_WIDTH,
    parameter int ARSize = IW+AW+8+3+2+1+4+3+4+4+UW,
    parameter int RSize = IW+DW+2+1+UW
) (
    // Global Clock and Reset
    input logic aclk,
    input logic aresetn,

    // Slave AXI Interface (Input Side) - FUB
    // Read address channel (AR)
    input logic [IW-1:0] fub_axi_arid,
    input logic [AW-1:0] fub_axi_araddr,
    input logic [7:0] fub_axi_arlen,
    input logic [2:0] fub_axi_arsize,
    input logic [1:0] fub_axi_arburst,
    input logic fub_axi_arlock,
    input logic [3:0] fub_axi_arcache,
    input logic [2:0] fub_axi_arprot,
    input logic [3:0] fub_axi_arqos,
    input logic [3:0] fub_axi_arregion,
    input logic [UW-1:0] fub_axi_aruser,
    input logic fub_axi_arvalid,
    output logic fub_axi_arready,

```

```

// Read data channel (R)
output logic [IW-1:0]      fub_axi_rid,
output logic [DW-1:0]      fub_axi_rdata,
output logic [1:0]         fub_axi_rresp,
output logic               fub_axi_rlast,
output logic [UW-1:0]      fub_axi_ruser,
output logic               fub_axi_rvalid,
input  logic               fub_axi_rready,

// Master AXI Interface (Output Side)
// Read address channel (AR)
output logic [IW-1:0]      m_axi_arid,
output logic [AW-1:0]      m_axi_araddr,
output logic [7:0]         m_axi_arlen,
output logic [2:0]         m_axi_arsize,
output logic [1:0]         m_axi_arburst,
output logic               m_axi_arlock,
output logic               m_axi_arcache,
output logic [3:0]         m_axi_arprot,
output logic [3:0]         m_axi_arqos,
output logic [3:0]         m_axi_arregion,
output logic [UW-1:0]      m_axi_aruser,
output logic               m_axi_arvalid,
input  logic               m_axi_arready,

// Read data channel (R)
input  logic [IW-1:0]      m_axi_rid,
input  logic [DW-1:0]      m_axi_rdata,
input  logic [1:0]         m_axi_rresp,
input  logic               m_axi_rlast,
input  logic [UW-1:0]      m_axi_ruser,
input  logic               m_axi_rvalid,
output logic               m_axi_rready,

// Status outputs for clock gating
output logic               busy
);

```

5.3.2 Clock and Reset

Port	Width	Direction	Description
aclk	1	Input	AXI clock
aresetn	1	Input	AXI active-low reset

5.3.3 Slave AXI Interface (Input Side - FUB)

5.3.3.1 Read Address Channel (AR)

Port	Width	Direction	Description
fub_axi_arid	AXI_ID_WIDTH	Input	Read address ID
fub_axi_araddr	AXI_ADDR_WIDTH	Input	Read address
fub_axi_arlen	8	Input	Burst length, AXI-encoded: beats - 1 (0x00 = 1 beat, 0xFF = 256)
fub_axi_arsize	3	Input	Transfer size (bytes per beat)
fub_axi_arburst	2	Input	Burst type (FIXED, INCR, WRAP)
fub_axi_arlock	1	Input	Lock type (atomic access)
fub_axi_arcache	4	Input	Cache attributes
fub_axi_arprot	3	Input	Protection attributes
fub_axi_arqos	4	Input	Quality of Service
fub_axi_arregion	4	Input	Region identifier
fub_axi_aruser	AXI_USER_WIDTH	Input	User-defined signals
fub_axi_arvalid	1	Input	Read address valid
fub_axi_arready	1	Output	Read address ready

5.3.3.2 Read Data Channel (R)

Port	Width	Direction	Description
fub_axi_rid	AXI_ID_WIDTH	Output	Read data ID

Port	Width	Direction	Description
	TH		
fub_axi_rdata	AXI_DATA_WIDTH	Output	Read data
fub_axi_response	2	Output	Read response (OKAY, EXOKAY, SLVERR, DECERR)
fub_axi_last	1	Output	Last read transfer in burst
fub_axi_user	AXI_USER_WIDTH	Output	User-defined signals
fub_axi_rvalid	1	Output	Read data valid
fub_axi_rready	1	Input	Read data ready

5.3.4 Master AXI Interface (Output Side)

5.3.4.1 Read Address Channel (AR)

Port	Width	Direction	Description
m_axi_arid	AXI_ID_WIDTH	Output	Read address ID
m_axi_araddr	AXI_ADDR_WIDTH	Output	Read address
m_axi_arlength	8	Output	Burst length, AXI-encoded: beats - 1 (0x00 = 1 beat, 0xFF = 256)
m_axi_arsize	3	Output	Transfer size (bytes per beat)
m_axi_arburst	2	Output	Burst type (FIXED, INCR, WRAP)
m_axi_arlock	1	Output	Lock type (atomic access)
m_axi_arcache	4	Output	Cache attributes

Port	Width	Direction	Description
m_axi_arprot	3	Output	Protection attributes
m_axi_arqos	4	Output	Quality of Service
m_axi_arregion	4	Output	Region identifier
m_axi_aruser	AXI_USER_WIDTH	Output	User-defined signals
m_axi_arvalid	1	Output	Read address valid
m_axi_arready	1	Input	Read address ready

5.3.4.2 Read Data Channel (R)

Port	Width	Direction	Description
m_axi_rid	AXI_ID_WIDTH	Input	Read data ID
m_axi_rdata	AXI_DATA_WIDTH	Input	Read data
m_axi_rresp	2	Input	Read response (OKAY, EXOKAY, SLVERR, DECERR)
m_axi_rlast	1	Input	Last read transfer in burst
m_axi_ruser	AXI_USER_WIDTH	Input	User-defined signals
m_axi_rvalid	1	Input	Read data valid
m_axi_rready	1	Output	Read data ready

5.3.5 Status Interface

Port	Width	Direction	Description
busy	1	Output	Module


Port	Width	Direction	Description
			activity indicator for clock gating

5.4 Functional Description

5.4.1 Dual Buffer Design

The module employs a dual skid buffer architecture:

1. **AR Channel Buffer:** Buffers read address transactions
2. **R Channel Buffer:** Buffers read data responses

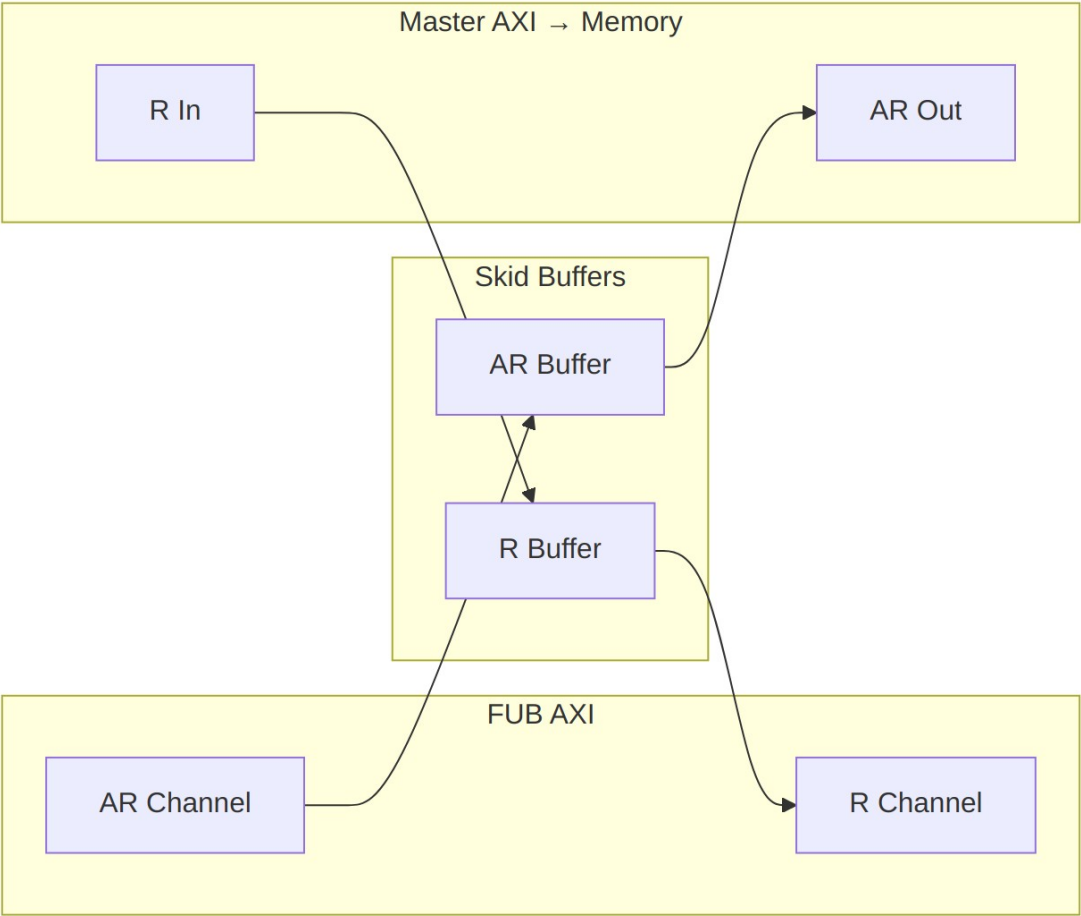

Data Flow

5.4.2 Key Features

- **Pipeline Optimization:** Dual buffering eliminates pipeline stalls
- **AXI4 Compliance:** Full AXI4 protocol support including all signals
- **Flow Control:** Independent buffering for address and data channels
- **Clock Gating Support:** Busy signal for power optimization
- **Burst Support:** Full burst transaction handling (1-256 beats)
- **ID Preservation:** Transaction ID forwarding (no matching – IDs pass through unchecked, as the ID handling section states)
- **Error Handling:** Proper error response propagation

5.4.3 Address Channel Processing

1. **Address Capture:** Incoming address transactions buffered in AR skid buffer
2. **Address Forward:** Buffered addresses forwarded to master interface
3. **Flow Control:** Ready/valid handshaking manages buffer flow

5.4.4 Data Channel Processing

1. **Data Reception:** Read data from master interface buffered in R skid buffer
2. **Data Forward:** Buffered data forwarded to FUB interface
3. **ID Pass-Through:** RID is carried through the R skid buffer as ordinary payload bits. The module does not maintain a transaction table and performs no ID matching, reordering, or outstanding-transaction tracking; ordering is whatever the downstream slave produces.

5.4.5 Busy Signal Generation

The busy output indicates module activity:

```
assign busy = (int_ar_count > 0) || (int_r_count > 0) ||  
              fub_axi_arvalid || m_axi_rvalid;
```

5.5 Timing Characteristics

5.5.1 Buffer Latency

Buffer	Default Depth	Latency	Description
AR Channel	2 entries (SKID_DEPTH_AR=2)	1 cycle	Address buffering
R Channel	4 entries	1 cycle	Data buffering

Buffer	Default Depth	Latency	Description
	(SKID_DEPTH_R=4)		

5.5.2 Performance Metrics

Metric	Value	Conditions
Maximum Frequency	300-600 MHz	Technology dependent
Address Throughput	1 transaction/cycle	When buffers not full
Data Throughput	1 beat/cycle	When buffers not empty
Pipeline Efficiency	95-99%	With appropriate buffer sizing

5.5.3 Transaction Latency

Transaction Type	Latency	Description
Single Read	2-3 cycles	Address → Data (minimum)
Burst Read	2+N cycles	Address + N data beats
Back-to-back	1 cycle/txn	Sustained rate with buffering

5.6 Usage Examples

Every parameter and port below is read from the module declaration.

```
axi4_master_rd #(
    .SKID_DEPTH_AR      (2),
    .SKID_DEPTH_R       (4),
    .AXI_ID_WIDTH        (8),
    .AXI_ADDR_WIDTH      (32),
    .AXI_DATA_WIDTH      (32),
    .AXI_USER_WIDTH      (1)
) u_axi4_master_rd (
    .aclk                (aclk),
    .aresetn              (aresetn),
    .fub_axi_arid         (fub_axi_arid),
    .fub_axi_araddr       (fub_axi_araddr),
    .fub_axi_arlen        (fub_axi_arlen),
```

```

.fub_axi_arsize      (fub_axi_arsize),
.fub_axi_arburst     (fub_axi_arburst),
.fub_axi_arlock      (fub_axi_arlock),
.fub_axi_arcache     (fub_axi_arcache),
.fub_axi_arprot      (fub_axi_arprot),
.fub_axi_arqos       (fub_axi_arqos),
.fub_axi_arregion    (fub_axi_arregion),
.fub_axi_aruser      (fub_axi_aruser),
.fub_axi_arvalid     (fub_axi_arvalid),
.fub_axi_arready     (fub_axi_arready),
.fub_axi_rid         (fub_axi_rid),
.fub_axi_rdata       (fub_axi_rdata),
.fub_axi_rresp       (fub_axi_rresp),
.fub_axi_rlast       (fub_axi_rlast),
.fub_axi_ruser       (fub_axi_ruser),
.fub_axi_rvalid      (fub_axi_rvalid),
.fub_axi_rready      (fub_axi_rready),
.m_axi_arid          (m_axi_arid),
.m_axi_araddr        (m_axi_araddr),
.m_axi_arlen         (m_axi_arlen),
.m_axi_arsize        (m_axi_arsize),
.m_axi_arburst       (m_axi_arburst),
.m_axi_arlock        (m_axi_arlock),
.m_axi_arcache       (m_axi_arcache),
.m_axi_arprot        (m_axi_arprot),
.m_axi_arqos         (m_axi_arqos),
.m_axi_arregion      (m_axi_arregion),
.m_axi_aruser        (m_axi_aruser),
.m_axi_arvalid       (m_axi_arvalid),
.m_axi_arready       (m_axi_arready),
.m_axi_rid           (m_axi_rid),
.m_axi_rdata         (m_axi_rdata),
.m_axi_rresp         (m_axi_rresp),
.m_axi_rlast         (m_axi_rlast),
.m_axi_ruser         (m_axi_ruser),
.m_axi_rvalid        (m_axi_rvalid),
.m_axi_rready        (m_axi_rready),
.busy                (busy)
);

```

5.7 Design Notes

5.7.1 Buffer Depth Selection

Choose buffer depths based on system characteristics:

SKID_DEPTH_* is an entry count, not a log2 exponent. The underlying gaxi_skid_buffer stores one register slot per entry and tracks occupancy in a 4-bit counter, so legal values are 2..8

inclusive (any integer – odd depths are legal). Values above 8 fail elaboration (the guard errors rather than overflowing); for deeper elasticity use a `gaxi_fifo_sync` stage ahead of the module instead.

System Type	SKID_DEPTH_AR	SKID_DEPTH_R	Rationale
Low Latency CPU	2	2	Minimize latency
High Throughput DMA	4	8	Maximize bandwidth
DDR4 Interface	4	8	Handle refresh cycles
PCIe Interface	4	6	Variable latency tolerance

5.7.2 Burst Optimization

```
// Optimize for burst efficiency
localparam BURST_LENGTH = 16; // Optimize for cache line size

// Generate efficient burst addresses
always_comb begin
    axi_araddr = base_addr & ~(BURST_LENGTH * DATA_BYTES - 1); //
Align
    axi_arlen  = BURST_LENGTH - 1;                               //
Length
    axi_arsize = $clog2(DATA_BYTES);                             // Size
    axi_arburst = 2'b01;                                         // INCR
end
```

5.7.3 Quality of Service (QoS)

```
// QoS-aware read master configuration
always_comb begin
    case (requestor_type)
        CPU_CRITICAL: axi_arqos = 4'hF; // Highest priority
        CPU_NORMAL:   axi_arqos = 4'h8; // Medium priority
        DMA_BULK:     axi_arqos = 4'h4; // Lower priority
        BACKGROUND:   axi_arqos = 4'h1; // Lowest priority
        default:       axi_arqos = 4'h0;
    endcase
end
```


5.7.4 Transaction Monitoring

```
// Performance monitoring integration
logic [31:0] read_transaction_count;
logic [31:0] read_burst_total;
logic [31:0] read_latency_accumulator;

always_ff @(posedge axi_clk) begin
    // Count transactions
    if (fub_axi_arvalid && fub_axi_arready) begin
        read_transaction_count <= read_transaction_count + 1;
        read_burst_total <= read_burst_total + fub_axi_arlen + 1;
    end

    // Measure latency (simplified)
    if (fub_axi_rvalid && fub_axi_rready && fub_axi_rlast) begin
        read_latency_accumulator <= read_latency_accumulator +
measured_latency;
    end
end

// Average burst length and latency calculations
assign avg_burst_length = read_burst_total / read_transaction_count;
assign avg_latency = read_latency_accumulator /
read_transaction_count;
```

5.7.5 Error Handling and Recovery

```
// Enhanced error handling
logic error_detected;
logic [7:0] error_count;

always_ff @(posedge axi_clk) begin
    error_detected <= fub_axi_rvalid && fub_axi_rready &&
        (fub_axi_rresp == 2'b10 || fub_axi_rresp ==
2'b11);

    if (error_detected) begin
        error_count <= error_count + 1;
        // Log error details for debugging
        error_log <= {fub_axi_rid, fub_axi_rresp, timestamp};
    end
end
```

5.7.6 Synthesis Considerations

Area Optimization: - Reduce buffer depths for area-constrained designs - Use smaller ID widths when possible - Share buffers across multiple masters if timing allows

Timing Optimization: - Register all interface signals for timing closure - Use appropriate buffer depths to break critical paths - Consider pipeline stages for very high-frequency operation

Power Optimization: - Use clock gating variant (`axi4_master_rd_cg`) when available - Implement QoS-based power scaling - Size buffers appropriately to minimize switching activity

5.8 Related Modules

- **`axi4_master_rd_cg`:** Clock-gated version for power optimization
- **`axi4_master_wr`:** Complementary AXI4 write master
- **`gaxi_skid_buffer`:** Underlying buffer infrastructure
- **`axi4_interconnect`:** AXI4 interconnect for multi-master systems
- **`axi_monitor_base`:** AXI4 protocol monitoring and analysis

5.9 Testing

5.9.1 Protocol Compliance

- Verify AXI4 handshaking on all channels
- Check burst handling and RLAST generation
- Validate ID preservation through the pipeline

5.9.2 Buffer Verification

- Test buffer overflow/underflow protection
- Verify data integrity through buffers
- Check flow control under various load conditions

5.9.3 Performance Verification

- Measure sustained throughput with various patterns
 - Verify buffer efficiency and utilization
 - Check latency under different loading conditions
-

5.10 Navigation

- [← Back to AXI4 Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

6 axi4_master_rd_cg

Module: axi4_master_rd_cg.sv **Base Module:** [axi4_master_rd](#) **Location:** rtl/amba/axi4/
Status: Production Ready

6.1 Overview

This is the **clock-gated variant** of [axi4_master_rd](#) — same datapath, with an activity-based clock gate wrapped around it for power optimization.

For complete clock-gating documentation, usage examples, and configuration guidelines, see:

→ [Clock-Gated Variants Guide](#)

What you get over the base module:

- **Same Functionality:** 100% equivalent to base module
 - **Power Savings:** traffic-dependent; unmeasured in this repo – treat any percentage as a placeholder until characterized
 - **Configurable at runtime:** cfg_cg_enable / cfg_cg_idle_count inputs
 - **Zero Overhead When Disabled:** cfg_cg_enable=0 bypasses the gate
-

6.2 Parameters

In addition to the [axi4_master_rd](#) parameters (note: the base module's busy output is NOT re-exported by this wrapper – it is consumed internally as a wake term):

Parameter	Default	Description
CG_IDLE_COUNT_WIDTH	4	Width of the idle countdown, sizing cfg_cg_idle_count
SKID_DEPTH_AR	2	Skid-buffer depth on the AR channel. Legal range 2..8 inclusive; odd depths are legal.
SKID_DEPTH_R	4	Skid-buffer depth on the R channel. Legal range 2..8 inclusive; odd depths are

Parameter	Default	Description
		legal.

The gating controls are RUNTIME INPUTS, not parameters: `cfg_cg_enable` (gate master-enable) and `cfg_cg_idle_count` (idle cycles before gating). Status outputs are `cg_gating` and `cg_idle`. There are no per-domain gates – one `amba_clock_gate_ctrl` gates the whole module. (This page once documented an `ENABLE_CLOCK_GATING / CG_IDLE_CYCLES / CG_GATE_*` parameter interface that never existed; the clock-gating guide in this book was always the accurate reference.)

6.2.1 Derived Parameters (do not override)

These are declared as `parameter` so the elaborator can compute them, not so callers can set them. Each defaults to an expression over the parameters above; overriding one desynchronises it from its source and the design fails to elaborate or silently mis-sizes a bus. Set the parameters they are derived FROM and leave these alone.

Derived parameter	Default expression
<code>AXI_WSTRB_WIDTH</code>	<code>AXI_DATA_WIDTH / 8</code>
<code>AW</code>	<code>AXI_ADDR_WIDTH</code>
<code>DW</code>	<code>AXI_DATA_WIDTH</code>
<code>IW</code>	<code>AXI_ID_WIDTH</code>
<code>SW</code>	<code>AXI_WSTRB_WIDTH</code>
<code>UW</code>	<code>AXI_USER_WIDTH</code>
<code>ARSize</code>	<code>IW+AW+8+3+2+1+4+3+4+4+UW</code>
<code>RSize</code>	<code>IW+DW+2+1+UW</code>

6.3 Ports

Port	Dir	Width	Description
<code>aclk</code>	In	1	
<code>aresetn</code>	In	1	
<code>cfg_cg_enable</code>	In	1	
<code>cfg_cg_idle_count</code>	In	<code>[CG_IDLE_COUNT_WIDTH-1:0]</code>	
<code>fub_axi_arid</code>	In	<code>[IW-1:0]</code>	
<code>fub_axi_araddr</code>	In	<code>[AW-1:0]</code>	
<code>fub_axi_arlen</code>	In	<code>[7:0]</code>	

Port	Dir	Width	Description
fub_axi_arsize	In	[2:0]	
fub_axi_arburst	In	[1:0]	
fub_axi_arlock	In	1	
fub_axi_arcache	In	[3:0]	
fub_axi_arprot	In	[2:0]	
fub_axi_arqos	In	[3:0]	
fub_axi_arregion	In	[3:0]	
fub_axi_aruser	In	[UW-1:0]	
fub_axi_arvalid	In	1	
fub_axi_arready	Out	1	
fub_axi_rid	Out	[IW-1:0]	
fub_axi_rdata	Out	[DW-1:0]	
fub_axi_rresp	Out	[1:0]	
fub_axi_rlast	Out	1	
fub_axi_ruser	Out	[UW-1:0]	
fub_axi_rvalid	Out	1	
fub_axi_rready	In	1	
m_axi_arid	Out	[IW-1:0]	
m_axi_araddr	Out	[AW-1:0]	
m_axi_arlen	Out	[7:0]	
m_axi_arsize	Out	[2:0]	
m_axi_arburst	Out	[1:0]	
m_axi_arlock	Out	1	
m_axi_arcache	Out	[3:0]	
m_axi_arprot	Out	[2:0]	

Port	Dir	Width	Description
m_axi_arqos	Out	[3:0]	
m_axi_arregion	Out	[3:0]	
m_axi_aruser	Out	[UW-1:0]	
m_axi_arvalid	Out	1	
m_axi_arready	In	1	
m_axi_rid	In	[IW-1:0]	
m_axi_rdata	In	[DW-1:0]	
m_axi_rresp	In	[1:0]	
m_axi_rlast	In	1	
m_axi_ruser	In	[UW-1:0]	
m_axi_rvalid	In	1	
m_axi_rready	Out	1	
cg_gating	Out	1	Active gating indicator
cg_idle	Out	1	All buffers empty indicator

6.4 Functional Description

This wrapper is the base module plus one `amba_clock_gate_ctrl` instance. The datapath is untouched – every channel signal is forwarded verbatim – so functional behaviour is identical to the base module and the wrapper adds no latency of its own.

What it adds is a gated clock. `amba_clock_gate_ctrl` watches two activity terms, `user_valid` (this side's valids plus the base module's busy) and `axi_valid` (the far side's valids), registers their OR into `r_wakeup`, and stops the inner module's clock once both have been quiet for `cfg_cg_idle_count` cycles. The clock restarts on the next activity, one cycle later.

While the clock is stopped the wrapper masks its outward-facing READY signals with !
`cg_gating`, so a peer sees no acceptance until the clock runs again and no handshake is lost across the wake boundary.

`cfg_cg_enable` arms this behaviour; with it low the clock free-runs and the module is indistinguishable from its base.

6.5 Timing Characteristics

Skid parameter	Default depth
SKID_DEPTH_AR	2 entries
SKID_DEPTH_R	4 entries

Each channel traverses one `gaxi_skid_buffer`, which registers both `rd_valid` and its storage. The **1-cycle input-to-output latency therefore applies on every transfer, including the un stalled case** – there is no combinational bypass. Depth buys backpressure absorption, not throughput; full rate is sustained once the pipeline is primed. Legal range is 2..8 inclusive, odd values included.

Clocking: `aclk`, reset `aresetn` (active-low asynchronous).

No synthesis numbers are quoted here. Frequency and area depend on the target device and the parameters you elaborate with; run your own build.

6.6 Usage Examples

```
axi4_master_rd_cg #(
    // Base module parameters (see axi4_master_rd.md)
    .AXI_ID_WIDTH(8),
    .AXI_ADDR_WIDTH(32),
    .AXI_DATA_WIDTH(64),
    .CG_IDLE_COUNT_WIDTH(4)
) u_cg (
    .aclk(clk),
    .aresetn(rst_n),
    .cfg_cg_enable(1'b1),
    .cfg_cg_idle_count(4'd8),
    .cg_gating(),           // status: clock currently gated
    .cg_idle(),             // status: interfaces quiet (~r_wakeup)
    // ... all other ports same as axi4_master_rd (except busy)
);
```

6.7 Design Notes

A peer's **READY** must never enter the activity term. A consumer that parks its response-ready high while idle is behaving correctly; folding that signal into `user_valid` pins this block permanently awake and defeats gating entirely – silently, because function is unaffected. Ten

wrappers in this repository shipped that way and nothing failed until someone measured. `val/amba/test_cg_peer_ready.py` parks the peer READY high, holds every VALID low, and requires `cg_gating`. Canonical rule: `vault/handbook/design/clock-gating-activity-terms.md`.

cfg_cg_enable is not a kill switch. It arms gating and reaches `amba_clock_gate_ctrl` only; the datapath and any monitor enables are forwarded untouched. With it low the clock free-runs and this module behaves exactly like its base.

Gating latency. The clock stops `cfg_cg_idle_count + 2` cycles after the last bus activity – the idle counter, plus one for the `r_wakeup` flop. Size the idle count against your traffic’s inter-burst gap: too small and the block wakes constantly, too large and it never gates.

Cost. Five flops: `r_wakeup` plus `r_idle_counter` at `IDLE_CNTR_WIDTH`, scaling as $1 + \text{CG_IDLE_COUNT_WIDTH}$. The ICG itself is a latch or BUFGCE, not fabric flops.

6.8 Related Modules

- **Base Module Functionality:** [axi4_master_rd.md](#)
 - **Clock Gating Guide:** [clock_gated_variants.md](#)
 - **Detailed CG Examples:**
 - [axi4_master_rd_mon_cg.md](#) (AXI4 monitor)
 - [axil4_master_rd_mon_cg.md](#) (AXIL4 monitor)
 - [apb4_slave_cg.md](#) (APB interface)
-

6.9 Testing

`val/amba/test_axi4_master_rd_cg.py` exercises this module. It collects 1 parameter cases at the default `REG_LEVEL`.

```
source env_python
pytest val/amba/test_axi4_master_rd_cg.py -v
```

6.10 Navigation

- [← Back to AXI4 Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

7 axi4_master_rd_mon

Module: `axi4_master_rd_mon.sv` **Location:** `rtl/amba/axi4/` (protocol monitors live with their protocol; only the monitor CORE pieces are in `rtl/amba/monitor/`) **Status:** Production Ready

7.1 Overview

The AXI4 Master Read Monitor combines a functional AXI4 master read interface with comprehensive transaction monitoring and filtering. This is the module you drop into a verification environment when you want real-time protocol checking, error detection, performance metrics, and configurable packet filtering without giving up the datapath — the traffic flows through it, and it watches on the way by.

7.1.1 Key Features

- **Integrated Monitoring:** Combines `axi4_master_rd` with `axi_monitor_filtered`
 - **2-Level Filtering: packet-type drop masks + per-event masks (`err_select` is reserved – no routing)**
 - **Error Detection:** SLVERR, DECERR, orphaned read data, timeouts (protocol-violation events are write-monitor only – see Error Detection Events)
 - **Timeout Monitoring:** Configurable timeout detection for stuck transactions
 - **Performance Metrics:** Latency tracking, transaction counting, throughput analysis
 - **Monitor Bus Output:** 128-bit packets paired with 64-bit side-band timestamps
 - **Configuration Validation:** Detects conflicting configuration settings
 - **Clock Gating Support:** Busy signal for power management
-

7.2 Parameters

A lite-monitor version of this wrapper exists as `axi4_master_rd_monlite`: the same core and taps with `axi_monitor_lite` instead of `axi_monitor_filtered`, about a fifth of the

monitor gates, error/timeout/completion/threshold packets only. Selected in generated bridges by `mon_preset = "lite"`.

7.2.1 AXI4 Master Parameters

Parameter	Type	Default	Description
SKID_DEPTH_AR	int	2	AR channel skid buffer depth
SKID_DEPTH_R	int	4	R channel skid buffer depth
AXI_ID_WIDTH	int	8	Transaction ID width
AXI_ADDR_WIDTH	int	32	Address bus width
AXI_DATA_WIDTH	int	32	Data bus width
AXI_USER_WIDTH	int	1	User signal width

7.2.2 Monitor Parameters

Parameter	Type	Default	Description
UNIT_ID	logic [7:0]	8'h01	8-bit unit identifier in monitor packets
AGENT_ID	logic [15:0]	16'h000A	16-bit agent identifier in monitor packets
MAX_TRANSACTIONS	int	16	Maximum concurrent outstanding transactions
ACLK_MHZ	int	100	Clock frequency in MHz – keeps the 1 us tick exact off-100MHz
CFI_MIN_FREQ_MHZ / CFI_MAX_FREQ_MHZ	int	= ACLK_MHZ	Bounds for the freq-invariant counter LUT (<code>cfg_freq_sel</code> indexes within them)
USE_WDATA_ORDER_Q	bit	0	Write-data ordering queue

Parameter	Type	Default	Description
NUM_BANKS	int	1	Banked transaction tables. >1 on a WRITE monitor requires USE_WDATA_ORDER_Q=1 – axi_monitor_trans_mgr fails elaboration otherwise
ID_FILTER_ENABLE	bit	0	Synthesises the per-instance ID-slice filter
ID_MATCH_BASE	int	0	First ID this instance owns
ID_MATCH_COUNT	int	0	How many; 0 means ALL, so a zeroed register block does not silently filter everything away
ACTIVE_TRANS_THRESHOLD	int	MAX_TRANSACTION/2	Active-transaction count that trips a threshold packet when <code>cfg_threshold_enable=1</code> . Replaces the former hardwired 8/4; threshold packets now scale with the table sizing
ENABLE_FILTERING	bit	1	Enable packet filtering: two active drop levels (packet type, then event code). Level 2 is reserved and routes nothing
ADD_PIPELINE_STAGE	bit	0	Add register stage for timing closure
USE_MONITOR	bit	1	Synthesis-time monitor enable. 0 = omit monitor and tie outputs to safe non-blocking defaults; 1 = full monitor

Parameter	Type	Default	Description
N_ADDR_RANGES	int	0	functionality. Number of address-range comparators. 0 = checker omitted (zero area). >0 = N independent [low, high] ranges; feeds the shared allowlist checker: a debug-range hit -> AddrMatch, an error-allowlist miss -> Error/ADDR_RANGE (see axi_monitor_addr_check.md).
ADDR_RANGE_IS_ERROR	logic [N_ADDR_RANGES-1:0]	'0	Per-range flavor: bit i = 0 -> DEBUG range (hit -> AddrMatch), 1 -> ERROR range (allowlist miss -> Error/ADDR_RANGE). Default all-0 (feature inert).

7.2.3 Synthesis-Cone Parameters

Each detection cone can be compiled out to save area. The classic cones default on; the debug cone defaults off. Setting a bit to 0 drops the corresponding cone at synthesis via a generate-if inside axi_monitor_reporter — the area saving is real.

Parameter	Type	Default	Effect when 0
ENABLE_ERROR_LOGIC	bit	1	Drop the error-detection cone
ENABLE_TIMEOUT_LOGIC	bit	1	Drop the timeout cone and the axi_monitor_timeout instance
ENABLE_COMPL_LOGIC	bit	1	Drop the completion cone
ENABLE_THRESHOLD_LOGIC	bit	1	Drop the threshold cone

Parameter	Type	Default	Effect when 0
ENABLE_PERF_LOGIC	bit	1	Gates only the reporter's legacy perf-packet cone and the two lifetime counters – the window FSM and meters are unconditional
ENABLE_DEBUG_LOGIC	bit	0	Drop the debug (trace) cone — the 6th reporter sub-block (off by default)

Internally the wrapper hardwires two master switches on its `axi_monitor_filtered` instance: `ENABLE_PERF_PACKETS = 1` (the reporter's legacy perf cone is built; `ENABLE_PERF_LOGIC` gates THAT cone only, never the measurement window) and `ENABLE_DEBUG_MODULE = 0` (debug tracking module omitted). These are not top-level parameters of the wrapper.

The transaction CAM is always pipelined.

7.2.4 Derived Parameters (do not override)

These are declared as `parameter` so the elaborator can compute them, not so callers can set them. Each defaults to an expression over the parameters above; overriding one desynchronises it from its source and the design fails to elaborate or silently mis-sizes a bus. Set the parameters they are derived FROM and leave these alone.

Derived parameter	Default expression
AXI_WSTRB_WIDTH	AXI_DATA_WIDTH / 8
AW	AXI_ADDR_WIDTH
DW	AXI_DATA_WIDTH
IW	AXI_ID_WIDTH
SW	AXI_WSTRB_WIDTH
UW	AXI_USER_WIDTH

7.3 Ports

7.3.1 AXI4 Interfaces

****Frontend Interface (fub_axi_*)**** - AR channel inputs: `arid`, `araddr`, `arlen`, `arsize`, `arburst`, `arlock`, `arcache`, `arprot`, `arqos`, `arregion`, `aruser`, `arvalid` - AR channel output: `arready` - R channel outputs: `rid`, `rdata`, `rresp`, `rlast`, `ruser`, `rvalid` - R channel input: `rready`

****Master Interface (m_axi_*):**** - AR channel outputs: arid, araddr, arlen, arsize, arbust, arlock, arcache, arprot, arqos, arregion, aruser, arvalid - AR channel input: arready - R channel inputs: rid, rdata, rresp, rlast, ruser, rvalid - R channel output: rready

7.3.2 Monitor Configuration

Basic Configuration:

Port	Direction	Width	Description
cfg_monit or_enable	Input	1	Master runtime gate. 0 = monitor inert: no allocation, transaction CAM held clear, and the upstream ready is never stalled (a disabled monitor cannot block the datapath). 1 = normal operation
cam_clear	Input	1	Synchronous clear of the monitor transaction CAM (driven from the harness clear control bit, e.g. CTRL[4])
cfg_error _enable	Input	1	Enable error packet generation
cfg_timeo ut_enable	Input	1	Enable timeout detection
cfg_perf_ enable	Input	1	Enable performance metrics
cfg_compl _enable	Input	1	Enable transaction-completion packets
cfg_thres hold_enab le	Input	1	Enable threshold-crossed packets
cfg_debug _enable	Input	1	Enable debug/trace packets (gates the debug cone — the 6th reporter sub-block)

Port	Direction	Width	Description
cfg_timeout_cycles	Input	16	Unified coarse timeout control, a MICROSECOND count passed through at FULL 16-bit width: 1..65535 us per phase; 0 = 16'hFFFF (~65 ms, effectively never). One value drives all three phase counts (addr/data/resp). The old 4-bit squash that saturated ≥ 16 at 15 us is retired
cfg_latency_threshold	Input	32	Latency threshold for alerts
cfg_freq_sel	Input	4	counter_freq_invariant LUT index scaling the 1 us timer tick – the microsecond timeouts above are measured in these ticks

The inner monitor's `cfg_debug_level` (tied to 0) and `cfg_debug_mask` (0) are fixed inside the wrapper; `cfg_active_trans_threshold` is driven from the `ACTIVE_TRANS_THRESHOLD` parameter (default `MAX_TRANSACTIONS/2`). `cfg_debug_enable` is the only debug-cone control exposed here.

Filtering Configuration (levels 1 and 3 drop packets; level 2 is reserved):

Level 1 - Packet Type Masks:

Port	Direction	Width	Description
cfg_axi_packet_mask	Input	16	Drop mask for entire packet types
cfg_axi_error_select	Input	16	Error routing select (future use)

Level 2 & 3 - Individual Event Masks:

Port	Direction	Width	Description
cfg_axi_error_mask	Input	16	Mask specific error events
cfg_axi_timeout_mask	Input	16	Mask specific timeout events
cfg_axi_completion_mask	Input	16	Mask specific completion events
cfg_axi_threshold_mask	Input	16	Mask specific threshold events
cfg_axi_performance_mask	Input	16	Mask specific performance events
cfg_axi_address_match_mask	Input	16	Mask specific address match events
cfg_axi_debug_mask	Input	16	Mask specific debug events

7.3.3 Monitor Bus Output

Port	Direction	Width	Description
monbus_valid	Output	1	Monitor packet valid
monbus_ready	Input	1	Downstream ready to accept packet
monbus_packet	Output	128	monitor_packet_t (see format below)
monbus_timestamp	Output	64	monbus_timestamp_t paired atomically with monbus_packet
debug_block_ready	Output	1	Observability tap for the block_ready gating net (drives nothing internally; leave unconnected if unused)
i_mon_time	Input	64	Free-running counter from monbus_group_core, sampled at packet

Port	Direction	Width	Description
			emission

7.3.4 Status Outputs

Port	Direction	Width	Description
busy	Output	1	Indicates active transactions (for clock gating)
active_transactions	Output	8	Current number of outstanding transactions
error_count	Output	16	Lifetime count of error+timeout packets actually emitted (reporter perf counter; reads 0 when ENABLE_PERF_LOGIC=0 or USE_MONITOR=0)
transaction_count	Output	32	Lifetime count of completion packets actually emitted (zero-extended 16-bit reporter perf counter; reads 0 when ENABLE_PERF_LOGIC=0 or USE_MONITOR=0)
cfg_conflict_error	Output	1	Configuration conflict detected

7.3.5 Packet filters

Two independent runtime filters cut monbus traffic without touching the datapath. Both are inert until driven, which is the failure to watch for: the build-time parameter only decides whether the logic is SYNTHESISED, and a design that sets the parameter but leaves the `cfg_*` ports tied low filters nothing and looks like the feature is broken.

Address-range filter — `ADDR_FILTER_ENABLE` (bit, default 0) builds it.

Port	Width	Description
cfg_addr_filter_enable	1	High: suppress packets for transactions outside the window. Low: inert, whatever the parameter says
cfg_addr_filter_low	ADDR_WIDTH	Window base, inclusive
cfg_addr_filter_high	ADDR_WIDTH	Window limit, inclusive


The verdict is latched per table entry at ALLOCATION, from the command address, and held for that entry's life. Widening the window mid-flight does not un-filter entries already admitted — which is exactly what makes it safe to reprogram live, since an entry's fate is decided when it is admitted and the retire accounting cannot be corrupted afterwards. Contrast the address-range CHECKER (N_ADDR_RANGES), which re-evaluates per command.

Runtime ID filter — overrides the ID_MATCH_BASE/ID_MATCH_COUNT elaboration constants so an instance can be retargeted at a different master without a rebuild.

Port	Width	Description
cfg_id_filter_enable	1	High: use the window below. Low: use the parameters, bit-identical to a build without this feature
cfg_id_match_base	ID_WIDTH	First ID owned
cfg_id_match_count	ID_WIDTH+1	How many; 0 means ALL, matching the parameter rule so a zeroed register block does not silently filter everything away

The window is half-open: [base, base + count).

7.4 Functional Description

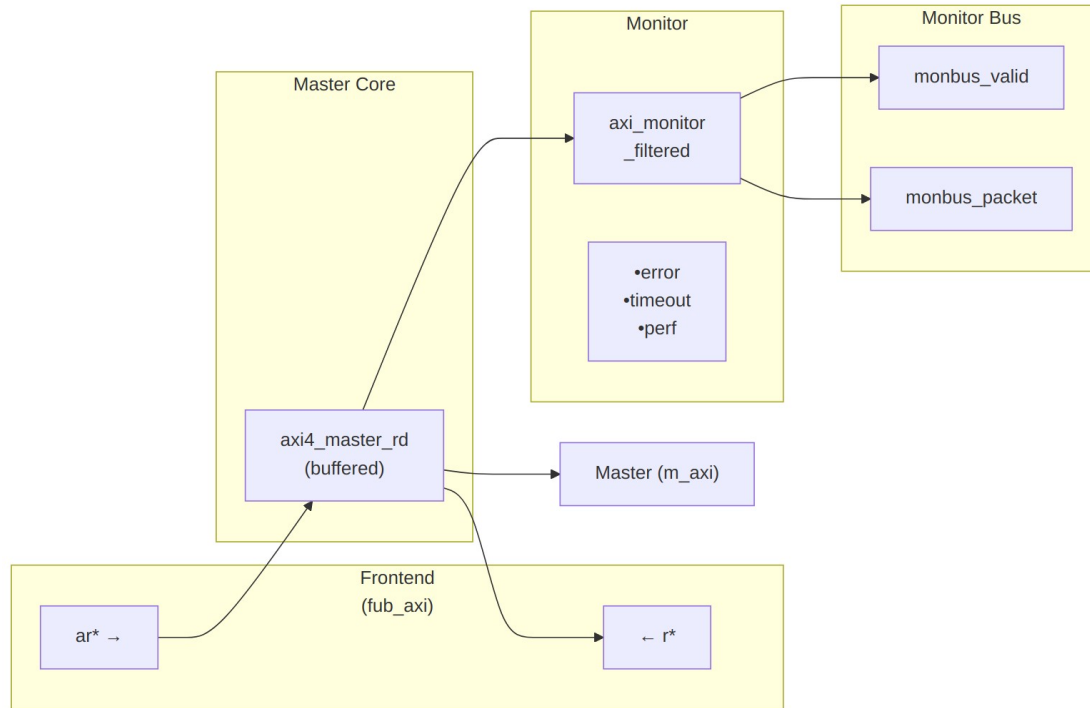

Module Architecture

The module instantiates two sub-modules: 1. **axi4_master_rd** - Core AXI4 functionality with buffering 2. **axi_monitor_filtered** - Transaction monitoring with 2-Level Filtering: packet-type drop masks + per-event masks (err_select is reserved – no routing)

7.4.1 Monitor Backpressure (block_ready)

`block_ready` is exported as the `debug_block_ready` output port – the wrapper deliberately makes the gating contract observable (the plain `_mon_cg` wrapper ties it off rather than forwarding it). It goes low when the monitor's transaction-table occupancy reaches its blocking threshold (a function of `MAX_TRANSACTIONS`; the reporter FIFO depth `INTR_FIFO_DEPTH` has no path to it). The wrapper ANDs it into the upstream-facing `fub_axi_arready` so a saturated monitor throttles new transactions at the handshake instead of dropping events.

- **Where the stall lands:** the upstream `fub_axi_arready` is forced low until the monitor drains.
- **When `USE_MONITOR=0`:** `block_ready` is internally tied high, so the wrapper imposes no stall and runs at full bandwidth.
- **When `cfg_monitor_enable=0`:** the wrapper gate forces the upstream ready open, so a runtime-disabled monitor can never stall the datapath (in-RTL formal property `ap_disabled_never_stalls`).

Recovery is guaranteed by the **saturation-recovery contract**: command-originated table entries are capped at `MAX_TRANSACTIONS - cmd_entry_reserve(MAX_TRANSACTIONS)` (reserve = 4 for tables of 16 or more, 0 below; the function lives in `monitor_common_pkg`), and `block_ready` re-asserts at occupancy < `MAX_TRANSACTIONS - (reserve - 1)` – a threshold strictly ABOVE the command cap – so a saturated table always drains back below the reopen point. Blocking throttles; it never deadlocks. Tables smaller than 16 keep full legacy allocation (small tables cannot spare slots) and trade the recovery guarantee for tracking capacity. The contract is verified by in-RTL formal properties (mutation-checked) and a 100-seed deliberately-undersized-table stream sweep; see [axi_monitor_base](#) for the canonical description.

Sizing note: a monitor on a bus shared by several channels/requesters must size `MAX_TRANSACTIONS` to cover `NUM_CHANNELS × per-channel outstanding` plus margin – the per-channel limit alone makes the monitor throttle the shared master. Tables deeper than 64 also need Verilator's `--unroll-count` raised (default 64) in sim builds.

7.4.2 Address-Range Checker

With `N_ADDR_RANGES > 0` the wrapper instantiates the shared allowlist checker (`axi_monitor_addr_check`). Each range carries a DEBUG/ERROR flavor:

- **DEBUG range** — a hit emits a `PktTypeAddrMatch` (4'h8) packet with event code `AXI_ADDR_RANGE_MATCH` (8'h01), gated by `cfg_debug_enable`.
- **ERROR range** — the enabled ERROR ranges form an allowlist; an address in NONE of them emits a `PktTypeError` (4'h0) packet with event code `AXI_ERR_ADDR_RANGE` (8'h0D), gated by `cfg_error_enable`.

This wrapper exposes **ADDR_RANGE_IS_ERROR** (per-range) as a parameter, so ranges can be assigned to either flavor.

Config inputs (active only when `N_ADDR_RANGES > 0`): - `cfg_addr_check_enable` — master on/off for the checker. - `cfg_addr_range_enable[N-1:0]` — per-range enable bit. - `cfg_addr_range_low/high[N-1:0][AXI_ADDR_WIDTH-1:0]` — inclusive bounds.

Event encoding: `event_data[63:60]` = `range_index` (matching DEBUG range, or 4'hF sentinel on an ERROR miss); `event_data[59:0]` = full address. **Filtering:** `AddrMatch` is dropped by `cfg_axi_addr_mask[1]`, the `ADDR_RANGE` error by `cfg_axi_error_mask[13]`. See the checker page for coalescing + formal properties.

7.4.3 Performance Monitoring

The wrapper hardwires `ENABLE_PERF_PACKETS = 1` on its inner `axi_monitor_filtered`. The **measurement-window state machine** and its counters are unconditional `always_ff` blocks in `axi_monitor_base` – outside every generate – so they are present and running in EVERY build, including `ENABLE_PERF_LOGIC = 0`. That parameter reaches one consumer: the `g_perf` generate in `axi_monitor_reporter` holding the legacy perf-packet cone and the two 16-bit lifetime counters behind `perf_completed_count` / `perf_error_count`. Setting it to 0 saves that cone and nothing else. `USE_MONITOR = 0` is what ties the perfmon outputs off. The wrapper

instantiates plus a bank of R-data-channel utilization counters. All counters accumulate **only while a window is open** (`window_active = 1`) and hold their values between windows, so the host can read a completed window's totals.

7.4.3.1 The Measurement Window

A window is opened by a **start event** and closed by an **end event**. The event sources are selected by `cfg_start_event_sel` / `cfg_end_event_sel` (3-bit; e.g. 3'b010 selects the `cfg_perf_enable` edge) and can also be fired directly by the `cfg_start_trigger` / `cfg_end_trigger` pulses (from an engine or CSR). `cfg_window_force_close` is a software override that closes the window immediately. While the window is open:

- `window_active` is high.
- `window_cycles[31:0]` free-runs, counting every clock elapsed inside the window.

Sample the counters on the cycle `window_active` falls to 0 (drive `cfg_end_trigger`, or wait for the configured end event).

7.4.3.2 Utilization Counters (R Data Channel)

Every cycle inside the window is classified by the R channel's `rvalid` / `rready` into exactly one of four buckets:

Output	Width	Condition	Meaning
<code>perf_prod_cycles</code>	32	<code>rvalid && rready</code>	productive beat transferred
<code>perf_bp_cycles</code>	32	<code>rvalid && !rready</code>	back-pressure (data offered, sink not ready)
<code>perf_starv_cycles</code>	32	<code>!rvalid && rready</code>	starvation (sink ready, no data)
<code>perf_idle_cycles</code>	32	<code>!rvalid && !rready</code>	idle

The four buckets sum to `window_cycles - 1` (the start cycle seeds `window_cycles` to 1 while the buckets reset to 0); the one-count skew is negligible for long windows.

7.4.3.3 Throughput Counters

Output	Width	Meaning
<code>perf_beat_count</code>	32	R data beats transferred (= <code>perf_prod_cycles</code> , 1 beat/cycle)

Output	Width	Meaning
perf_byte_count	64	bytes transferred = beats × (1 << ARSIZE), using the ARSIZE captured at the most recent AR address phase (upper bound: counts full-width beats; an unaligned start address means the first beat carries fewer useful bytes)
perf_burst_count	32	AR address-phase handshakes

The integrator computes average burst length as `perf_beat_count / perf_burst_count`.

7.4.3.4 Performance Monitoring Ports

Port	Direction	Width	Description
cfg_perf_enable	Input	1	Enable performance-metric packet generation
cfg_start_event_sel	Input	3	Window start event source select
cfg_end_event_sel	Input	3	Window end event source select
cfg_start_trigger	Input	1	Pulse: open the measurement window
cfg_end_trigger	Input	1	Pulse: close the measurement window
cfg_window_force_close	Input	1	Software override: force the window closed
window_active	Output	1	High while a measurement window is open
window_cycles	Output	32	Cycles elapsed in the current window
perf_prod_cycles	Output	32	rvalid && rready cycles

Port	Direction	Width	Description
perf_bp_cycles	Output	32	rvalid && !rready cycles (back-pressure)
perf_starv_cycles	Output	32	!rvalid && rready cycles (starvation)
perf_idle_cycles	Output	32	!rvalid && !rready cycles
perf_beat_count	Output	32	R data beats transferred
perf_byte_count	Output	64	bytes transferred
perf_burst_count	Output	32	AR address-phase handshakes

When `USE_MONITOR = 0`, every perfmon output is tied to 0 and the window never opens.

7.4.4 Monitor Packet Format

The 128-bit `monbus_packet` (paired with the 64-bit `monbus_timestamp` side-band signal) follows the standardized AMBA monitor bus format:

Bits [127:124] - Packet Type:

- 0x0 = ERROR Error events (SLVERR, DECERR, protocol violations)
- 0x1 = COMPL Completion events (transaction finished)
- 0x2 = THRESH Threshold events
- 0x3 = TIMEOUT Timeout events
- 0x4 = PERF Performance metrics
- 0x8 = ADDR_MATCH Address match events
- 0x9 = APB APB-specific events
- 0xF = DEBUG Debug events

Bits [123:109] - Reserved (15 bits, forward-compat slack)

Bits [108:105] - Protocol (4 bits): 0x0=AXI, 0x1=AXIS, 0x2=APB, 0x3=ARB, 0x4=CORE

Bits [104:97] - Event Code (8 bits, protocol-specific)

Bits [96:88] - Channel ID (9 bits – AXI ID or channel index)

Bits [87:72] - Agent ID (16 bits, from `AGENT_ID` parameter)

Bits [71:64] - Unit ID (8 bits, from `UNIT_ID` parameter)

Bits [63:0] - Event Data (64 bits – full address, latency, etc.)

7.5 Timing Characteristics

Skid parameter	Default depth
SKID_DEPTH_AR	2 entries
SKID_DEPTH_R	4 entries

Each channel traverses one `gaxi_skid_buffer`, which registers both `rd_valid` and its storage. The **1-cycle input-to-output latency therefore applies on every transfer, including the un stalled case** – there is no combinational bypass. Depth buys backpressure absorption, not throughput; full rate is sustained once the pipeline is primed. Legal range is 2..8 inclusive, odd values included.

Clocking: `aclk`, reset `aresetn` (active-low asynchronous).


No synthesis numbers are quoted here. Frequency and area depend on the target device and the parameters you elaborate with; run your own build.

7.6 Waveforms

The following waveforms show AXI4 master read monitor behavior across various scenarios:

7.6.1 Scenario 1: Single-Beat Read Transaction

Complete AXI4 read transaction with AR handshake and R response:

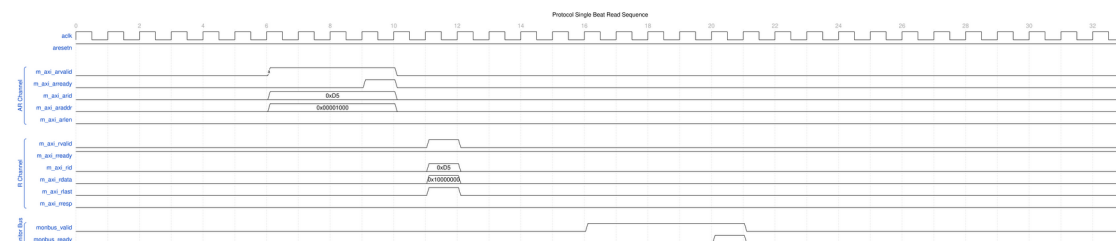


Single Beat Read

WaveJSON: [single_beat_read_001.json](#)

Key Observations: - AR channel handshake (ARVALID/ARREADY) - R channel response (RVALID/RREADY/RLAST) - Monitor bus packet generation - Transaction tracking and completion

7.6.2 Scenario 2: AR Channel Handshake Detail

Detailed view of address read channel handshake:

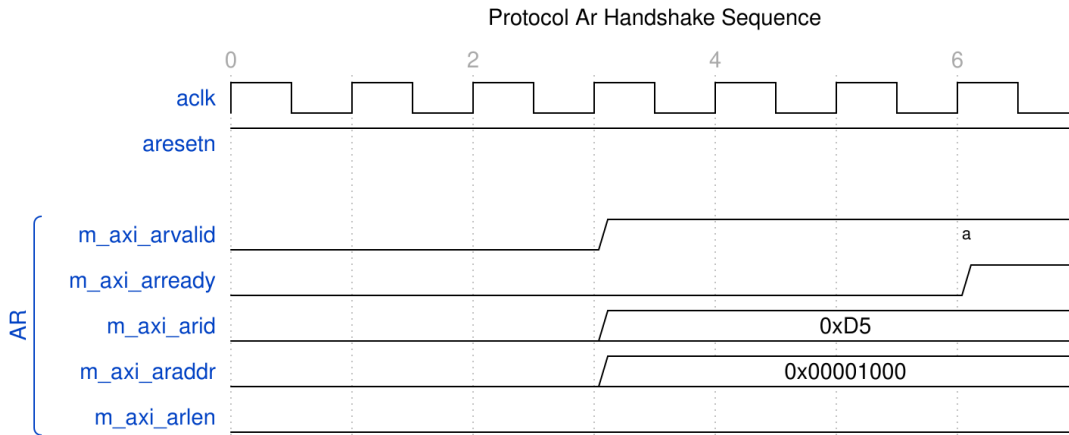


AR Handshake

WaveJSON: [ar_handshake_001.json](#)

Key Observations: - ARVALID assertion timing - ARREADY response from slave - Address and control signal stability - Handshake protocol compliance

7.6.3 Scenario 3: R Response Channel Detail

Read data response channel behavior:

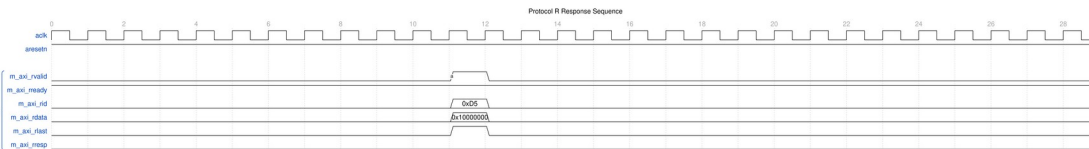

R Response

WaveJSON: [r_response_001.json](#)

Key Observations: - RVALID/RREADY handshake - RLAST assertion for transaction completion - RRESP status (OKAY/SLVERR/DECERR) - Read data capture

7.6.4 Scenario 4: Complete AXI4 Read Transaction

End-to-end AXI4 read transaction flow:




AXI4 Read Transaction

WaveJSON: [axi4_read_transaction_001.json](#)

Key Observations: - Complete AR → R channel flow - Transaction ID tracking - Burst length and size handling - Monitor packet correlation

7.6.5 Scenario 5: Monitor Bus Packet Generation

Monitor bus output packet format and timing:




MonBus Packet

WaveJSON: [monbus_packet_001.json](#)

Key Observations: - Monitor bus valid/ready handshake - 128-bit packet format (plus 64-bit side-band timestamp) - Packet type encoding - Event data payload

7.6.6 Scenario 6: Simple ARVALID Transaction

Simplified view of ARVALID-based transaction:

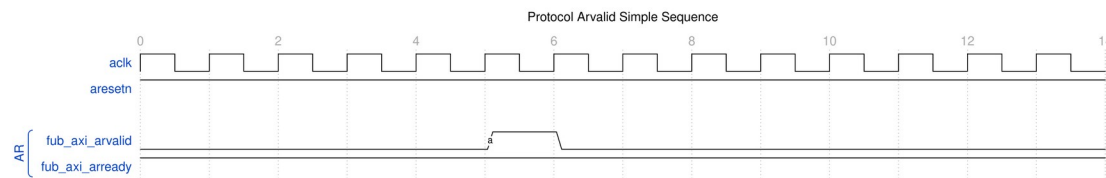


ARVALID Simple

WaveJSON: [arvalid_simple_001.json](#)

Key Observations: - Minimal handshake sequence - Single-beat read operation - Fast transaction completion

7.6.7 Scenario 7: Alternative Single-Beat Read

Variant single-beat read with different timing:

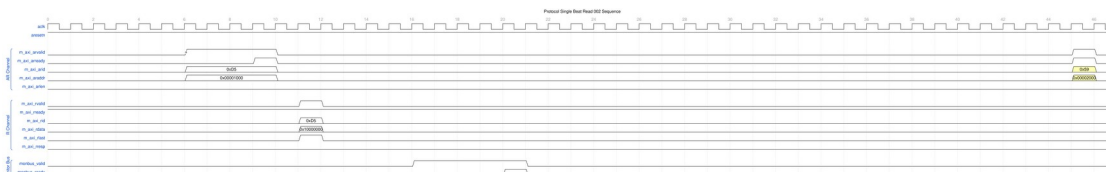

Single Beat Read Alt

WaveJSON: [single_beat_read_002_001.json](#)

Key Observations: - Different backpressure pattern - Ready signal de-assertion effects - Transaction latency variation

7.7 Usage Examples

Every parameter and port below is read from the module declaration.

```
axi4_master_rd_mon #(
    .SKID_DEPTH_AR      (2),
    .SKID_DEPTH_R       (4),
    .AXI_ID_WIDTH       (8),
    .AXI_ADDR_WIDTH     (32),
    .AXI_DATA_WIDTH     (32),
    .AXI_USER_WIDTH     (1),
    .ACLK_MHZ           (100),
    .USE_MONITOR        (1'b1),
    .N_ADDR_RANGES      (0),
    .ADDR_RANGE_IS_ERROR ('0')
) u_axi4_master_rd_mon (
    .aclk                (aclk),
    .aresetn             (aresetn),
    .cam_clear           (cam_clear),
    .fub_axi_arid        (fub_axi_arid),
    .fub_axi_araddr      (fub_axi_araddr),
    .fub_axi_arlen       (fub_axi_arlen),
    .fub_axi_arsize      (fub_axi_arsize),
    .fub_axi_arburst     (fub_axi_arburst),
    .fub_axi_arlock      (fub_axi_arlock),
    .fub_axi_arcache     (fub_axi_arcache),
    .fub_axi_arprot      (fub_axi_arprot),
    .fub_axi_arqos       (fub_axi_arqos),
    .fub_axi_arregion    (fub_axi_arregion),
    .fub_axi_aruser      (fub_axi_aruser),
    .fub_axi_arvalid     (fub_axi_arvalid),
    .fub_axi_arready     (fub_axi_arready),
    .fub_axi_rid         (fub_axi_rid),
    .fub_axi_rdata       (fub_axi_rdata),
    .fub_axi_rresp       (fub_axi_rresp),
    .fub_axi_rlast       (fub_axi_rlast),
    .fub_axi_ruser       (fub_axi_ruser),
    .fub_axi_rvalid      (fub_axi_rvalid),
    .fub_axi_rready      (fub_axi_rready),
    .m_axi_arid          (m_axi_arid),
    .m_axi_araddr        (m_axi_araddr),
    .m_axi_arlen         (m_axi_arlen),
    .m_axi_arsize        (m_axi_arsize),
```

.m_axi_arburst	(m_axi_arburst),
.m_axi_arlock	(m_axi_arlock),
.m_axi_arcache	(m_axi_arcache),
.m_axi_arprot	(m_axi_arprot),
.m_axi_arqos	(m_axi_arqos),
.m_axi_arregion	(m_axi_arregion),
.m_axi_aruser	(m_axi_aruser),
.m_axi_arvalid	(m_axi_arvalid),
.m_axi_arready	(m_axi_arready),
.m_axi_rid	(m_axi_rid),
.m_axi_rdata	(m_axi_rdata),
.m_axi_rresp	(m_axi_rresp),
.m_axi_rlast	(m_axi_rlast),
.m_axi_ruser	(m_axi_ruser),
.m_axi_rvalid	(m_axi_rvalid),
.m_axi_rready	(m_axi_rready),
.cfg_monitor_enable	(cfg_monitor_enable),
.cfg_error_enable	(cfg_error_enable),
.cfg_timeout_enable	(cfg_timeout_enable),
.cfg_perf_enable	(cfg_perf_enable),
.cfg_compl_enable	(cfg_compl_enable),
.cfg_threshold_enable	(cfg_threshold_enable),
.cfg_debug_enable	(cfg_debug_enable),
.cfg_timeout_cycles	(cfg_timeout_cycles),
.cfg_freq_sel	(cfg_freq_sel),
.cfg_latency_threshold	(cfg_latency_threshold),
.cfg_axi_pkt_mask	(cfg_axi_pkt_mask),
.cfg_axi_err_select	(cfg_axi_err_select),
.cfg_axi_error_mask	(cfg_axi_error_mask),
.cfg_axi_timeout_mask	(cfg_axi_timeout_mask),
.cfg_axi_compl_mask	(cfg_axi_compl_mask),
.cfg_axi_thresh_mask	(cfg_axi_thresh_mask),
.cfg_axi_perf_mask	(cfg_axi_perf_mask),
.cfg_axi_addr_mask	(cfg_axi_addr_mask),
.cfg_axi_debug_mask	(cfg_axi_debug_mask),
.cfg_addr_check_enable	(cfg_addr_check_enable),
.cfg_addr_range_enable	(cfg_addr_range_enable),
.cfg_addr_range_low	(cfg_addr_range_low),
.cfg_addr_range_high	(cfg_addr_range_high),
.cfg_id_filter_enable	(cfg_id_filter_enable),
.cfg_id_match_base	(cfg_id_match_base),
.cfg_id_match_count	(cfg_id_match_count),
.cfg_addr_filter_enable	(cfg_addr_filter_enable),
.cfg_addr_filter_low	(cfg_addr_filter_low),
.cfg_addr_filter_high	(cfg_addr_filter_high),
.cfg_start_event_sel	(cfg_start_event_sel),
.cfg_end_event_sel	(cfg_end_event_sel),
.cfg_start_trigger	(cfg_start_trigger),

```

.cfg_end_trigger      (cfg_end_trigger),
.cfg_window_force_close(cfg_window_force_close),
.i_mon_time           (i_mon_time),
.monbus_valid         (monbus_valid),
.monbus_ready         (monbus_ready),
.monbus_packet        (monbus_packet),
.monbus_timestamp     (monbus_timestamp),
.busy                 (busy),
.active_transactions  (active_transactions),
.error_count          (error_count),
.transaction_count    (transaction_count),
.debug_block_ready    (debug_block_ready),
.window_active        (window_active),
.window_cycles        (window_cycles),
.perf_prod_cycles     (perf_prod_cycles),
.perf_bp_cycles       (perf_bp_cycles),
.perf_starv_cycles    (perf_starv_cycles),
.perf_idle_cycles     (perf_idle_cycles),
.perf_beat_count      (perf_beat_count),
.perf_byte_count      (perf_byte_count),
.perf_burst_count     (perf_burst_count),
.cfg_conflict_error   (cfg_conflict_error)
);

```

7.8 Design Notes

7.8.1 Filtering Hierarchy

The 2-Level Filtering: packet-type drop masks + per-event masks (err_select is reserved – no routing)

1. **Level 1 (cfg_axi_pkt_mask):** Coarse filtering by packet type
 - Bit per packet type (ERROR, TIMEOUT, COMPL, etc.)
 - 1 = drop, 0 = pass to next level
2. **Level 2 (cfg_axi_err_select):** Future error routing
 - Reserved for directing errors to alternate paths
3. ****Level 3 (cfg_axi_*_mask):**** Fine-grained event filtering
 - Individual event masks within each packet type
 - Allows selecting specific events while dropping others

7.8.2 Configuration Conflicts

cfg_conflict_error asserts when a packet type dropped by cfg_axi_pkt_mask is simultaneously selected for error routing by cfg_axi_err_select:

```
assign cfg_conflict_error = |(cfg_axi_pkt_mask & cfg_axi_err_select);
```

7.8.3 Performance Considerations

Monitor Bus Bandwidth: - The reporter sustains at most 1 packet per 2 cycles - Completion packets: 1 per transaction - Performance packets: periodic count rollups (completed-count and error-count), not per-transaction - Error packets: Variable (0-N per transaction)

Recommended Packet Budget: - Functional mode: 1-2 packets per transaction (COMPL + occasional ERROR/TIMEOUT) - Performance mode: ERROR packets plus periodic PERF rollups - Debug mode: several packets per transaction (all types)

7.8.4 Transaction Table

Monitors up to MAX_TRANSACTIONS concurrent transactions: - Tracks ARID, address, latency, status - Generates packets on completion, timeout, or error - Proper cleanup via event_reported feedback (fixed in v1.1)

7.9 Related Modules

7.9.1 Companion Monitors

- **axi4_master_wr_mon** - AXI4 master write with monitoring
- **axi4_slave_rd_mon** - AXI4 slave read with monitoring
- **axi4_slave_wr_mon** - AXI4 slave write with monitoring

7.9.2 Base Modules

- **axi4_master_rd** - Functional AXI4 master read (without monitoring)
- **axi_monitor_filtered** - Monitoring engine with filtering (monitor/)

7.9.3 Used Components

- **gaxi_skid_buffer** - Elastic buffering
 - **axi_monitor_base** - Core monitoring logic (monitor/)
 - **axi_monitor_trans_mgr** - Transaction tracking (monitor/)
-

7.10 Testing

val/amba/test_axi4_master_rd_mon.py exercises this module. It collects 4 parameter cases at the default REG_LEVEL.

```
source env_python
pytest val/amba/test_axi4_master_rd_mon.py -v
```

7.11 References

7.11.1 Specifications

- ARM IHI 0022E: AMBA AXI Protocol Specification (AXI4)
- Monitor Bus Packet Format: [monitor_package_spec.md](#)

7.11.2 Source Code

- RTL: rtl/amba/axi4/axi4_master_rd_mon.sv
- Tests: val/amba/test_axi4_master_rd_mon.py
- Framework: bin/TBClasses/components/axi4/

7.11.3 Documentation

- Configuration Guide: [AXI Monitor Base](#)
 - Architecture: [rtl-amba Overview](#)
 - AXI4 Index: [axi4/README.md](#)
-

Last Updated: 2026-07-18

7.12 Navigation

- [← Back to AXI4 Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

8 axi4_master_rd_mon_cg

Module: axi4_master_rd_mon_cg.sv **Base Module:** [axi4_master_rd_mon](#) **Location:** rtl/amba/axi4/ (protocol monitors live with their protocol; only the monitor CORE pieces are in rtl/amba/monitor/) **Status:** Production Ready

8.1 Overview

The `axi4_master_rd_mon_cg` module is a clock-gated variant of `axi4_master_rd_mon` that adds comprehensive power optimization capabilities through activity-based clock gating.

8.1.1 Key Differences from Base Module

- **Activity-Based Clock Gating:** one gate for the whole module, woken by bus valids, core busy, and a pending monitor packet
- **Runtime Control:** `cfg_cg_enable` / `cfg_cg_idle_count` (no per-domain policies)
- **Gating Status:** `cg_gating` / `cg_idle` outputs (no built-in power statistics)
- **Functional differences from base:** `ACTIVE_TRANS_THRESHOLD` not forwarded (harmless – its inner default is derived from the forwarded `MAX_TRANSACTIONS`), `debug_block_ready` tied off, and gated-clock caveats for windows/triggers (see the WARNING below) – use the base module when those matter

All other functionality is identical to the base module. See `axi4_master_rd_mon.md` for complete functional specification.

8.1.2 When to Use the Clock-Gated Variant

Use `axi4_master_rd_mon_cg` when: - Power consumption is a critical concern - Design has periods of inactivity (burst traffic patterns) - FPGA/ASIC has integrated clock gating support - Meeting power budgets for battery-operated systems

Use base module (`axi4_master_rd_mon`) when: - Maximum performance with no power constraints - Continuous high-activity traffic - Simpler design with fewer configuration parameters - Minimizing gate count is priority

8.2 Parameters

8.2.1 Clock Gating Parameters

In addition to all parameters from `axi4_master_rd_mon`, this module adds:

Parameter	Type	Default	Description
<code>CG_IDLE_COUNT_WIDTH</code>	int	4	Width of the idle countdown, sizing <code>cfg_cg_idle_count</code>

Parameter	Type	Default	Description
ADD_PIPELINE_STAGE	bit	0	Insert a register stage for timing closure. Costs a cycle of latency. (Add register stage for timing closure)
ENABLE_COMPL_LOGIC	bit	1'b1	Synthesise the completion-packet cone. 0 removes the logic entirely.
ENABLE_DEBUG_LOGIC	bit	1'b0	Synthesise the debug-packet cone. 0 removes the logic entirely.
ENABLE_ERROR_LOGIC	bit	1'b1	Synthesise the error detection cone. 0 removes the logic entirely.
ENABLE_FILTERING	bit	1	Enable packet filtering: two active drop levels (packet type, then event code). Level 2 is reserved and routes nothing.
ENABLE_PERF_LOGIC	bit	1'b1	Synthesise the reporter's performance cone (g_perf). Does NOT gate the perfmon window state machine or its counters.
ENABLE_THRESHOLD_LOGIC	bit	1'b1	Synthesise the threshold-packet cone. 0 removes the logic entirely.
ENABLE_TIMEOUT_LOGIC	bit	1'b1	Synthesise the timeout detection cone. 0 removes the logic entirely.
SKID_DEPTH_AR	int	2	Skid-buffer depth on the

Parameter	Type	Default	Description
SKID_DEPTH_R	int	4	AR channel. Legal range 2..8 inclusive; odd depths are legal. Skid-buffer depth on the R channel. Legal range 2..8 inclusive; odd depths are legal.
AGENT_ID	logic	16'h000A	Agent identifier emitted in the agent_id field of every monitor packet. Pairs with UNIT_ID to identify the packet source. (16-bit Agent ID for monitor packets)
UNIT_ID	logic	8'h01	Unit identifier emitted in the unit_id field of every monitor packet. Give each monitored interface a distinct value or the packets cannot be told apart at the collector. (8-bit Unit ID for monitor packets)

The gating controls are RUNTIME INPUTS: `cfg_cg_enable` and `cfg_cg_idle_count`; status outputs are `cg_gating / cg_idle`. ONE `amba_clock_gate_ctrl` gates the entire inner monitor module – there are no per-domain gates and no `cg_*_gated` status signals. (The `ENABLE_CLOCK_GATING / CG_IDLE_CYCLES / CG_GATE_*` interface this page once documented never existed.)

8.2.2 Base Module Parameters

MOST base-module parameters pass through. As of 2026-09-01 only `ACTIVE_TRANS_THRESHOLD` is NOT forwarded, and that one is harmless: its inner default is `MAX_TRANSACTIONS/2`, computed from the `MAX_TRANSACTIONS` this wrapper DOES forward.

An earlier version of this page listed nine more as unforwarded, which was accurate when written. `ACLK_MHZ`, `CFI_MIN_FREQ_MHZ`, `CFI_MAX_FREQ_MHZ`, `USE_WDATA_ORDER_Q`, `NUM_BANKS` and `ADDR_RANGE_IS_ERROR` were threaded through every `_cg` wrapper on 2026-09-01, and `ID_FILTER_ENABLE / ID_MATCH_BASE / ID_MATCH_COUNT` the day before. Until then a clock-gated

build could not state its clock frequency, so the 1 us timer tick was pinned to the 100 MHz default and every microsecond-denominated timeout was miscalibrated on any other clock – silently.

Among the forwarded ones:

Parameter	Type	Default	Description
USE_MONITOR	bit	1	Synthesis-time monitor enable. 0 = omit monitor and tie outputs to safe non-blocking defaults; 1 = full monitor functionality.
N_ADDR_RANGES	int	0	Number of address-range comparators (forwarded to base module).
ADDR_FILTER_ENABLE	bit	0	Synthesises the address-range report filter. The parameter only decides whether the logic EXISTS – a build that sets it and leaves <code>cfg_addr_filter_enable</code> low filters nothing and looks broken.
ID_FILTER_ENABLE	bit	0	Synthesises the ID report filter (see <code>cfg_id_*</code> for the runtime override).
ID_MATCH_BASE	int	0	First ID this instance owns.
ID_MATCH_COUNT	int	0	How many IDs; 0 means ALL, so a zeroed register block does not silently filter everything away.

Base-module ports are forwarded EXCEPT `debug_block_ready`, which the wrapper ties off (use the base module when you need the backpressure tap). `cam_clear` is forwarded (Input, 1) - synchronous clear of the monitor transaction CAM (driven from the harness clear control bit, e.g. CTRL[4]) - and the full performance-monitoring interface (see [Performance Monitoring](#)

below). The six `ENABLE_*_LOGIC` synthesis-cone parameters and the `cfg_compl_enable / cfg_threshold_enable / cfg_debug_enable` control enables are also passed straight through.

8.2.3 Filter configuration (forwarded)

These reach the inner monitor through this wrapper; before 2026-09-01 they did not.

Port	Direction	Width	Description
<code>cfg_addr_filter_enable</code>	Input	1	High: suppress packets for transactions outside the window. Low: inert, whatever <code>ADDR_FILTER_ENABLE</code> says
<code>cfg_addr_filter_low</code>	Input	<code>ADDR_WIDTH</code>	Window base, inclusive
<code>cfg_addr_filter_high</code>	Input	<code>ADDR_WIDTH</code>	Window limit, inclusive
<code>cfg_id_filter_enable</code>	Input	1	High: use the runtime window below instead of the <code>ID_MATCH_*</code> parameters
<code>cfg_id_match_base</code>	Input	<code>ID_WIDTH</code>	First ID to accept
<code>cfg_id_match_count</code>	Input	<code>ID_WIDTH+1</code>	How many; 0 means ALL

Neither filter un-filters entries already admitted to the transaction table, which is what makes changing them at runtime safe.

8.2.4 Parameter Relationships

- **`cfg_cg_enable = 0`**: bypasses the gate at runtime; behavior is identical to base
- **`cfg_cg_idle_count`**: higher values keep the clock running longer after traffic stops, so the block is gated less often. It does not change wake-up latency, which is fixed at 1 register stage / 2 clocks to the first usable edge.

8.2.5 Derived Parameters (do not override)

These are declared as parameter so the elaborator can compute them, not so callers can set them. Each defaults to an expression over the parameters above; overriding one desynchronises it from its source and the design fails to elaborate or silently mis-sizes a bus. Set the parameters they are derived FROM and leave these alone.

Derived parameter	Default expression
AXI_WSTRB_WIDTH	AXI_DATA_WIDTH / 8
AW	AXI_ADDR_WIDTH
DW	AXI_DATA_WIDTH
IW	AXI_ID_WIDTH
SW	AXI_WSTRB_WIDTH
UW	AXI_USER_WIDTH

8.3 Ports

Port	Dir	Width	Description
aclk	In	1	
aresetn	In	1	
cam_clear	In	1	sync clear of the monitor trans CAM
fub_axi_arid	In	[IW-1:0]	
fub_axi_araddr	In	[AW-1:0]	
fub_axi_arlen	In	[7:0]	
fub_axi_arsize	In	[2:0]	
fub_axi_arburst	In	[1:0]	
fub_axi_arlock	In	1	
fub_axi_arcache	In	[3:0]	
fub_axi_arprot	In	[2:0]	
fub_axi_arqos	In	[3:0]	
fub_axi_arregion	In	[3:0]	
fub_axi_aruser	In	[UW-1:0]	
fub_axi_arvalid	In	1	
fub_axi_arready	Out	1	

Port	Dir	Width	Description
fub_axi_rid	Out	[IW-1:0]	
fub_axi_rdata	Out	[DW-1:0]	
fub_axi_rresp	Out	[1:0]	
fub_axi_rlast	Out	1	
fub_axi_ruser	Out	[UW-1:0]	
fub_axi_rvalid	Out	1	
fub_axi_rready	In	1	
m_axi_arid	Out	[IW-1:0]	
m_axi_araddr	Out	[AW-1:0]	
m_axi_arlen	Out	[7:0]	
m_axi_arsize	Out	[2:0]	
m_axi_arburst	Out	[1:0]	
m_axi_arlock	Out	1	
m_axi_arcache	Out	[3:0]	
m_axi_arprot	Out	[2:0]	
m_axi_arqos	Out	[3:0]	
m_axi_arregion	Out	[3:0]	
m_axi_aruser	Out	[UW-1:0]	
m_axi_arvalid	Out	1	
m_axi_arready	In	1	
m_axi_rid	In	[IW-1:0]	
m_axi_rdata	In	[DW-1:0]	
m_axi_rresp	In	[1:0]	
m_axi_rlast	In	1	
m_axi_ruser	In	[UW-1:0]	
m_axi_rvalid	In	1	
m_axi_rready	Out	1	
cfg_monitor_enable	In	1	Enable monitoring
cfg_error_enable	In	1	Enable error

Port	Dir	Width	Description
			detection
cfg_timeout_enable	In	1	Enable timeout detection
cfg_perf_enable	In	1	Enable performance monitoring
cfg_compl_enable	In	1	Enable completion packets
cfg_threshold_enable	In	1	Enable threshold packets
cfg_debug_enable	In	1	Enable debug packets
cfg_timeout_cycles	In	[15:0]	Timeout threshold in MICROSECONDS (1 us tick), despite the name
cfg_freq_sel	In	[3:0]	counter_freq_invariant LUT index
cfg_latency_threshold	In	[31:0]	Latency threshold for alerts
cfg_axi_pkt_mask	In	[15:0]	Drop mask for packet types
cfg_axi_err_select	In	[15:0]	Error select for packet types (for future routing)
cfg_axi_error_mask	In	[15:0]	Individual error event mask
cfg_axi_timeout_mask	In	[15:0]	Individual timeout event mask
cfg_axi_compl_mask	In	[15:0]	Individual completion event

Port	Dir	Width	Description
			mask
cfg_axi_thresh_mask	In	[15:0]	Individual threshold event mask
cfg_axi_perf_mask	In	[15:0]	Individual performance event mask
cfg_axi_addr_mask	In	[15:0]	Individual address match event mask
cfg_axi_debug_mask	In	[15:0]	Individual debug event mask
cfg_cg_enable	In	1	Enable clock gating
cfg_cg_idle_count	In	[CG_IDLE_COUNT_WIDTH-1:0]	Idle cycles before gating
cfg_addr_check_enable	In	1	
cfg_addr_range_enable	In	[(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1)-1:0]	
cfg_addr_range_low	In	[(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1)-1:0]	
cfg_addr_range_high	In	[(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1)-1:0]	
cfg_addr_filter_enable	In	1	
cfg_addr_filter_low	In	[AW-1:0]	
cfg_addr_filter_high	In	[AW-1:0]	
cfg_id_filter_enable	In	1	

Port	Dir	Width	Description
cfg_id_match_base	In	[IW-1:0]	
cfg_id_match_count	In	[IW:0]	
i_mon_time	In	1	
monbus_valid	Out	1	Monitor bus valid
monbus_ready	In	1	Monitor bus ready
monbus_packet	Out	1	Monitor packet (128-bit)
monbus_timestamp	Out	1	Side-band sampled time
busy	Out	1	
active_transactions	Out	[7:0]	Number of active transactions
error_count	Out	[15:0]	Total error count
transaction_count	Out	[31:0]	Total transaction count
cg_gating	Out	1	Gated clock is stopped
cg_idle	Out	1	No activity observed
cfg_conflict_error	Out	1	Configuration conflict detected
cfg_start_event_sel	In	[2:0]	
cfg_end_event_sel	In	[2:0]	
cfg_start_trigger	In	1	
cfg_end_trigger	In	1	
cfg_window_force_close	In	1	
window_active	Out	1	
window_cycles	Out	[31:0]	

Port	Dir	Width	Description
perf_prod_cycles	Out	[31:0]	
perf_bp_cycles	Out	[31:0]	
perf_starv_cycles	Out	[31:0]	
perf_idle_cycles	Out	[31:0]	
perf_beat_count	Out	[31:0]	
perf_byte_count	Out	[63:0]	
perf_burst_count	Out	[31:0]	

8.4 Functional Description

8.4.1 Clock Gating Architecture

ONE `amba_clock_gate_ctrl` gates the whole inner monitor module. The wake term is bus activity plus pending monitor work (`fub_axi_arvalid || fub_axi_rvalid || int_busy || w_monbus_valid || (!active_transactions)` on the user side, `m_axi_arvalid || m_axi_rvalid` on the AXI side); when both sides idle for `cfg_cg_idle_count` cycles with nothing pending on the monitor bus and the monitor CAM empty, everything inside – transaction tracking, reporter, timers, perf counters – stops together. There are no per-domain gates. The external `monbus_valid` is masked with `!cg_gating`, so monitor-bus delivery is exactly-once across gating at any idle count (`val/amba/test_mon_cg_gating.py` phase 6): a packet pending delivery holds the block awake, and the CAM-occupancy term covers the reporter's few-cycle retire -> FIFO -> output emission window, so a trailing packet cannot be stranded by the clock stopping before its valid rises – even at `cfg_cg_idle_count = 0`.

8.4.2 Gating State Machine

ACTIVE IDLE_COUNT GATED

(Activity Detected)

States:

- ACTIVE: Clocks enabled, monitoring activity
- IDLE_COUNT: Counting `cfg_cg_idle_count` before gating
- GATED: Clocks disabled, waiting for activity

8.4.3 Performance Monitoring

The clock-gated wrapper exposes the full perfmon interface of the base module and **forwards every port unchanged** to the inner `axi4_master_rd_mon`. The measurement-window state machine, the four R-channel utilization buckets (productive / back-pressure / starvation / idle), and the beat/byte/burst throughput counters behave exactly as documented in the base module — see [Performance Monitoring in axi4_master_rd_mon](#) for the full narrative and per-bit semantics.

Forwarded perfmon ports (identical width and direction to the base module):

- **Inputs:** `cfg_perf_enable`, `cfg_start_event_sel` (3), `cfg_end_event_sel` (3), `cfg_start_trigger`, `cfg_end_trigger`, `cfg_window_force_close`
- **Outputs:** `window_active`, `window_cycles` (32), `perf_prod_cycles` (32), `perf_bp_cycles` (32), `perf_starv_cycles` (32), `perf_idle_cycles` (32), `perf_beat_count` (32), `perf_byte_count` (64), `perf_burst_count` (32)

WARNING – gating vs window accounting. The whole inner monitor runs on the gated clock, window state machine and counters included. An open measurement window is not one of the terms that keeps the clock alive: `user_valid` is bus valids, busy, and pending monitor-bus work, and nothing else.

Two consequences:

- **Counters freeze.** If the bus idles past the countdown while a window is open, the clock gates and `window_cycles` and the perf counters stop while wall-clock time keeps passing. The host reads an under-counted window and has no indication it was short.
- **Pulses are dropped.** `cam_clear`, `cfg_start_trigger`, `cfg_end_trigger` and `cfg_window_force_close` are sampled in the gated domain, so a pulse that arrives while the clock is gated is lost entirely.

For exact wall-clock windows, or for triggering on an idle bus, hold `cfg_cg_enable` low across the measurement or use the base module.

8.5 Timing Characteristics

8.5.1 Wake-Up and Gating Latency

Wake-up latency does not depend on `cfg_cg_idle_count`. Activity is registered once (AXI4, AXI5, AXI4-Lite, AXI4-Stream) or twice (APB, APB5, AXI5-Stream) before reaching the ICG enable, which is combinational. This monitor wrapper drives the activity terms combinationally, so it has **1 register stage** and the first usable gated-clock edge arrives **2 clock cycles** after activity asserts.

`cfg_cg_idle_count` sets the going-to-sleep delay only: gating engages `cfg_cg_idle_count + 1` clocks after the internal wakeup deasserts, which is `cfg_cg_idle_count + 2` clocks after the last bus activity.

Configuration	Clocks from last activity to gating	Use Case
<code>cfg_cg_idle_count=4</code>	6 clock cycles	Low-latency, frequent bursts
<code>cfg_cg_idle_count=8</code>	10 clock cycles	Balanced
<code>cfg_cg_idle_count=15</code>	17 clock cycles	Maximum power savings, infrequent traffic

8.6 Usage Examples

8.6.1 Example 1: Maximum Power Savings (Burst Traffic)

```
axi4_master_rd_mon_cg #(
    // Base parameters (see axi4_master_rd_mon.md)
    .AXI_ID_WIDTH(8),
    .AXI_ADDR_WIDTH(32),
    .AXI_DATA_WIDTH(64),

    .CG_IDLE_COUNT_WIDTH(4)
) u_cg (
    .aclk(clk),
    .aresetn(rst_n),
    // Clock gating -- aggressive: gate quickly after 4 idle cycles
    .cfg_cg_enable(1'b1),
    .cfg_cg_idle_count(4'd4),
    .cg_gating(), .cg_idle(),
    // ... connect signals same as base module
);
```

8.6.2 Example 2: Balanced Performance and Power

```
axi4_master_rd_mon_cg #(
    // Base parameters
    .AXI_ID_WIDTH(8),
    .AXI_ADDR_WIDTH(32),
```

```

        .AXI_DATA_WIDTH(64),

        .CG_IDLE_COUNT_WIDTH(4)
    ) u_cg (
        .aclk(clk),
        .aresetn(rst_n),
        // Clock gating -- balanced: wait longer before gating (gated less
        often)
        .cfg_cg_enable(1'b1),
        .cfg_cg_idle_count(4'd15),
        .cg_gating(), .cg_idle(),
        // ... connect signals same as base module
    );

```

8.6.3 Example 3: Clock Gating Disabled (Functional Verification)

```

axi4_master_rd_mon_cg #(
    // Base parameters
    .AXI_ID_WIDTH(8),
    .AXI_ADDR_WIDTH(32),
    .AXI_DATA_WIDTH(64),

    .CG_IDLE_COUNT_WIDTH(4)
) u_cg (
    .aclk(clk),
    .aresetn(rst_n),
    // Clock gating -- DISABLED for verification (runtime bypass)
    .cfg_cg_enable(1'b0),
    .cfg_cg_idle_count(4'd0),
    .cg_gating(), .cg_idle(),
    // ... connect signals same as base module
);

```

Note: With `cfg_cg_enable=0`, this module is functionally identical to the base module.

8.7 Design Notes

8.7.1 Power Savings Analysis

These numbers are illustrative, not measured. No power analysis has been run on this library – `axi4_master_rd_cg.md` states the ground truth: power saving is “traffic-dependent; unmeasured in this repo – treat any percentage as a placeholder until characterized.” The shape of the curve (more idle time and a shorter idle count save more) is sound; the specific percentages are not sourced and disagree with the guide’s table at comparable duty cycles. Treat the rows as a sketch of the trend.

Traffic Pattern	Clock Gating Enabled	Power Savings
10% Utilization	Aggressive (cfg_cg_idle_count=4)	60-70%
25% Utilization	Balanced (cfg_cg_idle_count=8)	45-55%
50% Utilization	Conservative (cfg_cg_idle_count=15)	25-35%
90% Utilization	Any configuration	5-10%

Note: Actual savings depend on FPGA/ASIC technology, tool implementation, and traffic patterns.

8.7.2 Power Monitoring Signals

The module provides these status signals for power analysis:

Signal	Width	Description
cg_gating	1	The (single) gated clock is currently stopped
cg_idle	1	No activity this cycle (~r_wakeup – asserts one cycle after the interfaces go quiet; it does NOT wait for the countdown)

8.7.3 Verification Considerations

Recommendation: Disable clock gating during functional verification:

```
// Testbench instantiation
axi4_master_rd_mon_cg dut (
    .cfg_cg_enable(1'b0),    // runtime bypass for faster simulation
    // ... connections
);
```

Rationale: - Simpler waveforms (no clock gating events) - Faster simulation (no gating overhead) - Easier debug (no timing dependencies)

For power-specific verification:

1. **Enable clock gating** with realistic parameters
2. **Monitor gating signals** (cg_gating / cg_idle) to verify expected behavior

3. **Vary traffic patterns** to test gating effectiveness
4. **Check wake-up timing** meets system requirements

8.7.4 Synthesis Considerations

FPGA Implementations

Xilinx: - Drive `cfg_cg_enable=1` and let synthesis map the ICG to `BUFGCE` primitives - Tool will infer clock enables automatically - Verify with post-synthesis power analysis

Intel (Altera): - Drive `cfg_cg_enable=1` and let synthesis map the ICG to `ALTCLKCTRL` - May need vendor-specific clock gating primitives - Check power reports for gating effectiveness

Lattice: - Basic clock gating supported - May require manual instantiation of clock enables - Verify functionality in timing simulation

ASIC Implementations: - Work with foundry to select appropriate clock gating cells - Integrated Clock Gating (ICG) cells provide best results - Consider hold-time implications of clock gating - Verify power intent with UPF (Unified Power Format)

8.8 Related Modules

- [axi4_master_rd_mon](#) - Base module (non-clock-gated)
- [axi_monitor_base](#) - Core monitoring infrastructure
- [axi_monitor_filtered](#) - Filtering capabilities

8.8.1 See Also

- **Power Optimization Guide:** `docs/POWER_OPTIMIZATION_GUIDE.md`
 - **Clock Gating Best Practices:** `docs/CLOCK_GATING_GUIDE.md`
 - **AMBA Subsystem Overview:** `docs/markdown/rtl-amba/overview.md`
-

8.9 Testing

`val/amba/test_axi4_master_rd_mon_cg.py` exercises this module. It collects 3 parameter cases at the default `REG_LEVEL`.

```
source env_python
pytest val/amba/test_axi4_master_rd_mon_cg.py -v
```

8.10 Navigation

- [← Back to Base Module](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

9 AXI4 Master Read with Lite Monitor

Module: `axi4_master_rd_monlite.sv` **Location:** `rtl/amba/axi4/` **Status:** Production Ready
(`amba/monitor-lite TASK-001`, 2026-09-26)

9.1 Overview

`axi4_master_rd_monlite` is `axi4_master_rd` with `axi_monitor_lite` watching its master-side read channels. It is the lite-monitor sibling of `axi4_master_rd_mon`: same core, same taps, same 128-bit `monitor_packet_t` on the same monbus with the same `UNIT_ID/AGENT_ID`, so the monbus arbiter, the AXI-Lite group, the tally and the host tooling cannot tell the two apart. The difference is what it costs and what it can be asked for: about a fifth of the monitor LUTs (677 against 3,249 per read monitor in the same bridge fixture, see [axi_monitor_lite](#)), and only the four packet classes the lite emits: error, timeout, completion and active-count threshold.

9.1.1 What is not here

Compared with `axi4_master_rd_mon`: no performance window or counters, no debug packets, no address-range checker, no ID or address filters, no per-event masks, no latency threshold, and no `block_ready`. The lite never stalls the port: an event it cannot deliver is dropped and counted (`dropped_count`, reported as an `EVENT_DROPPED` packet), and a command that finds no free table entry is counted (`refused_count`) and left untracked, so its beats report as orphans.

9.1.2 Key Features

- Every `axi4_master_rd` parameter and port, declared verbatim and passed through by name
 - `axi_monitor_lite` on the m_-side taps; `USE_MONITOR=0` omits it and ties its outputs
 - Nine config inputs: the enables, the microsecond timeout, the tick LUT index and the packet-type mask
 - Five status outputs, two of them (`dropped_count`, `refused_count`) unique to the lite
-

9.2 Parameters

9.2.1 Monitor Parameters

Parameter	Type	Default	Description
USE_MONITOR	bit	1'b1	0 = omit the monitor, tie its outputs
UNIT_ID	logic [7:0]	8'h01	Unit id in every packet
AGENT_ID	logic [15:0]	16'h000A	Agent id in every packet
MAX_TRANSACTIONS	int	8	table entries; a command finding none is counted, not tracked
ACTIVE_TRANS_THR ESHOLD	int	$\text{MAX_TRANSACTIONS} / 2$	Table occupancy that fires a threshold packet (rising edge)
OUT_DEPTH	int	4	monbus output queue, a power of two
ACLK_MHZ	int	100	Clock in MHz; keeps the 1 us tick exact
CFI_MIN_FREQ_MHZ	int	ACLK_MHZ	Frequency-invariant tick LUT lower bound (cfg_freq_sel indexes it)
CFI_MAX_FREQ_MHZ	int	ACLK_MHZ	Frequency-invariant tick LUT upper bound

9.2.2 Core Parameters (passed through to axi4_master_rd)

Parameter	Type	Default	Description
N_ADDR_RANGES	int	0	address-range checker windows; 0 = not built
ADDR_RANGE_IS_ERROR	logic [(N_ADDR_RANGE_S > 0 ? N_ADDR_RANGES : 1)-1:0]	'0	per range: 1 = miss is an error, 0 = hit is a match
SKID_DEPTH_AR	int	2	as on axi4_master_rd
SKID_DEPTH_R	int	4	as on axi4_master_rd
AXI_ID_WIDTH	int	8	as on axi4_master_rd
AXI_ADDR_WIDTH	int	32	as on axi4_master_rd
AXI_DATA_WIDTH	int	32	as on axi4_master_rd
AXI_USER_WIDTH	int	1	as on axi4_master_rd
AXI_WSTRB_WIDTH	int	AXI_DATA_WIDTH / 8	as on axi4_master_rd
AW	int	AXI_ADDR_WIDTH	as on axi4_master_rd
DW	int	AXI_DATA_WIDTH	as on axi4_master_rd
IW	int	AXI_ID_WIDTH	as on axi4_master_rd
SW	int	AXI_WSTRB_WIDTH	as on axi4_master_rd
UW	int	AXI_USER_WIDTH	as on axi4_master_rd
ARSize	int	IW+AW+8+3+2+1+4+3+4+4+UW	as on axi4_master_rd
RSize	int	IW+DW+2+1+UW	as on

Parameter	Type	Default	Description
			axi4_master_rd

9.3 Ports

9.3.1 Monitor Control, Bus and Status

Port	Direction	Type	Description
cam_clear	input	logic	sync clear of the monitor's table (named as on the _mon wrapper: pin-compatible)
cfg_monitor_enable	input	logic	0 = monitor inert, table held clear
cfg_error_enable	input	logic	
cfg_timeout_enable	input	logic	
cfg_compl_enable	input	logic	
cfg_threshold_enable	input	logic	
cfg_timeout_cycles	input	logic [15:0]	MICROSECONDS of no progress; 0 = never
cfg_freq_sel	input	logic [3:0]	counter_freq_invariant LUT index
cfg_axi_pkt_mask	input	logic [15:0]	drop mask by packet type
i_mon_time	input	monitor_common_pkg::monbus_timestamp_t	
monbus_valid	output	logic	
monbus_ready	input	logic	
monbus_packet	output	monitor_common_pkg::monitor_packet_t	
monbus_timestamp	output	monitor_common_p	

Port	Direction	Type	Description
		kg::monbus_times_tamp_t	
active_transactions	output	logic [7:0]	entries in the table
error_count	output	logic [15:0]	error + timeout packets emitted
transaction_count	output	logic [31:0]	completion packets emitted
dropped_count	output	logic [15:0]	events lost to monbus backpressure since the last report
refused_count	output	logic [15:0]	commands that found no free table entry

9.3.2 Core Ports (as on axi4_master_rd)

Port	Direction	Type	Description
aclk	input	logic	
aresetn	input	logic	
fub_axi_arid	input	logic [IW-1:0]	
fub_axi_araddr	input	logic [AW-1:0]	
fub_axi_arlen	input	logic [7:0]	
fub_axi_arsize	input	logic [2:0]	
fub_axi_arburst	input	logic [1:0]	
fub_axi_arlock	input	logic	
fub_axi_arcache	input	logic [3:0]	
fub_axi_arprot	input	logic [2:0]	
fub_axi_arqos	input	logic [3:0]	
fub_axi_arregion	input	logic [3:0]	
fub_axi_aruser	input	logic [UW-1:0]	
fub_axi_arvalid	input	logic	

Port	Direction	Type	Description
fub_axi_arready	output	logic	
fub_axi_rid	output	logic [IW-1:0]	
fub_axi_rdata	output	logic [DW-1:0]	
fub_axi_rresp	output	logic [1:0]	
fub_axi_rlast	output	logic	
fub_axi_ruser	output	logic [UW-1:0]	
fub_axi_rvalid	output	logic	
fub_axi_rready	input	logic	
m_axi_arid	output	logic [IW-1:0]	
m_axi_araddr	output	logic [AW-1:0]	
m_axi_arlen	output	logic [7:0]	
m_axi_arsize	output	logic [2:0]	
m_axi_arburst	output	logic [1:0]	
m_axi_arlock	output	logic	
m_axi_arcache	output	logic [3:0]	
m_axi_arprot	output	logic [2:0]	
m_axi_arqos	output	logic [3:0]	
m_axi_arregion	output	logic [3:0]	
m_axi_aruser	output	logic [UW-1:0]	
m_axi_arvalid	output	logic	
m_axi_arready	input	logic	
m_axi_rid	input	logic [IW-1:0]	
m_axi_rdata	input	logic [DW-1:0]	
m_axi_rresp	input	logic [1:0]	
m_axi_rlast	input	logic	
m_axi_ruser	input	logic [UW-1:0]	
m_axi_rvalid	input	logic	
m_axi_rready	output	logic	
busy	output	logic	
cfg_latency_thre shold	input	logic [31:0]	completion

Port	Direction	Type	Description
			latency (cycles) above this -> Threshold/LATENCY
cfg_addr_check_enable	input	logic	
cfg_addr_match_enable	input	logic	hit in a match range -> AddrMatch packet
cfg_addr_range_enable	input	logic [(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1)-1:0]	
cfg_addr_range_low	input	logic [(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1)-1:0][AW-1:0]	
cfg_addr_range_high	input	logic [(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1)-1:0][AW-1:0]	

9.4 Functional Description

The core is instantiated untouched; unlike `axi4_master_rd_mon` there is no gating of the command handshake, because the lite has no admission stall. The monitor taps the m-side command, data and response channels through three valids gated by `cfg_monitor_enable`, which also holds the table clear while low. `cfg_timeout_cycles` is a microsecond count of no progress on an entry, passed at full width; 0 means never. The active-count threshold is the parameter `ACTIVE_TRANS_THRESHOLD`, as on the `_mon` wrapper.

The lite's own behaviour – per-ID linked-list attribution, stamps instead of counters, the registered event stage, the 4-entry output queue and drop-and-count – is on the [axi_monitor_lite](#) page.

9.5 Timing Characteristics

The datapath timing is axi4_master_rd's. The monitor adds no gating to any handshake and no path into the datapath; its own paths are two short cycles (attribution, then packet formatting) and met 10 ns on an Artix-7 100T -1 with margin inside bridge_1x2_rd_lite_mon.

9.6 Usage Examples

```
axi4_master_rd_monlite #(
    .N_ADDR_RANGES      (0),
    .ADDR_RANGE_IS_ERROR ('0'),
    .SKID_DEPTH_AR      (2),
    .SKID_DEPTH_R       (4),
    .UNIT_ID            (8'h02),
    .AGENT_ID           (16'h0014),
    .MAX_TRANSACTIONS   (8)
) u_axi4_master_rd_monlite (
    .aclk                (aclk),
    .aresetn             (aresetn),
    // ... the axi4_master_rd ports, by name ...
    .cam_clear           (1'b0),
    .cfg_monitor_enable  (1'b1),
    .cfg_error_enable    (1'b1),
    .cfg_timeout_enable  (1'b1),
    .cfg_compl_enable    (1'b0),
    .cfg_threshold_enable (1'b0),
    .cfg_timeout_cycles  (16'd1000),
    .cfg_freq_sel        (4'd0),
    .cfg_axi_pkt_mask    (16'h0000),
    .i_mon_time          (mon_time),
    .monbus_valid        (monbus_valid),
    .monbus_ready        (monbus_ready),
    .monbus_packet       (monbus_packet),
    .monbus_timestamp    (monbus_timestamp),
    .active_transactions (),
    .error_count         (),
    .transaction_count   (),
    .dropped_count       (dropped_count),
    .refused_count       (refused_count)
);
```

In a generated bridge, mon_preset = "lite" selects this wrapper for every monitored port.

9.7 Design Notes

- `cam_clear` keeps the `_mon` wrapper's name so the two are pin-compatible on the monitor side; the lite has a table, not a CAM.
 - `MAX_TRANSACTION`s defaults to 8 here against 16 on `axi4_master_rd_mon`: size it to the port's real outstanding depth, since refused commands surface as orphans.
 - Consumers that relied on `block_ready` to bound the table get drop-and-count instead; the count is always reported, the identity of the lost events is not.
-

9.8 Related Modules

- `axi4_master_rd_mon` – the full-monitor sibling
 - `axi4_master_rd` – the core this wraps
 - [axi_monitor_lite](#) – the monitor itself
-

9.9 Testing

`val/amba/monitor-lite/test_axi4_master_rd_monlite.py` exercises this module: the same TB and scenarios as `val/amba/test_axi4_master_rd_mon.py`, with the DUT swapped.

```
source env_python
make -C val/amba/monitor-lite run-axi4_master_rd_monlite-gate
```

Last Updated: 2026-09-26

9.10 Navigation

- [← Back to Monitor Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

10 AXI4 Master Read Stub

Module: axi4_master_rd_stub.sv **Location:** rtl/amba/axi4/stubs/ **Status:** Production Ready

10.1 Overview

Drive AXI4 read transactions without writing an AXI4 master into your testbench. The AXI4 Master Read Stub packs the AR (read address) and R (read data) channels into single wide packet buses through skid buffers, so the stimulus side sees one valid/ready handshake and one concatenated payload per channel instead of a dozen individual signals. That makes it a natural fit for testbenches and integration scenarios where a simplified interface beats a protocol-faithful one.

10.1.1 Key Features

- Packed packet interface for AR and R channels
 - Configurable skid buffer depth on each channel
 - Full AXI4 read transaction support
 - Burst, ID, and user signal support
 - Parameterized data widths
-

10.2 Parameters

Parameter	Type	Default	Description
SKID_DEPTH_AR	int	2	AR channel skid buffer depth in entries (2..8 inclusive, any integer)
SKID_DEPTH_R	int	4	R channel skid buffer depth in entries (2..8 inclusive, any integer)
AXI_ID_WIDTH	int	8	AXI transaction ID width
AXI_ADDR_WIDTH	int	32	AXI address bus width
AXI_DATA_WIDTH	int	32	AXI data bus width
AXI_USER_WIDTH	int	1	AXI user signal width
AXI_WSTRB_WIDTH	int	AXI_DATA_WIDTH/8	Write strobe width (unused)

Parameter	Type	Default	Description
AW	int	AXI_ADDR_WIDTH	Short alias for address width
DW	int	AXI_DATA_WIDTH	Short alias for data width
IW	int	AXI_ID_WIDTH	Short alias for ID width
SW	int	AXI_WSTRB_WIDTH	Short alias for strobe width
UW	int	AXI_USER_WIDTH	Short alias for user width
ARSize	int	$IW + AW + 8 + 3 + 2 + 1 + 4 + 3 + 4 + 4 + UW$	AR packet size (calculated)
RSize	int	$IW + DW + 2 + 1 + UW$	R packet size (calculated)

10.3 Ports

10.3.1 Clock and Reset

Port	Direction	Width	Description
aclk	Input	1	AXI clock
aresetn	Input	1	AXI reset (active low)

10.3.2 AXI4 Read Address Channel (AR)

Port	Direction	Width	Description
m_axi_arid	Output	AXI_ID_WIDTH	Read address ID
m_axi_araddr	Output	AXI_ADDR_WIDTH	Read address
m_axi_arlen	Output	8	Burst length
m_axi_arsize	Output	3	Burst size
m_axi_arburst	Output	2	Burst type
m_axi_arlock	Output	1	Lock type

m_axi_arcache	Output	4	Cache type
m_axi_arprot	Output	3	Protection type
m_axi_arqos	Output	4	Quality of service
m_axi_arregion	Output	4	Region identifier
m_axi_aruser	Output	AXI_USER_WIDTH	User signal
m_axi_arvalid	Output	1	Read address valid
m_axi_arready	Input	1	Read address ready

10.3.3 AXI4 Read Data Channel (R)

Port	Direction	Width	Description
m_axi_rid	Input	AXI_ID_WIDTH	Read data ID
m_axi_rdata	Input	AXI_DATA_WIDTH	Read data
m_axi_rresp	Input	2	Read response
m_axi_rlast	Input	1	Read last
m_axi_ruser	Input	AXI_USER_WIDTH	User signal
m_axi_rvalid	Input	1	Read data valid
m_axi_rready	Output	1	Read data ready

10.3.4 AR Packet Interface

Port	Direction	Width	Description
fub_axi_arvalid	Input	1	AR packet valid
fub_axi_arready	Output	1	Ready to accept AR packet
fub_axi_ar	Output	4	AR skid occupancy (driven


Port	Direction	Width	Description
_count			since the round_20 fix)
fub_axi_ar_pkt	Input	ARSize	Packed AR packet data

10.3.5 R Packet Interface

Port	Direction	Width	Description
fub_axi_rvalid	Output	1	R packet valid
fub_axi_rready	Input	1	Ready to accept R packet
fub_axi_r_pkt	Output	RSize	Packed R packet data

10.4 Functional Description


Two skid buffers do all the real work here. The AR buffer unpacks your packet onto the AXI4 AR channel; the R buffer packs the returning read data back into a packet. Everything else is wiring.

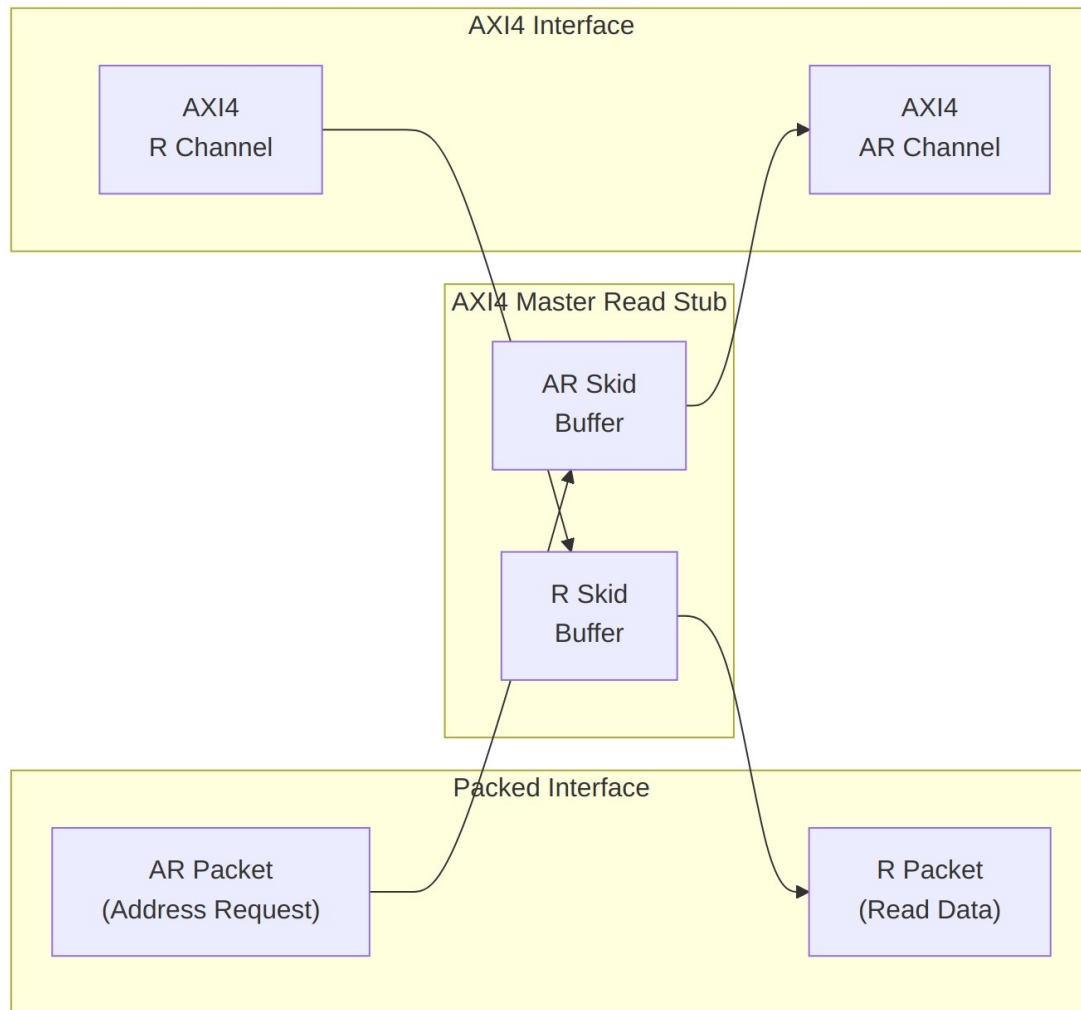

Architecture

10.4.1 Packet Formats

Packets are packed MSB-to-LSB in AXI signal order, so building one in the testbench is a single concatenation.




AR Packet Structure (Read Address)

Bit Positions:

```
fub_axi_ar_pkt = {arid, araddr, arlen, arsize, arburst, arlock,
arcache, arprot, arqos, arregion, aruser}
```

$$\text{Width} = \text{IW} + \text{AW} + 8 + 3 + 2 + 1 + 4 + 3 + 4 + 4 + \text{UW}$$

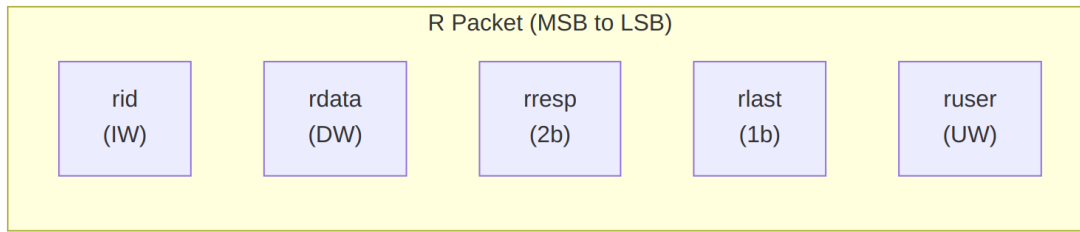


R Packet Structure (Read Data)

Bit Positions:

`fub_axi_r_pkt = {rid, rdata, rresp, rlast, ruser}`

$$\text{Width} = \text{IW} + \text{DW} + 2 + 1 + \text{UW}$$

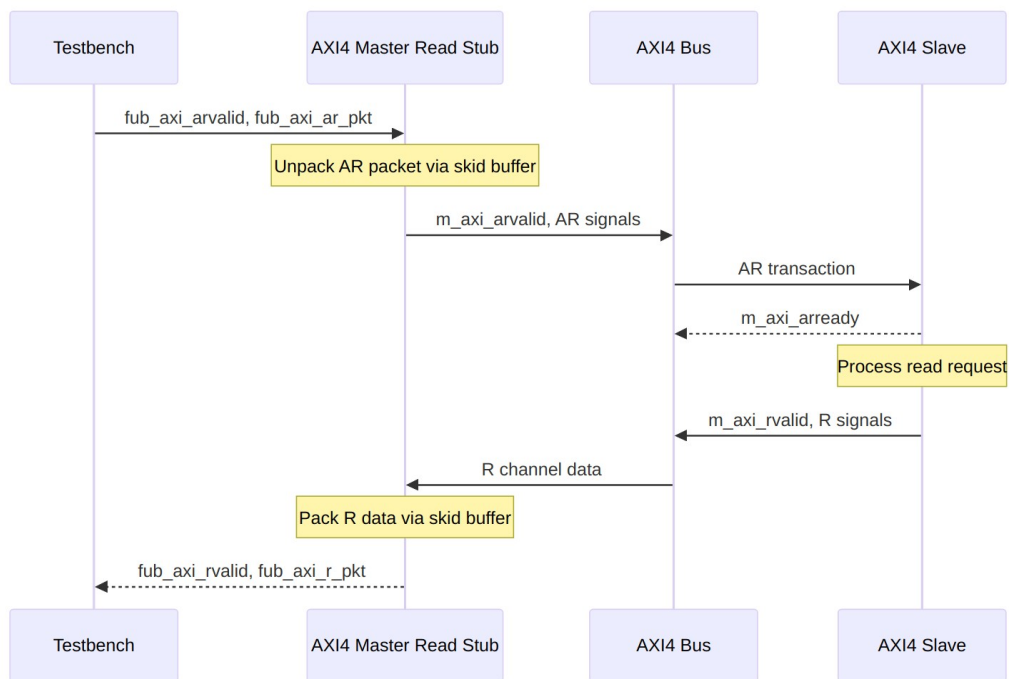

Transaction Flow

10.5 Timing Characteristics

Timing diagram pending. The signals and sequence this scenario exercises:

- aclk
 - fub_axi_arvalid, fub_axi_arready, fub_axi_ar_pkt
 - AXI AR signals (m_axi_arvalid, m_axi_araddr, m_axi_arlen, etc.)
 - AXI R signals (m_axi_rvalid, m_axi_rdata, m_axi_rlast, etc.)
 - fub_axi_rvalid, fub_axi_rready, fub_axi_r_pkt
 - Packet-to-AXI timing relationship with skid buffer operation
-

10.6 Usage Examples

```
axi4_master_rd_stub #(
    .SKID_DEPTH_AR    (2),
    .SKID_DEPTH_R     (4),
    .AXI_ID_WIDTH     (8),
    .AXI_ADDR_WIDTH   (32),
    .AXI_DATA_WIDTH   (64),
    .AXI_USER_WIDTH   (4)
) u_axi4_master_rd_stub (
    .aclk              (axi_clk),
    .aresetn           (axi_rst_n),

    // AXI4 master read interface
    .m_axi_arid        (m_axi_arid),
    .m_axi_araddr      (m_axi_araddr),
    .m_axi_arlen       (m_axi_arlen),
    .m_axi_arsize      (m_axi_arsize),
    .m_axi_arburst     (m_axi_arburst),
    .m_axi_arlock      (m_axi_arlock),
    .m_axi_arcache     (m_axi_arcache),
    .m_axi_arprot      (m_axi_arprot),
    .m_axi_arqos       (m_axi_arqos),
    .m_axi_arregion    (m_axi_arregion),
    .m_axi_aruser      (m_axi_aruser),
    .m_axi_arvalid     (m_axi_arvalid),
    .m_axi_arready     (m_axi_arready),

    .m_axi_rid         (m_axi_rid),
    .m_axi_rdata       (m_axi_rdata),
    .m_axi_rresp       (m_axi_rresp),
    .m_axi_rlast       (m_axi_rlast),
```

```

        .m_axi_ruser      (m_axi_ruser),
        .m_axi_rvalid    (m_axi_rvalid),
        .m_axi_rready    (m_axi_rready),

        // Packed AR interface
        .fub_axi_arvalid (tb_ar_valid),
        .fub_axi_arready (tb_ar_ready),
        .fub_axi_ar_count(tb_ar_count),
        .fub_axi_ar_pkt  (tb_ar_pkt),

        // Packed R interface
        .fub_axi_rvalid  (tb_r_valid),
        .fub_axi_rready  (tb_r_ready),
        .fub_axi_r_pkt   (tb_r_pkt)
    );

    // Build AR packet (single beat read at address 0x1000)
    localparam ARSize = 8 + 32 + 8 + 3 + 2 + 1 + 4 + 3 + 4 + 4 + 4; //
    Calculate size
    assign tb_ar_pkt = {
        8'd0,           // arid
        32'h0000_1000,  // araddr
        8'd0,           // arlen (1 beat)
        3'b011,         // arsize (8 bytes)
        2'b01,          // arburst (INCR)
        1'b0,           // arlock
        4'b0011,         // arcache
        3'b000,          // arprot
        4'b0000,         // arqos
        4'b0000,         // arregion
        4'h0             // aruser
    };

    // Parse R packet
    localparam int RSize = 8+64+2+1+4; // match your instance widths
    wire [7:0]  r_id    = tb_r_pkt[RSize-1:RSize-8];
    wire [63:0] r_data  = tb_r_pkt[RSize-9:RSize-72];
    wire [1:0]  r_resp  = tb_r_pkt[6:5];
    wire        r_last  = tb_r_pkt[4];
    wire [3:0]  r_user  = tb_r_pkt[3:0];

```

10.7 Design Notes

10.7.1 Skid Buffer Operation

The stub is only as smart as its `gaxi_skid_buffer` instances, which is exactly the point. They:

- Decouple timing between testbench and AXI bus
- Provide configurable buffering depth per channel
- Handle backpressure gracefully
- Support burst transactions without stalling

Recommended Depths: - **AR Channel:** 2-4 (address transactions) - **R Channel:** 4-8 (data beats for bursts)

10.7.2 Packet Packing Order

AR and R packets are packed MSB-to-LSB following AXI signal order:

- Simplifies testbench packet creation
- Matches common concatenation order
- Efficient for burst transaction handling

10.7.3 Internal Architecture

The stub instantiates two `gaxi_skid_buffer` modules:

- **AR Skid Buffer:** Unpacks AR packets to AXI AR channel
- **R Skid Buffer:** Packs AXI R channel to R packets

All AXI protocol handling is done by the skid buffers and downstream modules.

10.8 Related Modules

- **AXI4 Master Read** - Full AXI4 master read module (if wrapping one)
 - **AXI4 Master Write Stub** - Corresponding write stub
 - **AXI4 Master Stub** - Combined read/write stub
 - **AXI4 Slave Read Stub** - Slave-side read stub
-

10.9 Testing

No dedicated testbench, and none is expected. This is a stub: a tie-off shell that presents the interface and drives inert values, so there is no behaviour to verify beyond elaboration. make verilator lints it as its own top on every run, which is the coverage that applies.

Treat any behaviour described on this page as unverified by simulation.

10.10 Navigation

- [← Back to AXI4 Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

11 AXI4 Master Stub

Module: `axi4_master_stub.sv` **Location:** `rtl/amba/axi4/stubs/` **Status:** Production Ready

11.1 Overview

Why instantiate two stubs when one will do? The AXI4 Master Stub combines the read and write stubs into a single module — it internally instantiates `axi4_master_rd_stub` and `axi4_master_wr_stub` — giving you packed packet interfaces on all five AXI4 channels behind one complete AXI4 master port. It's built for testbenches and integration scenarios where packet-based control beats wrangling individual AXI signals.

11.1.1 Key Features

- Combined read and write channel support
 - Packed packet interfaces for all channels (AW, W, B, AR, R)
 - Configurable skid buffer depths per channel
 - Full AXI4 protocol support (bursts, IDs, user signals)
 - Simplified testbench integration
 - Parameterized data widths
-

11.2 Parameters

Parameter	Type	Default	Description
SKID_DEPTH_AW	int	2	AW channel skid buffer depth in entries (2..8 inclusive, any integer)
SKID_DEPTH_W	int	4	W channel skid buffer depth in entries (2..8 inclusive, any integer)
SKID_DEPTH_B	int	2	B channel skid buffer depth in entries (2..8 inclusive, any integer)
SKID_DEPTH_AR	int	2	AR channel skid buffer depth in entries (2..8 inclusive, any integer)
SKID_DEPTH_R	int	4	R channel skid buffer depth in entries (2..8 inclusive, any integer)
AXI_ID_WIDTH	int	8	AXI transaction ID width
AXI_ADDR_WIDTH	int	32	AXI address bus width
AXI_DATA_WIDTH	int	32	AXI data bus width
AXI_USER_WIDTH	int	1	AXI user signal width
AXI_WSTRB_WIDTH	int	AXI_DATA_WIDTH/8	Write strobe width
AW	int	AXI_ADDR_WIDTH	Short alias for address width
DW	int	AXI_DATA_WIDTH	Short alias for data width
IW	int	AXI_ID_WIDTH	Short alias for ID width
SW	int	AXI_WSTRB_WIDTH	Short alias for strobe width
UW	int	AXI_USER_WIDTH	Short alias for user width
AWSize	int	IW+AW+8+3+2+1+4+3+4+4+UW	AW packet size (calculated)

Parameter	Type	Default	Description
WSize	int	DW+SW+1+UW	W packet size (calculated)
BSize	int	IW+2+UW	B packet size (calculated)
ARSize	int	IW+AW+8+3+2+1+4+3+4+4+UW	AR packet size (calculated)
RSize	int	IW+DW+2+1+UW	R packet size (calculated)

11.3 Ports

11.3.1 Clock and Reset

Port	Direction	Width	Description
aclk	Input	1	AXI clock
aresetn	Input	1	AXI reset (active low)

11.3.2 AXI4 Write Channels

Port	Direction	Width	Description
m_axi_awid	Output	AXI_ID_WIDTH	Write address ID
m_axi_awaddr	Output	AXI_ADDR_WIDTH	Write address
m_axi_awlen	Output	8	Burst length
m_axi_awsz	Output	3	Burst size
m_axi_awburst	Output	2	Burst type
m_axi_awlock	Output	1	Lock type
m_axi_awcache	Output	4	Cache type
m_axi_awprot	Output	3	Protection type
m_axi_awqos	Output	4	Quality of service
m_axi_awregid	Output	4	Region

Port	Direction	Width	Description
n			identifier
m_axi_awuser	Output	AXI_USER_WIDTH	User signal
m_axi_awvalid	Output	1	Write address valid
m_axi_awready	Input	1	Write address ready
m_axi_wdata	Output	AXI_DATA_WIDTH	Write data
m_axi_wstrb	Output	AXI_WSTRB_WIDTH	Write strobes
m_axi_wlast	Output	1	Write last
m_axi_wuser	Output	AXI_USER_WIDTH	User signal
m_axi_wvalid	Output	1	Write data valid
m_axi_wready	Input	1	Write data ready
m_axi_bid	Input	AXI_ID_WIDTH	Response ID
m_axi_bresp	Input	2	Write response
m_axi_buser	Input	AXI_USER_WIDTH	User signal
m_axi_bvalid	Input	1	Write response valid
m_axi_bready	Output	1	Write response ready

11.3.3 AXI4 Read Channels

Port	Direction	Width	Description
m_axi_arid	Output	AXI_ID_WIDTH	Read address ID
m_axi_araddr	Output	AXI_ADDR_WIDTH	Read address

Port	Direction	Width	Description
m_axi_arlen	Output	8	Burst length
m_axi_arsize	Output	3	Burst size
m_axi_arburst	Output	2	Burst type
m_axi_arlock	Output	1	Lock type
m_axi_arcache	Output	4	Cache type
m_axi_arprot	Output	3	Protection type
m_axi_arqos	Output	4	Quality of service
m_axi_arregion	Output	4	Region identifier
m_axi_aruser	Output	AXI_USER_WIDTH	User signal
m_axi_arvalid	Output	1	Read address valid
m_axi_arready	Input	1	Read address ready
m_axi_rid	Input	AXI_ID_WIDTH	Read data ID
m_axi_rdata	Input	AXI_DATA_WIDTH	Read data
m_axi_rresp	Input	2	Read response
m_axi_rlast	Input	1	Read last
m_axi_ruser	Input	AXI_USER_WIDTH	User signal
m_axi_rvalid	Input	1	Read data valid
m_axi_rready	Output	1	Read data ready

11.3.4 Write Packet Interfaces

Port	Direction	Width	Description
fub_axi_awvalid	Input	1	AW packet valid


Port	Direction	Width	Description
fub_axi_awready	Output	1	Ready to accept AW packet
fub_axi_awcount	Output	4	AW buffer occupancy
fub_axi_awpkt	Input	AWSize	Packed AW packet data
fub_axi_wvalid	Input	1	W packet valid
fub_axi_wready	Output	1	Ready to accept W packet
fub_axi_wpkt	Input	WSize	Packed W packet data
fub_axi_bvalid	Output	1	B packet valid
fub_axi_bready	Input	1	Ready to accept B packet
fub_axi_bpkt	Output	BSize	Packed B packet data

11.3.5 Read Packet Interfaces

Port	Direction	Width	Description
fub_axi_arvalid	Input	1	AR packet valid
fub_axi_arready	Output	1	Ready to accept AR packet
fub_axi_arcount	Output	4	AR skid occupancy (driven since the round_20 fix; was an undriven 3-bit port)
fub_axi_arpkt	Input	ARSize	Packed AR packet data
fub_axi_rvalid	Output	1	R packet valid

Port	Direction	Width	Description
fub_axi_rready	Input	1	Ready to accept R packet
fub_axi_rpkt	Output	RSize	Packed R packet data

11.4 Functional Description

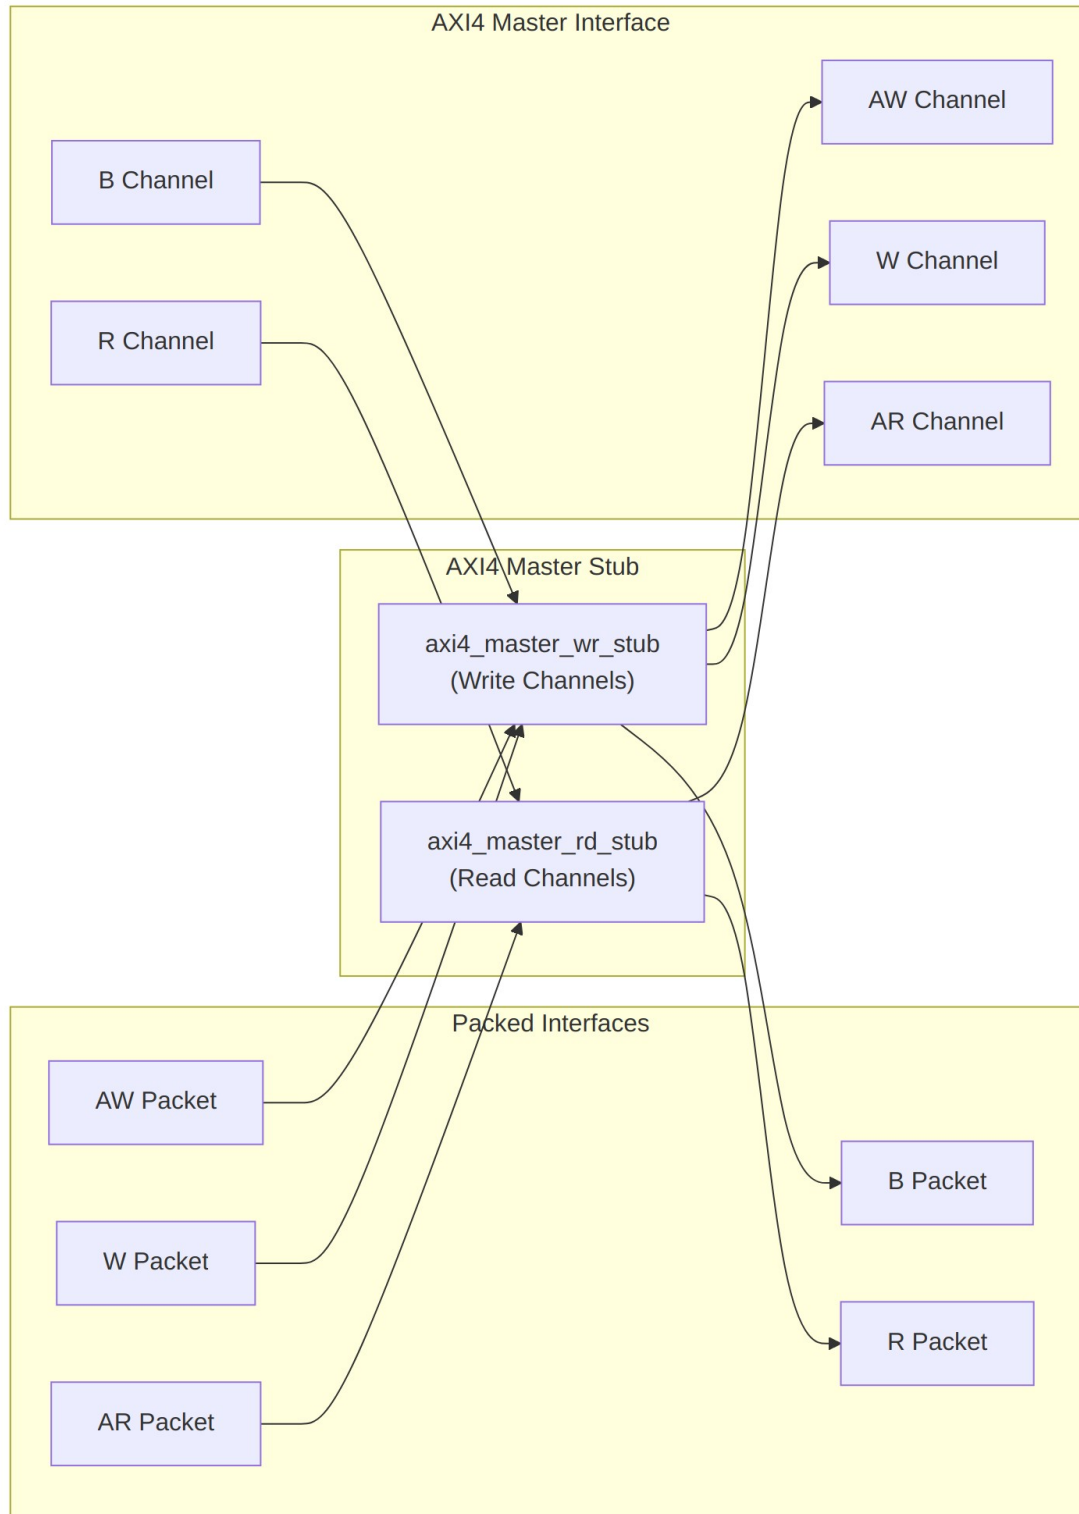

Architecture

11.4.1 Packet Formats

11.4.1.1 Write Channel Packets

AW Packet (Write Address):

```
fub_axi_aw_pkt = {awid, awaddr, awlen, awsize, awburst, awlock,
awcache, awprot, awqos, awregion, awuser}
Width = IW + AW + 8 + 3 + 2 + 1 + 4 + 3 + 4 + 4 + UW
```

W Packet (Write Data):

```
fub_axi_w_pkt = {wdata, wstrb, wlast, wuser}
Width = DW + SW + 1 + UW
```

B Packet (Write Response):

```
fub_axi_b_pkt = {bid, bresp, buser}
Width = IW + 2 + UW
```

11.4.1.2 Read Channel Packets

AR Packet (Read Address):

```
fub_axi_ar_pkt = {arid, araddr, arlen, arsize, arburst, arlock,
arcache, arprot, arqos, arregion, aruser}
Width = IW + AW + 8 + 3 + 2 + 1 + 4 + 3 + 4 + 4 + UW
```

R Packet (Read Data):

```
fub_axi_r_pkt = {rid, rdata, rresp, rlast, ruser}
Width = IW + DW + 2 + 1 + UW
```

Complete packet format details: See [AXI4 Master Write Stub](#) and [AXI4 Master Read Stub](#)

11.4.2 Transaction Flow

Read and write run independently and can overlap — the sequence below shows both in flight at once.

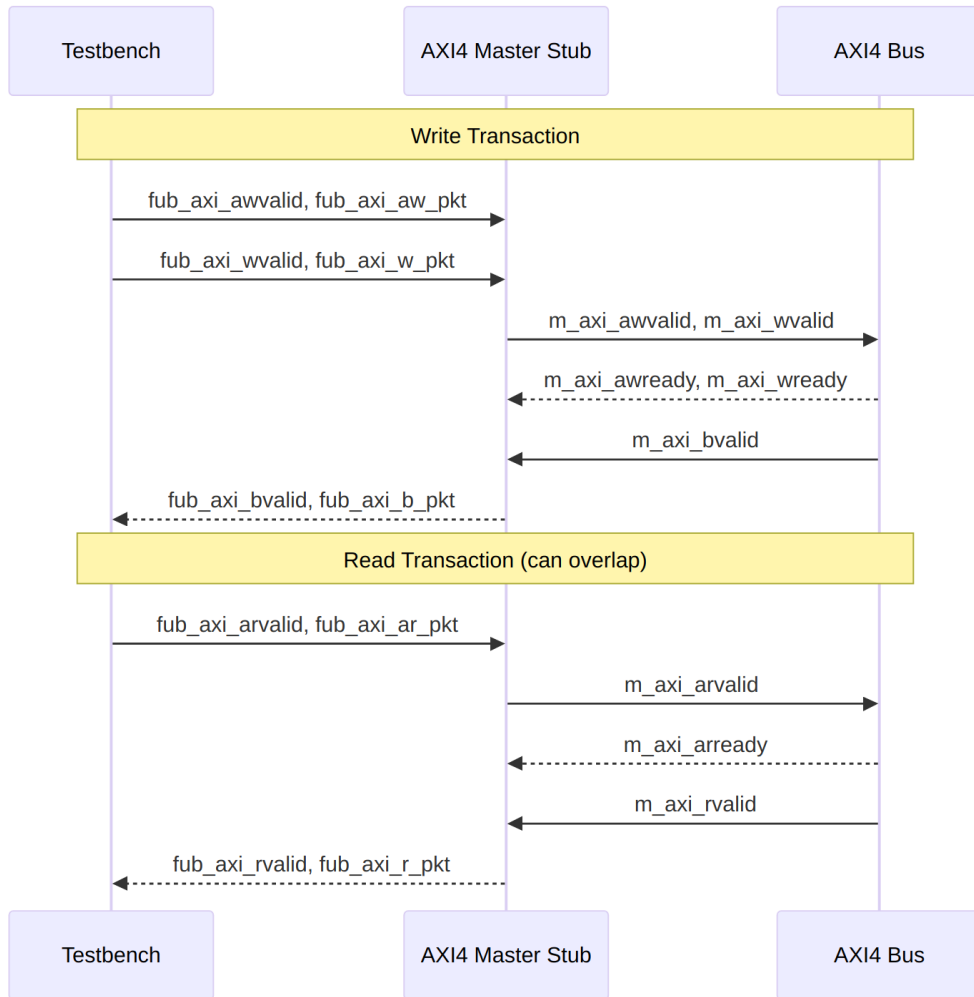


Diagram 11

11.5 Timing Characteristics

Timing diagram pending. The signals and sequence this scenario exercises:

- `aclk`
- Write packet interfaces (`fub_axi_aw`, `fub_axi_w`, `fub_axi_b*`)
- Read packet interfaces (`fub_axi_ar`, `fub_axi_r`)
- AXI write channels (`m_axi_aw`, `m_axi_w`, `m_axi_b*`)
- AXI read channels (`m_axi_ar`, `m_axi_r`)
- Overlapping read/write operations

11.6 Usage Examples

```
axi4_master_stub #(
    .SKID_DEPTH_AW    (2),
    .SKID_DEPTH_W     (4),
    .SKID_DEPTH_B     (2),
    .SKID_DEPTH_AR    (2),
    .SKID_DEPTH_R     (4),
    .AXI_ID_WIDTH     (8),
    .AXI_ADDR_WIDTH   (32),
    .AXI_DATA_WIDTH   (64),
    .AXI_USER_WIDTH   (4)
) u_axi4_master_stub (
    .aclk              (axi_clk),
    .aresetn           (axi_rst_n),

    // AXI4 master interface (all channels)
    .m_axi_awid        (m_axi_awid),
    .m_axi_awaddr      (m_axi_awaddr),
    .m_axi_awlen       (m_axi_awlen),
    .m_axi_awsz        (m_axi_awsz),
    .m_axi_awburst     (m_axi_awburst),
    .m_axi_awlock      (m_axi_awlock),
    .m_axi_awcache     (m_axi_awcache),
    .m_axi_awprot      (m_axi_awprot),
    .m_axi_awqos       (m_axi_awqos),
    .m_axi_awregion    (m_axi_awregion),
    .m_axi_awuser      (m_axi_awuser),
    .m_axi_awvalid     (m_axi_awvalid),
    .m_axi_awready     (m_axi_awready),

    .m_axi_wdata       (m_axi_wdata),
    .m_axi_wstrb       (m_axi_wstrb),
    .m_axi_wlast       (m_axi_wlast),
    .m_axi_wuser       (m_axi_wuser),
    .m_axi_wvalid      (m_axi_wvalid),
    .m_axi_wready      (m_axi_wready),

    .m_axi_bid         (m_axi_bid),
    .m_axi_bresp       (m_axi_bresp),
    .m_axi_buser       (m_axi_buser),
    .m_axi_bvalid      (m_axi_bvalid),
    .m_axi_bready      (m_axi_bready),

    .m_axi_arid        (m_axi_arid),
```

```

.m_axi_araddr    (m_axi_araddr),
.m_axi_arlen     (m_axi_arlen),
.m_axi_arsize    (m_axi_arsize),
.m_axi_arburst   (m_axi_arburst),
.m_axi_arlock    (m_axi_arlock),
.m_axi_arcache   (m_axi_arcache),
.m_axi_arprot    (m_axi_arprot),
.m_axi_arqos     (m_axi_arqos),
.m_axi_arregion  (m_axi_arregion),
.m_axi_aruser    (m_axi_aruser),
.m_axi_arvalid   (m_axi_arvalid),
.m_axi_arready   (m_axi_arready),

.m_axi_rid       (m_axi_rid),
.m_axi_rdata     (m_axi_rdata),
.m_axi_rresp     (m_axi_rresp),
.m_axi_rlast     (m_axi_rlast),
.m_axi_ruser     (m_axi_ruser),
.m_axi_rvalid    (m_axi_rvalid),
.m_axi_rready    (m_axi_rready),

// Write packet interfaces
.fub_axi_awvalid (tb_aw_valid),
.fub_axi_awready (tb_aw_ready),
.fub_axi_aw_count(tb_aw_count),
.fub_axi_aw_pkt  (tb_aw_pkt),

.fub_axi_wvalid  (tb_w_valid),
.fub_axi_wready  (tb_w_ready),
.fub_axi_w_pkt   (tb_w_pkt),

.fub_axi_bvalid  (tb_b_valid),
.fub_axi_bready  (tb_b_ready),
.fub_axi_b_pkt   (tb_b_pkt),

// Read packet interfaces
.fub_axi_arvalid (tb_ar_valid),
.fub_axi_arready (tb_ar_ready),
.fub_axi_ar_count(tb_ar_count),
.fub_axi_ar_pkt  (tb_ar_pkt),

.fub_axi_rvalid  (tb_r_valid),
.fub_axi_rready  (tb_r_ready),
.fub_axi_r_pkt   (tb_r_pkt)
);

```

```

// Example: Build write transaction packets
assign tb_aw_pkt = {
    8'd1,           // awid
    32'h1000_0000,  // awaddr
    8'd0,           // awlen (1 beat)
    3'b011,         // awsize (8 bytes)
    2'b01,         // awburst (INCR)
    1'b0,           // awlock
    4'b0011,        // awcache
    3'b000,         // awprot
    4'b0000,        // awqos
    4'b0000,        // awregion
    4'h0            // awuser
};

assign tb_w_pkt = {
    64'hDEAD_BEEF_CAFE_BABE, // wdata
    8'hFF,                   // wstrb
    1'b1,                    // wlast
    4'h0                      // wuser
};

// Example: Build read transaction packet
assign tb_ar_pkt = {
    8'd2,           // arid
    32'h2000_0000,  // araddr
    8'd3,           // arlen (4 beats)
    3'b011,         // arsize (8 bytes)
    2'b01,         // arburst (INCR)
    1'b0,           // arlock
    4'b0011,        // arcache
    3'b000,         // arprot
    4'b0000,        // arqos
    4'b0000,        // arregion
    4'h0            // aruser
};

// Parse responses
localparam int BSize = 8 + 2 + 4;           // IW + resp + UW -- match
your instance
localparam int RSize = 8 + 64 + 2 + 1 + 4; // IW + DW + resp + last +
UW
wire [7:0] b_id   = tb_b_pkt[BSize-1:BSize-8];
wire [1:0] b_resp = tb_b_pkt[5:4];

wire [7:0] r_id   = tb_r_pkt[RSize-1:RSize-8];
wire [63:0] r_data = tb_r_pkt[RSize-9:RSize-72];

```

```
wire [1:0] r_resp = tb_r_pkt[6:5];  
wire      r_last = tb_r_pkt[4];
```

11.7 Design Notes

11.7.1 Internal Architecture

The stub instantiates two sub-modules:

- **axi4_master_wr_stub** - Handles AW, W, and B channels
- **axi4_master_rd_stub** - Handles AR and R channels

This hierarchical design:

- Reuses proven read/write stub modules
- Maintains clear channel separation
- Simplifies verification and testing
- Allows independent read/write operation

11.7.2 Read/Write Independence

Read and write channels are completely independent:

- Can overlap in time (simultaneous read and write)
- Each has independent skid buffers
- No ordering constraints between reads and writes
- Testbench can drive at different rates

11.7.3 Skid Buffer Depths

Recommended configurations:

Low latency (fast memory):

```
.SKID_DEPTH_AW(2), .SKID_DEPTH_W(2), .SKID_DEPTH_B(2),  
.SKID_DEPTH_AR(2), .SKID_DEPTH_R(2)
```

Typical system:

```
.SKID_DEPTH_AW(2), .SKID_DEPTH_W(4), .SKID_DEPTH_B(2),  
.SKID_DEPTH_AR(2), .SKID_DEPTH_R(4)
```

High throughput bursts:

```
.SKID_DEPTH_AW(4), .SKID_DEPTH_W(8), .SKID_DEPTH_B(4),  
.SKID_DEPTH_AR(4), .SKID_DEPTH_R(8)
```

11.8 Related Modules

- [AXI4 Master Read Stub](#) - Read-only stub (instantiated internally)
 - [AXI4 Master Write Stub](#) - Write-only stub (instantiated internally)
 - [AXI4 Slave Stub](#) - Corresponding combined slave stub
 - [AXI4 Master Read](#) - Full AXI4 master read module
 - [AXI4 Master Write](#) - Full AXI4 master write module
-

11.9 Testing

No dedicated testbench, and none is expected. This is a stub: a tie-off shell that presents the interface and drives inert values, so there is no behaviour to verify beyond elaboration. make verilator lints it as its own top on every run, which is the coverage that applies.

Treat any behaviour described on this page as unverified by simulation.

11.10 Navigation

- [← Back to AXI4 Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

12 AXI4 Master Write

Module: axi4_master_wr.sv **Location:** rtl/amba/axi4/ **Status:** Production Ready

12.1 Overview

Think of this module as an elastic buffer that speaks fluent AXI4. The AXI4 Master Write sits between a write initiator and an AXI4 interconnect with an independent, configurable-depth skid buffer on each of the AW, W, and B channels, so timing on one side never leaks into the other and backpressure always has somewhere to park.

12.1.1 Key Features

- **Full AXI4 Write Support:** Complete AW, W, and B channel implementation
 - **Independent Channel Buffering:** Separate configurable depth buffers for each channel
 - **Elastic Buffering:** Decouples upstream and downstream timing domains
 - **Burst Support:** Full burst transaction handling with WLAST tracking
 - **User Signal Support:** Carries AWUSER, WUSER, and BUSER signals
 - **Clock Gating Support:** Busy signal for dynamic power management
-

12.2 Parameters

Parameter	Type	Default	Description
SKID_DEPTH_AW	int	2	Depth of write address (AW) channel skid buffer
SKID_DEPTH_W	int	4	Depth of write data (W) channel skid buffer
SKID_DEPTH_B	int	2	Depth of write response (B) channel skid buffer
AXI_ID_WIDTH	int	8	Width of transaction ID signals (AWID, BID)
AXI_ADDR_WIDTH	int	32	Width of address bus (AWADDR)
AXI_DATA_WIDTH	int	32	Width of data bus (WDATA), must be 8, 16, 32, 64, 128, 256, 512, or 1024
AXI_USER_WIDTH	int	1	Width of user-defined signals (AWUSER, WUSER, BUSER)

12.2.1 Derived Parameters (do not override)

These are declared as parameter so the elaborator can compute them, not so callers can set them. Each defaults to an expression over the parameters above; overriding one desynchronises it from

its source and the design fails to elaborate or silently mis-sizes a bus. Set the parameters they are derived FROM and leave these alone.

Derived parameter	Default expression
AXI_WSTRB_WIDTH	AXI_DATA_WIDTH / 8
DW	AXI_DATA_WIDTH
IW	AXI_ID_WIDTH
SW	AXI_WSTRB_WIDTH
UW	AXI_USER_WIDTH
AWSize	IW+AW+8+3+2+1+4+3+4+4+UW
WSize	DW+SW+1+UW
BSize	IW+2+UW

12.3 Ports

The full port list, straight from the RTL:

```

module axi4_master_wr #(
    parameter int SKID_DEPTH_AW      = 2,
    parameter int SKID_DEPTH_W      = 4,
    parameter int SKID_DEPTH_B      = 2,
    parameter int AXI_ID_WIDTH      = 8,
    parameter int AXI_ADDR_WIDTH    = 32,
    parameter int AXI_DATA_WIDTH    = 32,
    parameter int AXI_USER_WIDTH    = 1
) (
    // Clock and Reset
    input   logic          aclk,
    input   logic          aresetn,

    // Frontend AXI Interface (fub_axi_*)
    // Write address channel (AW)
    input   logic [AXI_ID_WIDTH-1:0] fub_axi_awid,
    input   logic [AXI_ADDR_WIDTH-1:0] fub_axi_awaddr,
    input   logic [7:0] fub_axi_awlen,
    input   logic [2:0] fub_axi_awsz,
    input   logic [1:0] fub_axi_awburst,
    input   logic fub_axi_awlock,
    input   logic [3:0] fub_axi_awcache,
    input   logic [2:0] fub_axi_awprot,
    input   logic [3:0] fub_axi_awqos,
    input   logic [3:0] fub_axi_awregion,
    input   logic [AXI_USER_WIDTH-1:0] fub_axi_awuser,
    input   logic fub_axi_awvalid,
    output  logic fub_axi_awready,

```

```

// Write data channel (W)
input  logic [AXI_DATA_WIDTH-1:0] fub_axi_wdata,
input  logic [AXI_DATA_WIDTH/8-1:0] fub_axi_wstrb,
input  logic                                     fub_axi_wlast,
input  logic [AXI_USER_WIDTH-1:0] fub_axi_wuser,
input  logic                                     fub_axi_wvalid,
output logic                                     fub_axi_wready,

// Write response channel (B)
output logic [AXI_ID_WIDTH-1:0] fub_axi_bid,
output logic [1:0] fub_axi_bresp,
output logic [AXI_USER_WIDTH-1:0] fub_axi_buser,
output logic                                     fub_axi_bvalid,
input  logic                                     fub_axi_bready,

// Master AXI Interface (m_axi_*)
// Write address channel (AW)
output logic [AXI_ID_WIDTH-1:0] m_axi_awid,
output logic [AXI_ADDR_WIDTH-1:0] m_axi_awaddr,
output logic [7:0] m_axi_awlen,
output logic [2:0] m_axi_awsz,
output logic [1:0] m_axi_awburst,
output logic m_axi_awlock,
output logic [3:0] m_axi_awcache,
output logic [2:0] m_axi_awprot,
output logic [3:0] m_axi_awqos,
output logic [3:0] m_axi_awregion,
output logic [AXI_USER_WIDTH-1:0] m_axi_awuser,
output logic m_axi_awvalid,
input  logic m_axi_awready,

// Write data channel (W)
output logic [AXI_DATA_WIDTH-1:0] m_axi_wdata,
output logic [AXI_DATA_WIDTH/8-1:0] m_axi_wstrb,
output logic m_axi_wlast,
output logic [AXI_USER_WIDTH-1:0] m_axi_wuser,
output logic m_axi_wvalid,
input  logic m_axi_wready,

// Write response channel (B)
input  logic [AXI_ID_WIDTH-1:0] m_axi_bid,
input  logic [1:0] m_axi_bresp,
input  logic [AXI_USER_WIDTH-1:0] m_axi_buser,
input  logic m_axi_bvalid,
output logic m_axi_bready,

```

```

        // Status
        output logic busy
    );

```

12.3.1 Clock and Reset

Port	Direction	Width	Description
acclk	Input	1	AXI clock - all signals sampled on rising edge
aresetn	Input	1	Active-low asynchronous reset

12.3.2 Frontend AXI Interface (fub_axi_*)

Write Address Channel (AW)

Port	Direction	Width	Description
fub_axi_a_wid	Input	AXI_ID_WIDTH	Write transaction ID
fub_axi_a_waddr	Input	AXI_ADDR_WIDTH	Write address
fub_axi_a_wlen	Input	8	Burst length, AXI-encoded: beats - 1 (0x00 = 1 beat, 0xFF = 256)
fub_axi_a_wsize	Input	3	Burst size (bytes per beat)
fub_axi_a_wburst	Input	2	Burst type (FIXED, INCR, WRAP)
fub_axi_a_wlock	Input	1	Lock type (atomic access support)
fub_axi_a_wcache	Input	4	Cache attributes
fub_axi_a_wprot	Input	3	Protection attributes
fub_axi_a_wqos	Input	4	Quality of Service identifier
fub_axi_a_wregion	Input	4	Region identifier

Port	Direction	Width	Description
fub_axi_a_wuser	Input	AXI_USER_WIDTH	User-defined signal
fub_axi_a_wvalid	Input	1	Write address valid
fub_axi_a_wready	Output	1	Write address ready

Write Data Channel (W)

Port	Direction	Width	Description
fub_axi_w_data	Input	AXI_DATA_WIDTH	Write data
fub_axi_w_strb	Input	AXI_DATA_WIDTH/8	Write strobes (byte enables)
fub_axi_w_last	Input	1	Last beat of burst indicator
fub_axi_w_user	Input	AXI_USER_WIDTH	User-defined signal
fub_axi_w_valid	Input	1	Write data valid
fub_axi_w_ready	Output	1	Write data ready

Write Response Channel (B)

Port	Direction	Width	Description
fub_axi_b_id	Output	AXI_ID_WIDTH	Response transaction ID
fub_axi_b_resp	Output	2	Write response (OKAY, EXOKAY, SLVERR, DECERR)
fub_axi_b_user	Output	AXI_USER_WIDTH	User-defined signal
fub_axi_b_valid	Output	1	Write response valid
fub_axi_b_ready	Input	1	Write response ready

12.3.3 Master AXI Interface (m_axi_*)

Mirrors the frontend interface but in the opposite direction (output on AW/W, input on B).

12.3.4 Status Outputs

Port	Direction	Width	Description
busy	Output	1	Indicates active transactions in buffers (for clock gating)

12.4 Functional Description

12.4.1 Architecture

Three independent `gaxi_skid_buffer` instances provide the elastic buffering, one per write channel:

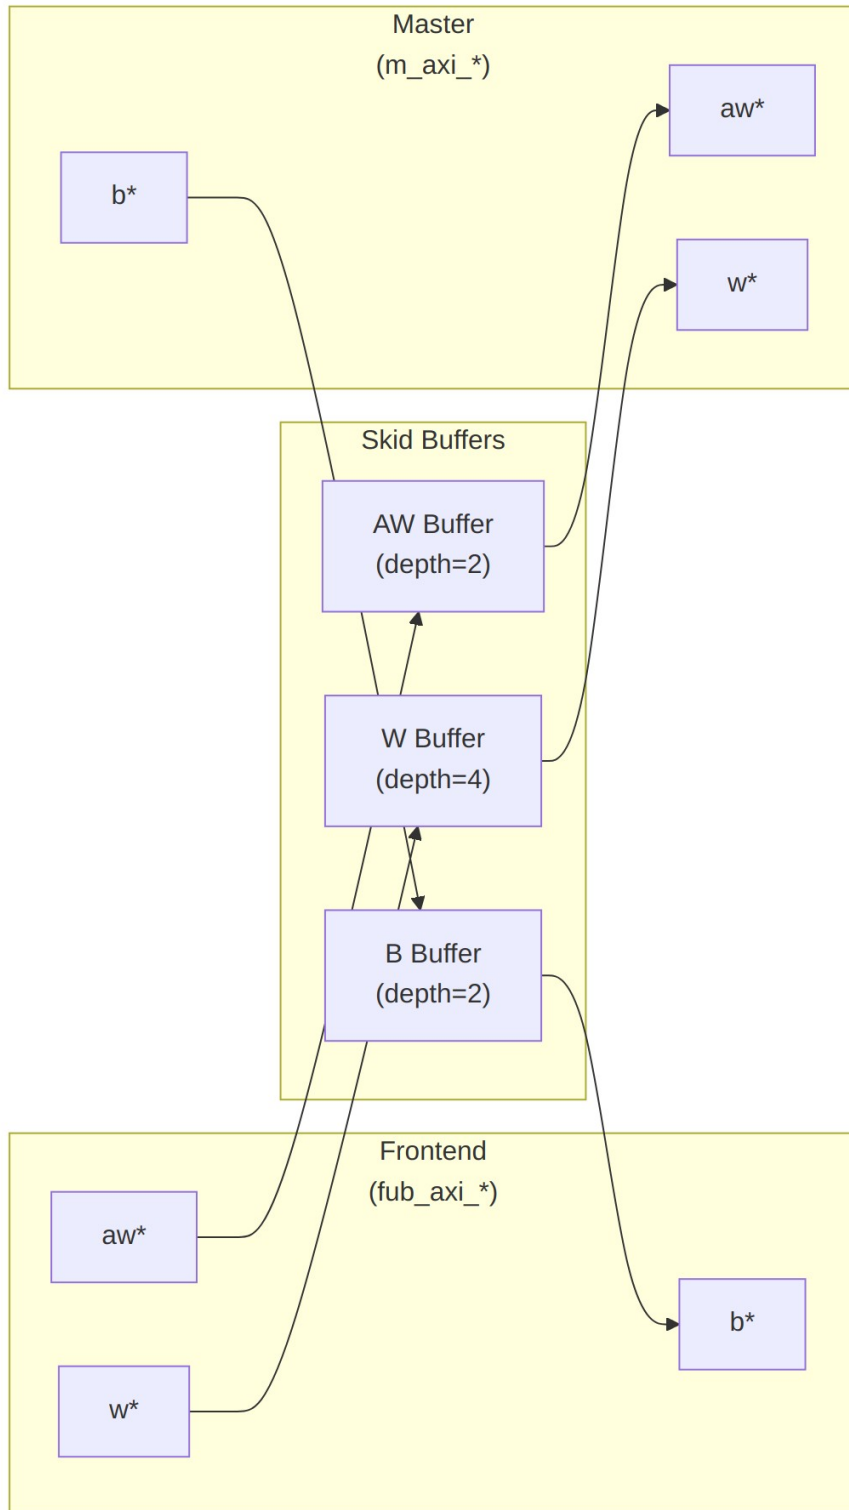


Diagram 12

12.4.2 Channel Operations

12.4.2.1 Write Address (AW) Channel

1. Frontend presents write address and attributes
2. AW skid buffer accepts when space available (fub_axi_awready high)
3. Buffered address presented to master interface when ready
4. Configurable depth (SKID_DEPTH_AW) smooths timing variations

12.4.2.2 Write Data (W) Channel

1. Frontend presents write data with strobes
2. W skid buffer provides deeper buffering (default depth=4)
3. WLAST signal preserved to indicate burst boundaries
4. Independent from AW channel (AXI4 allows W before AW)

12.4.2.3 Write Response (B) Channel

1. Master returns write response with transaction ID
2. B skid buffer captures response when frontend busy
3. Frontend receives response when ready to accept
4. ID matching handled by AXI interconnect (not this module)

12.4.3 Busy Signal

The busy output indicates active transactions:

```
assign busy = (int_aw_count > 0) || (int_w_count > 0) || (int_b_count > 0) ||  
              fub_axi_awvalid || fub_axi_wvalid || m_axi_bvalid;
```

Use cases: - **Clock gating**: Disable clock when busy is low - **Power management**: Enter low-power mode when idle - **Synchronization**: Wait for idle before configuration changes

12.5 Timing Characteristics

Skid parameter	Default depth
SKID_DEPTH_AW	2 entries
SKID_DEPTH_W	4 entries
SKID_DEPTH_B	2 entries

Each channel traverses one gaxi_skid_buffer, which registers both rd_valid and its storage. The **1-cycle input-to-output latency therefore applies on every transfer, including the**

unstalled case – there is no combinational bypass. Depth buys backpressure absorption, not throughput; full rate is sustained once the pipeline is primed. Legal range is 2..8 inclusive, odd values included.

Clocking: `aclk`, reset `aresetn` (active-low asynchronous).

No synthesis numbers are quoted here. Frequency and area depend on the target device and the parameters you elaborate with; run your own build.

12.6 Usage Examples

Every parameter and port below is read from the module declaration.

```
axi4_master_wr #(
    .SKID_DEPTH_AW          (2),
    .SKID_DEPTH_W           (4),
    .SKID_DEPTH_B           (2),
    .AXI_ID_WIDTH           (8),
    .AXI_ADDR_WIDTH         (32),
    .AXI_DATA_WIDTH         (32),
    .AXI_USER_WIDTH         (1)
) u_axi4_master_wr (
    .aclk                    (aclk),
    .aresetn                 (aresetn),
    .fub_axi_awid            (fub_axi_awid),
    .fub_axi_awaddr         (fub_axi_awaddr),
    .fub_axi_awlen          (fub_axi_awlen),
    .fub_axi_awsz           (fub_axi_awsz),
    .fub_axi_awburst        (fub_axi_awburst),
    .fub_axi_awlock         (fub_axi_awlock),
    .fub_axi_awcache        (fub_axi_awcache),
    .fub_axi_awprot         (fub_axi_awprot),
    .fub_axi_awqos          (fub_axi_awqos),
    .fub_axi_awregion       (fub_axi_awregion),
    .fub_axi_awuser         (fub_axi_awuser),
    .fub_axi_awvalid        (fub_axi_awvalid),
    .fub_axi_awready        (fub_axi_awready),
    .fub_axi_wdata          (fub_axi_wdata),
    .fub_axi_wstrb          (fub_axi_wstrb),
    .fub_axi_wlast          (fub_axi_wlast),
    .fub_axi_wuser          (fub_axi_wuser),
    .fub_axi_wvalid         (fub_axi_wvalid),
    .fub_axi_wready         (fub_axi_wready),
    .fub_axi_bid            (fub_axi_bid),
    .fub_axi_bresp          (fub_axi_bresp),
    .fub_axi_buser          (fub_axi_buser),
```

```

.fub_axi_bvalid      (fub_axi_bvalid),
.fub_axi_bready      (fub_axi_bready),
.m_axi_awid          (m_axi_awid),
.m_axi_awaddr        (m_axi_awaddr),
.m_axi_awlen         (m_axi_awlen),
.m_axi_awsiz        (m_axi_awsiz),
.m_axi_awburst       (m_axi_awburst),
.m_axi_awlock        (m_axi_awlock),
.m_axi_awcache       (m_axi_awcache),
.m_axi_awprot        (m_axi_awprot),
.m_axi_awqos         (m_axi_awqos),
.m_axi_awregion      (m_axi_awregion),
.m_axi_awuser        (m_axi_awuser),
.m_axi_awvalid       (m_axi_awvalid),
.m_axi_awready       (m_axi_awready),
.m_axi_wdata         (m_axi_wdata),
.m_axi_wstrb         (m_axi_wstrb),
.m_axi_wlast         (m_axi_wlast),
.m_axi_wuser         (m_axi_wuser),
.m_axi_wvalid        (m_axi_wvalid),
.m_axi_wready        (m_axi_wready),
.m_axi_bid           (m_axi_bid),
.m_axi_bresp         (m_axi_bresp),
.m_axi_buser         (m_axi_buser),
.m_axi_bvalid        (m_axi_bvalid),
.m_axi_bready        (m_axi_bready),
.busy                (busy)
);

```

12.7 Design Notes

12.7.1 Buffer Depth Selection

SKID_DEPTH_* is an entry count, not a log2 exponent. The underlying gaxi_skid_buffer allocates one register slot per entry and tracks occupancy with a 4-bit counter, so legal values are 2..8 inclusive (any integer). Values greater than 8 overflow the occupancy counter and are not supported.

Write Address (SKID_DEPTH_AW): - Default: 2 (sufficient for most cases) - Increase if: - High-latency address decode paths - Frequent address channel backpressure - Multiple outstanding bursts needed

Write Data (SKID_DEPTH_W): - Default: 4 (deeper than AW for burst data) - Increase if: - Large burst sizes (AWLEN > 4) - High-bandwidth streaming writes - Significant W channel backpressure

Write Response (SKID_DEPTH_B): - Default: 2 (responses are typically single-beat) - Increase if: - Frontend slow to accept responses - Many concurrent outstanding writes - Response channel backpressure observed

12.7.2 Recommended Configurations

Low-Latency System (single outstanding write):

```
axi4_master_wr #(
    .SKID_DEPTH_AW(2),
    .SKID_DEPTH_W(2),
    .SKID_DEPTH_B(2)
) u_master_wr ( ... );
```

High-Throughput Streaming (burst writes):

```
axi4_master_wr #(
    .SKID_DEPTH_AW(4),
    .SKID_DEPTH_W(8),    // Deep for burst data
    .SKID_DEPTH_B(4)
) u_master_wr ( ... );
```

Multiple Outstanding Writes:

```
axi4_master_wr #(
    .SKID_DEPTH_AW(8),
    .SKID_DEPTH_W(8),
    .SKID_DEPTH_B(8)
) u_master_wr ( ... );
```

12.7.3 Buffer Independence

The three skid buffers operate independently: - AW and W channels can progress at different rates - AXI4 allows W data before AW address - B responses return asynchronously based on slave timing

12.7.4 Packet Preservation

All signal groups packed and unpacked atomically: - AW channel: {awid, awaddr, awlen, awsize, awburst, awlock, awcache, awprot, awqos, awregion, awuser} - W channel: {wdata, wstrb, wlast, wuser} - B channel: {bid, bresp, buser}

12.7.5 Backpressure Handling

Ready signals propagate backpressure: - Frontend sees awready/wready low when buffers full - Master backpressure captured in buffers - Prevents data loss while decoupling timing

12.7.6 Reset Behavior

On aresetn assertion (active-low): - All skid buffers flush - Valid signals deasserted - Busy signal goes low - No data retained across reset

12.8 Related Modules

12.8.1 Companion Modules

- [axi4_master_rd](#) - AXI4 master read with buffering
- [axi4_master_wr_cg](#) - Clock-gated variant with additional CG logic
- [axi4_master_wr_mon](#) - Write transaction monitor for verification

12.8.2 Used Components

- [gaxi_skid_buffer](#) - Elastic buffer with valid/ready handshake
- [clock_gate_ctrl](#) - Clock gating control (example)

12.8.3 Related Infrastructure

- [axi4_interconnect](#) - Multi-master/multi-slave crossbar
 - [axi4_slave_wr](#) - Corresponding AXI4 write slave module
-

12.9 Testing

`val/amba/test_axi4_master_wr.py` exercises this module. It collects 8 parameter cases at the default `REG_LEVEL`.

```
source env_python
pytest val/amba/test_axi4_master_wr.py -v
```

12.10 References

12.10.1 Specifications

- ARM IHI 0022E: AMBA AXI Protocol Specification (AXI4)

12.10.2 Source Code

- RTL: `rtl/amba/axi4/axi4_master_wr.sv`
- Tests: `val/amba/test_axi4_master_wr.py`
- Framework: `bin/TBClasses/components/axi4/`

12.10.3 Documentation

- Architecture: [rtl-amba Overview](#)
- AXI4 Index: [axi4/README.md](#)

- GAXI Buffers: [gaxi/README.md](#)
-

Last Updated: 2025-10-20

12.11 Navigation

- [← Back to AXI4 Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

13 AXI4 Master Write Interface (Clock-Gated)

Module: `axi4_master_wr_cg.sv` **Base Module:** [axi4_master_wr](#) **Location:** `rtl/amba/axi4/`
Status: Production Ready

13.1 Overview

Same module, smaller power bill. This is the **clock-gated variant** of [axi4_master_wr](#): functionally identical, with activity-based clock gating wrapped around it.

For complete clock-gating documentation, usage examples, and configuration guidelines, see the [Clock-Gated Variants Guide](#).

What the wrapper buys you:

- **Same Functionality:** 100% equivalent to base module
 - **Power Savings:** traffic-dependent; unmeasured in this repo – treat any percentage as a placeholder until characterized
 - **Configurable at runtime:** `cfg_cg_enable` / `cfg_cg_idle_count` inputs
 - **Zero Overhead When Disabled:** `cfg_cg_enable=0` bypasses the gate
-

13.2 Parameters

In addition to all [axi4_master_wr](#) parameters:

Parameter	Default	Description
CG_IDLE_COUNT_WIDTH	4	Width of the idle countdown, sizing <code>cfg_cg_idle_count</code>
SKID_DEPTH_AW	2	Skid-buffer depth on the AW channel. Legal range 2..8 inclusive; odd depths are legal.
SKID_DEPTH_B	2	Skid-buffer depth on the B channel. Legal range 2..8 inclusive; odd depths are legal.
SKID_DEPTH_W	4	Skid-buffer depth on the W channel. Legal range 2..8 inclusive; odd depths are legal.

The gating controls are RUNTIME INPUTS, not parameters: `cfg_cg_enable` and `cfg_cg_idle_count`; status outputs `cg_gating` / `cg_idle`. One `amba_clock_gate_ctrl` gates the whole module – no per-domain gates. The base module's busy output is NOT re-exported (consumed internally as a wake term). (The `ENABLE_CLOCK_GATING` / `CG_IDLE_CYCLES` / `CG_GATE_*` interface this page once documented never existed.)

13.2.1 Derived Parameters (do not override)

These are declared as parameter so the elaborator can compute them, not so callers can set them. Each defaults to an expression over the parameters above; overriding one desynchronises it from its source and the design fails to elaborate or silently mis-sizes a bus. Set the parameters they are derived FROM and leave these alone.

Derived parameter	Default expression
AXI_WSTRB_WIDTH	$AXI_DATA_WIDTH / 8$
AW	AXI_ADDR_WIDTH
DW	AXI_DATA_WIDTH
IW	AXI_ID_WIDTH
SW	AXI_WSTRB_WIDTH
UW	AXI_USER_WIDTH
AWSize	$IW + AW + 8 + 3 + 2 + 1 + 4 + 3 + 4 + 4 + UW$
WSize	$DW + SW + 1 + UW$

Derived parameter	Default expression
BSize	IW+2+UW

13.3 Ports

Port	Dir	Width	Description
aclk	In	1	
aresetn	In	1	
cfg_cg_enable	In	1	
cfg_cg_idle_count	In	[CG_IDLE_COUNT_WIDTH-1:0]	
fub_axi_awid	In	[IW-1:0]	
fub_axi_awaddr	In	[AW-1:0]	
fub_axi_awlen	In	[7:0]	
fub_axi_awsiz	In	[2:0]	
fub_axi_awburst	In	[1:0]	
fub_axi_awlock	In	1	
fub_axi_awcache	In	[3:0]	
fub_axi_awprot	In	[2:0]	
fub_axi_awqos	In	[3:0]	
fub_axi_awregion	In	[3:0]	
fub_axi_awuser	In	[UW-1:0]	
fub_axi_awvalid	In	1	
fub_axi_awready	Out	1	
fub_axi_wdata	In	[DW-1:0]	
fub_axi_wstrb	In	[SW-1:0]	
fub_axi_wlast	In	1	
fub_axi_wuser	In	[UW-1:0]	

Port	Dir	Width	Description
fub_axi_wvalid	In	1	
fub_axi_wready	Out	1	
fub_axi_bid	Out	[IW-1:0]	
fub_axi_bresp	Out	[1:0]	
fub_axi_buser	Out	[UW-1:0]	
fub_axi_bvalid	Out	1	
fub_axi_bready	In	1	
m_axi_awid	Out	[IW-1:0]	
m_axi_awaddr	Out	[AW-1:0]	
m_axi_awlen	Out	[7:0]	
m_axi_awsiz	Out	[2:0]	
m_axi_awburst	Out	[1:0]	
m_axi_awlock	Out	1	
m_axi_awcache	Out	[3:0]	
m_axi_awprot	Out	[2:0]	
m_axi_awqos	Out	[3:0]	
m_axi_awregion	Out	[3:0]	
m_axi_awuser	Out	[UW-1:0]	
m_axi_awvalid	Out	1	
m_axi_awready	In	1	
m_axi_wdata	Out	[DW-1:0]	
m_axi_wstrb	Out	[SW-1:0]	
m_axi_wlast	Out	1	
m_axi_wuser	Out	[UW-1:0]	
m_axi_wvalid	Out	1	
m_axi_wready	In	1	
m_axi_bid	In	[IW-1:0]	
m_axi_bresp	In	[1:0]	

Port	Dir	Width	Description
m_axi_buser	In	[UW-1:0]	
m_axi_bvalid	In	1	
m_axi_bready	Out	1	
cg_gating	Out	1	
cg_idle	Out	1	

13.4 Functional Description

This wrapper is the base module plus one `amba_clock_gate_ctrl` instance. The datapath is untouched – every channel signal is forwarded verbatim – so functional behaviour is identical to the base module and the wrapper adds no latency of its own.

What it adds is a gated clock. `amba_clock_gate_ctrl` watches two activity terms, `user_valid` (this side's valids plus the base module's busy) and `axi_valid` (the far side's valids), registers their OR into `r_wakeup`, and stops the inner module's clock once both have been quiet for `cfg_cg_idle_count` cycles. The clock restarts on the next activity, one cycle later.

While the clock is stopped the wrapper masks its outward-facing READY signals with !
`cg_gating`, so a peer sees no acceptance until the clock runs again and no handshake is lost across the wake boundary.

`cfg_cg_enable` arms this behaviour; with it low the clock free-runs and the module is indistinguishable from its base.

13.5 Timing Characteristics

Skid parameter	Default depth
SKID_DEPTH_AW	2 entries
SKID_DEPTH_W	4 entries
SKID_DEPTH_B	2 entries

Each channel traverses one `gaxi_skid_buffer`, which registers both `rd_valid` and its storage. The **1-cycle input-to-output latency therefore applies on every transfer, including the unstalled case** – there is no combinational bypass. Depth buys backpressure absorption, not throughput; full rate is sustained once the pipeline is primed. Legal range is 2..8 inclusive, odd values included.

Clocking: `aclk`, reset `aresetn` (active-low asynchronous).

No synthesis numbers are quoted here. Frequency and area depend on the target device and the parameters you elaborate with; run your own build.

13.6 Usage Examples

```
axi4_master_wr_cg #(
    // Base module parameters (see axi4_master_wr.md)
    .AXI_ID_WIDTH(8),
    .AXI_ADDR_WIDTH(32),
    .AXI_DATA_WIDTH(64),

    .CG_IDLE_COUNT_WIDTH(4)
) u_cg (
    .aclk(clk),
    .aresetn(rst_n),
    .cfg_cg_enable(1'b1),
    .cfg_cg_idle_count(4'd8),
    .cg_gating(), .cg_idle(),
    // ... all other ports same as axi4_master_wr (except busy)
);
```

13.7 Design Notes

A peer's READY must never enter the activity term. A consumer that parks its response-ready high while idle is behaving correctly; folding that signal into `user_valid` pins this block permanently awake and defeats gating entirely – silently, because function is unaffected. Ten wrappers in this repository shipped that way and nothing failed until someone measured. `val/amba/test_cg_peer_ready.py` parks the peer READY high, holds every VALID low, and requires `cg_gating`. Canonical rule: `vault/handbook/design/clock-gating-activity-terms.md`.

cfg_cg_enable is not a kill switch. It arms gating and reaches `amba_clock_gate_ctrl` only; the datapath and any monitor enables are forwarded untouched. With it low the clock free-runs and this module behaves exactly like its base.

Gating latency. The clock stops `cfg_cg_idle_count + 2` cycles after the last bus activity – the idle counter, plus one for the `r_wakeup` flop. Size the idle count against your traffic's inter-burst gap: too small and the block wakes constantly, too large and it never gates.

Cost. Five flops: `r_wakeup` plus `r_idle_counter` at `IDLE_CNTR_WIDTH`, scaling as $1 + \text{CG_IDLE_COUNT_WIDTH}$. The ICG itself is a latch or `BUFGCE`, not fabric flops.

13.8 Related Modules

- **Base Module Functionality:** [axi4_master_wr.md](#)
 - **Clock Gating Guide:** [clock_gated_variants.md](#)
 - **Detailed CG Examples:**
 - [axi4_master_rd_mon_cg.md](#) (AXI4 monitor)
 - [axil4_master_rd_mon_cg.md](#) (AXIL4 monitor)
 - [apb4_slave_cg.md](#) (APB interface)
-

13.9 Testing

`val/amba/test_axi4_master_wr_cg.py` exercises this module. It collects 1 parameter cases at the default `REG_LEVEL`.

```
source env_python
pytest val/amba/test_axi4_master_wr_cg.py -v
```

13.10 Navigation

- [← Back to AXI4 Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

14 AXI4 Master Write Monitor

Module: `axi4_master_wr_mon.sv` **Location:** `rtl/amba/axi4/` (protocol monitors live with their protocol; only the monitor CORE pieces are in `rtl/amba/monitor/`) **Status:** Production Ready

14.1 Overview

Some modules move data; this one moves data and tells you how the transfer went. The AXI4 Master Write Monitor pairs a fully functional `axi4_master_wr` with an `axi_monitor_filtered`, so you get a working buffered master write interface plus real-time protocol checking, error detection, performance metrics, and configurable packet filtering on write transactions. It's built for verification environments that need eyes on the bus without getting in the way of it.

14.1.1 Key Features

- **Integrated Monitoring:** Combines axi4_master_wr with axi_monitor_filtered
 - **2-Level Filtering:** packet-type drop masks + per-event masks (err_select is reserved – no routing)
 - **Error Detection:** Protocol violations, SLVERR, DECERR, orphan transactions
 - **Timeout Monitoring:** Configurable timeout detection for stuck transactions
 - **Performance Metrics:** Latency tracking, transaction counting, throughput analysis
 - **Monitor Bus Output:** 128-bit packets paired with 64-bit side-band timestamps
 - **Configuration Validation:** Detects conflicting configuration settings
 - **Clock Gating Support:** Busy signal for power management
-

14.2 Parameters

A lite-monitor version of this wrapper exists as axi4_master_wr_monlite: the same core and taps with axi_monitor_lite instead of axi_monitor_filtered, about a fifth of the monitor gates, error/timeout/completion/threshold packets only. Selected in generated bridges by mon_preset = "lite".

14.2.1 AXI4 Master Parameters

Parameter	Type	Default	Description
SKID_DEPTH_AW	int	2	AW channel skid buffer depth
SKID_DEPTH_W	int	4	W channel skid buffer depth
SKID_DEPTH_B	int	2	B channel skid buffer depth
AXI_ID_WIDTH	int	8	Transaction ID width

Parameter	Type	Default	Description
AXI_ADDR_WIDTH	int	32	Address bus width
AXI_DATA_WIDTH	int	32	Data bus width
AXI_USER_WIDTH	int	1	User signal width

14.2.2 Monitor Parameters

Parameter	Type	Default	Description
UNIT_ID	logic [7:0]	8'h01	8-bit unit identifier in monitor packets
AGENT_ID	logic [15:0]	16'h000B	16-bit agent identifier in monitor packets
MAX_TRANSACTIONS	int	16	Maximum concurrent outstanding transactions
USE_WDATA_ORDER_Q	bit	0	Write-data ordering queue
NUM_BANKS	int	1	Banked transaction tables. >1 on a WRITE monitor requires USE_WDATA_ORDER_Q=1 – axi_monitor_trans_mgr fails elaboration otherwise
ID_FILTER_ENABLE	bit	0	Synthesises the per-instance ID-slice filter
ID_MATCH_BASE	int	0	First ID this instance owns
ID_MATCH_COUNT	int	0	How many; 0 means ALL, so a zeroed register block does not silently filter everything away
ACLK_MHZ	int	100	Clock frequency in MHz – keeps the 1 us tick exact off-100MHz

Parameter	Type	Default	Description
CFI_MIN_FREQ_MHZ / CFI_MAX_FREQ_MHZ	int	= ACLK_MHZ	Freq-invariant counter LUT bounds (cfg_freq_sel indexes within them)
ACTIVE_TRANS_THRES HOLD	int	MAX_TRANSACT IONS/2	Active-transaction count that trips a threshold packet when cfg_threshold_enable= 1. Replaces the former hardwired 8/4; threshold packets now scale with the table sizing
ENABLE_FILTERING	bit	1	Enable packet filtering: two active drop levels (packet type, then event code). Level 2 is reserved and routes nothing
ADD_PIPELINE_STAGE	bit	0	Add register stage for timing closure
USE_MONITOR	bit	1	Synthesis-time monitor enable. 0 = omit monitor and tie outputs to safe non-blocking defaults; 1 = full monitor functionality.
N_ADDR_RANGES	int	0	Number of address- range comparators. 0 = checker omitted (zero area). >0 = N independent [low, high] ranges; feeds the shared allowlist checker: a debug-range hit -> AddrMatch, an error- allowlist miss -> Error/ADDR_RANGE (see

Parameter	Type	Default	Description
ADDR_RANGE_IS_ERROR	logic [N_ADDR_RANGES-1:0]	'0	axi_monitor_addr_check.md). Per-range flavor: bit i = 0 -> DEBUG range (hit -> AddrMatch), 1 -> ERROR range (allowlist miss -> Error/ADDR_RANGE). Default all-0 (feature inert).

14.2.3 Synthesis-Cone Parameters

Each detection cone can be compiled out to save area. The classic cones default on; the debug cone defaults off. Setting a bit to 0 drops the corresponding cone at synthesis via a generate-if inside `axi_monitor_reporter` — the area saving is real.

Parameter	Type	Default	Effect when 0
ENABLE_ERROR_LOGIC	bit	1	Drop the error-detection cone
ENABLE_TIMEOUT_LOGIC	bit	1	Drop the timeout cone and the <code>axi_monitor_timeout</code> instance
ENABLE_COMPL_LOGIC	bit	1	Drop the completion cone
ENABLE_THRESHOLD_LOGIC	bit	1	Drop the threshold cone
ENABLE_PERF_LOGIC	bit	1	Gates only the reporter's legacy perf-packet cone and the two lifetime counters – the window FSM and meters are unconditional
ENABLE_DEBUG_LOGIC	bit	0	Drop the debug (trace) cone — the 6th reporter sub-block (off by default)

Internally the wrapper hardwires two master switches on its `axi_monitor_filtered` instance: `ENABLE_PERF_PACKETS = 1` (the reporter's legacy perf cone is built; `ENABLE_PERF_LOGIC` gates THAT cone only, never the measurement window) and `ENABLE_DEBUG_MODULE = 0` (debug tracking module omitted). These are not top-level parameters of the wrapper.

The transaction CAM is always pipelined.

14.2.4 Derived Parameters (do not override)

These are declared as parameter so the elaborator can compute them, not so callers can set them. Each defaults to an expression over the parameters above; overriding one desynchronises it from its source and the design fails to elaborate or silently mis-sizes a bus. Set the parameters they are derived FROM and leave these alone.

Derived parameter	Default expression
AXI_WSTRB_WIDTH	AXI_DATA_WIDTH / 8
DW	AXI_DATA_WIDTH
IW	AXI_ID_WIDTH
SW	AXI_WSTRB_WIDTH
UW	AXI_USER_WIDTH

14.3 Ports

14.3.1 AXI4 Write Channels

****Frontend Interface (fub_axi_*):**** - AW channel: awid, awaddr, awlen, awsize, awburst, awlock, awcache, awprot, awqos, awregion, awuser, awvalid, awready - W channel: wdata, wstrb, wlast, wuser, wvalid, wready - B channel: bid, bresp, buser, bvalid, bready

****Master Interface (m_axi_*):**** - Same signals as frontend, mirrored direction

14.3.2 Monitor Configuration

Configuration ports are identical to [axi4_master_rd_mon](#): - Basic enables:

cfg_monitor_enable (master runtime gate: 0 = monitor inert, CAM held clear, never stalls the datapath), cfg_error_enable, cfg_timeout_enable, cfg_perf_enable, cfg_compl_enable (completion packets), cfg_threshold_enable (threshold-crossed packets), cfg_debug_enable (debug/trace cone — the 6th reporter sub-block) - Clear: cam_clear (Input, 1) - synchronous clear of the monitor transaction CAM (driven from the harness clear control bit, e.g. CTRL[4]) - Thresholds: cfg_timeout_cycles (unified coarse timeout, a MICROSECOND count at full 16-bit width: 1..65535 us per phase, 0 = 16'hFFFF ~ effectively never; drives all three phase counts), cfg_latency_threshold - Filtering: 8 mask signals (cfg_axi_*_mask: pkt, error, timeout, compl, thresh, perf, addr, debug) plus cfg_axi_err_select - Performance window control: cfg_start_event_sel, cfg_end_event_sel, cfg_start_trigger, cfg_end_trigger, cfg_window_force_close (see [Performance Monitoring](#))

The inner monitor's `cfg_debug_level` (tied to 0), `cfg_debug_mask` (0) are fixed inside the wrapper; `cfg_active_trans_threshold` is driven by the `ACTIVE_TRANS_THRESHOLD` parameter (default `MAX_TRANSACTIONS/2`), not hardwired to 8, and all three are **not** top-level ports on this module.

14.3.3 Monitor Bus Output

Port	Direction	Width	Description
<code>monbus_valid</code>	Output	1	Monitor packet valid
<code>monbus_ready</code>	Input	1	Downstream ready to accept packet
<code>monbus_packet</code>	Output	128	<code>monitor_packet_t</code> (see format below)
<code>monbus_timestamp</code>	Output	64	<code>monbus_timestamp_t</code> paired atomically with <code>monbus_packet</code>
<code>debug_block_ready</code>	Output	1	Observability tap for the <code>block_ready</code> gating net (drives nothing internally; leave unconnected if unused)
<code>i_mon_time</code>	Input	64	Free-running counter from <code>monbus_group_core</code> , sampled at packet emission

14.3.4 Status Outputs

Port	Direction	Width	Description
<code>busy</code>	Output	1	Indicates active transactions (for clock gating)
<code>active_transactions</code>	Output	8	Current number of outstanding transactions
<code>error_count</code>	Output	16	Lifetime count of error+timeout packets actually emitted (reporter perf counter; reads 0)

Port	Direction	Width	Description
transaction_count	Output	32	when ENABLE_PERF_LOGIC=0 or USE_MONITOR=0) Lifetime count of completion packets actually emitted (zero- extended 16-bit reporter perf counter; reads 0 when ENABLE_PERF_LOGIC=0 or USE_MONITOR=0)
cfg_conflict_error	Output	1	Configuration conflict detected

14.3.5 Packet filters

Two independent runtime filters cut monbus traffic without touching the datapath. Both are inert until driven, which is the failure to watch for: the build-time parameter only decides whether the logic is SYNTHESISED, and a design that sets the parameter but leaves the `cfg_*` ports tied low filters nothing and looks like the feature is broken.

Address-range filter — ADDR_FILTER_ENABLE (bit, default 0) builds it.

Port	Width	Description
cfg_addr_filter_enable	1	High: suppress packets for transactions outside the window. Low: inert, whatever the parameter says
cfg_addr_filter_low	ADDR_WIDTH	Window base, inclusive
cfg_addr_filter_high	ADDR_WIDTH	Window limit, inclusive


The verdict is latched per table entry at ALLOCATION, from the command address, and held for that entry's life. Widening the window mid-flight does not un-filter entries already admitted — which is exactly what makes it safe to reprogram live, since an entry's fate is decided when it is admitted and the retire accounting cannot be corrupted afterwards. Contrast the address-range CHECKER (N_ADDR_RANGES), which re-evaluates per command.

Runtime ID filter — overrides the ID_MATCH_BASE/ID_MATCH_COUNT elaboration constants so an instance can be retargeted at a different master without a rebuild.

Port	Width	Description
cfg_id_filter_enable	1	High: use the window below. Low: use the parameters, bit-identical to a build without this feature
cfg_id_match_base	ID_WIDTH	First ID owned
cfg_id_match_count	ID_WIDTH+1	How many; 0 means ALL, matching the parameter rule so a zeroed register block does not silently filter everything away

The window is half-open: [base, base + count).

14.4 Functional Description

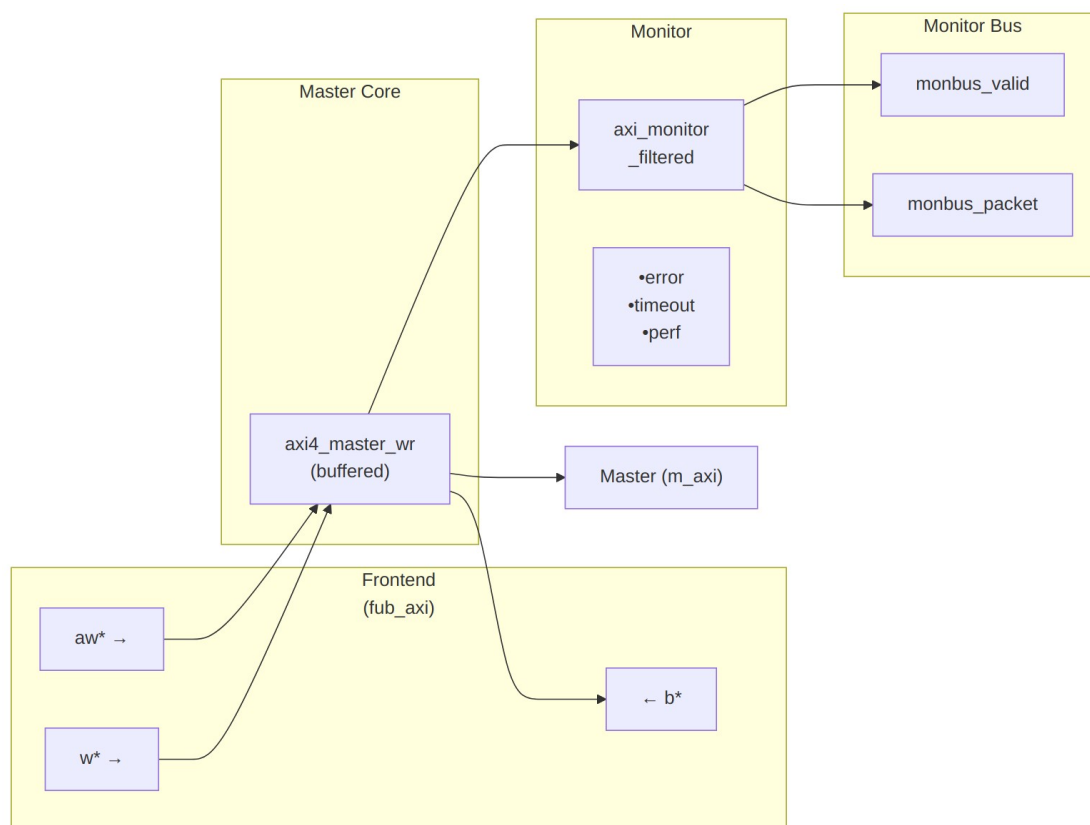

Architecture

The module instantiates two sub-modules: 1. **axi4_master_wr** - Core AXI4 write functionality with buffering 2. **axi_monitor_filtered** - Transaction monitoring with 2-Level Filtering: packet-type drop masks + per-event masks (err_select is reserved – no routing)

14.4.1 Monitor Backpressure (block_ready)

`block_ready` is exported as the `debug_block_ready` output port – the wrapper deliberately makes the gating contract observable (the `_mon_cg` wrapper ties it off rather than forwarding it). It goes low when the monitor's transaction-table occupancy reaches its blocking threshold (a function of `MAX_TRANSACTIONS`; the reporter FIFO depth `INTR_FIFO_DEPTH` has no path to it). The wrapper ANDs it into the upstream-facing `fub_axi_awready` so a saturated monitor throttles new transactions at the handshake instead of dropping events.

- **Where the stall lands:** the upstream `fub_axi_awready` is forced low until the monitor drains.
- **When `USE_MONITOR=0`:** `block_ready` is internally tied high, so the wrapper imposes no stall and runs at full bandwidth.

- **When `cfg_monitor_enable=0`:** the wrapper gate forces the upstream ready open, so a runtime-disabled monitor can never stall the datapath (in-RTL formal property `ap_disabled_never_stalls`).

Recovery is guaranteed by the **saturation-recovery contract**: command-originated table entries are capped at `MAX_TRANSACTIONS - cmd_entry_reserve(MAX_TRANSACTIONS)` (reserve = 4 for tables of 16 or more, 0 below; the function lives in `monitor_common_pkg`), and `block_ready` re-asserts at occupancy < `MAX_TRANSACTIONS - (reserve - 1)` – a threshold strictly ABOVE the command cap – so a saturated table always drains back below the reopen point. Blocking throttles; it never deadlocks. Tables smaller than 16 keep full legacy allocation (small tables cannot spare slots) and trade the recovery guarantee for tracking capacity. The contract is verified by in-RTL formal properties (mutation-checked) and a 100-seed deliberately-undersized-table stream sweep; see [axi_monitor_base](#) for the canonical description.

Sizing note: a monitor on a bus shared by several channels/requesters must size `MAX_TRANSACTIONS` to cover `NUM_CHANNELS × per-channel outstanding` plus margin – the per-channel limit alone makes the monitor throttle the shared master. Tables deeper than 64 also need Verilator's `--unroll-count` raised (default 64) in sim builds.

14.4.2 Address-Range Checker

With `N_ADDR_RANGES > 0` the wrapper instantiates the shared allowlist checker (`axi_monitor_addr_check`). Each range carries a DEBUG/ERROR flavor:

- **DEBUG range** — a hit emits a `PktTypeAddrMatch` (4'h8) packet with event code `AXI_ADDR_RANGE_MATCH` (8'h01), gated by `cfg_debug_enable`.
- **ERROR range** — the enabled ERROR ranges form an allowlist; an address in NONE of them emits a `PktTypeError` (4'h0) packet with event code `AXI_ERR_ADDR_RANGE` (8'h0D), gated by `cfg_error_enable`.

This wrapper exposes **ADDR_RANGE_IS_ERROR** (per-range) as a parameter, so ranges can be assigned to either flavor.

Config inputs (active only when `N_ADDR_RANGES > 0`): - `cfg_addr_check_enable` — master on/off for the checker. - `cfg_addr_range_enable[N-1:0]` — per-range enable bit. - `cfg_addr_range_low/high[N-1:0][AXI_ADDR_WIDTH-1:0]` — inclusive bounds.

Event encoding: `event_data[63:60]` = `range_index` (matching DEBUG range, or 4'hF sentinel on an ERROR miss); `event_data[59:0]` = full address. **Filtering:** `AddrMatch` is dropped by `cfg_axi_addr_mask[1]`, the `ADDR_RANGE` error by `cfg_axi_error_mask[13]`. See the checker page for coalescing + formal properties.

14.4.3 Performance Monitoring

The wrapper hardwires `ENABLE_PERF_PACKETS = 1` on its inner `axi_monitor_filtered`. The **measurement-window state machine** and its counters are unconditional `always_ff` blocks in

axi_monitor_base – outside every generate – so they are present and running in EVERY build, including ENABLE_PERF_LOGIC = 0. That parameter reaches one consumer: the g_perf generate in axi_monitor_reporter holding the legacy perf-packet cone and the two 16-bit lifetime counters behind perf_completed_count / perf_error_count. Setting it to 0 saves that cone and nothing else. USE_MONITOR = 0 is what ties the perfmon outputs off. The wrapper instantiates plus a bank of W-data-channel utilization counters. All counters accumulate **only while a window is open** (window_active = 1) and hold their values between windows, so the host can read a completed window's totals.

14.4.3.1 The Measurement Window

A window is opened by a **start event** and closed by an **end event**. The event sources are selected by cfg_start_event_sel / cfg_end_event_sel (3-bit; e.g. 3'b010 selects the cfg_perf_enable edge) and can also be fired directly by the cfg_start_trigger / cfg_end_trigger pulses (from an engine or CSR). cfg_window_force_close is a software override that closes the window immediately. While the window is open:

- window_active is high.
- window_cycles[31:0] free-runs, counting every clock elapsed inside the window.

Sample the counters on the cycle window_active falls to 0 (drive cfg_end_trigger, or wait for the configured end event).

14.4.3.2 Utilization Counters (W Data Channel)

Every cycle inside the window is classified by the W channel's wvalid / wready into exactly one of four buckets:

Output	Width	Condition	Meaning
perf_prod_cycles	32	wvalid && wready	productive beat transferred
perf_bp_cycles	32	wvalid && !wready	back-pressure (data offered, sink not ready)
perf_starv_cycles	32	!wvalid && wready	starvation (sink ready, no data)
perf_idle_cycles	32	!wvalid && !wready	idle

The four buckets sum to window_cycles - 1 (the start cycle seeds window_cycles to 1 while the buckets reset to 0); the one-count skew is negligible for long windows.

14.4.3.3 Throughput Counters

Output	Width	Meaning
perf_beat_count	32	W data beats transferred (= perf_prod_cycles, 1 beat/cycle)
perf_byte_count	64	bytes transferred = beats × (1 << AWSIZE), using the AWSIZE captured at the most recent AW address phase (upper bound: counts full-width beats and does not subtract bytes masked off byWSTRB on unaligned or partial beats)
perf_burst_count	32	AW address-phase handshakes

The integrator computes average burst length as $\text{perf_beat_count} / \text{perf_burst_count}$.

14.4.3.4 Performance Monitoring Ports

Port	Direction	Width	Description
cfg_perf_enable	Input	1	Enable performance-metric packet generation
cfg_start_event_sel	Input	3	Window start event source select
cfg_end_event_sel	Input	3	Window end event source select
cfg_start_trigger	Input	1	Pulse: open the measurement window
cfg_end_trigger	Input	1	Pulse: close the measurement window
cfg_window_force_close	Input	1	Software override: force the window closed
window_active	Output	1	High while a measurement window is

Port	Direction	Width	Description
			open
window_cycles	Output	32	Cycles elapsed in the current window
perf_prod_cycles	Output	32	wvalid && wready cycles
perf_bp_cycles	Output	32	wvalid && !wready cycles (back-pressure)
perf_starv_cycles	Output	32	!wvalid && wready cycles (starvation)
perf_idle_cycles	Output	32	!wvalid && !wready cycles
perf_beat_count	Output	32	W data beats transferred
perf_byte_count	Output	64	bytes transferred
perf_burst_count	Output	32	AW address-phase handshakes

When `USE_MONITOR = 0`, every perfmon output is tied to 0 and the window never opens.

14.4.4 Monitor Packet Format

The 128-bit `monbus_packet` (paired with the 64-bit `monbus_timestamp` side-band signal) follows the standardized AMBA monitor bus format. Identical format as [axi4_master_rd_mon](#):

Bits [127:124] - Packet Type:

- 0x0 = ERROR Error events (SLVERR, DECERR, protocol violations)
- 0x1 = COMPL Completion events (transaction finished)
- 0x2 = THRESH Threshold events
- 0x3 = TIMEOUT Timeout events
- 0x4 = PERF Performance metrics
- 0x8 = ADDR_MATCH Address match events
- 0x9 = APB APB-specific events
- 0xF = DEBUG Debug events

Bits [123:109] - Reserved (15 bits, forward-compat slack)

Bits [108:105] - Protocol (4 bits): 0x0=AXI, 0x1=AXIS, 0x2=APB, 0x3=ARB, 0x4=CORE

Bits [104:97] - Event Code (8 bits, protocol-specific)

Bits [96:88] - Channel ID (9 bits – AXI ID or channel index)

Bits [87:72] - Agent ID (16 bits, from `AGENT_ID` parameter)

Bits [71:64] - Unit ID (8 bits, from `UNIT_ID` parameter)

Bits [63:0] - Event Data (64 bits – full address, latency, etc.)

14.5 Timing Characteristics

Skid parameter	Default depth
SKID_DEPTH_AW	2 entries
SKID_DEPTH_W	4 entries
SKID_DEPTH_B	2 entries

Each channel traverses one `gaxi_skid_buffer`, which registers both `rd_valid` and its storage. The **1-cycle input-to-output latency therefore applies on every transfer, including the unstalled case** – there is no combinational bypass. Depth buys backpressure absorption, not throughput; full rate is sustained once the pipeline is primed. Legal range is 2..8 inclusive, odd values included.

Clocking: `aclk`, reset `aresetn` (active-low asynchronous).


No synthesis numbers are quoted here. Frequency and area depend on the target device and the parameters you elaborate with; run your own build.

14.6 Waveforms

The following waveforms show AXI4 master write monitor behavior:

14.6.1 Scenario 1: Single-Beat Write Transaction

Complete AXI4 write transaction showing AW, W, and B channels:

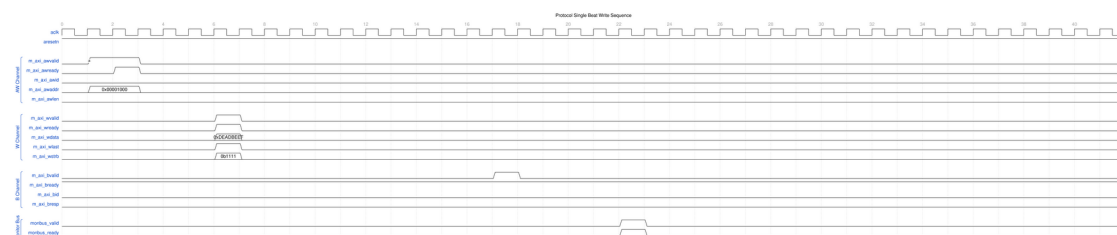

Single Beat Write

WaveJSON: [single_beat_write_001.json](#)

Key Observations: - AW channel handshake (`AWVALID`/`AWREADY`) - W channel data (`WVALID`/`WREADY`/`WLAST`/`WSTRB`) - B channel response (`BVALID`/`BREADY`/`BRESP`) - Monitor bus packet generation - Three-channel write protocol coordination


```
clear the CAM -- do NOT leave unconnected
.cfg_latency_threshold (32'd500)
```

14.7.1.2 Strategy 2: Performance Analysis

Goal: Collect write performance metrics

```
// Enable configuration
.cfg_monitor_enable    (1'b1),
.cfg_error_enable      (1'b1),      // Still catch errors
.cfg_timeout_enable    (1'b0),      // Disable timeouts
.cfg_perf_enable       (1'b1),      // Enable performance

// Filtering - pass error and performance only
.cfg_axi_pkt_mask      (16'hFFEE), // Drop all but ERROR, PERF (set
bit = drop)
.cfg_axi_error_mask    (16'h0000), // Pass all errors
.cfg_axi_perf_mask     (16'h0000), // Pass all performance
.cfg_axi_completion_mask (16'hFFFF), // Drop completions
.cfg_axi_timeout_mask  (16'hFFFF)  // Drop timeouts
```

14.7.1.3 Strategy 3: Debug Mode

Goal: Maximum visibility for write transactions

```
// Enable everything
.cfg_monitor_enable    (1'b1),
.cfg_error_enable      (1'b1),
.cfg_timeout_enable    (1'b1),
.cfg_perf_enable       (1'b1),

// Filtering - pass all packets
.cfg_axi_pkt_mask      (16'h0000), // Pass all
// All individual masks set to 16'h0000
```

WARNING: Avoid enabling all packet types in high-throughput write scenarios — the monitor bus sustains at most one packet per two cycles and will congest. (Congestion or runtime-disabled classes can drop packets but, since 95c9490a, can no longer leak table slots or wedge the bus.)

14.7.2 Basic Integration

```
axi4_master_wr_mon #(
    .SKID_DEPTH_AW    (2),
    .SKID_DEPTH_W      (4),
    .SKID_DEPTH_B      (2),
    .AXI_ID_WIDTH      (4),
    .AXI_ADDR_WIDTH    (32),
    .AXI_DATA_WIDTH    (64),
    .AXI_USER_WIDTH    (1),
    .UNIT_ID           (1),
```

```

        .AGENT_ID            (11),
        .MAX_TRANSACTIONS    (16),
        .ENABLE_FILTERING    (1)
    ) u_master_wr_mon (
        .aclk                (axi_aclk),
        .aresetn              (axi_aresetn),

        // Frontend interface (from write initiator)
        .fub_axi_awid         (write_awid),
        .fub_axi_awaddr        (write_awaddr),
        // ... rest of AW/W/B signals

        // Master interface (to interconnect)
        .m_axi_awid            (m_axi_awid),
        .m_axi_awaddr          (m_axi_awaddr),
        // ... rest of AW/W/B signals

        // Monitor configuration (Strategy 1 - Functional)
        .cfg_monitor_enable    (1'b1),
        .cfg_error_enable      (1'b1),
        .cfg_timeout_enable    (1'b1),
        .cfg_perf_enable        (1'b0),
        .cfg_timeout_cycles    (16'd10),    // 10 microseconds per phase
        (full 16-bit range)
        .cfg_latency_threshold (32'd500),

        .cfg_axi_pkt_mask      (16'hFFF6), // Drop all but ERROR,
TIMEOUT
        .cfg_axi_error_mask    (16'h0000),
        .cfg_axi_timeout_mask  (16'h0000),
        .cfg_axi_compl_mask    (16'hFFFF),
        // ... rest of mask signals

        // Monitor bus output
        .monbus_valid          (mon_valid),
        .monbus_ready          (mon_ready),
        .monbus_packet         (mon_packet),

        // Status
        .busy                  (wr_busy),
        .active_transactions   (wr_active),
        .error_count           (wr_errors),
        .transaction_count     (wr_count),
        .cfg_conflict_error     (cfg_conflict)
    );

```

14.8 Design Notes

14.8.1 Write-Specific Monitoring

Write Response Tracking: - Monitors AW channel for write address capture - Tracks W channel beats (WLAST detection) - Correlates B channel responses with AWID - Completes write data on WLAST or the expected beat count – there is NO mismatch event; a short-terminated or over-long burst is not flagged

Common Write Errors Detected: - **SLVERR:** Slave error response (decode failure, access violation) - **DECERR:** Decode error (address not mapped) - **Orphan responses:** a B response (BID) arriving with NO matching tracked command – the detection direction is response-side; an AW that never gets its B surfaces as a TIMEOUT, not an orphan - **Timeout:** Write address or response stuck beyond threshold - **Protocol violations:** response-before-data ordering only (WSTRB never reaches the monitor – no strobe check exists; WLAST is used for completion, not validated)

14.8.2 Performance Considerations

Write Transaction Bandwidth: - AW channel: 1 transaction/cycle (when buffer not full) - W channel: 1 beat/cycle sustained (burst pipelining) - B channel: 1 response/cycle (sparse compared to W beats)

Monitor Packet Budget (Write): - Typical: 2-3 packets per write transaction - Burst writes: More efficient packet/beat ratio - Single writes: Higher packet overhead

14.8.3 Buffer Depth Guidelines

Same as [axi4_master_wr](#): - **SKID_DEPTH_AW:** 2 (default) - sufficient for most systems - **SKID_DEPTH_W:** 4 (default) - accommodates moderate bursts - **SKID_DEPTH_B:** 2 (default) - responses are single-beat

Increase depths for high-latency or high-throughput scenarios.

14.9 Related Modules

14.9.1 Companion Monitors

- [axi4_master_rd_mon](#) - AXI4 master read with monitoring
- [axi4_slave_rd_mon](#) - AXI4 slave read with monitoring
- [axi4_slave_wr_mon](#) - AXI4 slave write with monitoring

14.9.2 Base Modules

- [axi4_master_wr](#) - Functional AXI4 master write (without monitoring)
- [axi_monitor_filtered](#) - Monitoring engine with filtering (monitor/)

14.9.3 Used Components

- [gaxi_skid_buffer](#) - Elastic buffering
 - [axi_monitor_base](#) - Core monitoring logic (monitor/)
 - [axi_monitor_trans_mgr](#) - Transaction tracking (monitor/)
-

14.10 Testing

val/amba/test_axi4_master_wr_mon.py exercises this module. It collects 3 parameter cases at the default REG_LEVEL.

```
source env_python
pytest val/amba/test_axi4_master_wr_mon.py -v
```

14.11 References

14.11.1 Specifications

- ARM IHI 0022E: AMBA AXI Protocol Specification (AXI4)
- Monitor Bus Packet Format: [monitor_package_spec.md](#)

14.11.2 Source Code

- RTL: rtl/amba/axi4/axi4_master_wr_mon.sv
- Tests: val/amba/test_axi4_master_wr_mon.py
- Framework: bin/TBClasses/components/axi4/

14.11.3 Documentation

- Configuration Guide: [AXI Monitor Base](#)
 - Architecture: [rtl-amba Overview](#)
 - AXI4 Index: [README.md](#)
-

Last Updated: 2026-07-18

14.12 Navigation

- [← Back to AXI4 Index](#)

- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

15 AXI4 Master Write Monitor (Clock-Gated)

Module: `axi4_master_wr_mon_cg.sv` **Base Module:** [axi4_master_wr_mon](#) **Location:** `rtl/amba/axi4/` (protocol monitors live with their protocol; only the monitor CORE pieces are in `rtl/amba/monitor/`) **Status:** Production Ready

15.1 Overview

This is the **clock-gated variant** of [axi4_master_wr_mon](#) — the same monitored master write, with activity-based clock gating wrapped around it.

For complete clock-gating documentation, usage examples, and configuration guidelines, see the [Clock-Gated Variants Guide](#).

What the wrapper buys you:

- **Same Functionality:** 100% equivalent to base module
 - **Power Savings:** traffic-dependent; unmeasured in this repo – treat any percentage as a placeholder until characterized
 - **Configurable:** Idle threshold, gating domains, enable/disable
 - **Zero Overhead When Disabled:** `cfg_cg_enable=0` bypasses the gate at runtime
-

15.2 Parameters

MOST [axi4_master_wr_mon](#) parameters pass through. As of 2026-09-01 only `ACTIVE_TRANS_THRESHOLD` is NOT forwarded, and that one is harmless: its inner default is `MAX_TRANSACTIONS/2`, computed from the `MAX_TRANSACTIONS` this wrapper DOES forward.

An earlier version of this page listed nine more as unforwarded, which was accurate when written. `ACLK_MHZ`, `CFI_MIN_FREQ_MHZ`, `CFI_MAX_FREQ_MHZ`, `USE_WDATA_ORDER_Q`, `NUM_BANKS` and `ADDR_RANGE_IS_ERROR` were threaded through every `_cg` wrapper on 2026-09-01, and `ID_FILTER_ENABLE` / `ID_MATCH_BASE` / `ID_MATCH_COUNT` the day before. Until then a clock-gated build could not state its clock frequency, so the 1 us timer tick was pinned to the 100 MHz default and every microsecond-denominated timeout was miscalibrated on any other clock – silently.

Parameter	Default	Description
CG_IDLE_COUNT_WIDTH	4	Width of the idle countdown, sizing <code>cfg_cg_idle_count</code>
USE_MONITOR	1	Synthesis-time monitor enable (forwarded to inner monitor).
N_ADDR_RANGES	0	Number of address-range comparators (forwarded to base module).
ADDR_FILTER_ENABLE	0	Synthesises the address-range report filter. The parameter only decides whether the logic EXISTS – a build that sets it and leaves <code>cfg_addr_filter_enable</code> low filters nothing and looks broken.
ID_FILTER_ENABLE	0	Synthesises the ID report filter (see <code>cfg_id_*</code> for the runtime override).
ID_MATCH_BASE	0	First ID this instance owns.
ID_MATCH_COUNT	0	How many IDs; 0 means ALL, so a zeroed register block does not silently filter everything away.
ADD_PIPELINE_STAGE	0	Insert a register stage for timing closure. Costs a cycle of latency. (Add register stage for timing closure)
ENABLE_COMPL_LOGIC	1'b1	Synthesise the completion-packet cone. 0 removes the logic entirely.
ENABLE_DEBUG_LOGIC	1'b0	Synthesise the debug-packet cone. 0 removes the logic entirely.

Parameter	Default	Description
ENABLE_ERROR_LOGIC	1'b1	Synthesise the error detection cone. 0 removes the logic entirely.
ENABLE_FILTERING	1	Enable packet filtering: two active drop levels (packet type, then event code). Level 2 is reserved and routes nothing.
ENABLE_PERF_LOGIC	1'b1	Synthesise the reporter's performance cone (g_perf). Does NOT gate the perfmon window state machine or its counters.
ENABLE_THRESHOLD_LOGIC	1'b1	Synthesise the threshold-packet cone. 0 removes the logic entirely.
ENABLE_TIMEOUT_LOGIC	1'b1	Synthesise the timeout detection cone. 0 removes the logic entirely.
SKID_DEPTH_AW	2	Skid-buffer depth on the AW channel. Legal range 2..8 inclusive; odd depths are legal.
SKID_DEPTH_B	2	Skid-buffer depth on the B channel. Legal range 2..8 inclusive; odd depths are legal.
SKID_DEPTH_W	4	Skid-buffer depth on the W channel. Legal range 2..8 inclusive; odd depths are legal.
AGENT_ID	16'h000B	Agent identifier emitted in the agent_id field of every monitor packet. Pairs with UNIT_ID to identify the packet

Parameter	Default	Description
UNIT_ID	8'h01	source. (16-bit Agent ID for monitor packets) Unit identifier emitted in the unit_id field of every monitor packet. Give each monitored interface a distinct value or the packets cannot be told apart at the collector. (8-bit Unit ID for monitor packets)

Gating is controlled by RUNTIME inputs `cfg_cg_enable` / `cfg_cg_idle_count` with status outputs `cg_gating` / `cg_idle`; ONE `amba_clock_gate_ctrl` gates the entire inner module (no per-domain gates). (The `ENABLE_CLOCK_GATING` / `CG_IDLE_CYCLES` / `CG_GATE_*` interface this page once documented never existed.)

Base-module ports are forwarded EXCEPT `debug_block_ready`, which this wrapper ties off (use the base module for the backpressure tap). `cam_clear` is forwarded (Input, 1) - synchronous clear of the monitor transaction CAM (driven from the harness clear control bit, e.g. `CTRL[4]`) - and the full performance-monitoring interface (see [Performance Monitoring](#) below). The six `ENABLE_*_LOGIC` synthesis-cone parameters and the `cfg_compl_enable` / `cfg_threshold_enable` / `cfg_debug_enable` control enables are also passed straight through.

15.2.1 Filter configuration (forwarded)

These reach the inner monitor through this wrapper; before 2026-09-01 they did not.

Port	Direction	Width	Description
<code>cfg_addr_filter_enable</code>	Input	1	High: suppress packets for transactions outside the window. Low: inert, whatever <code>ADDR_FILTER_ENABLE</code> says
<code>cfg_addr_filter_low</code>	Input	<code>ADDR_WIDTH</code>	Window base, inclusive
<code>cfg_addr_filter_high</code>	Input	<code>ADDR_WIDTH</code>	Window limit, inclusive
<code>cfg_id_filter_enable</code>	Input	1	High: use the runtime window below instead of

Port	Direction	Width	Description
le			the ID_MATCH_* parameters
cfg_id_match_base	Input	ID_WIDTH	First ID to accept
cfg_id_match_count	Input	ID_WIDTH+1	How many; 0 means ALL

Neither filter un-filters entries already admitted to the transaction table, which is what makes changing them at runtime safe.

15.2.2 Derived Parameters (do not override)

These are declared as parameter so the elaborator can compute them, not so callers can set them. Each defaults to an expression over the parameters above; overriding one desynchronises it from its source and the design fails to elaborate or silently mis-sizes a bus. Set the parameters they are derived FROM and leave these alone.

Derived parameter	Default expression
AXI_WSTRB_WIDTH	AXI_DATA_WIDTH / 8
AW	AXI_ADDR_WIDTH
DW	AXI_DATA_WIDTH
IW	AXI_ID_WIDTH
SW	AXI_WSTRB_WIDTH
UW	AXI_USER_WIDTH

15.3 Ports

Port	Dir	Width	Description
aclk	In	1	
aresetn	In	1	
cam_clear	In	1	sync clear of the monitor trans CAM
fub_axi_awid	In	[IW-1:0]	
fub_axi_awaddr	In	[AW-1:0]	
fub_axi_awlen	In	[7:0]	
fub_axi_awsz	In	[2:0]	

Port	Dir	Width	Description
fub_axi_awburst	In	[1:0]	
fub_axi_awlock	In	1	
fub_axi_awcache	In	[3:0]	
fub_axi_awprot	In	[2:0]	
fub_axi_awqos	In	[3:0]	
fub_axi_awregion	In	[3:0]	
fub_axi_awuser	In	[UW-1:0]	
fub_axi_awvalid	In	1	
fub_axi_awready	Out	1	
fub_axi_wdata	In	[DW-1:0]	
fub_axi_wstrb	In	[SW-1:0]	
fub_axi_wlast	In	1	
fub_axi_wuser	In	[UW-1:0]	
fub_axi_wvalid	In	1	
fub_axi_wready	Out	1	
fub_axi_bid	Out	[IW-1:0]	
fub_axi_bresp	Out	[1:0]	
fub_axi_buser	Out	[UW-1:0]	
fub_axi_bvalid	Out	1	
fub_axi_bready	In	1	
m_axi_awid	Out	[IW-1:0]	
m_axi_awaddr	Out	[AW-1:0]	
m_axi_awlen	Out	[7:0]	
m_axi_awsiz	Out	[2:0]	
m_axi_awburst	Out	[1:0]	
m_axi_awlock	Out	1	
m_axi_awcache	Out	[3:0]	
m_axi_awprot	Out	[2:0]	
m_axi_awqos	Out	[3:0]	
m_axi_awregion	Out	[3:0]	

Port	Dir	Width	Description
m_axi_awuser	Out	[UW-1:0]	
m_axi_awvalid	Out	1	
m_axi_awready	In	1	
m_axi_wdata	Out	[DW-1:0]	
m_axi_wstrb	Out	[SW-1:0]	
m_axi_wlast	Out	1	
m_axi_wuser	Out	[UW-1:0]	
m_axi_wvalid	Out	1	
m_axi_wready	In	1	
m_axi_bid	In	[IW-1:0]	
m_axi_bresp	In	[1:0]	
m_axi_buser	In	[UW-1:0]	
m_axi_bvalid	In	1	
m_axi_bready	Out	1	
cfg_monitor_enable	In	1	Enable monitoring
cfg_error_enable	In	1	Enable error detection
cfg_timeout_enable	In	1	Enable timeout detection
cfg_perf_enable	In	1	Enable performance monitoring
cfg_compl_enable	In	1	Enable completion packets
cfg_threshold_enable	In	1	Enable threshold packets
cfg_debug_enable	In	1	Enable debug packets
cfg_timeout_cycles	In	[15:0]	Timeout threshold in

Port	Dir	Width	Description
			MICROSECONDS (1 us tick), despite the name
cfg_freq_sel	In	[3:0]	counter_freq_inva riant LUT index
cfg_latency_thre shold	In	[31:0]	Latency threshold for alerts
cfg_axi_pkt_mask	In	[15:0]	Drop mask for packet types
cfg_axi_err_sele ct	In	[15:0]	Error select for packet types (for future routing)
cfg_axi_error_ma sk	In	[15:0]	Individual error event mask
cfg_axi_timeout_ mask	In	[15:0]	Individual timeout event mask
cfg_axi_compl_ma sk	In	[15:0]	Individual completion event mask
cfg_axi_thresh_m ask	In	[15:0]	Individual threshold event mask
cfg_axi_perf_mas k	In	[15:0]	Individual performance event mask
cfg_axi_addr_mas k	In	[15:0]	Individual address match event mask
cfg_axi_debug_ma sk	In	[15:0]	Individual debug event mask
cfg_cg_enable	In	1	Enable clock gating
cfg_cg_idle_coun	In	[CG_IDLE_COUNT_W	Idle cycles before

Port	Dir	Width	Description
t		IDTH-1:0]	gating
cfg_addr_check_enable	In	1	
cfg_addr_range_enable	In	[(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1) - 1:0]	
cfg_addr_range_low	In	[(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1) - 1:0]	
cfg_addr_range_high	In	[(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1) - 1:0]	
cfg_addr_filter_enable	In	1	
cfg_addr_filter_low	In	[AW-1:0]	
cfg_addr_filter_high	In	[AW-1:0]	
cfg_id_filter_enable	In	1	
cfg_id_match_base	In	[IW-1:0]	
cfg_id_match_count	In	[IW:0]	
i_mon_time	In	1	
monbus_valid	Out	1	Monitor bus valid
monbus_ready	In	1	Monitor bus ready
monbus_packet	Out	1	Monitor packet (128-bit)
monbus_timestamp	Out	1	Side-band sampled time
busy	Out	1	
active_transactions	Out	[7:0]	Number of active transactions
error_count	Out	[15:0]	Total error count

Port	Dir	Width	Description
transaction_count	Out	[31:0]	Total transaction count
cg_gating	Out	1	Gated clock is stopped
cg_idle	Out	1	No activity observed
cfg_conflict_error	Out	1	Configuration conflict detected
cfg_start_event_sel	In	[2:0]	
cfg_end_event_sel	In	[2:0]	
cfg_start_trigger	In	1	
cfg_end_trigger	In	1	
cfg_window_force_close	In	1	
window_active	Out	1	
window_cycles	Out	[31:0]	
perf_prod_cycles	Out	[31:0]	
perf_bp_cycles	Out	[31:0]	
perf_starv_cycles	Out	[31:0]	
perf_idle_cycles	Out	[31:0]	
perf_beat_count	Out	[31:0]	
perf_byte_count	Out	[63:0]	
perf_burst_count	Out	[31:0]	

15.4 Functional Description

15.4.1 Performance Monitoring

The clock-gated wrapper exposes the full perfmon interface of the base module and **forwards every port unchanged** to the inner `axi4_master_wr_mon`. The measurement-window state machine, the four W-channel utilization buckets (productive / back-pressure / starvation / idle),

and the beat/byte/burst throughput counters behave exactly as documented in the base module — see [Performance Monitoring in axi4_master_wr_mon](#) for the full narrative and per-bit semantics.

Forwarded perfmon ports (identical width and direction to the base module):

- **Inputs:** `cfg_perf_enable`, `cfg_start_event_sel` (3), `cfg_end_event_sel` (3), `cfg_start_trigger`, `cfg_end_trigger`, `cfg_window_force_close`
- **Outputs:** `window_active`, `window_cycles` (32), `perf_prod_cycles` (32), `perf_bp_cycles` (32), `perf_starv_cycles` (32), `perf_idle_cycles` (32), `perf_beat_count` (32), `perf_byte_count` (64), `perf_burst_count` (32)

WARNING – gating vs window accounting: an open measurement window is NOT a wake term, and the entire inner monitor (window state machine and counters included) runs on the gated clock. If the bus idles past `cfg_cg_idle_count` with a window open, the counters FREEZE while wall-clock time passes, and trigger pulses (`cfg_start_trigger`, `cfg_end_trigger`, `cfg_window_force_close`, `cam_clear`) arriving while gated are DROPPED. For exact wall-clock windows or idle-bus triggering, hold `cfg_cg_enable` low around the measurement, or use the base module.

15.5 Timing Characteristics

Skid parameter	Default depth
<code>SKID_DEPTH_AW</code>	2 entries
<code>SKID_DEPTH_W</code>	4 entries
<code>SKID_DEPTH_B</code>	2 entries

Each channel traverses one `gaxi_skid_buffer`, which registers both `rd_valid` and its storage. The **1-cycle input-to-output latency therefore applies on every transfer, including the unstalled case** – there is no combinational bypass. Depth buys backpressure absorption, not throughput; full rate is sustained once the pipeline is primed. Legal range is 2..8 inclusive, odd values included.

Clocking: `aclk`, reset `aresetn` (active-low asynchronous).

No synthesis numbers are quoted here. Frequency and area depend on the target device and the parameters you elaborate with; run your own build.

15.6 Usage Examples

```
axi4_master_wr_mon_cg #(
    // Base module parameters (see axi4_master_wr_mon.md)
    .AXI_ID_WIDTH(8),
    .AXI_ADDR_WIDTH(32),
    .AXI_DATA_WIDTH(64),

    .CG_IDLE_COUNT_WIDTH(4)
) u_cg (
    .aclk(clk),
    .aresetn(rst_n),
    .cfg_cg_enable(1'b1),
    .cfg_cg_idle_count(4'd8),
    .cg_gating(), .cg_idle(),
    // ... all other ports same as axi4_master_wr_mon (except
    debug_block_ready)
);
```

15.7 Design Notes

A peer's READY must never enter the activity term. A consumer that parks its response-ready high while idle is behaving correctly; folding that signal into user_valid pins this block permanently awake and defeats gating entirely – silently, because function is unaffected. Ten wrappers in this repository shipped that way and nothing failed until someone measured. `val/amba/test_cg_peer_ready.py` parks the peer READY high, holds every VALID low, and requires `cg_gating`. Canonical rule: `vault/handbook/design/clock-gating-activity-terms.md`.

cfg_cg_enable is not a kill switch. It arms gating and reaches `amba_clock_gate_ctrl` only; the datapath and any monitor enables are forwarded untouched. With it low the clock free-runs and this module behaves exactly like its base.

Gating latency. The clock stops `cfg_cg_idle_count + 2` cycles after the last bus activity – the idle counter, plus one for the `r_wakeup` flop. Size the idle count against your traffic's inter-burst gap: too small and the block wakes constantly, too large and it never gates.

Cost. Five flops: `r_wakeup` plus `r_idle_counter` at `IDLE_CNTR_WIDTH`, scaling as $1 + \text{CG_IDLE_COUNT_WIDTH}$. The ICG itself is a latch or BUFGCE, not fabric flops.

15.8 Related Modules

- **Base Module Functionality:** [axi4_master_wr_mon.md](#)

- **Clock Gating Guide:** [clock_gated_variants.md](#)
 - **Detailed CG Examples:**
 - [axi4_master_rd_mon_cg.md](#) (AXI4 monitor)
 - [axil4_master_rd_mon_cg.md](#) (AXIL4 monitor)
 - [apb4_slave_cg.md](#) (APB interface)
-

15.9 Testing

`val/amba/test_axi4_master_wr_mon_cg.py` exercises this module. It collects 3 parameter cases at the default `REG_LEVEL`.

```
source env_python
pytest val/amba/test_axi4_master_wr_mon_cg.py -v
```

15.10 Navigation

- [← Back to AXI4 Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

16 AXI4 Master Write with Lite Monitor

Module: `axi4_master_wr_monlite.sv` **Location:** `rtl/amba/axi4/` **Status:** Production Ready
(amba/monitor-lite TASK-001, 2026-09-26)

16.1 Overview

`axi4_master_wr_monlite` is `axi4_master_wr` with `axi_monitor_lite` watching its master-side write channels. It is the lite-monitor sibling of `axi4_master_wr_mon`: same core, same taps, same 128-bit `monitor_packet_t` on the same monbus with the same `UNIT_ID/AGENT_ID`, so the monbus arbiter, the AXI-Lite group, the tally and the host tooling cannot tell the two apart. The difference is what it costs and what it can be asked for: about a fifth of the monitor LUTs (677 against 3,249 per read monitor in the same bridge fixture, see [axi_monitor_lite](#)), and only the four packet classes the lite emits: error, timeout, completion and active-count threshold.

16.1.1 What is not here

Compared with `axi4_master_wr_mon`: no performance window or counters, no debug packets, no address-range checker, no ID or address filters, no per-event masks, no latency threshold, and no `block_ready`. The lite never stalls the port: an event it cannot deliver is dropped and counted (`dropped_count`, reported as an `EVENT_DROPPED` packet), and a command that finds no free table entry is counted (`refused_count`) and left untracked, so its beats report as orphans.

16.1.2 Key Features

- Every `axi4_master_wr` parameter and port, declared verbatim and passed through by name
 - `axi_monitor_lite` on the m_-side taps; `USE_MONITOR=0` omits it and ties its outputs
 - Nine config inputs: the enables, the microsecond timeout, the tick LUT index and the packet-type mask
 - Five status outputs, two of them (`dropped_count`, `refused_count`) unique to the lite
-

16.2 Parameters

16.2.1 Monitor Parameters

Parameter	Type	Default	Description
<code>USE_MONITOR</code>	bit	<code>1'b1</code>	0 = omit the monitor, tie its outputs
<code>UNIT_ID</code>	logic [7:0]	<code>8'h01</code>	Unit id in every packet
<code>AGENT_ID</code>	logic [15:0]	<code>16'h000B</code>	Agent id in every packet
<code>MAX_TRANSACTIONS</code>	int	8	table entries; a command finding none is counted, not tracked
<code>ACTIVE_TRANS_THR</code> <code>ESHOLD</code>	int	$\text{MAX_TRANSACTIONS} / 2$	Table occupancy that fires a threshold packet (rising edge)

Parameter	Type	Default	Description
OUT_DEPTH	int	4	monbus output queue, a power of two
ACLK_MHZ	int	100	Clock in MHz; keeps the 1 us tick exact
CFI_MIN_FREQ_MHZ	int	ACLK_MHZ	Frequency-invariant tick LUT lower bound (cfg_freq_sel indexes it)
CFI_MAX_FREQ_MHZ	int	ACLK_MHZ	Frequency-invariant tick LUT upper bound

16.2.2 Core Parameters (passed through to axi4_master_wr)

Parameter	Type	Default	Description
N_ADDR_RANGES	int	0	address-range checker windows; 0 = not built
ADDR_RANGE_IS_ERROR	logic [(N_ADDR_RANGE S > 0 ? N_ADDR_RANGES : 1)-1:0]	'0	per range: 1 = miss is an error, 0 = hit is a match
SKID_DEPTH_AW	int	2	as on axi4_master_wr
SKID_DEPTH_W	int	4	as on axi4_master_wr
SKID_DEPTH_B	int	2	as on axi4_master_wr
AXI_ID_WIDTH	int	8	as on axi4_master_wr
AXI_ADDR_WIDTH	int	32	as on axi4_master_wr

Parameter	Type	Default	Description
AXI_DATA_WIDTH	int	32	as on axi4_master_wr
AXI_USER_WIDTH	int	1	as on axi4_master_wr
AXI_WSTRB_WIDTH	int	AXI_DATA_WIDTH / 8	as on axi4_master_wr
AW	int	AXI_ADDR_WIDTH	as on axi4_master_wr
DW	int	AXI_DATA_WIDTH	as on axi4_master_wr
IW	int	AXI_ID_WIDTH	as on axi4_master_wr
SW	int	AXI_WSTRB_WIDTH	as on axi4_master_wr
UW	int	AXI_USER_WIDTH	as on axi4_master_wr
AWSize	int	$IW+AW+8+3+2+1+4+3+4+4+UW$	as on axi4_master_wr
WSize	int	$DW+SW+1+UW$	as on axi4_master_wr
BSize	int	$IW+2+UW$	as on axi4_master_wr

16.3 Ports

16.3.1 Monitor Control, Bus and Status

Port	Direction	Type	Description
cam_clear	input	logic	sync clear of the monitor's table (named as on the _mon wrapper: pin-compatible)
cfg_monitor_enable	input	logic	0 = monitor inert, table held clear
cfg_error_enable	input	logic	

Port	Direction	Type	Description
cfg_timeout_enable	input	logic	
cfg_compl_enable	input	logic	
cfg_threshold_enable	input	logic	
cfg_timeout_cycles	input	logic [15:0]	MICROSECONDS of no progress; 0 = never
cfg_freq_sel	input	logic [3:0]	counter_freq_invariant LUT index
cfg_axi_pkt_mask	input	logic [15:0]	drop mask by packet type
i_mon_time	input	monitor_common_pkg::monbus_timestamp_t	
monbus_valid	output	logic	
monbus_ready	input	logic	
monbus_packet	output	monitor_common_pkg::monitor_packet_t	
monbus_timestamp	output	monitor_common_pkg::monbus_timestamp_t	
active_transactions	output	logic [7:0]	entries in the table
error_count	output	logic [15:0]	error + timeout packets emitted
transaction_count	output	logic [31:0]	completion packets emitted
dropped_count	output	logic [15:0]	events lost to monbus backpressure since the last report
refused_count	output	logic [15:0]	commands that found no free

Port	Direction	Type	Description
table entry			

16.3.2 Core Ports (as on axi4_master_wr)

Port	Direction	Type	Description
aclk	input	logic	
aresetn	input	logic	
fub_axi_awid	input	logic [IW-1:0]	
fub_axi_awaddr	input	logic [AW-1:0]	
fub_axi_awlen	input	logic [7:0]	
fub_axi_awsz	input	logic [2:0]	
fub_axi_awburst	input	logic [1:0]	
fub_axi_awlock	input	logic	
fub_axi_awcache	input	logic [3:0]	
fub_axi_awprot	input	logic [2:0]	
fub_axi_awqos	input	logic [3:0]	
fub_axi_awregion	input	logic [3:0]	
fub_axi_awuser	input	logic [UW-1:0]	
fub_axi_awvalid	input	logic	
fub_axi_awready	output	logic	
fub_axi_wdata	input	logic [DW-1:0]	
fub_axi_wstrb	input	logic [SW-1:0]	
fub_axi_wlast	input	logic	
fub_axi_wuser	input	logic [UW-1:0]	
fub_axi_wvalid	input	logic	
fub_axi_wready	output	logic	
fub_axi_bid	output	logic [IW-1:0]	
fub_axi_bresp	output	logic [1:0]	
fub_axi_buser	output	logic [UW-1:0]	
fub_axi_bvalid	output	logic	
fub_axi_bready	input	logic	
m_axi_awid	output	logic [IW-1:0]	

Port	Direction	Type	Description
m_axi_awaddr	output	logic [AW-1:0]	
m_axi_awlen	output	logic [7:0]	
m_axi_awsiz	output	logic [2:0]	
m_axi_awburst	output	logic [1:0]	
m_axi_awlock	output	logic	
m_axi_awcache	output	logic [3:0]	
m_axi_awprot	output	logic [2:0]	
m_axi_awqos	output	logic [3:0]	
m_axi_awregion	output	logic [3:0]	
m_axi_awuser	output	logic [UW-1:0]	
m_axi_awvalid	output	logic	
m_axi_awready	input	logic	
m_axi_wdata	output	logic [DW-1:0]	
m_axi_wstrb	output	logic [SW-1:0]	
m_axi_wlast	output	logic	
m_axi_wuser	output	logic [UW-1:0]	
m_axi_wvalid	output	logic	
m_axi_wready	input	logic	
m_axi_bid	input	logic [IW-1:0]	
m_axi_bresp	input	logic [1:0]	
m_axi_buser	input	logic [UW-1:0]	
m_axi_bvalid	input	logic	
m_axi_bready	output	logic	
busy	output	logic	
cfg_latency_thre shold	input	logic [31:0]	completion latency (cycles) above this -> Threshold/LATEN CY
cfg_addr_check_e nable	input	logic	

Port	Direction	Type	Description
cfg_addr_match_enable	input	logic	hit in a match range -> AddrMatch packet
cfg_addr_range_enable	input	logic [(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1) - 1:0]	
cfg_addr_range_low	input	logic [(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1) - 1:0][AW-1:0]	
cfg_addr_range_high	input	logic [(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1) - 1:0][AW-1:0]	

16.4 Functional Description

The core is instantiated untouched; unlike `axi4_master_wr_mon` there is no gating of the command handshake, because the lite has no admission stall. The monitor taps the m_-side command, data and response channels through three valids gated by `cfg_monitor_enable`, which also holds the table clear while low. `cfg_timeout_cycles` is a microsecond count of no progress on an entry, passed at full width; 0 means never. The active-count threshold is the parameter `ACTIVE_TRANS_THRESHOLD`, as on the `_mon` wrapper.

The lite's own behaviour – per-ID linked-list attribution, stamps instead of counters, the registered event stage, the 4-entry output queue and drop-and-count – is on the [axi_monitor_lite](#) page.

16.5 Timing Characteristics

The datapath timing is `axi4_master_wr`'s. The monitor adds no gating to any handshake and no path into the datapath; its own paths are two short cycles (attribution, then packet formatting) and met 10 ns on an Artix-7 100T -1 with margin inside `bridge_1x2_rd_lite_mon`.

16.6 Usage Examples

```
axi4_master_wr_monlite #(
    .N_ADDR_RANGES      (0),
    .ADDR_RANGE_IS_ERROR ('0'),
    .SKID_DEPTH_AW       (2),
    .SKID_DEPTH_W        (4),
    .UNIT_ID             (8'h02),
    .AGENT_ID            (16'h0014),
    .MAX_TRANSACTIONS    (8)
) u_axi4_master_wr_monlite (
    .aclk                (aclk),
    .aresetn              (aresetn),
    // ... the axi4_master_wr ports, by name ...
    .cam_clear            (1'b0),
    .cfg_monitor_enable   (1'b1),
    .cfg_error_enable     (1'b1),
    .cfg_timeout_enable   (1'b1),
    .cfg_compl_enable     (1'b0),
    .cfg_threshold_enable (1'b0),
    .cfg_timeout_cycles   (16'd1000),
    .cfg_freq_sel         (4'd0),
    .cfg_axi_pkt_mask     (16'h0000),
    .i_mon_time           (mon_time),
    .monbus_valid         (monbus_valid),
    .monbus_ready         (monbus_ready),
    .monbus_packet        (monbus_packet),
    .monbus_timestamp     (monbus_timestamp),
    .active_transactions  (),
    .error_count           (),
    .transaction_count    (),
    .dropped_count        (dropped_count),
    .refused_count        (refused_count)
);
```

In a generated bridge, `mon_preset = "lite"` selects this wrapper for every monitored port.

16.7 Design Notes

- `cam_clear` keeps the `_mon` wrapper's name so the two are pin-compatible on the monitor side; the lite has a table, not a CAM.
- `MAX_TRANSACTIONS` defaults to 8 here against 16 on `axi4_master_wr_mon`: size it to the port's real outstanding depth, since refused commands surface as orphans.

- Consumers that relied on `block_ready` to bound the table get drop-and-count instead; the count is always reported, the identity of the lost events is not.
-

16.8 Related Modules

- `axi4_master_wr_mon` – the full-monitor sibling
 - `axi4_master_wr` – the core this wraps
 - [axi_monitor_lite](#) – the monitor itself
-

16.9 Testing

`val/amba/monitor-lite/test_axi4_master_wr_monlite.py` exercises this module: the same TB and scenarios as `val/amba/test_axi4_master_wr_mon.py`, with the DUT swapped.

```
source env_python
make -C val/amba/monitor-lite run-axi4_master_wr_monlite-gate
```

Last Updated: 2026-09-26

16.10 Navigation

- [← Back to Monitor Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

17 AXI4 Master Write Stub

Module: `axi4_master_wr_stub.sv` **Location:** `rtl/amba/axi4/stubs/` **Status:** Production Ready

17.1 Overview

The write-side counterpart to the read stub. The AXI4 Master Write Stub packs the AW (write address), W (write data), and B (write response) channels into simple packet interfaces through

skid buffers, so your testbench drives one wide payload per channel instead of handshaking a dozen AXI signals. Ideal for testbenches and integration scenarios where a simplified interface is the whole point.

17.1.1 Key Features

- Packed packet interface for AW, W, and B channels
- Configurable skid buffer depth on each channel
- Full AXI4 write transaction support
- Burst, ID, strobe, and user signal support
- Parameterized data widths

17.2 Parameters

Parameter	Type	Default	Description
SKID_DEPTH_AW	int	2	AW channel skid buffer depth in entries (2..8 inclusive, any integer)
SKID_DEPTH_W	int	4	W channel skid buffer depth in entries (2..8 inclusive, any integer)
SKID_DEPTH_B	int	2	B channel skid buffer depth in entries (2..8 inclusive, any integer)
AXI_ID_WIDTH	int	8	AXI transaction ID width
AXI_ADDR_WIDTH	int	32	AXI address bus width
AXI_DATA_WIDTH	int	32	AXI data bus width
AXI_USER_WIDTH	int	1	AXI user signal width
AXI_WSTRB_WIDTH	int	AXI_DATA_WIDTH/8	Write strobe width
AW	int	AXI_ADDR_WIDTH	Short alias for address width
DW	int	AXI_DATA_WIDTH	Short alias for data width
IW	int	AXI_ID_WIDTH	Short alias for ID width
SW	int	AXI_WSTRB_WIDTH	Short alias for strobe

Parameter	Type	Default	Description
		DTH	width
UW	int	AXI_USER_WIDT H	Short alias for user width
AWSize	int	IW+AW+8+3+2+ 1+4+3+4+4+UW	AW packet size (calculated)
WSize	int	DW+SW+1+UW	W packet size (calculated)
BSize	int	IW+2+UW	B packet size (calculated)

17.3 Ports

17.3.1 Clock and Reset

Port	Direction	Width	Description
aclk	Input	1	AXI clock
aresetn	Input	1	AXI reset (active low)

17.3.2 AXI4 Write Address Channel (AW)

Port	Direction	Width	Description
m_axi_awid	Output	IW	Write address ID
m_axi_awaddr	Output	AW	Write address
m_axi_awlen	Output	8	Burst length
m_axi_awsz	Output	3	Burst size
m_axi_awburst	Output	2	Burst type
m_axi_awlock	Output	1	Lock type
m_axi_awcache	Output	4	Cache type
m_axi_awprot	Output	3	Protection type
m_axi_awqos	Output	4	Quality of service
m_axi_awregio	Output	4	Region

Port	Direction	Width	Description
n			identifier
m_axi_awuser	Output	UW	User signal
m_axi_awvalid	Output	1	Write address valid
m_axi_awready	Input	1	Write address ready

17.3.3 AXI4 Write Data Channel (W)

Port	Direction	Width	Description
m_axi_wdata	Output	DW	Write data
m_axi_wstrb	Output	SW	Write strobes
m_axi_wlast	Output	1	Write last
m_axi_wuser	Output	UW	User signal
m_axi_wvalid	Output	1	Write data valid
m_axi_wready	Input	1	Write data ready

17.3.4 AXI4 Write Response Channel (B)

Port	Direction	Width	Description
m_axi_bid	Input	IW	Response ID
m_axi_bresp	Input	2	Write response
m_axi_buser	Input	UW	User signal
m_axi_bvalid	Input	1	Write response valid
m_axi_bready	Output	1	Write response ready

17.3.5 AW Packet Interface

Port	Direction	Width	Description
fub_axi_awvalid	Input	1	AW packet valid
fub_axi_awready	Output	1	Ready to

Port	Direction	Width	Description
dy			accept AW packet
fub_axi_aw_count	Output	4	AW buffer occupancy
fub_axi_aw_pkt	Input	AWSize	Packed AW packet data


17.3.6 W Packet Interface

Port	Direction	Width	Description
fub_axi_wvalid	Input	1	W packet valid
fub_axi_wready	Output	1	Ready to accept W packet
fub_axi_w_pkt	Input	WSize	Packed W packet data

17.3.7 B Packet Interface

Port	Direction	Width	Description
fub_axi_bvalid	Output	1	B packet valid
fub_axi_bready	Input	1	Ready to accept B packet
fub_axi_b_pkt	Output	BSize	Packed B packet data


17.4 Functional Description

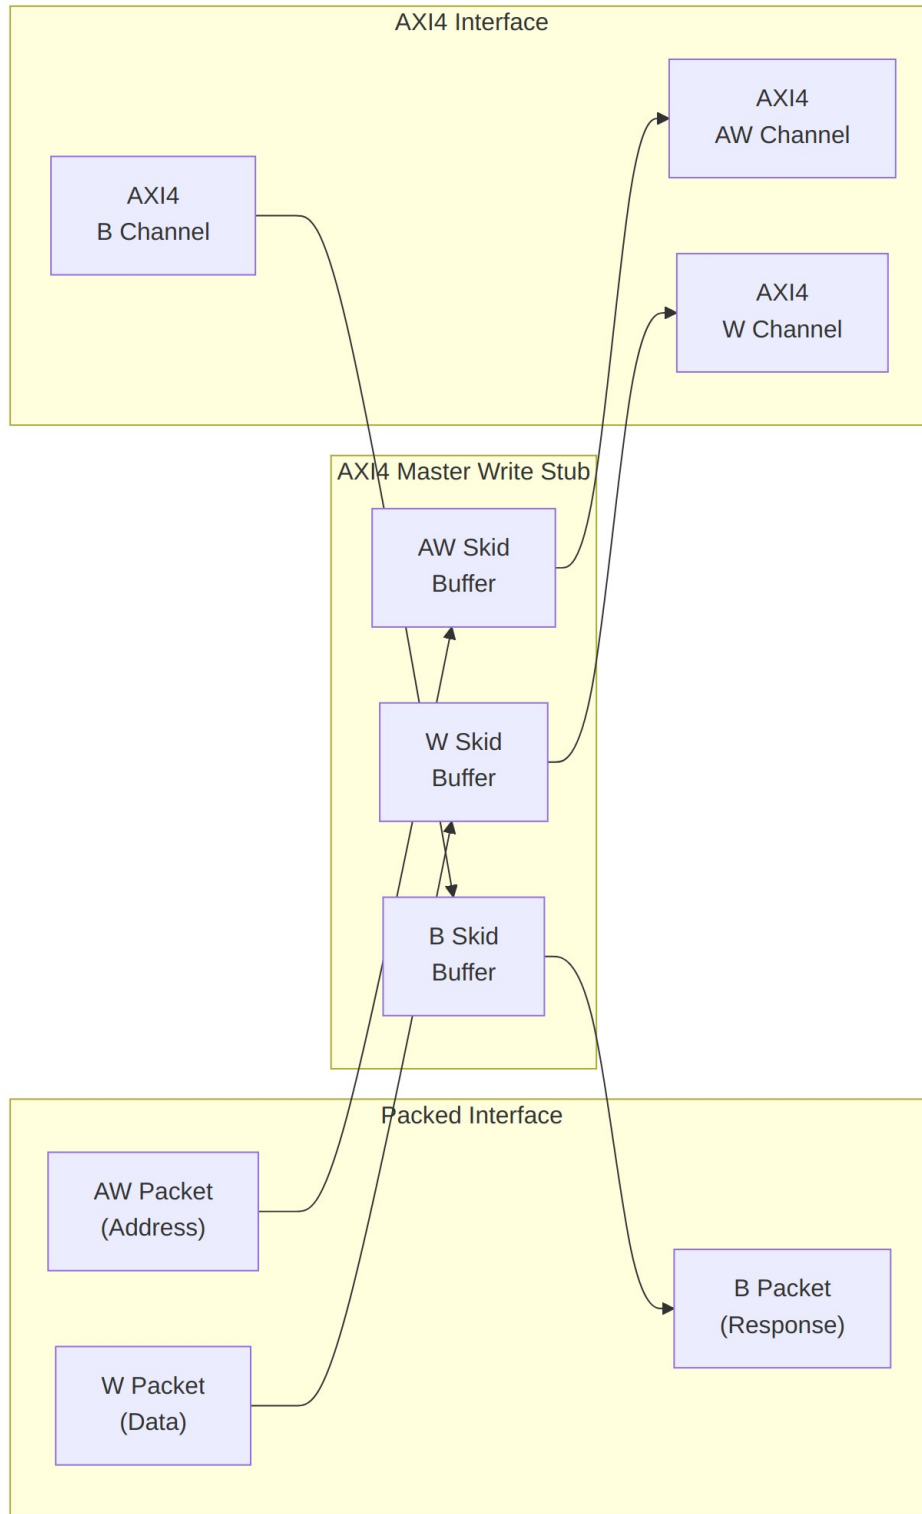

Architecture

17.4.1 Packet Formats

Packets are packed MSB-to-LSB in AXI signal order — one concatenation per channel, no bit shuffling required on the testbench side.




AW Packet Structure (Write Address)

Bit Positions:

```
fub_axi_aw_pkt = {awid, awaddr, awlen, awsize, awburst, awlock, awcache, awprot, awqos, awregion, awuser}
```

Width = IW + AW + 8 + 3 + 2 + 1 + 4 + 3 + 4 + 4 + UW

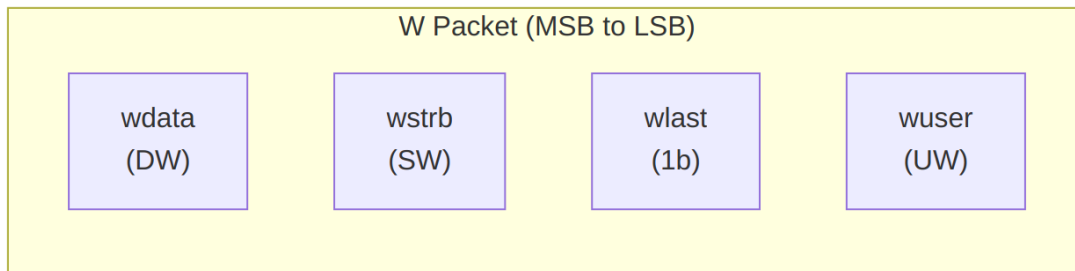


W Packet Structure (Write Data)

Bit Positions:

```
fub_axi_w_pkt = {wdata, wstrb, wlast, wuser}
```

Width = DW + SW + 1 + UW

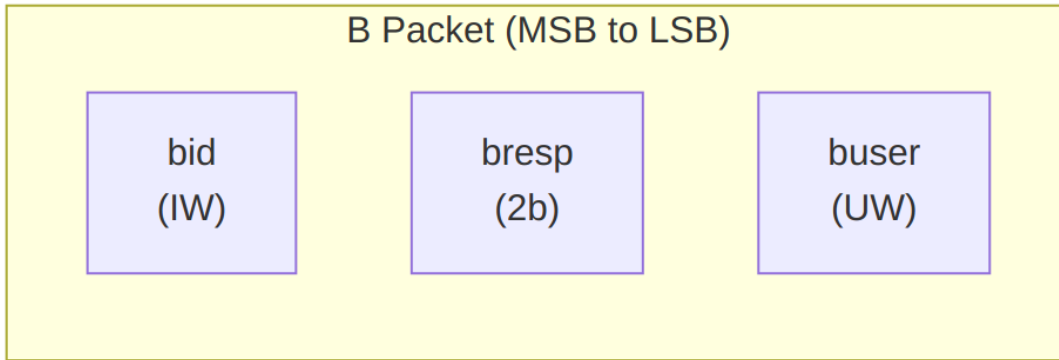


B Packet Structure (Write Response)

Bit Positions:

`fub_axi_b_pkt = {bid, bresp, buser}`

$\text{Width} = \text{IW} + 2 + \text{UW}$

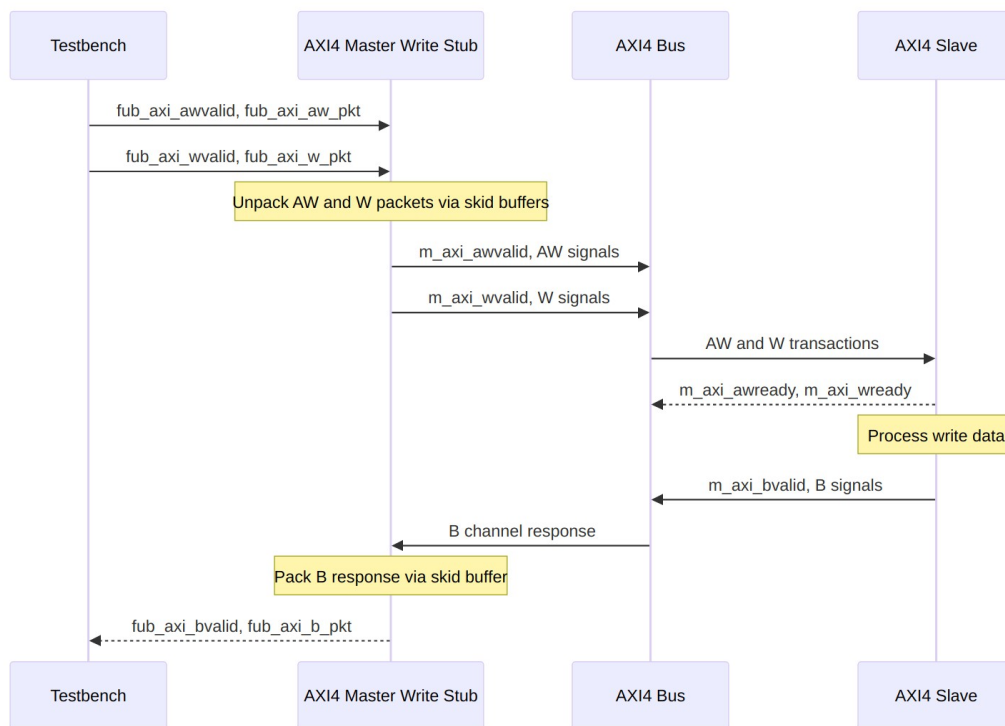

Transaction Flow

17.5 Timing Characteristics

Timing diagram pending. The signals and sequence this scenario exercises:

- aclk
 - fub_axi_awvalid, fub_axi_awready, fub_axi_aw_pkt
 - fub_axi_wvalid, fub_axi_wready, fub_axi_w_pkt
 - AXI AW signals (m_axi_awvalid, m_axi_awaddr, m_axi_awlen, etc.)
 - AXI W signals (m_axi_wvalid, m_axi_wdata, m_axi_wstrb, m_axi_wlast, etc.)
 - AXI B signals (m_axi_bvalid, m_axi_bid, m_axi_bresp, etc.)
 - fub_axi_bvalid, fub_axi_bready, fub_axi_b_pkt
 - Packet-to-AXI timing relationship with skid buffer operation
-

17.6 Usage Examples

```
axi4_master_wr_stub #(
    .SKID_DEPTH_AW    (2),
    .SKID_DEPTH_W     (4),
    .SKID_DEPTH_B     (2),
    .AXI_ID_WIDTH     (8),
    .AXI_ADDR_WIDTH   (32),
    .AXI_DATA_WIDTH   (64),
    .AXI_USER_WIDTH   (4)
) u_axi4_master_wr_stub (
    .aclk              (axi_clk),
    .aresetn           (axi_rst_n),

    // AXI4 master write interface
    .m_axi_awid        (m_axi_awid),
    .m_axi_awaddr      (m_axi_awaddr),
    .m_axi_awlen       (m_axi_awlen),
    .m_axi_awsz        (m_axi_awsz),
    .m_axi_awburst     (m_axi_awburst),
    .m_axi_awlock      (m_axi_awlock),
    .m_axi_awcache     (m_axi_awcache),
    .m_axi_awprot      (m_axi_awprot),
    .m_axi_awqos       (m_axi_awqos),
    .m_axi_awregion    (m_axi_awregion),
    .m_axi_awuser      (m_axi_awuser),
    .m_axi_awvalid     (m_axi_awvalid),
    .m_axi_awready     (m_axi_awready),
```

```

.m_axi_wdata      (m_axi_wdata),
.m_axi_wstrb      (m_axi_wstrb),
.m_axi_wlast      (m_axi_wlast),
.m_axi_wuser      (m_axi_wuser),
.m_axi_wvalid      (m_axi_wvalid),
.m_axi_wready      (m_axi_wready),

.m_axi_bid        (m_axi_bid),
.m_axi_bresp      (m_axi_bresp),
.m_axi_buser      (m_axi_buser),
.m_axi_bvalid      (m_axi_bvalid),
.m_axi_bready      (m_axi_bready),

// Packed AW interface
.fub_axi_awvalid  (tb_aw_valid),
.fub_axi_awready  (tb_aw_ready),
.fub_axi_aw_count (tb_aw_count),
.fub_axi_aw_pkt   (tb_aw_pkt),

// Packed W interface
.fub_axi_wvalid   (tb_w_valid),
.fub_axi_wready   (tb_w_ready),
.fub_axi_w_pkt    (tb_w_pkt),

// Packed B interface
.fub_axi_bvalid   (tb_b_valid),
.fub_axi_bready   (tb_b_ready),
.fub_axi_b_pkt    (tb_b_pkt)
);

// Build AW packet (single beat write at address 0x1000)
localparam ASize = 8 + 32 + 8 + 3 + 2 + 1 + 4 + 3 + 4 + 4 + 4; //
Calculate size
assign tb_aw_pkt = {
    8'd0,           // awid
    32'h0000_1000,  // awaddr
    8'd0,           // awlen (1 beat)
    3'b011,         // aysize (8 bytes)
    2'b01,          // awburst (INCR)
    1'b0,           // awlock
    4'b0011,        // awcache
    3'b000,         // awprot
    4'b0000,        // awqos
    4'b0000,        // awregion
    4'h0            // awuser
};

```

```

// Build W packet
localparam WSize = 64 + 8 + 1 + 4; // Calculate size
assign tb_w_pkt = {
    64'hDEAD_BEEF_CAFE_BABE, // wdata
    8'hFF, // wstrb (all bytes)
    1'b1, // wlast
    4'h0 // wuser
};

// Parse B packet
localparam int BSize = 8 + 2 + 4; // IW + resp + UW
wire [7:0] b_id = tb_b_pkt[BSize-1:BSize-8];
wire [1:0] b_resp = tb_b_pkt[5:4];
wire [3:0] b_user = tb_b_pkt[3:0];

```

17.7 Design Notes

17.7.1 Skid Buffer Operation

The stub is three gaxi_skid_buffer instances and nothing fancier. They:

- Decouple timing between testbench and AXI bus
- Provide configurable buffering depth per channel
- Handle backpressure gracefully
- Support burst transactions without stalling

Recommended Depths: - **AW Channel:** 2-4 (address transactions) - **W Channel:** 4-8 (data beats for bursts) - **B Channel:** 2-4 (responses)

17.7.2 Channel Independence

The AW, W, and B channels are independent: - AW and W can be driven in any order - Stub handles proper AXI timing - B responses arrive asynchronously

17.7.3 Packet Packing Order

AW, W, and B packets are packed MSB-to-LSB following AXI signal order: - Simplifies testbench packet creation - Matches common concatenation order - Efficient for burst transaction handling

17.7.4 Internal Architecture

The stub instantiates three gaxi_skid_buffer modules: - **AW Skid Buffer:** Unpacks AW packets to AXI AW channel - **W Skid Buffer:** Unpacks W packets to AXI W channel - **B Skid Buffer:** Packs AXI B channel to B packets

All AXI protocol handling is done by the skid buffers and downstream modules.

17.8 Related Modules

- [AXI4 Master Write](#) - Full AXI4 master write module (if wrapping one)
 - [AXI4 Master Read Stub](#) - Corresponding read stub
 - [AXI4 Master Stub](#) - Combined read/write stub
 - [AXI4 Slave Write Stub](#) - Slave-side write stub
-

17.9 Testing

No dedicated testbench, and none is expected. This is a stub: a tie-off shell that presents the interface and drives inert values, so there is no behaviour to verify beyond elaboration. make verilator lints it as its own top on every run, which is the coverage that applies.

Treat any behaviour described on this page as unverified by simulation.

17.10 Navigation

- [← Back to AXI4 Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

18 AXI4 Slave Read

Module: `axi4_slave_rd.sv` **Location:** `rtl/amba/axi4/` **Status:** Production Ready

18.1 Overview

The mirror image of the master-side buffers. The AXI4 Slave Read sits between an AXI4 interconnect and your memory or backend processing element, with configurable-depth skid buffers on the AR and R channels. The interconnect can present addresses whenever it likes, the backend can return data whenever it's ready, and neither one stalls the other — that's the entire job, and it's worth doing well.

18.1.1 Key Features

- **Full AXI4 Read Support:** Complete AR and R channel implementation
- **Independent Channel Buffering:** Separate configurable depth buffers for each channel
- **Elastic Buffering:** Decouples interconnect and backend timing domains
- **Burst Support:** Full burst transaction handling with RLAST tracking
- **User Signal Support:** Carries ARUSER and RUSER signals
- **Clock Gating Support:** Busy signal for dynamic power management

18.2 Parameters

Parameter	Type	Default	Description
SKID_DEPTH_AR	int	2	Depth of read address (AR) channel skid buffer
SKID_DEPTH_R	int	4	Depth of read data (R) channel skid buffer
AXI_ID_WIDTH	int	8	Width of transaction ID signals (ARID, RID)
AXI_ADDR_WIDTH	int	32	Width of address bus (ARADDR)
AXI_DATA_WIDTH	int	32	Width of data bus (RDATA), must be 8, 16, 32, 64, 128, 256, 512, or 1024
AXI_USER_WIDTH	int	1	Width of user-defined signals (ARUSER, RUSER)

18.2.1 Derived Parameters (do not override)

These are declared as parameter so the elaborator can compute them, not so callers can set them. Each defaults to an expression over the parameters above; overriding one desynchronises it from its source and the design fails to elaborate or silently mis-sizes a bus. Set the parameters they are derived FROM and leave these alone.

Derived parameter	Default expression
AXI_WSTRB_WIDTH	AXI_DATA_WIDTH / 8

Derived parameter	Default expression
AW	AXI_ADDR_WIDTH
DW	AXI_DATA_WIDTH
IW	AXI_ID_WIDTH
SW	AXI_WSTRB_WIDTH
UW	AXI_USER_WIDTH
ARSize	IW+AW+8+3+2+1+4+3+4+4+UW
RSize	IW+DW+2+1+UW

18.3 Ports

The full port list, straight from the RTL:

```

module axi4_slave_rd #(
    parameter int SKID_DEPTH_AR    = 2,
    parameter int SKID_DEPTH_R     = 4,
    parameter int AXI_ID_WIDTH     = 8,
    parameter int AXI_ADDR_WIDTH   = 32,
    parameter int AXI_DATA_WIDTH   = 32,
    parameter int AXI_USER_WIDTH   = 1
) (
    // Clock and Reset
    input logic          aclk,
    input logic          aresetn,

    // Slave AXI Interface (s_axi_*)
    // Read address channel (AR)
    input logic [AXI_ID_WIDTH-1:0] s_axi_arid,
    input logic [AXI_ADDR_WIDTH-1:0] s_axi_araddr,
    input logic [7:0] s_axi_arlen,
    input logic [2:0] s_axi_arsize,
    input logic [1:0] s_axi_arburst,
    input logic s_axi_arlock,
    input logic [3:0] s_axi_arcache,
    input logic [2:0] s_axi_arprot,
    input logic [3:0] s_axi_arqos,
    input logic [3:0] s_axi_arregion,
    input logic [AXI_USER_WIDTH-1:0] s_axi_aruser,
    input logic s_axi_arvalid,
    output logic s_axi_arready,

    // Read data channel (R)
    output logic [AXI_ID_WIDTH-1:0] s_axi_rid,
    output logic [AXI_DATA_WIDTH-1:0] s_axi_rdata,
    output logic [1:0] s_axi_rresp,

```

```

output logic                                s_axi_rlast,
output logic [AXI_USER_WIDTH-1:0] s_axi_ruser,
output logic                                s_axi_rvalid,
input  logic                                s_axi_rready,

// Backend Interface (fub_axi_* - to memory/backend)
// Read address channel (AR)
output logic [AXI_ID_WIDTH-1:0] fub_axi_arid,
output logic [AXI_ADDR_WIDTH-1:0] fub_axi_araddr,
output logic [7:0] fub_axi_arlen,
output logic [2:0] fub_axi_arsize,
output logic [1:0] fub_axi_arburst,
output logic fub_axi_arlock,
output logic [3:0] fub_axi_arcache,
output logic [2:0] fub_axi_arprot,
output logic [3:0] fub_axi_arqos,
output logic [3:0] fub_axi_arregion,
output logic [AXI_USER_WIDTH-1:0] fub_axi_aruser,
output logic fub_axi_arvalid,
input  logic fub_axi_arready,

// Read data channel (R)
input  logic [AXI_ID_WIDTH-1:0] fub_axi_rid,
input  logic [AXI_DATA_WIDTH-1:0] fub_axi_rdata,
input  logic [1:0] fub_axi_rresp,
input  logic fub_axi_rlast,
input  logic [AXI_USER_WIDTH-1:0] fub_axi_ruser,
input  logic fub_axi_rvalid,
output logic fub_axi_rready,

// Status
output logic busy
);

```

18.3.1 Clock and Reset

Port	Direction	Width	Description
aclk	Input	1	AXI clock - all signals sampled on rising edge
aresetn	Input	1	Active-low asynchronous reset

18.3.2 Slave AXI Interface (s_axi_*)

Read Address Channel (AR)

Port	Direction	Width	Description
s_axi_arid	Input	AXI_ID_WIDTH	Read transaction ID
s_axi_araddr	Input	AXI_ADDR_WIDTH	Read address
s_axi_arlen	Input	8	Burst length, AXI-encoded: beats - 1 (0x00 = 1 beat, 0xFF = 256)
s_axi_arsize	Input	3	Burst size (bytes per beat)
s_axi_arburst	Input	2	Burst type (FIXED, INCR, WRAP)
s_axi_arlock	Input	1	Lock type (atomic access support)
s_axi_arcache	Input	4	Cache attributes
s_axi_arprot	Input	3	Protection attributes
s_axi_arqos	Input	4	Quality of Service identifier
s_axi_arregion	Input	4	Region identifier
s_axi_aruser	Input	AXI_USER_WIDTH	User-defined signal
s_axi_arvalid	Input	1	Read address valid
s_axi_arready	Output	1	Read address ready

Read Data Channel (R)

Port	Direction	Width	Description
s_axi_rid	Output	AXI_ID_WIDTH	Read transaction ID
s_axi_rdata	Output	AXI_DATA_WIDTH	Read data
s_axi_rresp	Output	2	Read response (OKAY,

Port	Direction	Width	Description
			EXOKAY, SLVERR, DECERR)
s_axi_rlast	Output	1	Last beat of burst indicator
s_axi_ruser	Output	AXI_USER_WIDTH	User-defined signal
s_axi_rvalid	Output	1	Read data valid
s_axi_rready	Input	1	Read data ready

18.3.3 Backend Interface (fub_axi_*)

Mirrors the slave interface but in the opposite direction (output on AR, input on R).

18.3.4 Status Outputs

Port	Direction	Width	Description
busy	Output	1	Indicates active transactions in buffers (for clock gating)

18.4 Functional Description

18.4.1 Architecture

Two independent gaxi_skid_buffer instances provide the elastic buffering, one per read channel:

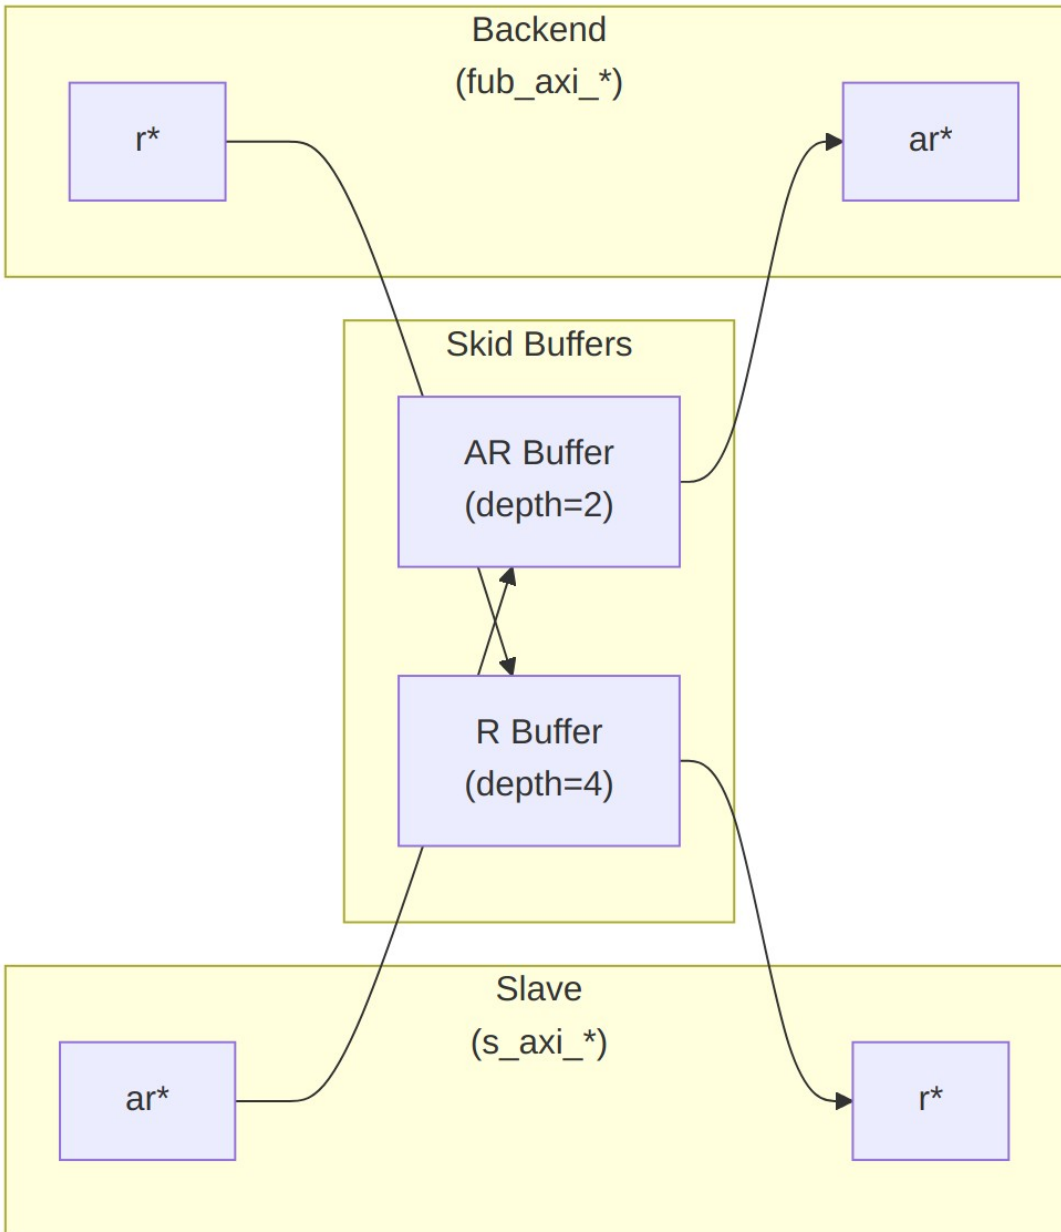


Diagram 19

18.4.2 Channel Operations

18.4.2.1 Read Address (AR) Channel

1. Master presents read address and attributes via interconnect
2. AR skid buffer accepts when space available ($s_axi_arready$ high)
3. Buffered address presented to backend when ready

4. Configurable depth (SKID_DEPTH_AR) smooths timing variations

18.4.2.2 Read Data (R) Channel

1. Backend returns read data with transaction ID
2. R skid buffer provides deeper buffering (default depth=4)
3. RLAST signal preserved to indicate burst boundaries
4. Data forwarded to master when ready to accept

18.4.3 Busy Signal

The busy output indicates active transactions:

```
assign busy = (int_ar_count > 0) || (int_r_count > 0) ||
              s_axi_arvalid || fub_axi_rvalid;
```

Use cases: - **Clock gating**: Disable clock when busy is low - **Power management**: Enter low-power mode when idle - **Synchronization**: Wait for idle before configuration changes

18.5 Timing Characteristics

Skid parameter	Default depth
SKID_DEPTH_AR	2 entries
SKID_DEPTH_R	4 entries

Each channel traverses one gaxi_skid_buffer, which registers both rd_valid and its storage. The **1-cycle input-to-output latency therefore applies on every transfer, including the un stalled case** – there is no combinational bypass. Depth buys backpressure absorption, not throughput; full rate is sustained once the pipeline is primed. Legal range is 2..8 inclusive, odd values included.

Clocking: aclk, reset aresetn (active-low asynchronous).

No synthesis numbers are quoted here. Frequency and area depend on the target device and the parameters you elaborate with; run your own build.

18.6 Usage Examples

Every parameter and port below is read from the module declaration.

```
axi4_slave_rd #(
    .SKID_DEPTH_AR    (2),
    .SKID_DEPTH_R     (4),
```

```

        .AXI_ID_WIDTH           (8),
        .AXI_ADDR_WIDTH        (32),
        .AXI_DATA_WIDTH        (32),
        .AXI_USER_WIDTH        (1)
    ) u_axi4_slave_rd (
        .aclk                    (aclk),
        .aresetn                 (aresetn),
        .s_axi_arid              (s_axi_arid),
        .s_axi_araddr            (s_axi_araddr),
        .s_axi_arlen             (s_axi_arlen),
        .s_axi_arsize            (s_axi_arsize),
        .s_axi_arburst           (s_axi_arburst),
        .s_axi_arlock            (s_axi_arlock),
        .s_axi_arcache           (s_axi_arcache),
        .s_axi_arprot            (s_axi_arprot),
        .s_axi_arqos             (s_axi_arqos),
        .s_axi_arregion          (s_axi_arregion),
        .s_axi_aruser            (s_axi_aruser),
        .s_axi_arvalid           (s_axi_arvalid),
        .s_axi_arready           (s_axi_arready),
        .s_axi_rid               (s_axi_rid),
        .s_axi_rdata             (s_axi_rdata),
        .s_axi_rresp             (s_axi_rresp),
        .s_axi_rlast             (s_axi_rlast),
        .s_axi_ruser             (s_axi_ruser),
        .s_axi_rvalid            (s_axi_rvalid),
        .s_axi_rready            (s_axi_rready),
        .fub_axi_arid            (fub_axi_arid),
        .fub_axi_araddr          (fub_axi_araddr),
        .fub_axi_arlen           (fub_axi_arlen),
        .fub_axi_arsize          (fub_axi_arsize),
        .fub_axi_arburst         (fub_axi_arburst),
        .fub_axi_arlock          (fub_axi_arlock),
        .fub_axi_arcache         (fub_axi_arcache),
        .fub_axi_arprot          (fub_axi_arprot),
        .fub_axi_arqos           (fub_axi_arqos),
        .fub_axi_arregion        (fub_axi_arregion),
        .fub_axi_aruser          (fub_axi_aruser),
        .fub_axi_arvalid         (fub_axi_arvalid),
        .fub_axi_arready         (fub_axi_arready),
        .fub_axi_rid             (fub_axi_rid),
        .fub_axi_rdata           (fub_axi_rdata),
        .fub_axi_rresp           (fub_axi_rresp),
        .fub_axi_rlast           (fub_axi_rlast),
        .fub_axi_ruser           (fub_axi_ruser),
        .fub_axi_rvalid          (fub_axi_rvalid),
        .fub_axi_rready          (fub_axi_rready),

```

```
        .busy                                (busy)
    );
```

18.7 Design Notes

18.7.1 Buffer Depth Selection

SKID_DEPTH_* is an entry count, not a log2 exponent. The underlying gaxi_skid_buffer allocates one register slot per entry and tracks occupancy with a 4-bit counter, so legal values are 2..8 inclusive (any integer). Values greater than 8 overflow the occupancy counter and are not supported.

Read Address (SKID_DEPTH_AR): - Default: 2 (sufficient for most cases) - Increase if: - High-latency backend address processing - Frequent address channel backpressure - Multiple outstanding bursts needed

Read Data (SKID_DEPTH_R): - Default: 4 (deeper than AR for burst data) - Increase if: - Large burst sizes (ARLEN > 4) - High-bandwidth streaming reads - Variable backend read latency

18.7.2 Recommended Configurations

Low-Latency Memory (single outstanding read):

```
axi4_slave_rd #(
    .SKID_DEPTH_AR(2),
    .SKID_DEPTH_R(2)
) u_slave_rd ( ... );
```

High-Throughput Streaming (burst reads):

```
axi4_slave_rd #(
    .SKID_DEPTH_AR(4),
    .SKID_DEPTH_R(8)      // Deep for burst data
) u_slave_rd ( ... );
```

Variable Latency Backend:

```
axi4_slave_rd #(
    .SKID_DEPTH_AR(8),
    .SKID_DEPTH_R(8)
) u_slave_rd ( ... );
```

18.7.3 Buffer Independence

The two skid buffers operate independently: - AR channel can accept new addresses while R channel returns data - Burst reads can pipeline - next burst starts before previous completes - Backend can have variable read latency without stalling interconnect

18.7.4 Packet Preservation

All signal groups packed and unpacked atomically: - AR channel: {arid, araddr, arlen, arsize, arburst, arlock, arcache, arprot, arqos, arregion, aruser} - R channel: {rid, rdata, rresp, rlast, ruser}

18.7.5 Backpressure Handling

Ready signals propagate backpressure: - Interconnect sees arready low when AR buffer full - Backend sees rready low when R buffer full - Prevents data loss while decoupling timing

18.7.6 ID and Burst Handling

This module is a pass-through buffer: - Does NOT track transaction IDs - Does NOT enforce burst ordering - Relies on backend to: - Match RID to ARID - Return correct number of beats (ARLEN+1) - Assert RLAST on final beat

18.7.7 Reset Behavior

On aresetn assertion (active-low): - All skid buffers flush - Valid signals deasserted - Busy signal goes low - No data retained across reset

18.8 Related Modules

18.8.1 Companion Modules

- **axi4_slave_wr** - AXI4 slave write with buffering
- **axi4_slave_rd_cg** - Clock-gated variant with additional CG logic
- **axi4_slave_rd_mon** - Read transaction monitor for verification

18.8.2 Used Components

- **gaxi_skid_buffer** - Elastic buffer with valid/ready handshake
- **clock_gate_ctrl** - Clock gating control (example)

18.8.3 Related Infrastructure

- **axi4_master_rd** - Corresponding AXI4 read master module
 - **axi4_interconnect** - Multi-master/multi-slave crossbar
-

18.9 Testing

`val/amba/test_axi4_slave_rd.py` exercises this module. It collects 8 parameter cases at the default `REG_LEVEL`.

```
source env_python
pytest val/amba/test_axi4_slave_rd.py -v
```

18.10 References

18.10.1 Specifications

- ARM IHI 0022E: AMBA AXI Protocol Specification (AXI4)

18.10.2 Source Code

- RTL: `rtl/amba/axi4/axi4_slave_rd.sv`
- Tests: `val/amba/test_axi4_slave_rd.py`
- Framework: `bin/TBClasses/components/axi4/`

18.10.3 Documentation

- Architecture: [rtl-amba Overview](#)
 - AXI4 Index: [axi4/README.md](#)
 - GAXI Buffers: [gaxi/README.md](#)
-

Last Updated: 2025-10-20

18.11 Navigation

- [← Back to AXI4 Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

19 AXI4 Slave Read Interface (Clock-Gated)

Module: `axi4_slave_rd_cg.sv` **Base Module:** [axi4_slave_rd](#) **Location:** `rtl/amba/axi4/`
Status: Production Ready

19.1 Overview

This is the **clock-gated variant** of [axi4_slave_rd](#) — same elastic buffer, with activity-based clock gating wrapped around it for power.

For complete clock-gating documentation, usage examples, and configuration guidelines, see the [Clock-Gated Variants Guide](#).

What the wrapper buys you:

- **Same Functionality:** 100% equivalent to base module
 - **Power Savings:** traffic-dependent; unmeasured in this repo – treat any percentage as a placeholder until characterized
 - **Configurable at runtime:** `cfg_cg_enable` / `cfg_cg_idle_count` inputs
 - **Zero Overhead When Disabled:** `cfg_cg_enable=0` bypasses the gate
-

19.2 Parameters

In addition to all [axi4_slave_rd](#) parameters:

Parameter	Default	Description
CG_IDLE_COUNT_WIDTH	4	Width of the idle countdown, sizing <code>cfg_cg_idle_count</code>
SKID_DEPTH_AR	2	Skid-buffer depth on the AR channel. Legal range 2..8 inclusive; odd depths are legal.
SKID_DEPTH_R	4	Skid-buffer depth on the R channel. Legal range 2..8 inclusive; odd depths are legal.

The gating controls are RUNTIME INPUTS, not parameters: `cfg_cg_enable` and `cfg_cg_idle_count`; status outputs `cg_gating` / `cg_idle`. One `amba_clock_gate_ctrl` gates the whole module – no per-domain gates. The base module's busy output is NOT re-exported (consumed internally as a wake term). (The `ENABLE_CLOCK_GATING` / `CG_IDLE_CYCLES` / `CG_GATE_*` interface this page once documented never existed.)

19.2.1 Derived Parameters (do not override)

These are declared as parameter so the elaborator can compute them, not so callers can set them. Each defaults to an expression over the parameters above; overriding one desynchronises it from its source and the design fails to elaborate or silently mis-sizes a bus. Set the parameters they are derived FROM and leave these alone.

Derived parameter	Default expression
AXI_WSTRB_WIDTH	AXI_DATA_WIDTH / 8
AW	AXI_ADDR_WIDTH
DW	AXI_DATA_WIDTH
IW	AXI_ID_WIDTH
SW	AXI_WSTRB_WIDTH
UW	AXI_USER_WIDTH
ARSize	IW+AW+8+3+2+1+4+3+4+4+UW
RSize	IW+DW+2+1+UW

19.3 Ports

Port	Dir	Width	Description
aclk	In	1	
aresetn	In	1	
cfg_cg_enable	In	1	
cfg_cg_idle_count	In	[CG_IDLE_COUNT_WIDTH-1:0]	
s_axi_arid	In	[IW-1:0]	
s_axi_araddr	In	[AW-1:0]	
s_axi_arlen	In	[7:0]	
s_axi_arsize	In	[2:0]	
s_axi_arburst	In	[1:0]	
s_axi_arlock	In	1	
s_axi_arcache	In	[3:0]	
s_axi_arprot	In	[2:0]	
s_axi_arqos	In	[3:0]	
s_axi_arregion	In	[3:0]	

Port	Dir	Width	Description
s_axi_aruser	In	[UW-1:0]	
s_axi_arvalid	In	1	
s_axi_arready	Out	1	
s_axi_rid	Out	[IW-1:0]	
s_axi_rdata	Out	[DW-1:0]	
s_axi_rresp	Out	[1:0]	
s_axi_rlast	Out	1	
s_axi_ruser	Out	[UW-1:0]	
s_axi_rvalid	Out	1	
s_axi_rready	In	1	
fub_axi_arid	Out	[IW-1:0]	
fub_axi_araddr	Out	[AW-1:0]	
fub_axi_arlen	Out	[7:0]	
fub_axi_arsize	Out	[2:0]	
fub_axi_arburst	Out	[1:0]	
fub_axi_arlock	Out	1	
fub_axi_arcache	Out	[3:0]	
fub_axi_arprot	Out	[2:0]	
fub_axi_arqos	Out	[3:0]	
fub_axi_arregion	Out	[3:0]	
fub_axi_aruser	Out	[UW-1:0]	
fub_axi_arvalid	Out	1	
fub_axi_arready	In	1	
fub_axi_rid	In	[IW-1:0]	
fub_axi_rdata	In	[DW-1:0]	

Port	Dir	Width	Description
fub_axi_rresp	In	[1:0]	
fub_axi_rlast	In	1	
fub_axi_ruser	In	[UW-1:0]	
fub_axi_rvalid	In	1	
fub_axi_rready	Out	1	
cg_gating	Out	1	
cg_idle	Out	1	

19.4 Functional Description

This wrapper is the base module plus one `amba_clock_gate_ctrl` instance. The datapath is untouched – every channel signal is forwarded verbatim – so functional behaviour is identical to the base module and the wrapper adds no latency of its own.

What it adds is a gated clock. `amba_clock_gate_ctrl` watches two activity terms, `user_valid` (this side's valids plus the base module's busy) and `axi_valid` (the far side's valids), registers their OR into `r_wakeup`, and stops the inner module's clock once both have been quiet for `cfg_cg_idle_count` cycles. The clock restarts on the next activity, one cycle later.

While the clock is stopped the wrapper masks its outward-facing READY signals with ! `cg_gating`, so a peer sees no acceptance until the clock runs again and no handshake is lost across the wake boundary.

`cfg_cg_enable` arms this behaviour; with it low the clock free-runs and the module is indistinguishable from its base.

19.5 Timing Characteristics

Skid parameter	Default depth
SKID_DEPTH_AR	2 entries
SKID_DEPTH_R	4 entries

Each channel traverses one `gaxi_skid_buffer`, which registers both `rd_valid` and its storage. The **1-cycle input-to-output latency therefore applies on every transfer, including the uninstalled case** – there is no combinational bypass. Depth buys backpressure absorption, not throughput; full rate is sustained once the pipeline is primed. Legal range is 2..8 inclusive, odd values included.

Clocking: `aclk`, reset `aresetn` (active-low asynchronous).

No synthesis numbers are quoted here. Frequency and area depend on the target device and the parameters you elaborate with; run your own build.

19.6 Usage Examples

```
axi4_slave_rd_cg #(
    // Base module parameters (see axi4_slave_rd.md)
    .AXI_ID_WIDTH(8),
    .AXI_ADDR_WIDTH(32),
    .AXI_DATA_WIDTH(64),

    .CG_IDLE_COUNT_WIDTH(4)
) u_cg (
    .aclk(clk),
    .aresetn(rst_n),
    .cfg_cg_enable(1'b1),
    .cfg_cg_idle_count(4'd8),
    .cg_gating(), .cg_idle(),
    // ... all other ports same as axi4_slave_rd (except busy)
);
```

19.7 Design Notes

A peer's READY must never enter the activity term. A consumer that parks its response-ready high while idle is behaving correctly; folding that signal into `user_valid` pins this block permanently awake and defeats gating entirely – silently, because function is unaffected. Ten wrappers in this repository shipped that way and nothing failed until someone measured. `val/amba/test_cg_peer_ready.py` parks the peer READY high, holds every VALID low, and requires `cg_gating`. Canonical rule: `vault/handbook/design/clock-gating-activity-terms.md`.

cfg_cg_enable is not a kill switch. It arms gating and reaches `amba_clock_gate_ctrl` only; the datapath and any monitor enables are forwarded untouched. With it low the clock free-runs and this module behaves exactly like its base.

Gating latency. The clock stops `cfg_cg_idle_count + 2` cycles after the last bus activity – the idle counter, plus one for the `r_wakeup` flop. Size the idle count against your traffic's inter-burst gap: too small and the block wakes constantly, too large and it never gates.

Cost. Five flops: `r_wakeup` plus `r_idle_counter` at `IDLE_CNTR_WIDTH`, scaling as $1 + \text{CG_IDLE_COUNT_WIDTH}$. The ICG itself is a latch or `BUFGCE`, not fabric flops.

19.8 Related Modules

- **Base Module Functionality:** [axi4_slave_rd.md](#)
 - **Clock Gating Guide:** [clock_gated_variants.md](#)
 - **Detailed CG Examples:**
 - [axi4_master_rd_mon_cg.md](#) (AXI4 monitor)
 - [axil4_master_rd_mon_cg.md](#) (AXIL4 monitor)
 - [apb4_slave_cg.md](#) (APB interface)
-

19.9 Testing

`val/amba/test_axi4_slave_rd_cg.py` exercises this module. It collects 1 parameter cases at the default `REG_LEVEL`.

```
source env_python
pytest val/amba/test_axi4_slave_rd_cg.py -v
```

19.10 Navigation

- [← Back to AXI4 Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

20 AXI4 Slave Read Monitor

Module: `axi4_slave_rd_mon.sv` **Location:** `rtl/amba/axi4/` (protocol monitors live with their protocol; only the monitor CORE pieces are in `rtl/amba/monitor/`) **Status:** Production Ready

20.1 Overview

The slave-side counterpart to the master monitors. The AXI4 Slave Read Monitor combines a working `axi4_slave_rd` with an `axi_monitor_filtered`, watching read transactions as they pass from the interconnect through to your backend and back. You get real-time protocol checking, error detection, performance metrics, and configurable packet filtering — from the slave's point of view, which is usually the angle that catches backend problems first.

20.1.1 Key Features

- **Integrated Monitoring:** Combines axi4_slave_rd with axi_monitor_filtered
 - **2-Level Filtering:** packet-type drop masks + per-event masks (err_select is reserved – no routing)
 - **Error Detection:** SLVERR, DECERR, orphaned read data, timeouts (protocol-violation events are write-monitor only – see Error Detection Events)
 - **Timeout Monitoring:** Configurable timeout detection for stuck transactions
 - **Performance Metrics:** Latency tracking, transaction counting, throughput analysis
 - **Monitor Bus Output:** 128-bit packets paired with 64-bit side-band timestamps
 - **Configuration Validation:** Detects conflicting configuration settings
 - **Clock Gating Support:** Busy signal for power management
-

20.2 Parameters

A lite-monitor version of this wrapper exists as axi4_slave_rd_monlite: the same core and taps with axi_monitor_lite instead of axi_monitor_filtered, about a fifth of the monitor gates, error/timeout/completion/threshold packets only. Selected in generated bridges by mon_preset = "lite".

20.2.1 AXI4 Slave Parameters

Parameter	Type	Default	Description
SKID_DEPTH_AR	int	2	AR channel skid buffer depth
SKID_DEPTH_R	int	4	R channel skid buffer depth
AXI_ID_WIDTH	int	8	Transaction ID width
AXI_ADDR_WIDTH	int	32	Address bus width

Parameter	Type	Default	Description
AXI_DATA_WIDTH	int	32	Data bus width
AXI_USER_WIDTH	int	1	User signal width

20.2.2 Monitor Parameters

Parameter	Type	Default	Description
UNIT_ID	logic [7:0]	8'h02	8-bit unit identifier in monitor packets
AGENT_ID	logic [15:0]	16'h0014	16-bit agent identifier in monitor packets
MAX_TRANSACTIONS	int	16	Maximum concurrent outstanding transactions
USE_WDATA_ORDER_Q	bit	0	Write-data ordering queue
NUM_BANKS	int	1	Banked transaction tables. >1 on a WRITE monitor requires USE_WDATA_ORDER_Q=1 – axi_monitor_trans_mgr fails elaboration otherwise
ID_FILTER_ENABLE	bit	0	Synthesises the per-instance ID-slice filter
ID_MATCH_BASE	int	0	First ID this instance owns
ID_MATCH_COUNT	int	0	How many; 0 means ALL, so a zeroed register block does not silently filter everything away
ACLK_MHZ	int	100	Clock frequency in MHz – keeps the 1 us tick exact off-100MHz
CFI_MIN_FREQ_MHZ / CFI_MAX_FREQ_MHZ	int	= ACLK_MHZ	Freq-invariant counter LUT bounds

Parameter	Type	Default	Description
ACTIVE_TRANS_THRES HOLD	int	MAX_TRANSACT IONS/2	(cfg_freq_sel indexes within them) Active-transaction count that trips a threshold packet when cfg_threshold_enable=1. Replaces the former hardwired 8/4; threshold packets now scale with the table sizing
ENABLE_FILTERING	bit	1	Enable packet filtering: two active drop levels (packet type, then event code). Level 2 is reserved and routes nothing
ADD_PIPELINE_STAGE	bit	0	Add register stage for timing closure
USE_MONITOR	bit	1	Synthesis-time monitor enable. 0 = omit monitor and tie outputs to safe non-blocking defaults; 1 = full monitor functionality.
N_ADDR_RANGES	int	0	Number of address-range comparators. 0 = checker omitted (zero area). >0 = N independent [low, high] ranges; feeds the shared allowlist checker: a debug-range hit -> AddrMatch, an error-allowlist miss -> Error/ADDR_RANGE (see axi_monitor_addr_check.md).

Parameter	Type	Default	Description
ADDR_RANGE_IS_ERROR	logic [N_ADDR_RANGES-1:0]	'0	Per-range flavor: bit i = 0 -> DEBUG range (hit -> AddrMatch), 1 -> ERROR range (allowlist miss -> Error/ADDR_RANGE). Default all-0 (feature inert).

20.2.3 Synthesis-Cone Parameters

Each detection cone can be compiled out to save area. The classic cones default on; the debug cone defaults off. Setting a bit to 0 drops the corresponding cone at synthesis via a generate-if inside `axi_monitor_reporter` — the area saving is real.

Parameter	Type	Default	Effect when 0
ENABLE_ERROR_LOGIC	bit	1	Drop the error-detection cone
ENABLE_TIMEOUT_LOGIC	bit	1	Drop the timeout cone and the <code>axi_monitor_timeout</code> instance
ENABLE_COMPL_LOGIC	bit	1	Drop the completion cone
ENABLE_THRESHOLD_LOGIC	bit	1	Drop the threshold cone
ENABLE_PERF_LOGIC	bit	1	Gates only the reporter's legacy perf-packet cone and the two lifetime counters – the window FSM and meters are unconditional
ENABLE_DEBUG_LOGIC	bit	0	Drop the debug (trace) cone — the 6th reporter sub-block (off by default)

Internally the wrapper hardwires two master switches on its `axi_monitor_filtered` instance: `ENABLE_PERF_PACKETS = 1` (the reporter's legacy perf cone is built; `ENABLE_PERF_LOGIC` gates THAT cone only, never the measurement window) and `ENABLE_DEBUG_MODULE = 0` (debug tracking module omitted). These are not top-level parameters of the wrapper.

The transaction CAM is always pipelined.

20.2.4 Derived Parameters (do not override)

These are declared as parameter so the elaborator can compute them, not so callers can set them. Each defaults to an expression over the parameters above; overriding one desynchronises it from its source and the design fails to elaborate or silently mis-sizes a bus. Set the parameters they are derived FROM and leave these alone.

Derived parameter	Default expression
AXI_WSTRB_WIDTH	AXI_DATA_WIDTH / 8
AW	AXI_ADDR_WIDTH
DW	AXI_DATA_WIDTH
IW	AXI_ID_WIDTH
SW	AXI_WSTRB_WIDTH
UW	AXI_USER_WIDTH

20.3 Ports

20.3.1 AXI4 Read Channels

****Slave Interface (s_axi_*):**** - AR channel: arid, araddr, arlen, arsize, arburst, arlock, arcache, arprot, arqos, arregion, aruser, arvalid, arready - R channel: rid, rdata, rresp, rlast, ruser, rvalid, rready

****Backend Interface (fub_axi_*):**** - Same signals as slave, mirrored direction (to memory/backend)

20.3.2 Monitor Configuration

Configuration ports are identical to other AXI4 monitors: - Basic enables: cfg_monitor_enable (master runtime gate: 0 = monitor inert, CAM held clear, never stalls the datapath), cfg_error_enable, cfg_timeout_enable, cfg_perf_enable, cfg_compl_enable (completion packets), cfg_threshold_enable (threshold-crossed packets), cfg_debug_enable (debug/trace cone — the 6th reporter sub-block) - Clear: cam_clear (Input, 1) - synchronous clear of the monitor transaction CAM (driven from the harness clear control bit, e.g. CTRL[4]) - Thresholds: cfg_timeout_cycles (unified coarse timeout, a MICROSECOND count at full 16-bit width: 1..65535 us per phase, 0 = 16'hFFFF ~ effectively never; drives all three phase counts), cfg_latency_threshold - Filtering: 8 mask signals (cfg_axi_*_mask: pkt, error, timeout, compl, thresh, perf, addr, debug) plus cfg_axi_err_select - Performance window control: cfg_start_event_sel, cfg_end_event_sel, cfg_start_trigger, cfg_end_trigger, cfg_window_force_close (see [Performance Monitoring](#))

The inner monitor's cfg_debug_level (tied to 0), cfg_debug_mask (0) are fixed inside the wrapper; cfg_active_trans_threshold is driven by the

ACTIVE_TRANS_THRESHOLD parameter (default MAX_TRANSACTIONS/2), not hardwired to 8, and all three are **not** top-level ports on this module.

20.3.3 Monitor Bus Output

Port	Direction	Width	Description
monbus_valid	Output	1	Monitor packet valid
monbus_ready	Input	1	Downstream ready to accept packet
monbus_packet	Output	128	monitor_packet_t (see format below)
monbus_timestamp	Output	64	monbus_timestamp_t paired atomically with monbus_packet
debug_block_ready	Output	1	Observability tap for the block_ready gating net (drives nothing internally; leave unconnected if unused)
i_mon_time	Input	64	Free-running counter from monbus_group_core, sampled at packet emission

20.3.4 Status Outputs

Port	Direction	Width	Description
busy	Output	1	Indicates active transactions (for clock gating)
active_transactions	Output	8	Current number of outstanding transactions
error_count	Output	16	Lifetime count of error+timeout packets actually emitted (reporter perf counter; reads 0 when ENABLE_PERF_LOGIC=0 or

Port	Direction	Width	Description
transaction_count	Output	32	USE_MONITOR=0) Lifetime count of completion packets actually emitted (zero-extended 16-bit reporter perf counter; reads 0 when ENABLE_PERF_LOGIC=0 or USE_MONITOR=0)
cfg_conflict_error	Output	1	Configuration conflict detected

20.3.5 Packet filters

Two independent runtime filters cut monbus traffic without touching the datapath. Both are inert until driven, which is the failure to watch for: the build-time parameter only decides whether the logic is SYNTHESISED, and a design that sets the parameter but leaves the `cfg_*` ports tied low filters nothing and looks like the feature is broken.

Address-range filter — `ADDR_FILTER_ENABLE` (bit, default 0) builds it.

Port	Width	Description
cfg_addr_filter_enable	1	High: suppress packets for transactions outside the window. Low: inert, whatever the parameter says
cfg_addr_filter_low	ADDR_WIDTH	Window base, inclusive
cfg_addr_filter_high	ADDR_WIDTH	Window limit, inclusive


The verdict is latched per table entry at ALLOCATION, from the command address, and held for that entry's life. Widening the window mid-flight does not un-filter entries already admitted — which is exactly what makes it safe to reprogram live, since an entry's fate is decided when it is admitted and the retire accounting cannot be corrupted afterwards. Contrast the address-range CHECKER (`N_ADDR_RANGES`), which re-evaluates per command.

Runtime ID filter — overrides the `ID_MATCH_BASE/ID_MATCH_COUNT` elaboration constants so an instance can be retargeted at a different master without a rebuild.

Port	Width	Description
cfg_id_filter_enable	1	High: use the window below. Low: use the parameters, bit-identical to a build without this feature
cfg_id_match_base	ID_WIDTH	First ID owned
cfg_id_match_count	ID_WIDTH+1	How many; 0 means ALL, matching the parameter rule so a zeroed register block does not silently filter everything away

The window is half-open: [base, base + count).

20.4 Functional Description

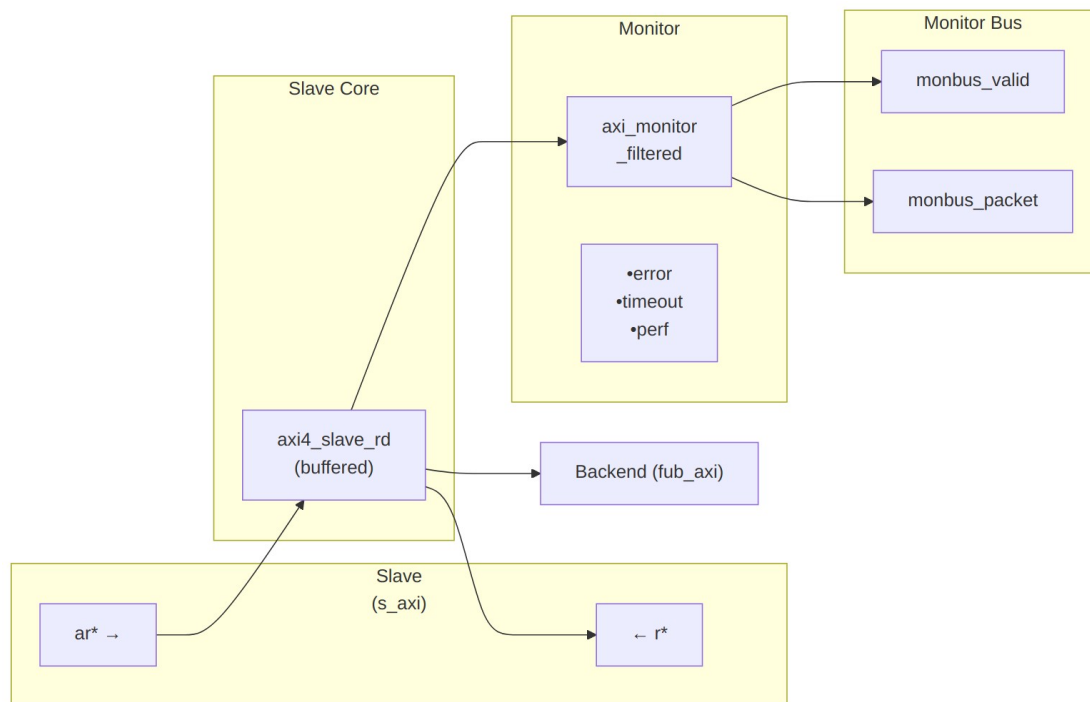

Architecture

The module instantiates two sub-modules: 1. **axi4_slave_rd** - Core AXI4 slave read functionality with buffering 2. **axi_monitor_filtered** - Transaction monitoring with 2-Level Filtering: packet-type drop masks + per-event masks (err_select is reserved – no routing)

20.4.1 Monitor Backpressure (block_ready)

block_ready is exported as the debug_block_ready output port – the wrapper deliberately makes the gating contract observable (the _mon_cg wrapper ties it off rather than forwarding it). It goes low when the monitor's transaction-table occupancy reaches its blocking threshold (a function of MAX_TRANSACTION; the reporter FIFO depth INTR_FIFO_DEPTH has no path to it). The wrapper ANDs it into the upstream-facing s_axi_arready so a saturated monitor throttles new transactions at the handshake instead of dropping events.

- **Where the stall lands:** the upstream s_axi_arready is forced low until the monitor drains.
- **When USE_MONITOR=0:** block_ready is internally tied high, so the wrapper imposes no stall and runs at full bandwidth.
- **When cfg_monitor_enable=0:** the wrapper gate forces the upstream ready open, so a runtime-disabled monitor can never stall the datapath (in-RTL formal property ap_disabled_never_stalls).

Recovery is guaranteed by the **saturation-recovery contract**: command-originated table entries are capped at MAX_TRANSACTION - cmd_entry_reserve(MAX_TRANSACTION) (reserve = 4 for tables of 16 or more, 0 below; the function lives in monitor_common_pkg), and block_ready re-asserts at occupancy < MAX_TRANSACTION - (reserve - 1) – a threshold strictly ABOVE the command cap – so a saturated table always drains back below the reopen point. Blocking throttles; it never deadlocks. Tables smaller than 16 keep full legacy allocation (small tables cannot spare slots) and trade the recovery guarantee for tracking capacity. The contract is verified by in-RTL formal properties (mutation-checked) and a 100-seed deliberately-undersized-table stream sweep; see [axi_monitor_base](#) for the canonical description.

Sizing note: a monitor on a bus shared by several channels/requesters must size MAX_TRANSACTION to cover NUM_CHANNELS × per-channel outstanding plus margin – the per-channel limit alone makes the monitor throttle the shared master. Tables deeper than 64 also need Verilator's --unroll-count raised (default 64) in sim builds.

20.4.2 Address-Range Checker

With N_ADDR_RANGES > 0 the wrapper instantiates the shared allowlist checker (axi_monitor_addr_check). Each range carries a DEBUG/ERROR flavor:

- **DEBUG range** — a hit emits a PktTypeAddrMatch (4'h8) packet with event code AXI_ADDR_RANGE_MATCH (8'h01), gated by cfg_debug_enable.

- **ERROR range** — the enabled ERROR ranges form an allowlist; an address in NONE of them emits a PktTypeError (4'h0) packet with event code AXI_ERR_ADDR_RANGE (8'h0D), gated by `cfg_error_enable`.

This wrapper exposes **ADDR_RANGE_IS_ERROR** (per-range) as a parameter, so ranges can be assigned to either flavor.

Config inputs (active only when `N_ADDR_RANGES > 0`): - `cfg_addr_check_enable` — master on/off for the checker. - `cfg_addr_range_enable[N-1:0]` — per-range enable bit. - `cfg_addr_range_low/high[N-1:0][AXI_ADDR_WIDTH-1:0]` — inclusive bounds.

Event encoding: `event_data[63:60]` = `range_index` (matching DEBUG range, or 4'hF sentinel on an ERROR miss); `event_data[59:0]` = full address. **Filtering:** `AddrMatch` is dropped by `cfg_axi_addr_mask[1]`, the ADDR_RANGE error by `cfg_axi_error_mask[13]`. See the checker page for coalescing + formal properties.

20.4.3 Performance Monitoring

The wrapper hardwires `ENABLE_PERF_PACKETS = 1` on its inner `axi_monitor_filtered`. The **measurement-window state machine** and its counters are unconditional `always_ff` blocks in `axi_monitor_base` – outside every generate – so they are present and running in EVERY build, including `ENABLE_PERF_LOGIC = 0`. That parameter reaches one consumer: the `g_perf` generate in `axi_monitor_reporter` holding the legacy perf-packet cone and the two 16-bit lifetime counters behind `perf_completed_count` / `perf_error_count`. Setting it to 0 saves that cone and nothing else. `USE_MONITOR = 0` is what ties the perfmon outputs off. The wrapper instantiates plus a bank of R-data-channel utilization counters. All counters accumulate **only while a window is open** (`window_active = 1`) and hold their values between windows, so the host can read a completed window's totals.

20.4.3.1 The Measurement Window

A window is opened by a **start event** and closed by an **end event**. The event sources are selected by `cfg_start_event_sel` / `cfg_end_event_sel` (3-bit; e.g. 3'b010 selects the `cfg_perf_enable` edge) and can also be fired directly by the `cfg_start_trigger` / `cfg_end_trigger` pulses (from an engine or CSR). `cfg_window_force_close` is a software override that closes the window immediately. While the window is open:

- `window_active` is high.
- `window_cycles[31:0]` free-runs, counting every clock elapsed inside the window.

Sample the counters on the cycle `window_active` falls to 0 (drive `cfg_end_trigger`, or wait for the configured end event).

20.4.3.2 Utilization Counters (R Data Channel)

Every cycle inside the window is classified by the R channel's `rvalid` / `rready` into exactly one of four buckets:

Output	Width	Condition	Meaning
<code>perf_prod_cycles</code>	32	<code>rvalid && rready</code>	productive beat transferred
<code>perf_bp_cycles</code>	32	<code>rvalid && !rready</code>	back-pressure (data offered, sink not ready)
<code>perf_starv_cycles</code>	32	<code>!rvalid && rready</code>	starvation (sink ready, no data)
<code>perf_idle_cycles</code>	32	<code>!rvalid && !rready</code>	idle

The four buckets sum to `window_cycles - 1` (the start cycle seeds `window_cycles` to 1 while the buckets reset to 0); the one-count skew is negligible for long windows.

20.4.3.3 Throughput Counters

Output	Width	Meaning
<code>perf_beat_count</code>	32	R data beats transferred (= <code>perf_prod_cycles</code> , 1 beat/cycle)
<code>perf_byte_count</code>	64	bytes transferred = beats × (1 << ARSIZE), using the ARSIZE captured at the most recent AR address phase (upper bound: counts full-width beats; an unaligned start address means the first beat carries fewer useful bytes)
<code>perf_burst_count</code>	32	AR address-phase handshakes

The integrator computes average burst length as `perf_beat_count / perf_burst_count`.

20.4.3.4 Performance Monitoring Ports

Port	Direction	Width	Description
cfg_perf_enable	Input	1	Enable performance-metric packet generation
cfg_start_event_sel	Input	3	Window start event source select
cfg_end_event_sel	Input	3	Window end event source select
cfg_start_trigger	Input	1	Pulse: open the measurement window
cfg_end_trigger	Input	1	Pulse: close the measurement window
cfg_window_force_close	Input	1	Software override: force the window closed
window_active	Output	1	High while a measurement window is open
window_cycles	Output	32	Cycles elapsed in the current window
perf_prod_cycles	Output	32	rvalid && rready cycles
perf_bp_cycles	Output	32	rvalid && !rready cycles (back-pressure)
perf_starv_cycles	Output	32	!rvalid && rready cycles (starvation)
perf_idle_cycles	Output	32	!rvalid && !rready cycles
perf_beat_count	Output	32	R data beats transferred
perf_byte_count	Output	64	bytes transferred
perf_burst_count	Output	32	AR address-phase handshakes

When USE_MONITOR = 0, every perfmon output is tied to 0 and the window never opens.

20.4.4 Monitor Packet Format

Identical 128-bit format (with 64-bit side-band timestamp) as other AXI4 monitors. See [axi4_master_rd_mon](#) for complete specification.

20.5 Timing Characteristics

Skid parameter	Default depth
SKID_DEPTH_AR	2 entries
SKID_DEPTH_R	4 entries

Each channel traverses one `gaxi_skid_buffer`, which registers both `rd_valid` and its storage. The **1-cycle input-to-output latency therefore applies on every transfer, including the un stalled case** – there is no combinational bypass. Depth buys backpressure absorption, not throughput; full rate is sustained once the pipeline is primed. Legal range is 2..8 inclusive, odd values included.

Clocking: `aclk`, reset `aresetn` (active-low asynchronous).


No synthesis numbers are quoted here. Frequency and area depend on the target device and the parameters you elaborate with; run your own build.

20.6 Waveforms

The following waveforms show AXI4 slave read monitor behavior from the slave perspective:

20.6.1 Scenario 1: Single-Beat Read (Slave View)

AXI4 read transaction from slave interface perspective:

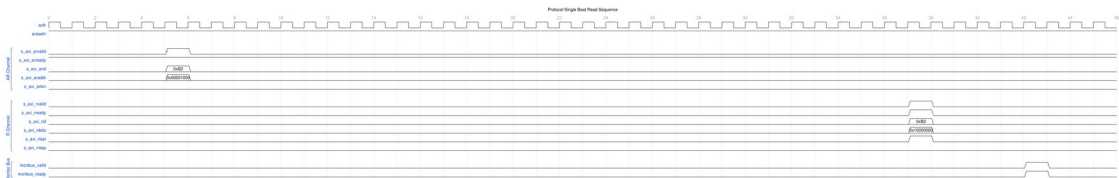


Single Beat Read Slave

WaveJSON: [single_beat_read_001.json](#)

Key Observations: - Slave-side AR channel (`s_axi_ar`) - *Slave-side R channel response* (`s_axi_r`) - Monitor packet generation from slave perspective - Slave RRESP status monitoring - Transaction tracking in slave context

20.6.2 Scenario 2: Alternative Single-Beat Read (Slave View)

Variant read transaction with different timing from slave:

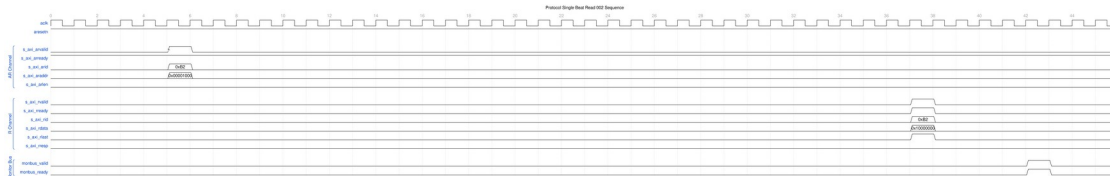

Single Beat Read Slave Alt

WaveJSON: [single_beat_read_002_001.json](#)

Key Observations: - Slave ready signal behavior - ARREADY backpressure effects - RVALID generation timing - Slave latency monitoring - Error detection from slave side

20.7 Usage Examples

Every parameter and port below is read from the module declaration.

```
axi4_slave_rd_mon #(
    .SKID_DEPTH_AR      (2),
    .SKID_DEPTH_R       (4),
    .AXI_ID_WIDTH       (8),
    .AXI_ADDR_WIDTH     (32),
    .AXI_DATA_WIDTH     (32),
    .AXI_USER_WIDTH     (1),
    .ACLK_MHZ           (100),
    .USE_MONITOR         (1'b1),
    .N_ADDR_RANGES      (0),
    .ADDR_RANGE_IS_ERROR ('0')
) u_axi4_slave_rd_mon (
    .aclk                (aclk),
    .aresetn             (aresetn),
    .cam_clear           (cam_clear),
    .s_axi_arid          (s_axi_arid),
    .s_axi_araddr        (s_axi_araddr),
    .s_axi_arlen         (s_axi_arlen),
    .s_axi_arsize        (s_axi_arsize),
    .s_axi_arburst       (s_axi_arburst),
    .s_axi_arlock        (s_axi_arlock),
    .s_axi_arcache       (s_axi_arcache),
    .s_axi_arprot        (s_axi_arprot),
    .s_axi_arqos         (s_axi_arqos),
    .s_axi_arregion      (s_axi_arregion),
```

.s_axi_aruser	(s_axi_aruser),
.s_axi_arvalid	(s_axi_arvalid),
.s_axi_arready	(s_axi_arready),
.s_axi_rid	(s_axi_rid),
.s_axi_rdata	(s_axi_rdata),
.s_axi_rresp	(s_axi_rresp),
.s_axi_rlast	(s_axi_rlast),
.s_axi_ruser	(s_axi_ruser),
.s_axi_rvalid	(s_axi_rvalid),
.s_axi_rready	(s_axi_rready),
.fub_axi_arid	(fub_axi_arid),
.fub_axi_araddr	(fub_axi_araddr),
.fub_axi_arlen	(fub_axi_arlen),
.fub_axi_arsize	(fub_axi_arsize),
.fub_axi_arburst	(fub_axi_arburst),
.fub_axi_arlock	(fub_axi_arlock),
.fub_axi_arcache	(fub_axi_arcache),
.fub_axi_arprot	(fub_axi_arprot),
.fub_axi_arqos	(fub_axi_arqos),
.fub_axi_arregion	(fub_axi_arregion),
.fub_axi_aruser	(fub_axi_aruser),
.fub_axi_arvalid	(fub_axi_arvalid),
.fub_axi_arready	(fub_axi_arready),
.fub_axi_rid	(fub_axi_rid),
.fub_axi_rdata	(fub_axi_rdata),
.fub_axi_rresp	(fub_axi_rresp),
.fub_axi_rlast	(fub_axi_rlast),
.fub_axi_ruser	(fub_axi_ruser),
.fub_axi_rvalid	(fub_axi_rvalid),
.fub_axi_rready	(fub_axi_rready),
.cfg_monitor_enable	(cfg_monitor_enable),
.cfg_error_enable	(cfg_error_enable),
.cfg_timeout_enable	(cfg_timeout_enable),
.cfg_perf_enable	(cfg_perf_enable),
.cfg_compl_enable	(cfg_compl_enable),
.cfg_threshold_enable	(cfg_threshold_enable),
.cfg_debug_enable	(cfg_debug_enable),
.cfg_timeout_cycles	(cfg_timeout_cycles),
.cfg_freq_sel	(cfg_freq_sel),
.cfg_latency_threshold	(cfg_latency_threshold),
.cfg_axi_pkt_mask	(cfg_axi_pkt_mask),
.cfg_axi_err_select	(cfg_axi_err_select),
.cfg_axi_error_mask	(cfg_axi_error_mask),
.cfg_axi_timeout_mask	(cfg_axi_timeout_mask),
.cfg_axi_compl_mask	(cfg_axi_compl_mask),
.cfg_axi_thresh_mask	(cfg_axi_thresh_mask),
.cfg_axi_perf_mask	(cfg_axi_perf_mask),
.cfg_axi_addr_mask	(cfg_axi_addr_mask),

```

.cfg_axi_debug_mask      (cfg_axi_debug_mask),
.cfg_addr_check_enable  (cfg_addr_check_enable),
.cfg_addr_range_enable  (cfg_addr_range_enable),
.cfg_addr_range_low     (cfg_addr_range_low),
.cfg_addr_range_high    (cfg_addr_range_high),
.cfg_id_filter_enable   (cfg_id_filter_enable),
.cfg_id_match_base      (cfg_id_match_base),
.cfg_id_match_count     (cfg_id_match_count),
.cfg_addr_filter_enable (cfg_addr_filter_enable),
.cfg_addr_filter_low    (cfg_addr_filter_low),
.cfg_addr_filter_high   (cfg_addr_filter_high),
.cfg_start_event_sel    (cfg_start_event_sel),
.cfg_end_event_sel      (cfg_end_event_sel),
.cfg_start_trigger      (cfg_start_trigger),
.cfg_end_trigger        (cfg_end_trigger),
.cfg_window_force_close (cfg_window_force_close),
.i_mon_time             (i_mon_time),
.monbus_valid           (monbus_valid),
.monbus_ready           (monbus_ready),
.monbus_packet          (monbus_packet),
.monbus_timestamp       (monbus_timestamp),
.busy                   (busy),
.active_transactions    (active_transactions),
.error_count            (error_count),
.transaction_count      (transaction_count),
.debug_block_ready      (debug_block_ready),
.window_active          (window_active),
.window_cycles          (window_cycles),
.perf_prod_cycles       (perf_prod_cycles),
.perf_bp_cycles         (perf_bp_cycles),
.perf_starv_cycles      (perf_starv_cycles),
.perf_idle_cycles       (perf_idle_cycles),
.perf_beat_count        (perf_beat_count),
.perf_byte_count        (perf_byte_count),
.perf_burst_count       (perf_burst_count),
.cfg_conflict_error     (cfg_conflict_error)
);

```

20.8 Design Notes

20.8.1 Slave-Side Monitoring

Key Differences from Master Monitors: - Monitors from slave perspective (interconnect → backend) - Tracks backend response latency - Detects backend timeout scenarios - Default UNIT_ID=2, AGENT_ID=20 (distinguishes from master)

Slave Read Sequence: 1. AR channel: Master request arrives at slave 2. Monitor captures: Address, ID, burst parameters 3. AR forwarded to backend (memory/logic) 4. R channel: Backend

returns data 5. Monitor tracks: Response latency, RLAST, RRESP 6. R forwarded back to master via interconnect

Common Slave Errors Detected: - **Backend timeout:** AR accepted but R never returned - **SLVERR:** Slave error (access violation, parity error) - **DECERR:** Decode error (shouldn't occur at slave, but detected) - (Read burst-length mismatch is NOT checked: reads complete on RLAST or error RRESP; expected_beats is stored but never compared) - **ID corruption:** RID doesn't match tracked ARID

20.8.2 Performance Considerations

Backend Latency Monitoring: - Tracks AR -> R LAST-beat latency (data_timestamp is written on the final beat; there is no first-beat timestamp) - Configurable timeout threshold - Separate from master-side latency

Typical Timeout Values: - SRAM backend: 1-5 us - DDR controller: 10-50 us - PCIe/external: 100+ us (the knob is a MICROSECOND count, not clock cycles)

20.8.3 Buffer Depth Guidelines

Same as [axi4_slave_rd](#): - **SKID_DEPTH_AR:** 2 (default) - handles interconnect backpressure - **SKID_DEPTH_R:** 4 (default) - buffers backend burst data - Increase for high-latency backends or large bursts

20.9 Related Modules

20.9.1 Companion Monitors

- [axi4_master_rd_mon](#) - AXI4 master read with monitoring
- [axi4_master_wr_mon](#) - AXI4 master write with monitoring
- [axi4_slave_wr_mon](#) - AXI4 slave write with monitoring

20.9.2 Base Modules

- [axi4_slave_rd](#) - Functional AXI4 slave read (without monitoring)
- [axi_monitor_filtered](#) - Monitoring engine with filtering (monitor/)

20.9.3 Used Components

- [gaxi_skid_buffer](#) - Elastic buffering
 - [axi_monitor_base](#) - Core monitoring logic (monitor/)
 - [axi_monitor_trans_mgr](#) - Transaction tracking (monitor/)
-

20.10 Testing

`val/amba/test_axi4_slave_rd_mon.py` exercises this module. It collects 3 parameter cases at the default `REG_LEVEL`.

```
source env_python
pytest val/amba/test_axi4_slave_rd_mon.py -v
```

20.11 References

20.11.1 Specifications

- ARM IHI 0022E: AMBA AXI Protocol Specification (AXI4)
- Monitor Bus Packet Format: [monitor_package_spec.md](#)

20.11.2 Source Code

- RTL: `rtl/amba/axi4/axi4_slave_rd_mon.sv`
- Tests: `val/amba/test_axi4_slave_rd_mon.py`
- Framework: `bin/TBClasses/components/axi4/`

20.11.3 Documentation

- Configuration Guide: [AXI Monitor Base](#)
 - Architecture: [rtl-amba Overview](#)
 - AXI4 Index: [README.md](#)
-

Last Updated: 2026-07-18

20.12 Navigation

- [← Back to AXI4 Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

21 AXI4 Slave Read Monitor (Clock-Gated)

Module: `axi4_slave_rd_mon_cg.sv` **Base Module:** [axi4_slave_rd_mon](#) **Location:** `rtl/amba/axi4/` (protocol monitors live with their protocol; only the monitor CORE pieces are in `rtl/amba/monitor/`) **Status:** Production Ready

21.1 Overview

This is the **clock-gated variant** of [axi4_slave_rd_mon](#) — the same monitored slave read, with activity-based clock gating wrapped around it.

For complete clock-gating documentation, usage examples, and configuration guidelines, see the [Clock-Gated Variants Guide](#).

What the wrapper buys you:

- **Same Functionality:** 100% equivalent to base module
 - **Power Savings:** traffic-dependent; unmeasured in this repo – treat any percentage as a placeholder until characterized
 - **Configurable:** Idle threshold, gating domains, enable/disable
 - **Zero Overhead When Disabled:** `cfg_cg_enable=0` bypasses the gate at runtime
-

21.2 Parameters

MOST [axi4_slave_rd_mon](#) parameters pass through. As of 2026-09-01 only `ACTIVE_TRANS_THRESHOLD` is NOT forwarded, and that one is harmless: its inner default is `MAX_TRANSACTIONS/2`, computed from the `MAX_TRANSACTIONS` this wrapper DOES forward.

An earlier version of this page listed nine more as unforwarded, which was accurate when written. `ACLK_MHZ`, `CFI_MIN_FREQ_MHZ`, `CFI_MAX_FREQ_MHZ`, `USE_WDATA_ORDER_Q`, `NUM_BANKS` and `ADDR_RANGE_IS_ERROR` were threaded through every `_cg` wrapper on 2026-09-01, and `ID_FILTER_ENABLE` / `ID_MATCH_BASE` / `ID_MATCH_COUNT` the day before. Until then a clock-gated build could not state its clock frequency, so the 1 us timer tick was pinned to the 100 MHz default and every microsecond-denominated timeout was miscalibrated on any other clock – silently.

Parameter	Default	Description
<code>CG_IDLE_COUNT_WIDTH</code>	4	Width of the idle countdown, sizing <code>cfg_cg_idle_count</code>
<code>USE_MONITOR</code>	1	Synthesis-time monitor

Parameter	Default	Description
		enable (forwarded to inner monitor).
N_ADDR_RANGES	0	Number of address-range comparators (forwarded to base module).
ADDR_FILTER_ENABLE	0	Synthesises the address-range report filter. The parameter only decides whether the logic EXISTS – a build that sets it and leaves <code>cfg_addr_filter_enable</code> low filters nothing and looks broken.
ID_FILTER_ENABLE	0	Synthesises the ID report filter (see <code>cfg_id_*</code> for the runtime override).
ID_MATCH_BASE	0	First ID this instance owns.
ID_MATCH_COUNT	0	How many IDs; 0 means ALL, so a zeroed register block does not silently filter everything away.
ADD_PIPELINE_STAGE	0	Insert a register stage for timing closure. Costs a cycle of latency. (Add register stage for timing closure)
ENABLE_FILTERING	1	Enable packet filtering: two active drop levels (packet type, then event code). Level 2 is reserved and routes nothing.
SKID_DEPTH_AR	2	Skid-buffer depth on the AR channel. Legal range 2..8 inclusive; odd depths are legal.
SKID_DEPTH_R	4	Skid-buffer depth on the R

Parameter	Default	Description
AGENT_ID	16'h0014	channel. Legal range 2..8 inclusive; odd depths are legal. Agent identifier emitted in the agent_id field of every monitor packet. Pairs with UNIT_ID to identify the packet source. (16-bit Agent ID for monitor packets)
UNIT_ID	8'h02	Unit identifier emitted in the unit_id field of every monitor packet. Give each monitored interface a distinct value or the packets cannot be told apart at the collector. (8-bit Unit ID for monitor packets)

Gating is controlled by RUNTIME inputs `cfg_cg_enable / cfg_cg_idle_count` with status outputs `cg_gating / cg_idle`; ONE `amba_clock_gate_ctrl` gates the entire inner module. (The `ENABLE_CLOCK_GATING / CG_IDLE_CYCLES / CG_GATE_*` interface this page once documented never existed.)

Base-module ports are forwarded EXCEPT `debug_block_ready`, which this wrapper ties off (use the base module for the backpressure tap) – including the full performance-monitoring interface (see [Performance Monitoring](#) below). The six `ENABLE_*_LOGIC` synthesis-cone parameters (`ENABLE_ERROR_LOGIC`, `ENABLE_TIMEOUT_LOGIC`, `ENABLE_COMPL_LOGIC`, `ENABLE_THRESHOLD_LOGIC`, `ENABLE_PERF_LOGIC`, `ENABLE_DEBUG_LOGIC`) and the `cfg_compl_enable / cfg_threshold_enable / cfg_debug_enable` control enables are also passed straight through.

21.2.1 Filter configuration (forwarded)

These reach the inner monitor through this wrapper; before 2026-09-01 they did not.

Port	Direction	Width	Description
<code>cfg_addr_filter_enable</code>	Input	1	High: suppress packets for transactions outside the window. Low: inert, whatever

Port	Direction	Width	Description
			ADDR_FILTER_ENABLE says
cfg_addr_filter_low	Input	ADDR_WIDTH H	Window base, inclusive
cfg_addr_filter_high	Input	ADDR_WIDTH H	Window limit, inclusive
cfg_id_filter_enable	Input	1	High: use the runtime window below instead of the ID_MATCH_* parameters
cfg_id_match_base	Input	ID_WIDTH	First ID to accept
cfg_id_match_count	Input	ID_WIDTH+1	How many; 0 means ALL

Neither filter un-filters entries already admitted to the transaction table, which is what makes changing them at runtime safe.

21.2.2 Derived Parameters (do not override)

These are declared as parameter so the elaborator can compute them, not so callers can set them. Each defaults to an expression over the parameters above; overriding one desynchronises it from its source and the design fails to elaborate or silently mis-sizes a bus. Set the parameters they are derived FROM and leave these alone.

Derived parameter	Default expression
AXI_WSTRB_WIDTH	AXI_DATA_WIDTH / 8
AW	AXI_ADDR_WIDTH
DW	AXI_DATA_WIDTH
IW	AXI_ID_WIDTH
SW	AXI_WSTRB_WIDTH
UW	AXI_USER_WIDTH

21.3 Ports

Port	Dir	Width	Description
aclk	In	1	
aresetn	In	1	

Port	Dir	Width	Description
cam_clear	In	1	sync clear of the monitor trans CAM
s_axi_arid	In	[IW-1:0]	
s_axi_araddr	In	[AW-1:0]	
s_axi_arlen	In	[7:0]	
s_axi_arsize	In	[2:0]	
s_axi_arburst	In	[1:0]	
s_axi_arlock	In	1	
s_axi_arcache	In	[3:0]	
s_axi_arprot	In	[2:0]	
s_axi_arqos	In	[3:0]	
s_axi_arregion	In	[3:0]	
s_axi_aruser	In	[UW-1:0]	
s_axi_arvalid	In	1	
s_axi_arready	Out	1	
s_axi_rid	Out	[IW-1:0]	
s_axi_rdata	Out	[DW-1:0]	
s_axi_rresp	Out	[1:0]	
s_axi_rlast	Out	1	
s_axi_ruser	Out	[UW-1:0]	
s_axi_rvalid	Out	1	
s_axi_rready	In	1	
fub_axi_arid	Out	[IW-1:0]	
fub_axi_araddr	Out	[AW-1:0]	
fub_axi_arlen	Out	[7:0]	
fub_axi_arsize	Out	[2:0]	
fub_axi_arburst	Out	[1:0]	
fub_axi_arlock	Out	1	
fub_axi_arcache	Out	[3:0]	

Port	Dir	Width	Description
fub_axi_arprot	Out	[2:0]	
fub_axi_arqos	Out	[3:0]	
fub_axi_arregion	Out	[3:0]	
fub_axi_aruser	Out	[UW-1:0]	
fub_axi_arvalid	Out	1	
fub_axi_arready	In	1	
fub_axi_rid	In	[IW-1:0]	
fub_axi_rdata	In	[DW-1:0]	
fub_axi_rresp	In	[1:0]	
fub_axi_rlast	In	1	
fub_axi_ruser	In	[UW-1:0]	
fub_axi_rvalid	In	1	
fub_axi_rready	Out	1	
cfg_monitor_enable	In	1	Enable monitoring
cfg_error_enable	In	1	Enable error detection
cfg_timeout_enable	In	1	Enable timeout detection
cfg_perf_enable	In	1	Enable performance monitoring
cfg_compl_enable	In	1	Enable completion packets
cfg_threshold_enable	In	1	Enable threshold packets
cfg_debug_enable	In	1	Enable debug packets
cfg_timeout_cycles	In	[15:0]	Timeout threshold in MICROSECONDS

Port	Dir	Width	Description
			(1 us tick), despite the name
cfg_freq_sel	In	[3:0]	counter_freq_invariant LUT index
cfg_latency_threshold	In	[31:0]	Latency threshold for alerts
cfg_axi_pkt_mask	In	[15:0]	Drop mask for packet types
cfg_axi_err_select	In	[15:0]	Error select for packet types (for future routing)
cfg_axi_error_mask	In	[15:0]	Individual error event mask
cfg_axi_timeout_mask	In	[15:0]	Individual timeout event mask
cfg_axi_compl_mask	In	[15:0]	Individual completion event mask
cfg_axi_thresh_mask	In	[15:0]	Individual threshold event mask
cfg_axi_perf_mask	In	[15:0]	Individual performance event mask
cfg_axi_addr_mask	In	[15:0]	Individual address match event mask
cfg_axi_debug_mask	In	[15:0]	Individual debug event mask
cfg_cg_enable	In	1	Enable clock gating
cfg_cg_idle_count	In	[CG_IDLE_COUNT_WIDTH-1:0]	Idle cycles before gating

Port	Dir	Width	Description
cfg_addr_check_enable	In	1	
cfg_addr_range_enable	In	[(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1) - 1:0]	
cfg_addr_range_low	In	[(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1) - 1:0]	
cfg_addr_range_high	In	[(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1) - 1:0]	
cfg_addr_filter_enable	In	1	
cfg_addr_filter_low	In	[AW-1:0]	
cfg_addr_filter_high	In	[AW-1:0]	
cfg_id_filter_enable	In	1	
cfg_id_match_base	In	[IW-1:0]	
cfg_id_match_count	In	[IW:0]	
i_mon_time	In	1	
monbus_valid	Out	1	Monitor bus valid
monbus_ready	In	1	Monitor bus ready
monbus_packet	Out	1	Monitor packet (128-bit)
monbus_timestamp	Out	1	Side-band sampled time
busy	Out	1	
active_transactions	Out	[7:0]	Number of active transactions
error_count	Out	[15:0]	Total error count
transaction_count	Out	[31:0]	Total transaction

Port	Dir	Width	Description
			count
cg_gating	Out	1	Gated clock is stopped
cg_idle	Out	1	No activity observed
cfg_conflict_err or	Out	1	Configuration conflict detected
cfg_start_event_ sel	In	[2:0]	
cfg_end_event_ sel	In	[2:0]	
cfg_start_trigge r	In	1	
cfg_end_trigger	In	1	
cfg_window_force_ _close	In	1	
window_active	Out	1	
window_cycles	Out	[31:0]	
perf_prod_cycles	Out	[31:0]	
perf_bp_cycles	Out	[31:0]	
perf_starv_cycle s	Out	[31:0]	
perf_idle_cycles	Out	[31:0]	
perf_beat_count	Out	[31:0]	
perf_byte_count	Out	[63:0]	
perf_burst_count	Out	[31:0]	

21.4 Functional Description

21.4.1 Performance Monitoring

The clock-gated wrapper exposes the full perfmon interface of the base module and **forwards every port unchanged** to the inner `axi4_slave_rd_mon`. The measurement-window state machine, the four R-channel utilization buckets (productive / back-pressure / starvation / idle), and the beat/byte/burst throughput counters behave exactly as documented in the base module —

see [Performance Monitoring in axi4_slave_rd_mon](#) for the full narrative and per-bit semantics.

Forwarded perfmon ports (identical width and direction to the base module):

- **Inputs:** `cfg_perf_enable`, `cfg_start_event_sel` (3), `cfg_end_event_sel` (3), `cfg_start_trigger`, `cfg_end_trigger`, `cfg_window_force_close`
- **Outputs:** `window_active`, `window_cycles` (32), `perf_prod_cycles` (32), `perf_bp_cycles` (32), `perf_starv_cycles` (32), `perf_idle_cycles` (32), `perf_beat_count` (32), `perf_byte_count` (64), `perf_burst_count` (32)

The `perf_burst_count` output tracks AR (read address) handshakes. **WARNING – gating vs window accounting:** an open measurement window is NOT a wake term, and the entire inner monitor (window state machine and counters included) runs on the gated clock. If the bus idles past `cfg_cg_idle_count` with a window open, the counters FREEZE while wall-clock time passes, and trigger pulses arriving while gated are DROPPED. For exact wall-clock windows or idle-bus triggering, hold `cfg_cg_enable` low around the measurement, or use the base module.

21.5 Timing Characteristics

Skid parameter	Default depth
SKID_DEPTH_AR	2 entries
SKID_DEPTH_R	4 entries

Each channel traverses one `gaxi_skid_buffer`, which registers both `rd_valid` and its storage. The **1-cycle input-to-output latency therefore applies on every transfer, including the un stalled case** – there is no combinational bypass. Depth buys backpressure absorption, not throughput; full rate is sustained once the pipeline is primed. Legal range is 2..8 inclusive, odd values included.

Clocking: `aclk`, reset `aresetn` (active-low asynchronous).

No synthesis numbers are quoted here. Frequency and area depend on the target device and the parameters you elaborate with; run your own build.

21.6 Usage Examples

```
axi4_slave_rd_mon_cg #(
    // Base module parameters (see axi4_slave_rd_mon.md)
    .AXI_ID_WIDTH(8),
    .AXI_ADDR_WIDTH(32),
    .AXI_DATA_WIDTH(64),
```

```

        .CG_IDLE_COUNT_WIDTH(4)
    ) u_cg (
        .aclk(clk),
        .aresetn(rst_n),
        .cfg_cg_enable(1'b1),
        .cfg_cg_idle_count(4'd8),
        .cg_gating(), .cg_idle(),
        // ... all other ports same as axi4_slave_rd_mon (except
        debug_block_ready)
    );

```

21.7 Design Notes

A peer's READY must never enter the activity term. A consumer that parks its response-ready high while idle is behaving correctly; folding that signal into user_valid pins this block permanently awake and defeats gating entirely – silently, because function is unaffected. Ten wrappers in this repository shipped that way and nothing failed until someone measured. `val/amba/test_cg_peer_ready.py` parks the peer READY high, holds every VALID low, and requires `cg_gating`. Canonical rule: `vault/handbook/design/clock-gating-activity-terms.md`.

cfg_cg_enable is not a kill switch. It arms gating and reaches `amba_clock_gate_ctrl` only; the datapath and any monitor enables are forwarded untouched. With it low the clock free-runs and this module behaves exactly like its base.

Gating latency. The clock stops `cfg_cg_idle_count + 2` cycles after the last bus activity – the idle counter, plus one for the `r_wakeup` flop. Size the idle count against your traffic's inter-burst gap: too small and the block wakes constantly, too large and it never gates.

Cost. Five flops: `r_wakeup` plus `r_idle_counter` at `IDLE_CNTR_WIDTH`, scaling as $1 + \text{CG_IDLE_COUNT_WIDTH}$. The ICG itself is a latch or BUFGCE, not fabric flops.

21.8 Related Modules

- **Base Module Functionality:** [axi4_slave_rd_mon.md](#)
- **Clock Gating Guide:** [clock_gated_variants.md](#)
- **Detailed CG Examples:**
 - [axi4_master_rd_mon_cg.md](#) (AXI4 monitor)
 - [axil4_master_rd_mon_cg.md](#) (AXIL4 monitor)
 - [apb4_slave_cg.md](#) (APB interface)

21.9 Testing

`val/amba/test_axi4_slave_rd_mon_cg.py` exercises this module. It collects 3 parameter cases at the default `REG_LEVEL`.

```
source env_python
pytest val/amba/test_axi4_slave_rd_mon_cg.py -v
```

21.10 Navigation

- [← Back to AXI4 Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

22 AXI4 Slave Read with Lite Monitor

Module: `axi4_slave_rd_monlite.sv` **Location:** `rtl/amba/axi4/` **Status:** Production Ready
(amba/monitor-lite TASK-001, 2026-09-26)

22.1 Overview

`axi4_slave_rd_monlite` is `axi4_slave_rd` with `axi_monitor_lite` watching its slave-side read channels. It is the lite-monitor sibling of `axi4_slave_rd_mon`: same core, same taps, same 128-bit `monitor_packet_t` on the same monbus with the same `UNIT_ID/AGENT_ID`, so the monbus arbiter, the AXI-Lite group, the tally and the host tooling cannot tell the two apart. The difference is what it costs and what it can be asked for: about a fifth of the monitor LUTs (677 against 3,249 per read monitor in the same bridge fixture, see [axi_monitor_lite](#)), and only the four packet classes the lite emits: error, timeout, completion and active-count threshold.

22.1.1 What is not here

Compared with `axi4_slave_rd_mon`: no performance window or counters, no debug packets, no address-range checker, no ID or address filters, no per-event masks, no latency threshold, and no `block_ready`. The lite never stalls the port: an event it cannot deliver is dropped and counted (dropped_count, reported as an `EVENT_DROPPED` packet), and a command that finds no free table entry is counted (refused_count) and left untracked, so its beats report as orphans.

22.1.2 Key Features

- Every axi4_slave_rd parameter and port, declared verbatim and passed through by name
 - axi_monitor_lite on the s_-side taps; USE_MONITOR=0 omits it and ties its outputs
 - Nine config inputs: the enables, the microsecond timeout, the tick LUT index and the packet-type mask
 - Five status outputs, two of them (dropped_count, refused_count) unique to the lite
-

22.2 Parameters

22.2.1 Monitor Parameters

Parameter	Type	Default	Description
USE_MONITOR	bit	1'b1	0 = omit the monitor, tie its outputs
UNIT_ID	logic [7:0]	8'h02	Unit id in every packet
AGENT_ID	logic [15:0]	16'h0014	Agent id in every packet
MAX_TRANSACTIONS	int	8	table entries; a command finding none is counted, not tracked
ACTIVE_TRANS_THR ESHOLD	int	MAX_TRANSACTIONS / 2	Table occupancy that fires a threshold packet (rising edge)
OUT_DEPTH	int	4	monbus output queue, a power of two
ACLK_MHZ	int	100	Clock in MHz; keeps the 1 us tick

Parameter	Type	Default	Description
CFI_MIN_FREQ_MHZ	int	ACLK_MHZ	exact Frequency-invariant tick LUT lower bound (cfg_freq_sel indexes it)
CFI_MAX_FREQ_MHZ	int	ACLK_MHZ	Frequency-invariant tick LUT upper bound

22.2.2 Core Parameters (passed through to axi4_slave_rd)

Parameter	Type	Default	Description
N_ADDR_RANGES	int	0	address-range checker windows; 0 = not built
ADDR_RANGE_IS_ERROR	logic [(N_ADDR_RANGE S > 0 ? N_ADDR_RANGES : 1)-1:0]	'0	per range: 1 = miss is an error, 0 = hit is a match
SKID_DEPTH_AR	int	2	as on axi4_slave_rd
SKID_DEPTH_R	int	4	as on axi4_slave_rd
AXI_ID_WIDTH	int	8	as on axi4_slave_rd
AXI_ADDR_WIDTH	int	32	as on axi4_slave_rd
AXI_DATA_WIDTH	int	32	as on axi4_slave_rd
AXI_USER_WIDTH	int	1	as on axi4_slave_rd
AXI_WSTRB_WIDTH	int	AXI_DATA_WIDTH / 8	as on axi4_slave_rd
AW	int	AXI_ADDR_WIDTH	as on axi4_slave_rd

Parameter	Type	Default	Description
DW	int	AXI_DATA_WIDTH	as on axi4_slave_rd
IW	int	AXI_ID_WIDTH	as on axi4_slave_rd
SW	int	AXI_WSTRB_WIDTH	as on axi4_slave_rd
UW	int	AXI_USER_WIDTH	as on axi4_slave_rd
ARSize	int	IW+AW+8+3+2+1+4+ 3+4+4+UW	as on axi4_slave_rd
RSize	int	IW+DW+2+1+UW	as on axi4_slave_rd

22.3 Ports

22.3.1 Monitor Control, Bus and Status

Port	Direction	Type	Description
cam_clear	input	logic	sync clear of the monitor's table (named as on the _mon wrapper: pin-compatible)
cfg_monitor_enab le	input	logic	0 = monitor inert, table held clear
cfg_error_enable	input	logic	
cfg_timeout_enab le	input	logic	
cfg_compl_enable	input	logic	
cfg_threshold_en able	input	logic	
cfg_timeout_cycl es	input	logic [15:0]	MICROSECONDS of no progress; 0 = never
cfg_freq_sel	input	logic [3:0]	counter_freq_inva riant LUT index

Port	Direction	Type	Description
cfg_axi_pkt_mask	input	logic [15:0]	drop mask by packet type
i_mon_time	input	monitor_common_pkg::monbus_times_tamp_t	
monbus_valid	output	logic	
monbus_ready	input	logic	
monbus_packet	output	monitor_common_pkg::monitor_packet_t	
monbus_timestamp	output	monitor_common_pkg::monbus_times_tamp_t	
active_transactions	output	logic [7:0]	entries in the table
error_count	output	logic [15:0]	error + timeout packets emitted
transaction_count	output	logic [31:0]	completion packets emitted
dropped_count	output	logic [15:0]	events lost to monbus backpressure since the last report
refused_count	output	logic [15:0]	commands that found no free table entry

22.3.2 Core Ports (as on axi4_slave_rd)

Port	Direction	Type	Description
aclk	input	logic	
aresetn	input	logic	
s_axi_arid	input	logic [IW-1:0]	
s_axi_araddr	input	logic [AW-1:0]	
s_axi_arlen	input	logic [7:0]	

Port	Direction	Type	Description
s_axi_arsize	input	logic [2:0]	
s_axi_arburst	input	logic [1:0]	
s_axi_arlock	input	logic	
s_axi_arcache	input	logic [3:0]	
s_axi_arprot	input	logic [2:0]	
s_axi_arqos	input	logic [3:0]	
s_axi_arregion	input	logic [3:0]	
s_axi_aruser	input	logic [UW-1:0]	
s_axi_arvalid	input	logic	
s_axi_arready	output	logic	
s_axi_rid	output	logic [IW-1:0]	
s_axi_rdata	output	logic [DW-1:0]	
s_axi_rresp	output	logic [1:0]	
s_axi_rlast	output	logic	
s_axi_ruser	output	logic [UW-1:0]	
s_axi_rvalid	output	logic	
s_axi_rready	input	logic	
fub_axi_arid	output	logic [IW-1:0]	
fub_axi_araddr	output	logic [AW-1:0]	
fub_axi_arlen	output	logic [7:0]	
fub_axi_arsize	output	logic [2:0]	
fub_axi_arburst	output	logic [1:0]	
fub_axi_arlock	output	logic	
fub_axi_arcache	output	logic [3:0]	
fub_axi_arprot	output	logic [2:0]	
fub_axi_arqos	output	logic [3:0]	
fub_axi_arregion	output	logic [3:0]	
fub_axi_aruser	output	logic [UW-1:0]	
fub_axi_arvalid	output	logic	
fub_axi_arready	input	logic	

Port	Direction	Type	Description
fub_axi_rid	input	logic [IW-1:0]	
fub_axi_rdata	input	logic [DW-1:0]	
fub_axi_rresp	input	logic [1:0]	
fub_axi_rlast	input	logic	
fub_axi_ruser	input	logic [UW-1:0]	
fub_axi_rvalid	input	logic	
fub_axi_rready	output	logic	
busy	output	logic	
cfg_latency_thre shold	input	logic [31:0]	completion latency (cycles) above this -> Threshold/LATEN CY
cfg_addr_check_e nable	input	logic	
cfg_addr_match_e nable	input	logic	hit in a match range -> AddrMatch packet
cfg_addr_range_e nable	input	logic [(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1)-1:0]	
cfg_addr_range_l ow	input	logic [(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1)-1:0][AW-1:0]	
cfg_addr_range_h igh	input	logic [(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1)-1:0][AW-1:0]	

22.4 Functional Description

The core is instantiated untouched; unlike `axi4_slave_rd_mon` there is no gating of the command handshake, because the lite has no admission stall. The monitor taps the `s_-side` command, data and response channels through three `valids` gated by `cfg_monitor_enable`, which also holds the table clear while low. `cfg_timeout_cycles` is a microsecond count of no progress on an entry, passed at full width; 0 means never. The active-count threshold is the parameter `ACTIVE_TRANS_THRESHOLD`, as on the `_mon` wrapper.

The lite's own behaviour – per-ID linked-list attribution, stamps instead of counters, the registered event stage, the 4-entry output queue and drop-and-count – is on the [axi_monitor_lite](#) page.

22.5 Timing Characteristics

The datapath timing is `axi4_slave_rd`'s. The monitor adds no gating to any handshake and no path into the datapath; its own paths are two short cycles (attribution, then packet formatting) and met 10 ns on an Artix-7 100T-1 with margin inside `bridge_1x2_rd_lite_mon`.

22.6 Usage Examples

```
axi4_slave_rd_monlite #(
    .N_ADDR_RANGES      (0),
    .ADDR_RANGE_IS_ERROR ('0'),
    .SKID_DEPTH_AR      (2),
    .SKID_DEPTH_R        (4),
    .UNIT_ID             (8'h02),
    .AGENT_ID            (16'h0014),
    .MAX_TRANSACTIONS    (8)
) u_axi4_slave_rd_monlite (
    .aclk                (aclk),
    .aresetn             (aresetn),
    // ... the axi4_slave_rd ports, by name ...
    .cam_clear           (1'b0),
    .cfg_monitor_enable  (1'b1),
    .cfg_error_enable    (1'b1),
    .cfg_timeout_enable  (1'b1),
    .cfg_compl_enable    (1'b0),
    .cfg_threshold_enable (1'b0),
    .cfg_timeout_cycles  (16'd1000),
    .cfg_freq_sel        (4'd0),
    .cfg_axi_pkt_mask    (16'h0000),
    .i_mon_time          (mon_time),
    .monbus_valid        (monbus_valid),
```

```

.monbus_ready      (monbus_ready),
.monbus_packet     (monbus_packet),
.monbus_timestamp  (monbus_timestamp),
.active_transactions (),
.error_count       (),
.transaction_count (),
.dropped_count     (dropped_count),
.refused_count     (refused_count)
);

```

In a generated bridge, `mon_preset = "lite"` selects this wrapper for every monitored port.

22.7 Design Notes

- `cam_clear` keeps the `_mon` wrapper's name so the two are pin-compatible on the monitor side; the lite has a table, not a CAM.
 - `MAX_TRANSACTION` defaults to 8 here against 16 on `axi4_slave_rd_mon`: size it to the port's real outstanding depth, since refused commands surface as orphans.
 - Consumers that relied on `block_ready` to bound the table get drop-and-count instead; the count is always reported, the identity of the lost events is not.
-

22.8 Related Modules

- `axi4_slave_rd_mon` – the full-monitor sibling
 - `axi4_slave_rd` – the core this wraps
 - [axi_monitor_lite](#) – the monitor itself
-

22.9 Testing

`val/amba/monitor-lite/test_axi4_slave_rd_monlite.py` exercises this module: the same TB and scenarios as `val/amba/test_axi4_slave_rd_mon.py`, with the DUT swapped.

```

source env_python
make -C val/amba/monitor-lite run-axi4_slave_rd_monlite-gate

```

Last Updated: 2026-09-26

22.10 Navigation

- [← Back to Monitor Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

23 AXI4 Slave Read Stub

Module: axi4_slave_rd_stub.sv **Location:** rtl/amba/axi4/stubs/ **Status:** Production Ready

23.1 Overview

The other end of the read transaction. The AXI4 Slave Read Stub receives AXI4 read transactions from a master and exposes them as simple packet interfaces — the AR channel arrives as one packed payload for your testbench to chew on, and you hand read data back the same way. Skid buffers do the pack/unpack work, which makes the stub ideal for testbenches and integration scenarios where a simplified slave interface is what you actually need.

23.1.1 Key Features

- Packed packet interface for AR and R channels
 - Configurable skid buffer depth on each channel
 - Full AXI4 read transaction support
 - Burst, ID, and user signal support
 - Parameterized data widths
-

23.2 Parameters

Parameter	Type	Default	Description
SKID_DEPTH_AR	int	2	AR channel skid buffer depth in entries (2..8 inclusive, any integer)
SKID_DEPTH_R	int	4	R channel skid buffer depth in entries (2..8 inclusive, any integer)
AXI_ID_WIDTH	int	8	AXI transaction ID width

Parameter	Type	Default	Description
AXI_ADDR_WIDTH	int	32	AXI address bus width
AXI_DATA_WIDTH	int	32	AXI data bus width
AXI_USER_WIDTH	int	1	AXI user signal width
AXI_WSTRB_WIDTH	int	AXI_DATA_WIDTH/8	Write strobe width (unused)
AW	int	AXI_ADDR_WIDTH	Short alias for address width
DW	int	AXI_DATA_WIDTH	Short alias for data width
IW	int	AXI_ID_WIDTH	Short alias for ID width
SW	int	AXI_WSTRB_WIDTH	Short alias for strobe width
UW	int	AXI_USER_WIDTH	Short alias for user width
ARSize	int	$IW + AW + 8 + 3 + 2 + 1 + 4 + 3 + 4 + 4 + UW$	AR packet size (calculated)
RSize	int	$IW + DW + 2 + 1 + UW$	R packet size (calculated)

23.3 Ports

23.3.1 Clock and Reset

Port	Direction	Width	Description
aclk	Input	1	AXI clock
aresetn	Input	1	AXI reset (active low)

23.3.2 AXI4 Read Address Channel (AR)

Port	Direction	Width	Description
s_axi_arid	Input	IW	Read address ID

Port	Direction	Width	Description
s_axi_araddr	Input	AW	Read address
s_axi_arlen	Input	8	Burst length
s_axi_arsize	Input	3	Burst size
s_axi_arburst	Input	2	Burst type
s_axi_arlock	Input	1	Lock type
s_axi_arcache	Input	4	Cache type
s_axi_arprot	Input	3	Protection type
s_axi_argos	Input	4	Quality of service
s_axi_arregion	Input	4	Region identifier
s_axi_aruser	Input	UW	User signal
s_axi_arvalid	Input	1	Read address valid
s_axi_arready	Output	1	Read address ready

23.3.3 AXI4 Read Data Channel (R)

Port	Direction	Width	Description
s_axi_rid	Output	IW	Read data ID
s_axi_rdata	Output	DW	Read data
s_axi_rresp	Output	2	Read response
s_axi_rlast	Output	1	Read last
s_axi_ruser	Output	UW	User signal
s_axi_rvalid	Output	1	Read data valid
s_axi_rready	Input	1	Read data ready


23.3.4 AR Packet Interface

Port	Direction	Width	Description
fub_axi_arvalid	Output	1	AR packet valid
fub_axi_arready	Input	1	Ready to accept AR packet
fub_axi_arcount	Output	4	AR buffer occupancy
fub_axi_arpkt	Output	ARSize	Packed AR packet data

23.3.5 R Packet Interface

Port	Direction	Width	Description
fub_axi_rvalid	Input	1	R packet valid
fub_axi_rready	Output	1	Ready to accept R packet
fub_axi_rpkt	Input	RSize	Packed R packet data


23.4 Functional Description

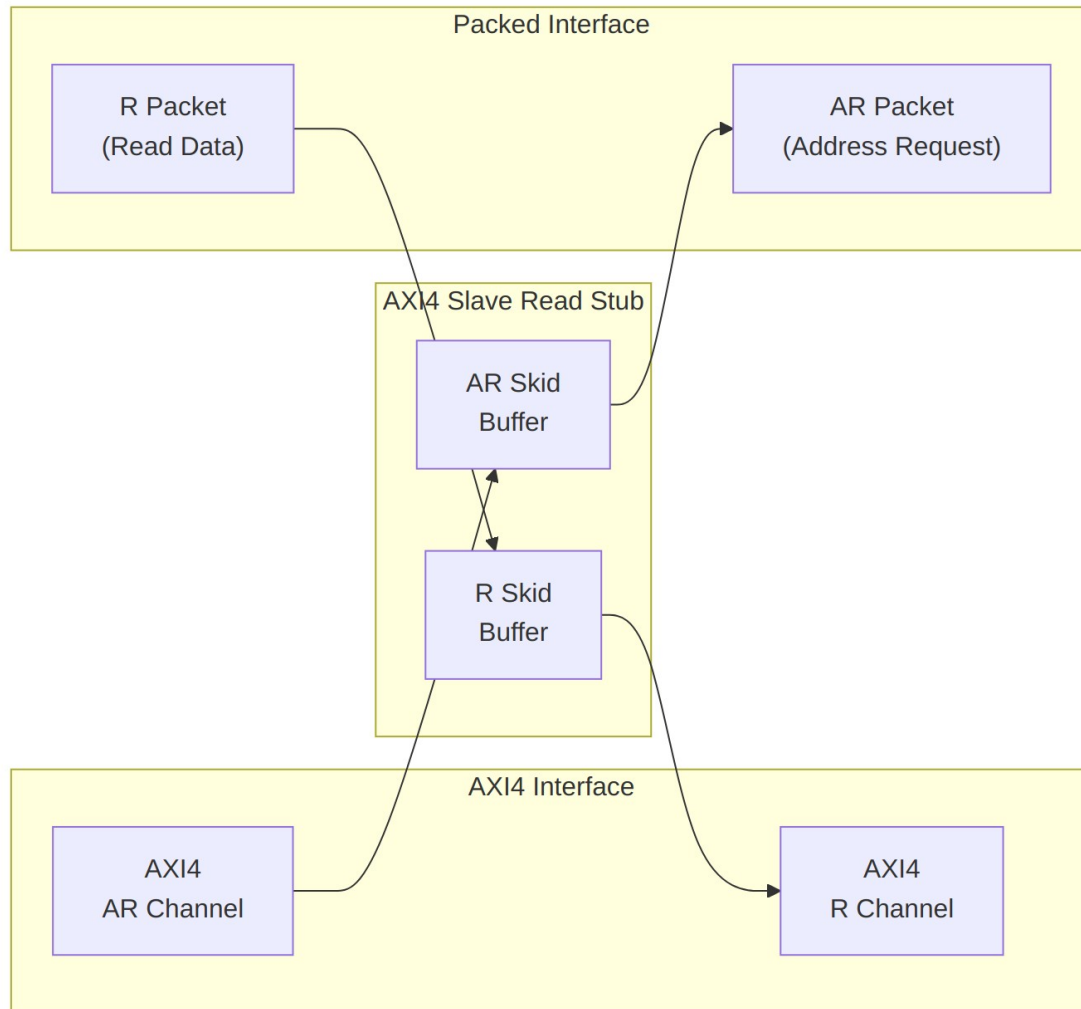

Architecture

23.4.1 Packet Formats

Packets are packed MSB-to-LSB in AXI signal order, so parsing one in the testbench is plain slicing.




AR Packet Structure (Read Address)

Bit Positions:

```
fub_axi_ar_pkt = {arid, araddr, arlen, arsize, arburst, arlock,
arcache, arprot, arqos, arregion, aruser}
```

$$\text{Width} = \text{IW} + \text{AW} + 8 + 3 + 2 + 1 + 4 + 3 + 4 + 4 + \text{UW}$$

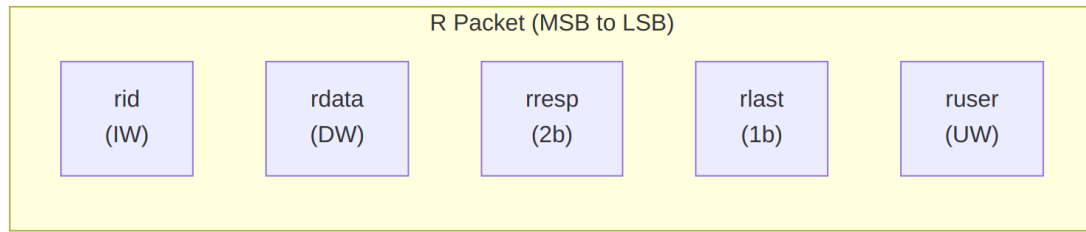


R Packet Structure (Read Data)

Bit Positions:

`fub_axi_r_pkt = {rid, rdata, rresp, rlast, ruser}`

$$\text{Width} = \text{IW} + \text{DW} + 2 + 1 + \text{UW}$$

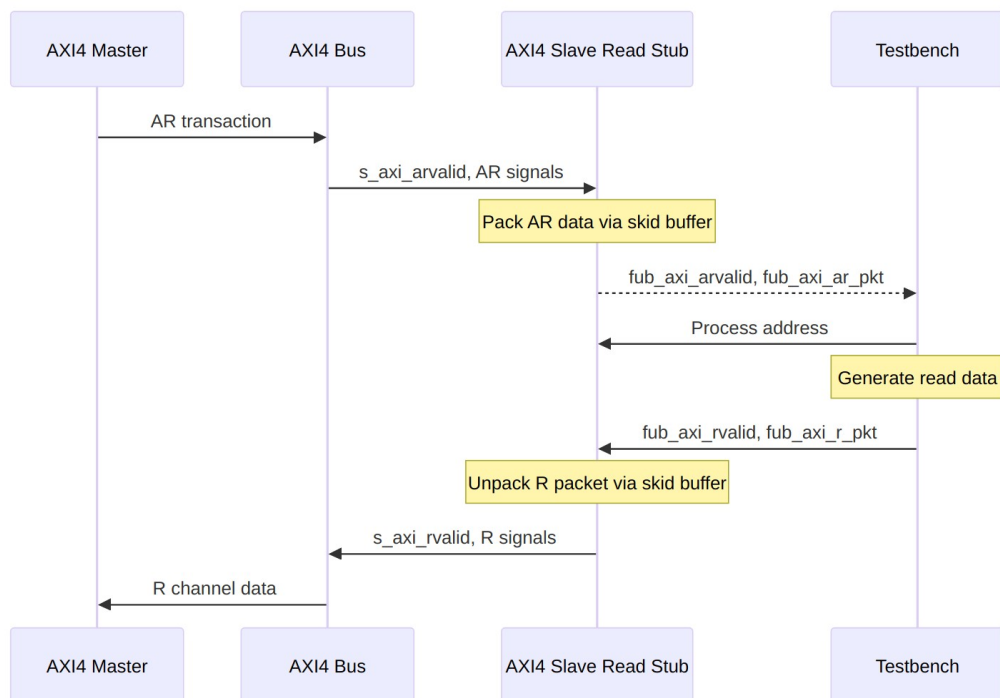

Transaction Flow

23.5 Timing Characteristics

Timing diagram pending. The signals and sequence this scenario exercises:

- aclk
 - AXI AR signals (s_axi_arvalid, s_axi_araddr, s_axi_arlen, etc.)
 - fub_axi_arvalid, fub_axi_arready, fub_axi_ar_pkt
 - fub_axi_rvalid, fub_axi_rready, fub_axi_r_pkt
 - AXI R signals (s_axi_rvalid, s_axi_rdata, s_axi_rlast, etc.)
 - Packet-to-AXI timing relationship with skid buffer operation
-

23.6 Usage Examples

```
axi4_slave_rd_stub #(
    .SKID_DEPTH_AR    (2),
    .SKID_DEPTH_R     (4),
    .AXI_ID_WIDTH     (8),
    .AXI_ADDR_WIDTH   (32),
    .AXI_DATA_WIDTH   (64),
    .AXI_USER_WIDTH   (4)
) u_axi4_slave_rd_stub (
    .aclk              (axi_clk),
    .aresetn           (axi_rst_n),

    // AXI4 slave read interface
    .s_axi_arid        (s_axi_arid),
    .s_axi_araddr       (s_axi_araddr),
    .s_axi_arlen        (s_axi_arlen),
    .s_axi_arsize       (s_axi_arsize),
    .s_axi_arburst      (s_axi_arburst),
    .s_axi_arlock       (s_axi_arlock),
    .s_axi_arcache      (s_axi_arcache),
    .s_axi_arprot       (s_axi_arprot),
    .s_axi_arqos        (s_axi_arqos),
    .s_axi_arregion     (s_axi_arregion),
    .s_axi_aruser       (s_axi_aruser),
    .s_axi_arvalid      (s_axi_arvalid),
    .s_axi_arready      (s_axi_arready),

    .s_axi_rid         (s_axi_rid),
    .s_axi_rdata        (s_axi_rdata),
    .s_axi_rresp        (s_axi_rresp),
    .s_axi_rlast        (s_axi_rlast),
```

```

.s_axi_ruser      (s_axi_ruser),
.s_axi_rvalid     (s_axi_rvalid),
.s_axi_rready     (s_axi_rready),

// Packed AR interface
.fub_axi_arvalid  (tb_ar_valid),
.fub_axi_arready  (tb_ar_ready),
.fub_axi_ar_count (tb_ar_count),
.fub_axi_ar_pkt   (tb_ar_pkt),

// Packed R interface
.fub_axi_rvalid   (tb_r_valid),
.fub_axi_rready   (tb_r_ready),
.fub_axi_r_pkt    (tb_r_pkt)
);

// Parse AR packet
localparam int ARSize = 8+32+8+3+2+1+4+3+4+4+4; // match your
instance widths
wire [7:0]  ar_id      = tb_ar_pkt[ARSize-1:ARSize-8];
wire [31:0] ar_addr    = tb_ar_pkt[ARSize-9:ARSize-40];
wire [7:0]  ar_len     = tb_ar_pkt[ARSize-41:ARSize-48];
wire [2:0]  ar_size    = tb_ar_pkt[ARSize-49:ARSize-51];
wire [1:0]  ar_burst   = tb_ar_pkt[ARSize-52:ARSize-53];
// ... additional fields as needed

// Build R packet (single beat response with data 0xDEADBEEFCAFEBAFE)
localparam RSize = 8 + 64 + 2 + 1 + 4; // Calculate size
assign tb_r_pkt = {
    ar_id,                // rid (match request ID)
    64'hDEAD_BEEF_CAFE_BABE, // rdata
    2'b00,                // rresp (OKAY)
    1'b1,                 // rlast
    4'h0                  // ruser
};

```

23.7 Design Notes

23.7.1 Skid Buffer Operation

The stub is two `gaxi_skid_buffer` instances, and they earn their keep. They:

- Decouple timing between AXI bus and testbench
- Provide configurable buffering depth per channel

- Handle backpressure gracefully
- Support burst transactions without stalling

Recommended Depths: - **AR Channel:** 2-4 (address transactions) - **R Channel:** 4-8 (data beats for bursts)

23.7.2 Packet Packing Order

AR and R packets are packed MSB-to-LSB following AXI signal order: - Simplifies testbench packet parsing - Matches common concatenation order - Efficient for burst transaction handling

23.7.3 Internal Architecture

The stub instantiates two `gaxi_skid_buffer` modules: - **AR Skid Buffer:** Packs AXI AR channel to AR packets - **R Skid Buffer:** Unpacks R packets to AXI R channel

All AXI protocol handling is done by the skid buffers and upstream modules.

23.8 Related Modules

- [AXI4 Slave Read](#) - Full AXI4 slave read module (if wrapping one)
 - [AXI4 Slave Write Stub](#) - Corresponding write stub
 - [AXI4 Slave Stub](#) - Combined read/write stub
 - [AXI4 Master Read Stub](#) - Master-side read stub
-

23.9 Testing

No dedicated testbench, and none is expected. This is a stub: a tie-off shell that presents the interface and drives inert values, so there is no behaviour to verify beyond elaboration. make verilator lints it as its own top on every run, which is the coverage that applies.

Treat any behaviour described on this page as unverified by simulation.

23.10 Navigation

- [← Back to AXI4 Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

24 AXI4 Slave Stub

Module: axi4_slave_stub.sv **Location:** rtl/amba/axi4/stubs/ **Status:** Production Ready

24.1 Overview

The AXI4 Slave Stub gives you a simplified packed-data interface for receiving both AXI4 read and write transactions from a master. It rolls the read and write slave stubs into one module – internally it just instantiates axi4_slave_rd_stub and axi4_slave_wr_stub – so you get a complete AXI4 slave interface with packet-based control and none of the protocol boilerplate. For testbenches and integration scenarios, this is the one I'd reach for first.

24.1.1 Key Features

- Combined read and write channel support
 - Packed packet interfaces for all channels (AW, W, B, AR, R)
 - Configurable skid buffer depths per channel
 - Full AXI4 protocol support (bursts, IDs, user signals)
 - Simplified testbench integration
 - Parameterized data widths
-

24.2 Parameters

Parameter	Type	Default	Description
SKID_DEPTH_AW	int	2	AW channel skid buffer depth in entries (2..8 inclusive, any integer)
SKID_DEPTH_W	int	4	W channel skid buffer depth in entries (2..8 inclusive, any integer)
SKID_DEPTH_B	int	2	B channel skid buffer depth in entries (2..8 inclusive, any integer)
SKID_DEPTH_AR	int	2	AR channel skid buffer depth in entries (2..8 inclusive, any integer)
SKID_DEPTH_R	int	4	R channel skid buffer

Parameter	Type	Default	Description
			depth in entries (2..8 inclusive, any integer)
AXI_ID_WIDTH	int	8	AXI transaction ID width
AXI_ADDR_WIDTH	int	32	AXI address bus width
AXI_DATA_WIDTH	int	32	AXI data bus width
AXI_USER_WIDTH	int	1	AXI user signal width
AXI_WSTRB_WIDTH	int	AXI_DATA_WIDTH/8	Write strobe width
AW	int	AXI_ADDR_WIDTH	Short alias for address width
DW	int	AXI_DATA_WIDTH	Short alias for data width
IW	int	AXI_ID_WIDTH	Short alias for ID width
SW	int	AXI_WSTRB_WIDTH	Short alias for strobe width
UW	int	AXI_USER_WIDTH	Short alias for user width
AWSize	int	$IW+AW+8+3+2+1+4+3+4+4+UW$	AW packet size (calculated)
WSize	int	$DW+SW+1+UW$	W packet size (calculated)
BSize	int	$IW+2+UW$	B packet size (calculated)
ARSize	int	$IW+AW+8+3+2+1+4+3+4+4+UW$	AR packet size (calculated)
RSize	int	$IW+DW+2+1+UW$	R packet size (calculated)

24.3 Ports

24.3.1 Clock and Reset

Port	Direction	Width	Description
aclk	Input	1	AXI clock

Port	Direction	Width	Description
aresetn	Input	1	AXI reset (active low)

24.3.2 AXI4 Write Channels

Port	Direction	Width	Description
s_axi_awid	Input	AXI_ID_WIDTH	Write address ID
s_axi_awaddr	Input	AXI_ADDR_WIDTH	Write address
s_axi_awlen	Input	8	Burst length
s_axi_awsz	Input	3	Burst size
s_axi_awburst	Input	2	Burst type
s_axi_awlock	Input	1	Lock type
s_axi_awcache	Input	4	Cache type
s_axi_awprot	Input	3	Protection type
s_axi_awqos	Input	4	Quality of service
s_axi_awregion	Input	4	Region identifier
s_axi_awuser	Input	AXI_USER_WIDTH	User signal
s_axi_awvalid	Input	1	Write address valid
s_axi_awready	Output	1	Write address ready
s_axi_wdata	Input	AXI_DATA_WIDTH	Write data
s_axi_wstrb	Input	AXI_WSTRB_WIDTH	Write strobes
s_axi_wlast	Input	1	Write last
s_axi_wuser	Input	AXI_USER_WIDTH	User signal
s_axi_wvalid	Input	1	Write data

Port	Direction	Width	Description
			valid
s_axi_wready	Output	1	Write data ready
s_axi_bid	Output	AXI_ID_WIDTH	Response ID
s_axi_bresp	Output	2	Write response
s_axi_buser	Output	AXI_USER_WIDTH	User signal
s_axi_bvalid	Output	1	Write response valid
s_axi_bready	Input	1	Write response ready

24.3.3 AXI4 Read Channels

Port	Direction	Width	Description
s_axi_arid	Input	AXI_ID_WIDTH	Read address ID
s_axi_araddr	Input	AXI_ADDR_WIDTH	Read address
s_axi_arlen	Input	8	Burst length
s_axi_arsize	Input	3	Burst size
s_axi_arburst	Input	2	Burst type
s_axi_arlock	Input	1	Lock type
s_axi_arcache	Input	4	Cache type
s_axi_arprot	Input	3	Protection type
s_axi_arqos	Input	4	Quality of service
s_axi_arregion	Input	4	Region identifier
s_axi_aruser	Input	AXI_USER_WIDTH	User signal
s_axi_arvalid	Input	1	Read address valid

Port	Direction	Width	Description
s_axi_arready	Output	1	Read address ready
s_axi_rid	Output	AXI_ID_WIDTH	Read data ID
s_axi_rdata	Output	AXI_DATA_WIDTH	Read data
s_axi_rresp	Output	2	Read response
s_axi_rlast	Output	1	Read last
s_axi_ruser	Output	AXI_USER_WIDTH	User signal
s_axi_rvalid	Output	1	Read data valid
s_axi_rready	Input	1	Read data ready

24.3.4 Write Packet Interfaces

Port	Direction	Width	Description
fub_axi_awvalid	Output	1	AW packet valid
fub_axi_awready	Input	1	Ready to accept AW packet
fub_axi_awcount	Output	4	AW buffer occupancy
fub_axi_awpkt	Output	AWSize	Packed AW packet data
fub_axi_wvalid	Output	1	W packet valid
fub_axi_wready	Input	1	Ready to accept W packet
fub_axi_wpkt	Output	WSize	Packed W packet data
fub_axi_bvalid	Input	1	B packet valid

Port	Direction	Width	Description
fub_axi_bready	Output	1	Ready to accept B packet
fub_axi_b_pkt	Input	BSize	Packed B packet data

24.3.5 Read Packet Interfaces

Port	Direction	Width	Description
fub_axi_arvalid	Output	1	AR packet valid
fub_axi_arready	Input	1	Ready to accept AR packet
fub_axi_ar_count	Output	4	AR buffer occupancy
fub_axi_ar_pkt	Output	ARSize	Packed AR packet data
fub_axi_rvalid	Input	1	R packet valid
fub_axi_rready	Output	1	Ready to accept R packet
fub_axi_r_pkt	Input	RSize	Packed R packet data

24.4 Functional Description

24.4.1 Architecture

The combined stub is a thin wrapper – the channel-specific stubs do the real work, and the packed packet interfaces are what your testbench talks to:

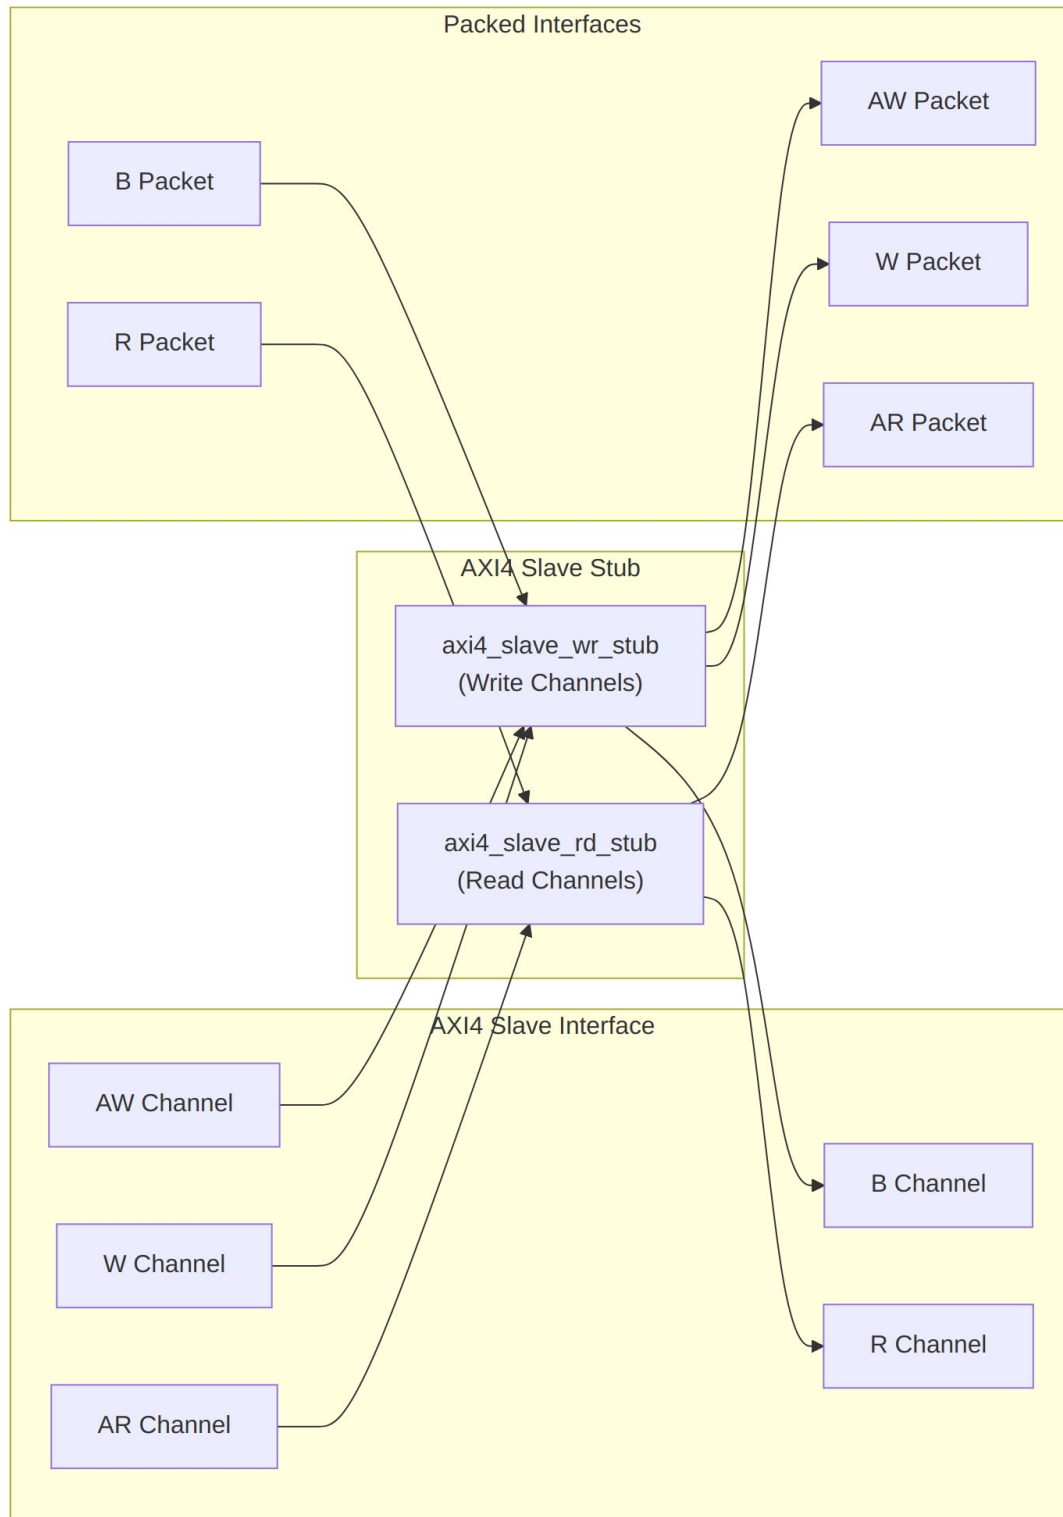


Diagram 25

24.4.2 Packet Formats

AW Packet (Write Address):

```
fub_axi_aw_pkt = {awid, awaddr, awlen, awsize, awburst, awlock,  
awcache, awprot, awqos, awregion, awuser}
```

Width = IW + AW + 8 + 3 + 2 + 1 + 4 + 3 + 4 + 4 + UW

W Packet (Write Data):

```
fub_axi_w_pkt = {wdata, wstrb, wlast, wuser}
```

Width = DW + SW + 1 + UW

B Packet (Write Response):

```
fub_axi_b_pkt = {bid, bresp, buser}
```

Width = IW + 2 + UW

AR Packet (Read Address):

```
fub_axi_ar_pkt = {arid, araddr, arlen, arsize, arburst, arlock,  
arcache, arprot, arqos, arregion, aruser}
```

Width = IW + AW + 8 + 3 + 2 + 1 + 4 + 3 + 4 + 4 + UW

R Packet (Read Data):

```
fub_axi_r_pkt = {rid, rdata, rresp, rlast, ruser}
```

Width = IW + DW + 2 + 1 + UW

Complete packet format details: See [AXI4 Slave Write Stub](#) and [AXI4 Slave Read Stub](#)

24.4.3 Transaction Flow

Reads and writes move through the stub at the same time without getting in each other's way – here's what that looks like:

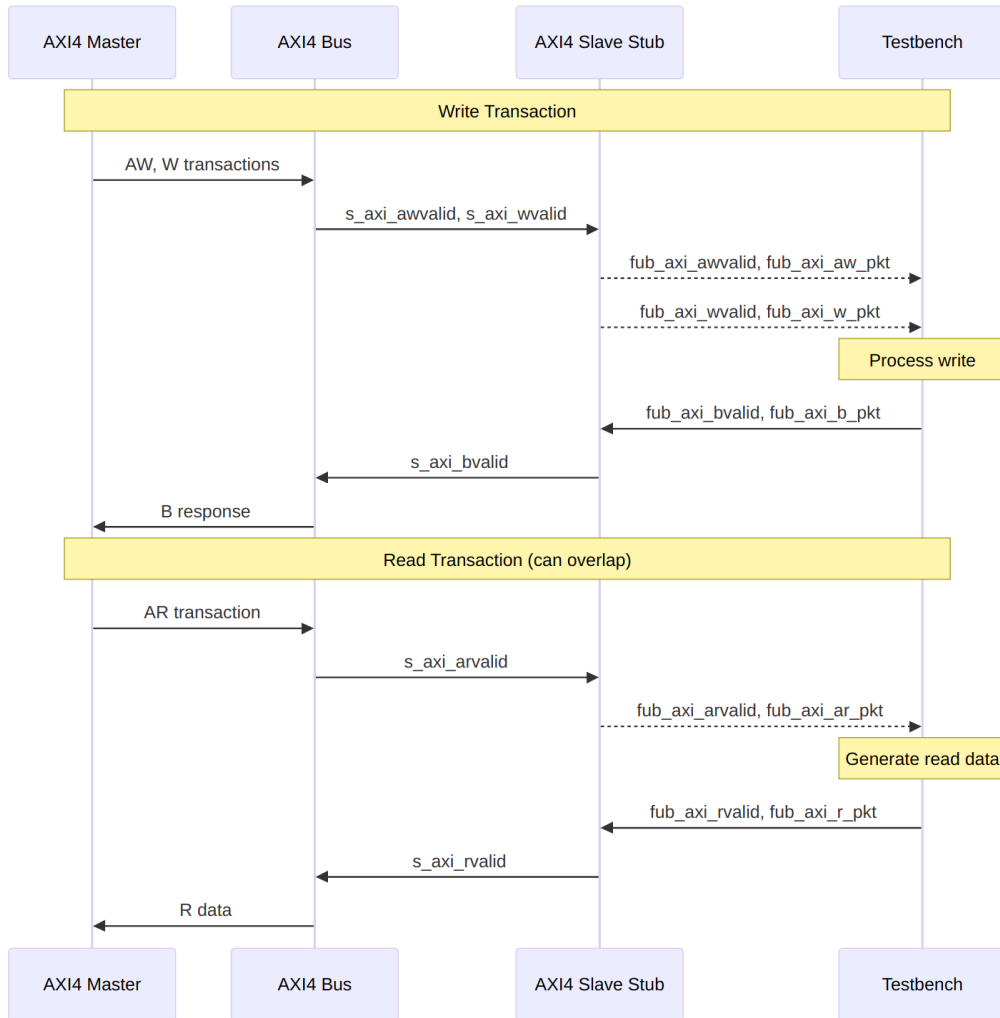


Diagram 26

24.5 Timing Characteristics

Timing diagram pending. The signals and sequence this scenario exercises:

- aclk
- AXI write channels (s_axi_aw, s_axi_w, s_axi_b*)
- Write packet interfaces (fub_axi_aw, fub_axi_w, fub_axi_b*)
- AXI read channels (s_axi_ar, s_axi_r)
- Read packet interfaces (fub_axi_ar, fub_axi_r)
- Overlapping read/write operations

24.6 Usage Examples

Wire it up, then parse and build packets in the testbench. The bit-slice localparams have to match your instance widths – get those wrong and you’ll spend an afternoon chasing misaligned IDs. Don’t ask how I know.

```
axi4_slave_stub #(
    .SKID_DEPTH_AW    (2),
    .SKID_DEPTH_W     (4),
    .SKID_DEPTH_B     (2),
    .SKID_DEPTH_AR    (2),
    .SKID_DEPTH_R     (4),
    .AXI_ID_WIDTH     (8),
    .AXI_ADDR_WIDTH   (32),
    .AXI_DATA_WIDTH   (64),
    .AXI_USER_WIDTH   (4)
) u_axi4_slave_stub (
    .aclk              (axi_clk),
    .aresetn           (axi_rst_n),

    // AXI4 slave interface (all channels)
    .s_axi_awid        (s_axi_awid),
    .s_axi_awaddr      (s_axi_awaddr),
    .s_axi_awlen       (s_axi_awlen),
    .s_axi_awsz        (s_axi_awsz),
    .s_axi_awburst     (s_axi_awburst),
    .s_axi_awlock      (s_axi_awlock),
    .s_axi_awcache     (s_axi_awcache),
    .s_axi_awprot      (s_axi_awprot),
    .s_axi_awqos       (s_axi_awqos),
    .s_axi_awregion    (s_axi_awregion),
    .s_axi_awuser      (s_axi_awuser),
    .s_axi_awvalid     (s_axi_awvalid),
    .s_axi_awready     (s_axi_awready),

    .s_axi_wdata       (s_axi_wdata),
    .s_axi_wstrb       (s_axi_wstrb),
    .s_axi_wlast       (s_axi_wlast),
    .s_axi_wuser       (s_axi_wuser),
    .s_axi_wvalid      (s_axi_wvalid),
    .s_axi_wready      (s_axi_wready),

    .s_axi_bid         (s_axi_bid),
    .s_axi_bresp       (s_axi_bresp),
    .s_axi_buser       (s_axi_buser),
```

```

.s_axi_bvalid      (s_axi_bvalid),
.s_axi_bready      (s_axi_bready),

.s_axi_arid        (s_axi_arid),
.s_axi_araddr      (s_axi_araddr),
.s_axi_arlen        (s_axi_arlen),
.s_axi_arsize       (s_axi_arsize),
.s_axi_arburst      (s_axi_arburst),
.s_axi_arlock       (s_axi_arlock),
.s_axi_arcache      (s_axi_arcache),
.s_axi_arprot       (s_axi_arprot),
.s_axi_arqos        (s_axi_arqos),
.s_axi_arregion     (s_axi_arregion),
.s_axi_aruser       (s_axi_aruser),
.s_axi_arvalid      (s_axi_arvalid),
.s_axi_arready      (s_axi_arready),

.s_axi_rid         (s_axi_rid),
.s_axi_rdata        (s_axi_rdata),
.s_axi_rresp        (s_axi_rresp),
.s_axi_rlast        (s_axi_rlast),
.s_axi_ruser        (s_axi_ruser),
.s_axi_rvalid       (s_axi_rvalid),
.s_axi_rready       (s_axi_rready),

// Write packet interfaces
.fub_axi_awvalid    (tb_aw_valid),
.fub_axi_awready    (tb_aw_ready),
.fub_axi_aw_count    (tb_aw_count),
.fub_axi_aw_pkt      (tb_aw_pkt),

.fub_axi_wvalid     (tb_w_valid),
.fub_axi_wready     (tb_w_ready),
.fub_axi_w_pkt       (tb_w_pkt),

.fub_axi_bvalid     (tb_b_valid),
.fub_axi_bready     (tb_b_ready),
.fub_axi_b_pkt       (tb_b_pkt),

// Read packet interfaces
.fub_axi_arvalid    (tb_ar_valid),
.fub_axi_arready    (tb_ar_ready),
.fub_axi_ar_count    (tb_ar_count),
.fub_axi_ar_pkt      (tb_ar_pkt),

.fub_axi_rvalid     (tb_r_valid),

```

```

        .fub_axi_rready (tb_r_ready),
        .fub_axi_r_pkt  (tb_r_pkt)
    );

    // Parse incoming write address
    localparam int ASize = 8+32+8+3+2+1+4+3+4+4+4; // match your
    instance widths
    wire [7:0]  aw_id      = tb_aw_pkt[ASize-1:ASize-8];
    wire [31:0] aw_addr    = tb_aw_pkt[ASize-9:ASize-40];
    wire [7:0]  aw_len     = tb_aw_pkt[ASize-41:ASize-48];
    // ... additional fields

    // Parse incoming write data
    localparam int WSize = 64+8+1+4; // match your instance widths
    wire [63:0] w_data     = tb_w_pkt[WSize-1:WSize-64];
    wire [7:0]  w_strb     = tb_w_pkt[WSize-65:WSize-72];
    wire                w_last = tb_w_pkt[WSize-73];

    // Generate write response (OKAY)
    assign tb_b_pkt = {
        aw_id,      // bid (match request ID)
        2'b00,      // bresp (OKAY)
        4'h0        // buser
    };

    // Parse incoming read address
    localparam int ARSize = 8+32+8+3+2+1+4+3+4+4+4; // match your
    instance widths
    wire [7:0]  ar_id      = tb_ar_pkt[ARSize-1:ARSize-8];
    wire [31:0] ar_addr    = tb_ar_pkt[ARSize-9:ARSize-40];
    wire [7:0]  ar_len     = tb_ar_pkt[ARSize-41:ARSize-48];
    // ... additional fields

    // Generate read data response
    reg [63:0] read_data; // From memory model
    assign tb_r_pkt = {
        ar_id,      // rid (match request ID)
        read_data,  // rdata
        2'b00,      // rresp (OKAY)
        1'b1,      // rlast (single beat example)
        4'h0        // ruser
    };
};

```

24.7 Design Notes

24.7.1 Internal Architecture

The stub instantiates two sub-modules: - **axi4_slave_wr_stub** - Handles AW, W, and B channels
- **axi4_slave_rd_stub** - Handles AR and R channels

That hierarchy buys you a few things: it reuses the proven read/write stub modules, keeps the channel separation clean, simplifies verification and testing, and lets reads and writes operate independently.

24.7.2 Read/Write Independence

Read and write channels are completely independent: - Can overlap in time (simultaneous read and write) - Each has independent skid buffers - No ordering constraints between reads and writes - Testbench can respond at different rates

24.7.3 Skid Buffer Depths

Recommended configurations:

Low latency (fast response):

```
.SKID_DEPTH_AW(2), .SKID_DEPTH_W(2), .SKID_DEPTH_B(2),  
.SKID_DEPTH_AR(2), .SKID_DEPTH_R(2)
```

Typical system:

```
.SKID_DEPTH_AW(2), .SKID_DEPTH_W(4), .SKID_DEPTH_B(2),  
.SKID_DEPTH_AR(2), .SKID_DEPTH_R(4)
```

High throughput bursts:

```
.SKID_DEPTH_AW(4), .SKID_DEPTH_W(8), .SKID_DEPTH_B(4),  
.SKID_DEPTH_AR(4), .SKID_DEPTH_R(8)
```

24.7.4 Memory Model Integration

The slave stub pairs naturally with a memory model – capture addresses and data on the write side, serve reads out of the array on the other:

```
// Simple memory model  
reg [63:0] memory [0:1023];  
  
// Handle write requests  
always @(posedge aclk) begin  
    if (tb_aw_valid && tb_aw_ready) begin  
        // Capture write address  
    end  
    if (tb_w_valid && tb_w_ready) begin
```

```

        // Write data to memory
        memory[write_addr] <= w_data;
    end
end

// Handle read requests
always @(posedge aclk) begin
    if (tb_ar_valid && tb_ar_ready) begin
        // Generate read data from memory
        read_data <= memory[ar_addr];
    end
end

```

24.8 Related Modules

- [AXI4 Slave Read Stub](#) - Read-only stub (instantiated internally)
 - [AXI4 Slave Write Stub](#) - Write-only stub (instantiated internally)
 - [AXI4 Master Stub](#) - Corresponding combined master stub
 - [AXI4 Slave Read](#) - Full AXI4 slave read module
 - [AXI4 Slave Write](#) - Full AXI4 slave write module
-

24.9 Testing

No dedicated testbench, and none is expected. This is a stub: a tie-off shell that presents the interface and drives inert values, so there is no behaviour to verify beyond elaboration. make verilator lints it as its own top on every run, which is the coverage that applies.

Treat any behaviour described on this page as unverified by simulation.

24.10 Navigation

- [<- Back to AXI4 Index](#)
- [<- Back to rtl-amba Index](#)
- [<- Back to Main Documentation Index](#)

25 AXI4 Slave Write

Module: axi4_slave_wr.sv **Location:** rtl/amba/axi4/ **Status:** Production Ready

25.1 Overview

The AXI4 Slave Write module is a buffered AXI4 slave write interface with configurable-depth skid buffers on all three write channels (AW, W, B). Think of it as an elastic buffer sitting between the AXI4 interconnect and your memory or backend processing element: it decouples the timing on the two sides and absorbs backpressure, so a sluggish backend doesn't stall the interconnect and an eager master doesn't overrun the backend.

25.1.1 Key Features

- **Full AXI4 Write Support:** Complete AW, W, and B channel implementation
 - **Independent Channel Buffering:** Separate configurable depth buffers for each channel
 - **Elastic Buffering:** Decouples interconnect and backend timing domains
 - **Burst Support:** Full burst transaction handling with WLAST tracking
 - **User Signal Support:** Carries AWUSER, WUSER, and BUSER signals
 - **Clock Gating Support:** Busy signal for dynamic power management
-

25.2 Parameters

Parameter	Type	Default	Description
SKID_DEPTH_AW	int	2	Depth of write address (AW) channel skid buffer
SKID_DEPTH_W	int	4	Depth of write data (W) channel skid buffer
SKID_DEPTH_B	int	2	Depth of write response (B) channel skid buffer
AXI_ID_WIDTH	int	8	Width of transaction ID signals (AWID, BID)
AXI_ADDR_WIDTH	int	32	Width of address bus (AWADDR)
AXI_DATA_WIDTH	int	32	Width of data bus (WDATA), must be 8, 16, 32, 64, 128, 256, 512, or 1024

Parameter	Type	Default	Description
AXI_WSTRB_WIDTH	int	AXI_DATA_WIDTH/8	Write strobe width
AXI_USER_WIDTH	int	1	Width of user-defined signals (AWUSER, WUSER, BUSER)

25.3 Ports

Here's the full module declaration – the tables below it break the ports down by group.

```

module axi4_slave_wr #(
    parameter int SKID_DEPTH_AW      = 2,
    parameter int SKID_DEPTH_W      = 4,
    parameter int SKID_DEPTH_B      = 2,
    parameter int AXI_ID_WIDTH      = 8,
    parameter int AXI_ADDR_WIDTH    = 32,
    parameter int AXI_DATA_WIDTH    = 32,
    parameter int AXI_USER_WIDTH    = 1,
    parameter int AXI_WSTRB_WIDTH  = AXI_DATA_WIDTH / 8,
    // Derived shorthands -- override the eight above, not these
    parameter int AW              = AXI_ADDR_WIDTH,
    parameter int DW              = AXI_DATA_WIDTH,
    parameter int IW              = AXI_ID_WIDTH,
    parameter int SW              = AXI_WSTRB_WIDTH,
    parameter int UW              = AXI_USER_WIDTH,
    parameter int ASize           = IW+AW+8+3+2+1+4+3+4+4+UW,
    parameter int WSize           = DW+SW+1+UW,
    parameter int BSize           = IW+2+UW
) (
    // Clock and Reset
    input   logic                aclk,
    input   logic                aresetn,

    // Slave AXI Interface (s_axi_*)
    // Write address channel (AW)
    input   logic [AXI_ID_WIDTH-1:0] s_axi_awid,
    input   logic [AXI_ADDR_WIDTH-1:0] s_axi_awaddr,
    input   logic [7:0] s_axi_awlen,
    input   logic [2:0] s_axi_awsz,
    input   logic [1:0] s_axi_awburst,
    input   logic s_axi_awlock,
    input   logic [3:0] s_axi_awcache,
    input   logic [2:0] s_axi_awprot,

```

```

input  logic [3:0]          s_axi_awqos,
input  logic [3:0]          s_axi_awregion,
input  logic [AXI_USER_WIDTH-1:0] s_axi_awuser,
input  logic                s_axi_awvalid,
output logic                s_axi_awready,

// Write data channel (W)
input  logic [AXI_DATA_WIDTH-1:0] s_axi_wdata,
input  logic [SW-1:0]             s_axi_wstrb,
input  logic                s_axi_wlast,
input  logic [AXI_USER_WIDTH-1:0] s_axi_wuser,
input  logic                s_axi_wvalid,
output logic                s_axi_wready,

// Write response channel (B)
output logic [AXI_ID_WIDTH-1:0] s_axi_bid,
output logic [1:0]             s_axi_bresp,
output logic [AXI_USER_WIDTH-1:0] s_axi_buser,
output logic                s_axi_bvalid,
input  logic                s_axi_bready,

// Backend Interface (fub_axi_* - to memory/backend)
// Write address channel (AW)
output logic [AXI_ID_WIDTH-1:0] fub_axi_awid,
output logic [AXI_ADDR_WIDTH-1:0] fub_axi_awaddr,
output logic [7:0]             fub_axi_awlen,
output logic [2:0]             fub_axi_awsz,
output logic [1:0]             fub_axi_awburst,
output logic                fub_axi_awlock,
output logic [3:0]             fub_axi_awcache,
output logic [2:0]             fub_axi_awprot,
output logic [3:0]             fub_axi_awqos,
output logic [3:0]             fub_axi_awregion,
output logic [AXI_USER_WIDTH-1:0] fub_axi_awuser,
output logic                fub_axi_awvalid,
input  logic                fub_axi_awready,

// Write data channel (W)
output logic [AXI_DATA_WIDTH-1:0] fub_axi_wdata,
output logic [SW-1:0]             fub_axi_wstrb,
output logic                fub_axi_wlast,
output logic [AXI_USER_WIDTH-1:0] fub_axi_wuser,
output logic                fub_axi_wvalid,
input  logic                fub_axi_wready,

// Write response channel (B)
input  logic [AXI_ID_WIDTH-1:0] fub_axi_bid,

```



```

    input logic [1:0]          fub_axi_bresp,
    input logic [AXI_USER_WIDTH-1:0] fub_axi_buser,
    input logic                fub_axi_bvalid,
    output logic                fub_axi_bready,

    // Status
    output logic                busy
);

```

25.3.1 Clock and Reset

Port	Direction	Width	Description
aclk	Input	1	AXI clock - all signals sampled on rising edge
aresetn	Input	1	Active-low asynchronous reset

25.3.2 Slave AXI Interface (s_axi_*)

25.3.2.1 Write Address Channel (AW)

Port	Direction	Width	Description
s_axi_awid	Input	AXI_ID_WIDTH	Write transaction ID
s_axi_awaddr	Input	AXI_ADDR_WIDTH	Write address
s_axi_awlen	Input	8	Burst length, AXI-encoded: beats - 1 (0x00 = 1 beat, 0xFF = 256)
s_axi_awsiz	Input	3	Burst size (bytes per beat)
s_axi_awburst	Input	2	Burst type (FIXED, INCR, WRAP)
s_axi_awlock	Input	1	Lock type (atomic access support)
s_axi_awcache	Input	4	Cache attributes
s_axi_awprot	Input	3	Protection attributes

Port	Direction	Width	Description
s_axi_awqos	Input	4	Quality of Service identifier
s_axi_awregion	Input	4	Region identifier
s_axi_awsuser	Input	AXI_USER_WIDTH	User-defined signal
s_axi_awsvalid	Input	1	Write address valid
s_axi_awsready	Output	1	Write address ready

25.3.2.2 Write Data Channel (W)

Port	Direction	Width	Description
s_axi_wdata	Input	AXI_DATA_WIDTH	Write data
s_axi_wstrobe	Input	AXI_DATA_WIDTH/8	Write strobes (byte enables)
s_axi_wlast	Input	1	Last beat of burst indicator
s_axi_wuser	Input	AXI_USER_WIDTH	User-defined signal
s_axi_wvalid	Input	1	Write data valid
s_axi_wready	Output	1	Write data ready

25.3.2.3 Write Response Channel (B)

Port	Direction	Width	Description
s_axi_bid	Output	AXI_ID_WIDTH	Response transaction ID
s_axi_bresp	Output	2	Write response (OKAY, EXOKAY, SLVERR, DECERR)
s_axi_buser	Output	AXI_USER_WIDTH	User-defined signal
s_axi_bvalid	Output	1	Write response valid
s_axi_bready	Input	1	Write response ready

25.3.3 Backend Interface (fub_axi_*)

Mirrors the slave interface but in the opposite direction (output on AW/W, input on B).

25.3.4 Status Outputs

Port	Direction	Width	Description
busy	Output	1	Indicates active transactions in buffers (for clock gating)

25.4 Functional Description

25.4.1 Architecture

Three independent gaxi_skid_buffer instances do the heavy lifting, one per write channel:

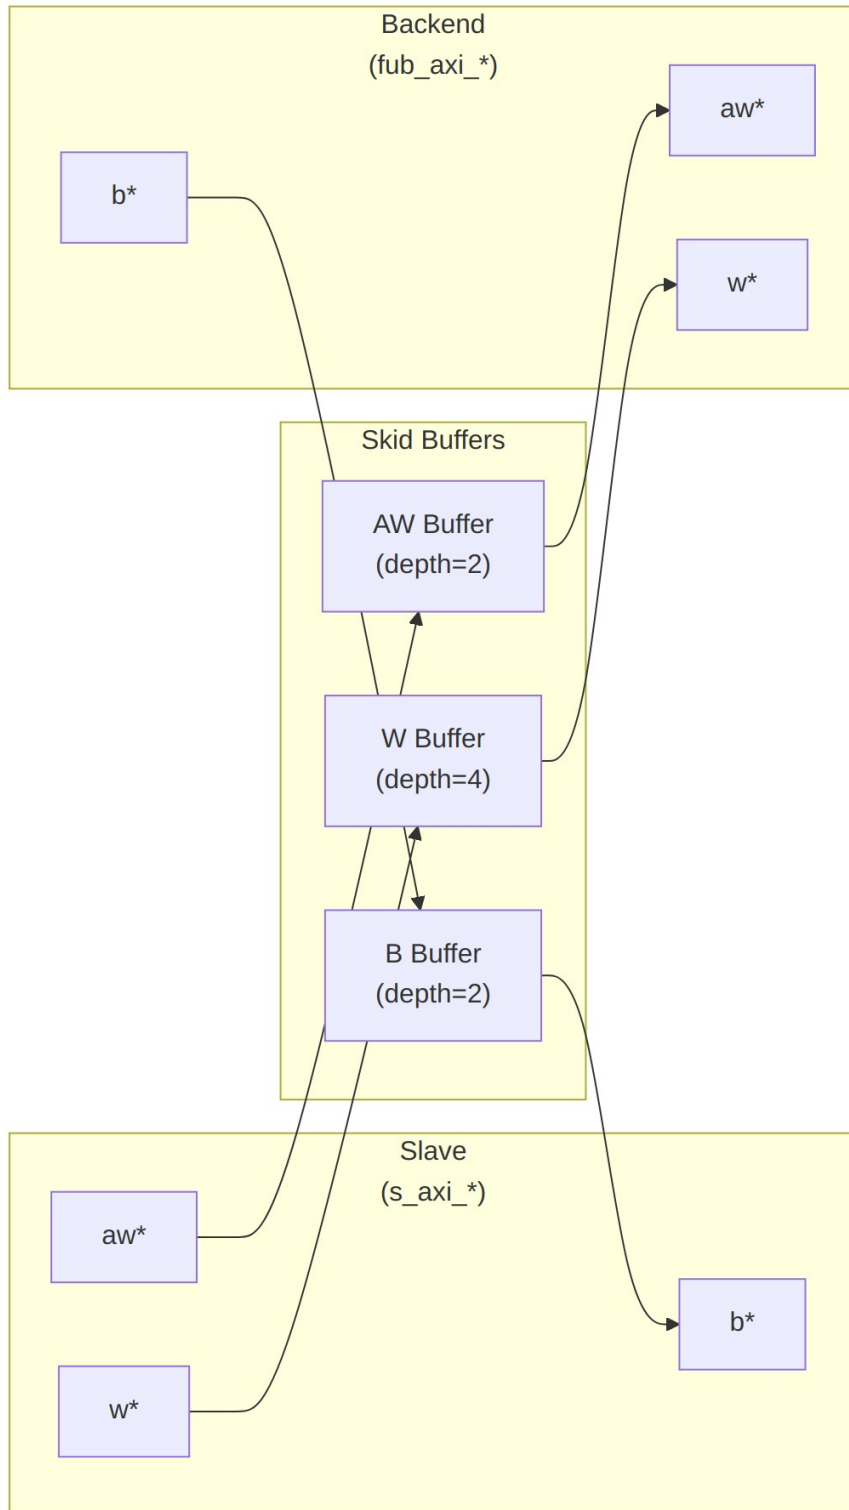


Diagram 27

25.4.2 Channel Operations

25.4.2.1 Write Address (AW) Channel

1. Master presents write address and attributes via interconnect
2. AW skid buffer accepts when space available (s_axi_awready high)
3. Buffered address presented to backend when ready
4. Configurable depth (SKID_DEPTH_AW) smooths timing variations

25.4.2.2 Write Data (W) Channel

1. Master presents write data with strobes via interconnect
2. W skid buffer provides deeper buffering (default depth=4)
3. WLAST signal preserved to indicate burst boundaries
4. Independent from AW channel (AXI4 allows W before AW)

25.4.2.3 Write Response (B) Channel

1. Backend returns write response with transaction ID
2. B skid buffer captures response when master busy
3. Master receives response via interconnect when ready to accept
4. ID matching handled by AXI interconnect (not this module)

25.4.3 Busy Signal

The busy output indicates active transactions:

```
assign busy = (int_aw_count > 0) || (int_w_count > 0) || (int_b_count > 0) ||  
              s_axi_awvalid || s_axi_wvalid || fub_axi_bvalid;
```

Use cases: - **Clock gating**: Disable clock when busy is low - **Power management**: Enter low-power mode when idle - **Synchronization**: Wait for idle before configuration changes

25.5 Timing Characteristics

Skid parameter	Default depth
SKID_DEPTH_AW	2 entries
SKID_DEPTH_W	4 entries
SKID_DEPTH_B	2 entries

Each channel traverses one gaxi_skid_buffer, which registers both rd_valid and its storage. The **1-cycle input-to-output latency therefore applies on every transfer, including the**

unstalled case – there is no combinational bypass. Depth buys backpressure absorption, not throughput; full rate is sustained once the pipeline is primed. Legal range is 2..8 inclusive, odd values included.

Clocking: `aclk`, reset `aresetn` (active-low asynchronous).

No synthesis numbers are quoted here. Frequency and area depend on the target device and the parameters you elaborate with; run your own build.

25.6 Usage Examples

Every parameter and port below is read from the module declaration.

```
axi4_slave_wr #(
    .SKID_DEPTH_AW          (2),
    .SKID_DEPTH_W           (4),
    .SKID_DEPTH_B           (2),
    .AXI_ID_WIDTH           (8),
    .AXI_ADDR_WIDTH         (32),
    .AXI_DATA_WIDTH         (32),
    .AXI_USER_WIDTH         (1)
) u_axi4_slave_wr (
    .aclk                    (aclk),
    .aresetn                 (aresetn),
    .s_axi_awid              (s_axi_awid),
    .s_axi_awaddr            (s_axi_awaddr),
    .s_axi_awlen             (s_axi_awlen),
    .s_axi_awsz              (s_axi_awsz),
    .s_axi_awburst           (s_axi_awburst),
    .s_axi_awlock            (s_axi_awlock),
    .s_axi_awcache           (s_axi_awcache),
    .s_axi_awprot            (s_axi_awprot),
    .s_axi_awqos             (s_axi_awqos),
    .s_axi_awregion          (s_axi_awregion),
    .s_axi_awuser            (s_axi_awuser),
    .s_axi_awvalid           (s_axi_awvalid),
    .s_axi_awready           (s_axi_awready),
    .s_axi_wdata             (s_axi_wdata),
    .s_axi_wstrb             (s_axi_wstrb),
    .s_axi_wlast             (s_axi_wlast),
    .s_axi_wuser            (s_axi_wuser),
    .s_axi_wvalid            (s_axi_wvalid),
    .s_axi_wready            (s_axi_wready),
    .s_axi_bid               (s_axi_bid),
    .s_axi_bresp             (s_axi_bresp),
    .s_axi_buser             (s_axi_buser),
```

```

.s_axi_bvalid      (s_axi_bvalid),
.s_axi_bready      (s_axi_bready),
.fub_axi_awid      (fub_axi_awid),
.fub_axi_awaddr     (fub_axi_awaddr),
.fub_axi_awlen      (fub_axi_awlen),
.fub_axi_awsiz      (fub_axi_awsiz),
.fub_axi_awburst    (fub_axi_awburst),
.fub_axi_awlock     (fub_axi_awlock),
.fub_axi_awcache    (fub_axi_awcache),
.fub_axi_awprot     (fub_axi_awprot),
.fub_axi_awqos      (fub_axi_awqos),
.fub_axi_awregion   (fub_axi_awregion),
.fub_axi_awuser     (fub_axi_awuser),
.fub_axi_awvalid    (fub_axi_awvalid),
.fub_axi_awready    (fub_axi_awready),
.fub_axi_wdata      (fub_axi_wdata),
.fub_axi_wstrb      (fub_axi_wstrb),
.fub_axi_wlast      (fub_axi_wlast),
.fub_axi_wuser      (fub_axi_wuser),
.fub_axi_wvalid     (fub_axi_wvalid),
.fub_axi_wready     (fub_axi_wready),
.fub_axi_bid        (fub_axi_bid),
.fub_axi_bresp      (fub_axi_bresp),
.fub_axi_buser      (fub_axi_buser),
.fub_axi_bvalid     (fub_axi_bvalid),
.fub_axi_bready     (fub_axi_bready),
.busy              (busy)
);

```

25.7 Design Notes

25.7.1 Buffer Depth Selection

SKID_DEPTH_* is an entry count, not a log2 exponent. The underlying gaxi_skid_buffer allocates one register slot per entry and tracks occupancy with a 4-bit counter, so legal values are 2..8 inclusive (any integer). Values greater than 8 overflow the occupancy counter and are not supported.

Write Address (SKID_DEPTH_AW): - Default: 2 (sufficient for most cases) - Increase if: - High-latency backend address decode - Frequent address channel backpressure - Multiple outstanding bursts needed

Write Data (SKID_DEPTH_W): - Default: 4 (deeper than AW for burst data) - Increase if: - Large burst sizes (AWLEN > 4) - High-bandwidth streaming writes - Variable backend write latency

Write Response (SKID_DEPTH_B): - Default: 2 (responses are typically single-beat) - Increase if: - Master slow to accept responses - Many concurrent outstanding writes - Response channel backpressure observed

25.7.2 Recommended Configurations

Low-Latency Memory (single outstanding write):

```
axi4_slave_wr #(
    .SKID_DEPTH_AW(2),
    .SKID_DEPTH_W(2),
    .SKID_DEPTH_B(2)
) u_slave_wr ( ... );
```

High-Throughput Streaming (burst writes):

```
axi4_slave_wr #(
    .SKID_DEPTH_AW(4),
    .SKID_DEPTH_W(8),    // Deep for burst data
    .SKID_DEPTH_B(4)
) u_slave_wr ( ... );
```

Multiple Outstanding Writes:

```
axi4_slave_wr #(
    .SKID_DEPTH_AW(8),
    .SKID_DEPTH_W(8),
    .SKID_DEPTH_B(8)
) u_slave_wr ( ... );
```

25.7.3 Buffer Independence

The three skid buffers operate independently: - AW and W channels can progress at different rates - AXI4 allows W data before AW address - B responses return asynchronously based on backend timing

25.7.4 Packet Preservation

All signal groups packed and unpacked atomically: - AW channel: {awid, awaddr, awlen, awsize, awburst, awlock, awcache, awprot, awqos, awregion, awuser} - W channel: {wdata, wstrb, wlast, wuser} - B channel: {bid, bresp, buser}

25.7.5 Backpressure Handling

Ready signals propagate backpressure: - Interconnect sees awready/wready low when buffers full - Backend backpressure captured in buffers - Prevents data loss while decoupling timing

25.7.6 ID and Burst Handling

This module is a pass-through buffer, and it's honest about it: - Does NOT track transaction IDs - Does NOT enforce burst ordering - Relies on backend to: - Match BID to AWID - Generate appropriate BRESP

25.7.7 Reset Behavior

On an `aresetn` assertion (active-low): - All skid buffers flush - Valid signals deasserted - Busy signal goes low - No data retained across reset

25.8 Related Modules

25.8.1 Companion Modules

- [axi4_slave_rd](#) - AXI4 slave read with buffering
- [axi4_slave_wr_cg](#) - Clock-gated variant with additional CG logic
- [axi4_slave_wr_mon](#) - Write transaction monitor for verification

25.8.2 Used Components

- [gaxi_skid_buffer](#) - Elastic buffer with valid/ready handshake
- [clock_gate_ctrl](#) - Clock gating control (example)

25.8.3 Related Infrastructure

- [axi4_master_wr](#) - Corresponding AXI4 write master module
 - [axi4_interconnect](#) - Multi-master/multi-slave crossbar
-

25.9 Testing

The unit testbench lives at `val/amba/test_axi4_slave_wr.py`, built on the shared AXI4 test framework in `bin/TBClasses/components/axi4/`.

25.10 References

25.10.1 Specifications

- ARM IHI 0022E: AMBA AXI Protocol Specification (AXI4)

25.10.2 Source Code

- RTL: `rtl/amba/axi4/axi4_slave_wr.sv`

25.10.3 Documentation

- Architecture: [rtl-amba Overview](#)

- AXI4 Index: [axi4/README.md](#)
 - GAXI Buffers: [gaxi/README.md](#)
-

Last Updated: 2025-10-20

25.11 Navigation

- [<- Back to AXI4 Index](#)
- [<- Back to rtl-amba Index](#)
- [<- Back to Main Documentation Index](#)

26 AXI4 Slave Write Interface (Clock-Gated)

Module: `axi4_slave_wr_cg.sv` **Base Module:** [axi4_slave_wr](#) **Location:** `rtl/amba/axi4/`
Status: Production Ready

26.1 Overview

This is the **clock-gated variant** of [axi4_slave_wr](#). The base page owns the functional story; this page only covers what changes when you put the module behind a clock gate.

For complete clock-gating documentation, usage examples, and configuration guidelines, see the [Clock-Gated Variants Guide](#).

The `axi4_slave_wr_cg` module adds power optimization to `axi4_slave_wr` through activity-based clock gating:

- **Same Functionality:** 100% equivalent to base module
 - **Power Savings:** traffic-dependent; unmeasured in this repo – treat any percentage as a placeholder until characterized
 - **Configurable at runtime:** `cfg_cg_enable` / `cfg_cg_idle_count` inputs
 - **Zero Overhead When Disabled:** `cfg_cg_enable=0` bypasses the gate
-

26.2 Parameters

In addition to all [axi4_slave_wr](#) parameters:

Parameter	Default	Description
CG_IDLE_COUNT_WIDTH	4	Width of the idle countdown, sizing <code>cfg_cg_idle_count</code>
SKID_DEPTH_AW	2	Skid-buffer depth on the AW channel. Legal range 2..8 inclusive; odd depths are legal.
SKID_DEPTH_B	2	Skid-buffer depth on the B channel. Legal range 2..8 inclusive; odd depths are legal.
SKID_DEPTH_W	4	Skid-buffer depth on the W channel. Legal range 2..8 inclusive; odd depths are legal.

The gating controls are RUNTIME INPUTS, not parameters: `cfg_cg_enable` and `cfg_cg_idle_count`; status outputs `cg_gating` / `cg_idle`. One `amba_clock_gate_ctrl` gates the whole module – no per-domain gates. The base module's busy output is NOT re-exported (consumed internally as a wake term). (The `ENABLE_CLOCK_GATING` / `CG_IDLE_CYCLES` / `CG_GATE_*` interface this page once documented never existed.)

26.2.1 Derived Parameters (do not override)

These are declared as parameter so the elaborator can compute them, not so callers can set them. Each defaults to an expression over the parameters above; overriding one desynchronises it from its source and the design fails to elaborate or silently mis-sizes a bus. Set the parameters they are derived FROM and leave these alone.

Derived parameter	Default expression
AXI_WSTRB_WIDTH	$AXI_DATA_WIDTH / 8$
AW	AXI_ADDR_WIDTH
DW	AXI_DATA_WIDTH
IW	AXI_ID_WIDTH
SW	AXI_WSTRB_WIDTH
UW	AXI_USER_WIDTH
AWSize	$IW+AW+8+3+2+1+4+3+4+4+UW$
WSize	$DW+SW+1+UW$

Derived parameter	Default expression
BSize	IW+2+UW

26.3 Ports

Port	Dir	Width	Description
aclk	In	1	
aresetn	In	1	
cfg_cg_enable	In	1	
cfg_cg_idle_count	In	[CG_IDLE_COUNT_WIDTH-1:0]	
s_axi_awid	In	[IW-1:0]	
s_axi_awaddr	In	[AW-1:0]	
s_axi_awlen	In	[7:0]	
s_axi_awsz	In	[2:0]	
s_axi_awburst	In	[1:0]	
s_axi_awlock	In	1	
s_axi_awcache	In	[3:0]	
s_axi_awprot	In	[2:0]	
s_axi_awqos	In	[3:0]	
s_axi_awregion	In	[3:0]	
s_axi_awuser	In	[UW-1:0]	
s_axi_awvalid	In	1	
s_axi_awready	Out	1	
s_axi_wdata	In	[DW-1:0]	
s_axi_wstrb	In	[SW-1:0]	
s_axi_wlast	In	1	
s_axi_wuser	In	[UW-1:0]	
s_axi_wvalid	In	1	
s_axi_wready	Out	1	
s_axi_bid	Out	[IW-1:0]	
s_axi_bresp	Out	[1:0]	

Port	Dir	Width	Description
s_axi_buser	Out	[UW-1:0]	
s_axi_bvalid	Out	1	
s_axi_bready	In	1	
fub_axi_awid	Out	[IW-1:0]	
fub_axi_awaddr	Out	[AW-1:0]	
fub_axi_awlen	Out	[7:0]	
fub_axi_awsiz	Out	[2:0]	
fub_axi_awburst	Out	[1:0]	
fub_axi_awlock	Out	1	
fub_axi_awcache	Out	[3:0]	
fub_axi_awprot	Out	[2:0]	
fub_axi_awqos	Out	[3:0]	
fub_axi_awregion	Out	[3:0]	
fub_axi_awuser	Out	[UW-1:0]	
fub_axi_awvalid	Out	1	
fub_axi_awready	In	1	
fub_axi_wdata	Out	[DW-1:0]	
fub_axi_wstrb	Out	[SW-1:0]	
fub_axi_wlast	Out	1	
fub_axi_wuser	Out	[UW-1:0]	
fub_axi_wvalid	Out	1	
fub_axi_wready	In	1	
fub_axi_bid	In	[IW-1:0]	
fub_axi_bresp	In	[1:0]	

Port	Dir	Width	Description
fub_axi_buser	In	[UW-1:0]	
fub_axi_bvalid	In	1	
fub_axi_bready	Out	1	
cg_gating	Out	1	
cg_idle	Out	1	

26.4 Functional Description

This wrapper is the base module plus one `amba_clock_gate_ctrl` instance. The datapath is untouched – every channel signal is forwarded verbatim – so functional behaviour is identical to the base module and the wrapper adds no latency of its own.

What it adds is a gated clock. `amba_clock_gate_ctrl` watches two activity terms, `user_valid` (this side's valids plus the base module's busy) and `axi_valid` (the far side's valids), registers their OR into `r_wakeup`, and stops the inner module's clock once both have been quiet for `cfg_cg_idle_count` cycles. The clock restarts on the next activity, one cycle later.

While the clock is stopped the wrapper masks its outward-facing READY signals with `!cg_gating`, so a peer sees no acceptance until the clock runs again and no handshake is lost across the wake boundary.

`cfg_cg_enable` arms this behaviour; with it low the clock free-runs and the module is indistinguishable from its base.

26.5 Timing Characteristics

Skid parameter	Default depth
SKID_DEPTH_AW	2 entries
SKID_DEPTH_W	4 entries
SKID_DEPTH_B	2 entries

Each channel traverses one `gaxi_skid_buffer`, which registers both `rd_valid` and its storage. The **1-cycle input-to-output latency therefore applies on every transfer, including the unstalled case** – there is no combinational bypass. Depth buys backpressure absorption, not throughput; full rate is sustained once the pipeline is primed. Legal range is 2..8 inclusive, odd values included.

Clocking: `aclk`, reset `aresetn` (active-low asynchronous).

No synthesis numbers are quoted here. Frequency and area depend on the target device and the parameters you elaborate with; run your own build.

26.6 Usage Examples

```
axi4_slave_wr_cg #(
    // Base module parameters (see axi4_slave_wr.md)
    .AXI_ID_WIDTH(8),
    .AXI_ADDR_WIDTH(32),
    .AXI_DATA_WIDTH(64),

    .CG_IDLE_COUNT_WIDTH(4)
) u_cg (
    .aclk(clk),
    .aresetn(rst_n),
    .cfg_cg_enable(1'b1),
    .cfg_cg_idle_count(4'd8),
    .cg_gating(), .cg_idle(),
    // ... all other ports same as axi4_slave_wr (except busy)
);
```

26.7 Design Notes

A peer's READY must never enter the activity term. A consumer that parks its response-ready high while idle is behaving correctly; folding that signal into `user_valid` pins this block permanently awake and defeats gating entirely – silently, because function is unaffected. Ten wrappers in this repository shipped that way and nothing failed until someone measured. `val/amba/test_cg_peer_ready.py` parks the peer READY high, holds every VALID low, and requires `cg_gating`. Canonical rule: `vault/handbook/design/clock-gating-activity-terms.md`.

cfg_cg_enable is not a kill switch. It arms gating and reaches `amba_clock_gate_ctrl` only; the datapath and any monitor enables are forwarded untouched. With it low the clock free-runs and this module behaves exactly like its base.

Gating latency. The clock stops `cfg_cg_idle_count + 2` cycles after the last bus activity – the idle counter, plus one for the `r_wakeup` flop. Size the idle count against your traffic's inter-burst gap: too small and the block wakes constantly, too large and it never gates.

Cost. Five flops: `r_wakeup` plus `r_idle_counter` at `IDLE_CNTR_WIDTH`, scaling as $1 + \text{CG_IDLE_COUNT_WIDTH}$. The ICG itself is a latch or `BUFGCE`, not fabric flops.

26.8 Related Modules

- **Base Module Functionality:** [axi4_slave_wr.md](#)
 - **Clock Gating Guide:** [clock_gated_variants.md](#)
 - **Detailed CG Examples:**
 - [axi4_master_rd_mon_cg.md](#) (AXI4 monitor)
 - [axil4_master_rd_mon_cg.md](#) (AXIL4 monitor)
 - [apb4_slave_cg.md](#) (APB interface)
-

26.9 Testing

`val/amba/test_axi4_slave_wr_cg.py` exercises this module. It collects 1 parameter cases at the default `REG_LEVEL`.

```
source env_python
pytest val/amba/test_axi4_slave_wr_cg.py -v
```

26.10 Navigation

- [<- Back to AXI4 Index](#)
- [<- Back to rtl-amba Index](#)
- [<- Back to Main Documentation Index](#)

27 AXI4 Slave Write Monitor

Module: `axi4_slave_wr_mon.sv` **Location:** `rtl/amba/axi4/` (protocol monitors live with their protocol; only the monitor CORE pieces are in `rtl/amba/monitor/`) **Status:** Production Ready

27.1 Overview

The AXI4 Slave Write Monitor bolts a full transaction monitor onto a working AXI4 slave write interface. You get the buffered slave from `axi4_slave_wr` plus real-time protocol checking, error detection, performance metrics, and configurable packet filtering on slave-side write transactions – everything a verification environment needs to know what the bus actually did, not just what it was supposed to do.

27.1.1 Key Features

- **Integrated Monitoring:** Combines axi4_slave_wr with axi_monitor_filtered
 - **2-Level Filtering:** Packet-type drop masks, individual event masking
 - **Error Detection:** Protocol violations, SLVERR, DECERR, orphan transactions
 - **Timeout Monitoring:** Configurable timeout detection for stuck transactions
 - **Performance Metrics:** Latency tracking, transaction counting, throughput analysis
 - **Monitor Bus Output:** 128-bit packets paired with 64-bit side-band timestamps
 - **Configuration Validation:** Detects conflicting configuration settings
 - **Clock Gating Support:** Busy signal for power management
-

27.2 Parameters

A lite-monitor version of this wrapper exists as axi4_slave_wr_monlite: the same core and taps with axi_monitor_lite instead of axi_monitor_filtered, about a fifth of the monitor gates, error/timeout/completion/threshold packets only. Selected in generated bridges by mon_preset = "lite".

27.2.1 AXI4 Slave Parameters

Parameter	Type	Default	Description
SKID_DEPTH_AW	int	2	AW channel skid buffer depth
SKID_DEPTH_W	int	4	W channel skid buffer depth
SKID_DEPTH_B	int	2	B channel skid buffer depth
AXI_ID_WIDTH	int	8	Transaction ID width
AXI_ADDR_WIDTH	int	32	Address bus width
AXI_DATA_WIDTH	int	32	Data bus width
AXI_WSTRB_WIDTH	int	AXI_DATA_WID	Write strobe width

Parameter	Type	Default	Description
		TH/8	(transport only – the monitor does not inspect strobes)
AXI_USER_WIDTH	int	1	User signal width

27.2.2 Monitor Parameters

Parameter	Type	Default	Description
UNIT_ID	logic [7:0]	8'h02	8-bit unit identifier in monitor packets
AGENT_ID	logic [15:0]	16'h0015	16-bit agent identifier in monitor packets
MAX_TRANSACTIONS	int	16	Maximum concurrent outstanding transactions
ACLK_MHZ	int	100	Clock frequency in MHz – keeps the 1 us tick exact off-100MHz
USE_WDATA_ORDER_Q	bit	0	Write-data ordering queue
NUM_BANKS	int	1	Banked transaction tables. >1 on a WRITE monitor requires USE_WDATA_ORDER_Q=1 – axi_monitor_trans_mgr fails elaboration otherwise
ID_FILTER_ENABLE	bit	0	Synthesises the per-instance ID-slice filter
ID_MATCH_BASE	int	0	First ID this instance owns
ID_MATCH_COUNT	int	0	How many; 0 means ALL, so a zeroed register block does not silently filter everything away
CFI_MIN_FREQ_MHZ /	int	= ACLK_MHZ	Freq-invariant counter

Parameter	Type	Default	Description
CFI_MAX_FREQ_MHZ			LUT bounds (cfg_freq_sel indexes within them)
ACTIVE_TRANS_THRES HOLD	int	MAX_TRANSACT IONS/2	Active-transaction count that trips a threshold packet when cfg_threshold_enable=1. Replaces the former hardwired 8/4; threshold packets now scale with the table sizing
ENABLE_FILTERING	bit	1	Enable packet filtering: two active drop levels (packet type, then event code). Level 2 is reserved and routes nothing
ADD_PIPELINE_STAGE	bit	0	Add register stage for timing closure
USE_MONITOR	bit	1	Synthesis-time monitor enable. 0 = omit monitor and tie outputs to safe non-blocking defaults; 1 = full monitor functionality.
N_ADDR_RANGES	int	0	Number of address-range comparators. 0 = checker omitted (zero area). >0 = N independent [low, high] ranges; feeds the shared allowlist checker: a debug-range hit -> AddrMatch, an error-allowlist miss -> Error/ADDR_RANGE (see axi_monitor_addr_check.

Parameter	Type	Default	Description
ADDR_RANGE_IS_ERROR	logic [N_ADDR_RANGES-1:0]	'0	md). Per-range flavor: bit i = 0 -> DEBUG range (hit -> AddrMatch), 1 -> ERROR range (allowlist miss -> Error/ADDR_RANGE). Default all-0 (feature inert).

27.2.3 Synthesis-Cone Parameters

Each detection cone can be compiled out to save area. The classic cones default on; the debug cone defaults off. Setting a bit to 0 drops the corresponding cone at synthesis via a generate-if inside `axi_monitor_reporter` – the area saving is real.

Parameter	Type	Default	Effect when 0
ENABLE_ERROR_LOGIC	bit	1	Drop the error-detection cone
ENABLE_TIMEOUT_LOGIC	bit	1	Drop the timeout cone and the <code>axi_monitor_timeout</code> instance
ENABLE_COMPL_LOGIC	bit	1	Drop the completion cone
ENABLE_THRESHOLD_LOGIC	bit	1	Drop the threshold cone
ENABLE_PERF_LOGIC	bit	1	Gates only the reporter's legacy perf-packet cone and the two lifetime counters – the window FSM and meters are unconditional
ENABLE_DEBUG_LOGIC	bit	0	Drop the debug (trace) cone – the 6th reporter sub-block (off by default)

Internally the wrapper hardwires two master switches on its `axi_monitor_filtered` instance: `ENABLE_PERF_PACKETS = 1` (the reporter's legacy perf cone is built; `ENABLE_PERF_LOGIC` gates THAT cone only, never the measurement window) and `ENABLE_DEBUG_MODULE = 0` (debug tracking module omitted). These are not top-level parameters of the wrapper.

The transaction CAM is always pipelined.

27.2.4 Derived Parameters (do not override)

These are declared as parameter so the elaborator can compute them, not so callers can set them. Each defaults to an expression over the parameters above; overriding one desynchronises it from its source and the design fails to elaborate or silently mis-sizes a bus. Set the parameters they are derived FROM and leave these alone.

Derived parameter	Default expression
DW	AXI_DATA_WIDTH
IW	AXI_ID_WIDTH
SW	AXI_WSTRB_WIDTH
UW	AXI_USER_WIDTH

27.3 Ports

27.3.1 AXI4 Write Channels

****Slave Interface (s_axi_*):**** - AW channel: awid, awaddr, awlen, awsize, awburst, awlock, awcache, awprot, awqos, awregion, awuser, awvalid, awready - W channel: wdata, wstrb, wlast, wuser, wvalid, wready - B channel: bid, bresp, buser, bvalid, bready

****Backend Interface (fub_axi_*):**** - Same signals as slave, mirrored direction (to memory/backend)

27.3.2 Monitor Configuration

Configuration ports are identical to other AXI4 monitors: - Basic enables: `cfg_monitor_enable` (master runtime gate: 0 = monitor inert, CAM held clear, never stalls the datapath), `cfg_error_enable`, `cfg_timeout_enable`, `cfg_perf_enable`, `cfg_compl_enable` (completion packets), `cfg_threshold_enable` (threshold-crossed packets), `cfg_debug_enable` (debug/trace cone – the 6th reporter sub-block) - Clear: `cam_clear` (Input, 1) - synchronous clear of the monitor transaction CAM (driven from the harness clear control bit, e.g. CTRL[4]) - Thresholds: `cfg_timeout_cycles` (unified coarse timeout, a MICROSECOND count at full 16-bit width: 1..65535 us per phase, 0 = 16'hFFFF ~ effectively never; drives all three phase counts), `cfg_latency_threshold` - Filtering: 8 mask signals (`cfg_axi_*_mask`: pkt, error, timeout, compl, thresh, perf, addr, debug) plus `cfg_axi_err_select` - Performance window control: `cfg_start_event_sel`, `cfg_end_event_sel`, `cfg_start_trigger`, `cfg_end_trigger`, `cfg_window_force_close` (see [Performance Monitoring](#))

The inner monitor's `cfg_debug_level` (tied to 0), `cfg_debug_mask` (0) are fixed inside the wrapper; `cfg_active_trans_threshold` is driven by the

ACTIVE_TRANS_THRESHOLD parameter (default MAX_TRANSACTIONS/2), not hardwired to 8, and all three are **not** top-level ports on this module.

27.3.3 Monitor Bus Output

Port	Direction	Width	Description
monbus_valid	Output	1	Monitor packet valid
monbus_ready	Input	1	Downstream ready to accept packet
monbus_packet	Output	128	monitor_packet_t (see format below)
monbus_timestamp	Output	64	monbus_timestamp_t paired atomically with monbus_packet
debug_block_ready	Output	1	Observability tap for the block_ready gating net (drives nothing internally; leave unconnected if unused)
i_mon_time	Input	64	Free-running counter from monbus_group_core, sampled at packet emission

27.3.4 Status Outputs

Port	Direction	Width	Description
busy	Output	1	Indicates active transactions (for clock gating)
active_transactions	Output	8	Current number of outstanding transactions
error_count	Output	16	Lifetime count of error+timeout packets actually emitted (reporter perf counter; reads 0 when ENABLE_PERF_LOGIC=0 or

Port	Direction	Width	Description
transaction_count	Output	32	USE_MONITOR=0) Lifetime count of completion packets actually emitted (zero-extended 16-bit reporter perf counter; reads 0 when ENABLE_PERF_LOGIC=0 or USE_MONITOR=0)
cfg_conflict_error	Output	1	Configuration conflict detected

27.3.5 Packet filters

Two independent runtime filters cut monbus traffic without touching the datapath. Both are inert until driven, which is the failure to watch for: the build-time parameter only decides whether the logic is SYNTHESISED, and a design that sets the parameter but leaves the `cfg_*` ports tied low filters nothing and looks like the feature is broken.

Address-range filter — `ADDR_FILTER_ENABLE` (bit, default 0) builds it.

Port	Width	Description
cfg_addr_filter_enable	1	High: suppress packets for transactions outside the window. Low: inert, whatever the parameter says
cfg_addr_filter_low	ADDR_WIDTH	Window base, inclusive
cfg_addr_filter_high	ADDR_WIDTH	Window limit, inclusive


The verdict is latched per table entry at ALLOCATION, from the command address, and held for that entry's life. Widening the window mid-flight does not un-filter entries already admitted — which is exactly what makes it safe to reprogram live, since an entry's fate is decided when it is admitted and the retire accounting cannot be corrupted afterwards. Contrast the address-range CHECKER (`N_ADDR_RANGES`), which re-evaluates per command.

Runtime ID filter — overrides the `ID_MATCH_BASE/ID_MATCH_COUNT` elaboration constants so an instance can be retargeted at a different master without a rebuild.

Port	Width	Description
cfg_id_filter_enable	1	High: use the window below. Low: use the parameters, bit-identical to a build without this feature
cfg_id_match_base	ID_WIDTH	First ID owned
cfg_id_match_count	ID_WIDTH+1	How many; 0 means ALL, matching the parameter rule so a zeroed register block does not silently filter everything away

The window is half-open: [base, base + count).

27.4 Functional Description

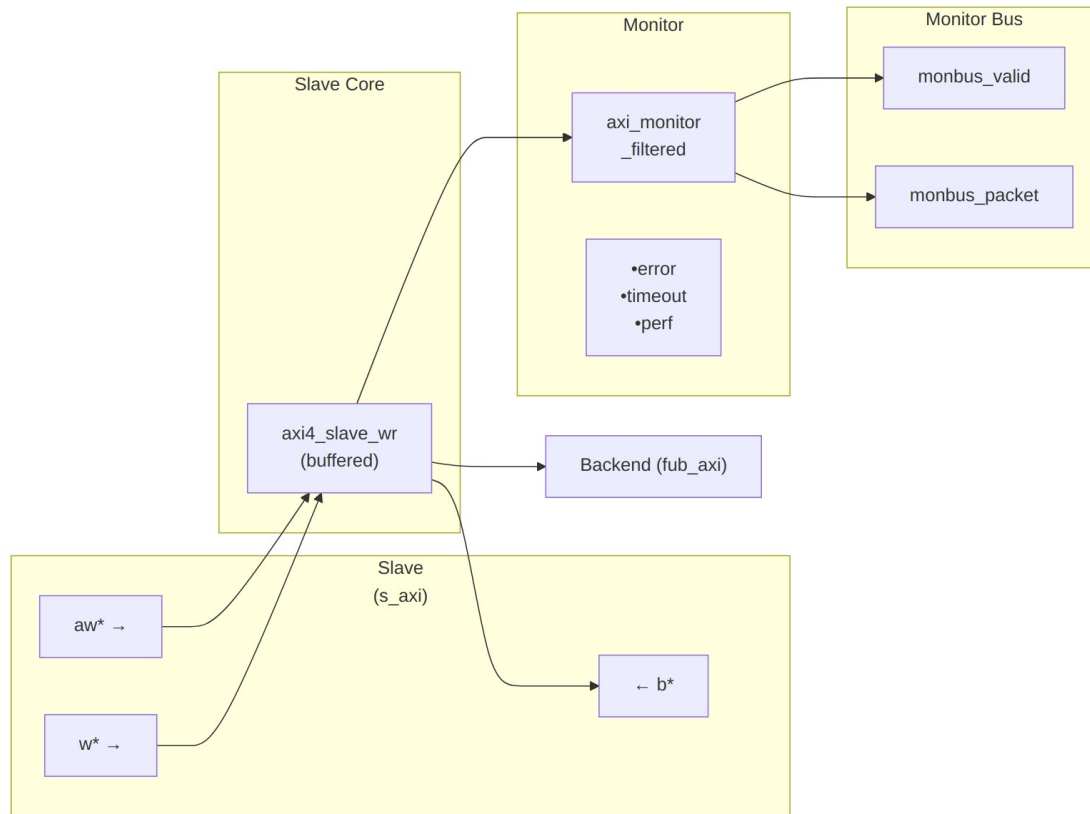

Architecture

The module instantiates two sub-modules: 1. **axi4_slave_wr** - Core AXI4 slave write functionality with buffering 2. **axi_monitor_filtered** - Transaction monitoring with 2-Level Filtering: packet-type drop masks + per-event masks (err_select is reserved – no routing)

27.4.1 Monitor Backpressure (block_ready)

`block_ready` is exported as the `debug_block_ready` output port – the wrapper deliberately makes the gating contract observable (the `_mon_cg` wrapper ties it off rather than forwarding it). It goes low when the monitor's transaction-table occupancy reaches its blocking threshold (a function of `MAX_TRANSACTIONS`; the reporter FIFO depth `INTR_FIFO_DEPTH` has no path to it). The wrapper ANDs it into the upstream-facing `s_axi_awready` so a saturated monitor throttles new transactions at the handshake instead of dropping events.

- **Where the stall lands:** the upstream `s_axi_awready` is forced low until the monitor drains.
- **When `USE_MONITOR=0`:** `block_ready` is internally tied high, so the wrapper imposes no stall and runs at full bandwidth.

- **When `cfg_monitor_enable=0`:** the wrapper gate forces the upstream ready open, so a runtime-disabled monitor can never stall the datapath (in-RTL formal property `ap_disabled_never_stalls`).

Recovery is guaranteed by the **saturation-recovery contract**: command-originated table entries are capped at `MAX_TRANSACTIONS - cmd_entry_reserve(MAX_TRANSACTIONS)` (reserve = 4 for tables of 16 or more, 0 below; the function lives in `monitor_common_pkg`), and `block_ready` re-asserts at occupancy < `MAX_TRANSACTIONS - (reserve - 1)` – a threshold strictly ABOVE the command cap – so a saturated table always drains back below the reopen point. Blocking throttles; it never deadlocks. Tables smaller than 16 keep full legacy allocation (small tables cannot spare slots) and trade the recovery guarantee for tracking capacity. The contract is verified by in-RTL formal properties (mutation-checked) and a 100-seed deliberately-undersized-table stream sweep; see [axi_monitor_base](#) for the canonical description.

Sizing note: a monitor on a bus shared by several channels/requesters must size `MAX_TRANSACTIONS` to cover `NUM_CHANNELS × per-channel outstanding` plus margin – the per-channel limit alone makes the monitor throttle the shared master. Tables deeper than 64 also need Verilator's `--unroll-count` raised (default 64) in sim builds.

27.4.2 Address-Range Checker

With `N_ADDR_RANGES > 0` the wrapper instantiates the shared allowlist checker (`axi_monitor_addr_check`). Each range carries a DEBUG/ERROR flavor:

- **DEBUG range** – a hit emits a `PktTypeAddrMatch` (4'h8) packet with event code `AXI_ADDR_RANGE_MATCH` (8'h01), gated by `cfg_debug_enable`.
- **ERROR range** – the enabled ERROR ranges form an allowlist; an address in NONE of them emits a `PktTypeError` (4'h0) packet with event code `AXI_ERR_ADDR_RANGE` (8'h0D), gated by `cfg_error_enable`.

This wrapper exposes **ADDR_RANGE_IS_ERROR** (per-range) as a parameter, so ranges can be assigned to either flavor.

Config inputs (active only when `N_ADDR_RANGES > 0`): - `cfg_addr_check_enable` – master on/off for the checker. - `cfg_addr_range_enable[N-1:0]` – per-range enable bit. - `cfg_addr_range_low/high[N-1:0][AXI_ADDR_WIDTH-1:0]` – inclusive bounds.

Event encoding: `event_data[63:60]` = `range_index` (matching DEBUG range, or 4'hF sentinel on an ERROR miss); `event_data[59:0]` = full address. **Filtering:** `AddrMatch` is dropped by `cfg_axi_addr_mask[1]`, the `ADDR_RANGE` error by `cfg_axi_error_mask[13]`. See the checker page for coalescing + formal properties.

27.4.3 Performance Monitoring

The wrapper hardwires `ENABLE_PERF_PACKETS = 1` on its inner `axi_monitor_filtered`. The **measurement-window state machine** and its counters are unconditional `always_ff` blocks in

axi_monitor_base – outside every generate – so they are present and running in EVERY build, including ENABLE_PERF_LOGIC = 0. That parameter reaches one consumer: the g_perf generate in axi_monitor_reporter holding the legacy perf-packet cone and the two 16-bit lifetime counters behind perf_completed_count / perf_error_count. Setting it to 0 saves that cone and nothing else. USE_MONITOR = 0 is what ties the perfmon outputs off. The wrapper instantiates plus a bank of W-data-channel utilization counters. All counters accumulate **only while a window is open** (window_active = 1) and hold their values between windows, so the host can read a completed window's totals.

27.4.3.1 The Measurement Window

A window is opened by a **start event** and closed by an **end event**. The event sources are selected by cfg_start_event_sel / cfg_end_event_sel (3-bit; e.g. 3'b010 selects the cfg_perf_enable edge) and can also be fired directly by the cfg_start_trigger / cfg_end_trigger pulses (from an engine or CSR). cfg_window_force_close is a software override that closes the window immediately. While the window is open:

- window_active is high.
- window_cycles[31:0] free-runs, counting every clock elapsed inside the window.

Sample the counters on the cycle window_active falls to 0 (drive cfg_end_trigger, or wait for the configured end event).

27.4.3.2 Utilization Counters (W Data Channel)

Every cycle inside the window is classified by the W channel's wvalid / wready into exactly one of four buckets:

Output	Width	Condition	Meaning
perf_prod_cycles	32	wvalid && wready	productive beat transferred
perf_bp_cycles	32	wvalid && !wready	back-pressure (data offered, sink not ready)
perf_starv_cycles	32	!wvalid && wready	starvation (sink ready, no data)
perf_idle_cycles	32	!wvalid && !wready	idle

The four buckets sum to window_cycles - 1 (the start cycle seeds window_cycles to 1 while the buckets reset to 0); the one-count skew is negligible for long windows.

27.4.3.3 Throughput Counters

Output	Width	Meaning
perf_beat_count	32	W data beats transferred (= perf_prod_cycles, 1 beat/cycle)
perf_byte_count	64	bytes transferred = beats x (1 << AWSIZE), using the AWSIZE captured at the most recent AW address phase (upper bound: counts full-width beats and does not subtract bytes masked off byWSTRB on unaligned or partial beats)
perf_burst_count	32	AW address-phase handshakes

The integrator computes average burst length as $\text{perf_beat_count} / \text{perf_burst_count}$.

27.4.3.4 Performance Monitoring Ports

Port	Direction	Width	Description
cfg_perf_enable	Input	1	Enable performance-metric packet generation
cfg_start_event_sel	Input	3	Window start event source select
cfg_end_event_sel	Input	3	Window end event source select
cfg_start_trigger	Input	1	Pulse: open the measurement window
cfg_end_trigger	Input	1	Pulse: close the measurement window
cfg_window_force_close	Input	1	Software override: force the window closed
window_active	Output	1	High while a measurement window is

Port	Direction	Width	Description
			open
window_cycles	Output	32	Cycles elapsed in the current window
perf_prod_cycles	Output	32	wvalid && wready cycles
perf_bp_cycles	Output	32	wvalid && !wready cycles (back-pressure)
perf_starv_cycles	Output	32	!wvalid && wready cycles (starvation)
perf_idle_cycles	Output	32	!wvalid && !wready cycles
perf_beat_count	Output	32	W data beats transferred
perf_byte_count	Output	64	bytes transferred
perf_burst_count	Output	32	AW address-phase handshakes

When `USE_MONITOR = 0`, every perfmon output is tied to 0 and the window never opens.

27.4.4 Monitor Packet Format

Identical 128-bit format (with 64-bit side-band timestamp) as other AXI4 monitors. See [axi4_master_rd_mon](#) for complete specification.

27.5 Timing Characteristics

Skid parameter	Default depth
SKID_DEPTH_AW	2 entries
SKID_DEPTH_W	4 entries
SKID_DEPTH_B	2 entries

Each channel traverses one `gaxi_skid_buffer`, which registers both `rd_valid` and its storage. The **1-cycle input-to-output latency therefore applies on every transfer, including the un stalled case** – there is no combinational bypass. Depth buys backpressure absorption, not throughput; full rate is sustained once the pipeline is primed. Legal range is 2..8 inclusive, odd values included.

Clocking: `aclk`, reset `aresetn` (active-low asynchronous).


No synthesis numbers are quoted here. Frequency and area depend on the target device and the parameters you elaborate with; run your own build.

27.6 Waveforms

The following waveforms show AXI4 slave write monitor behavior from the slave perspective:

27.6.1 Scenario 1: Single-Beat Write (Slave View)

AXI4 write transaction from slave interface perspective:

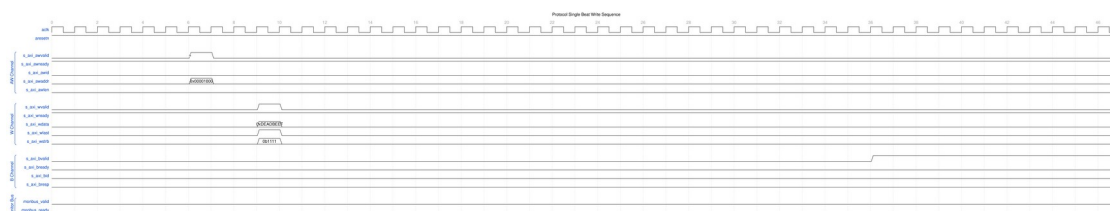


Single Beat Write Slave

WaveJSON: [single_beat_write_001.json](#)

Key Observations: - Slave-side AW channel (`s_axi_aw`) - Slave-side W channel data (`s_axi_w`) - Slave-side B channel response (`s_axi_b*`) - Monitor packet generation from slave perspective - Slave BRESP status monitoring - Transaction tracking in slave context

27.6.2 Scenario 2: Alternative Single-Beat Write (Slave View)

Variant write transaction with different timing from slave:

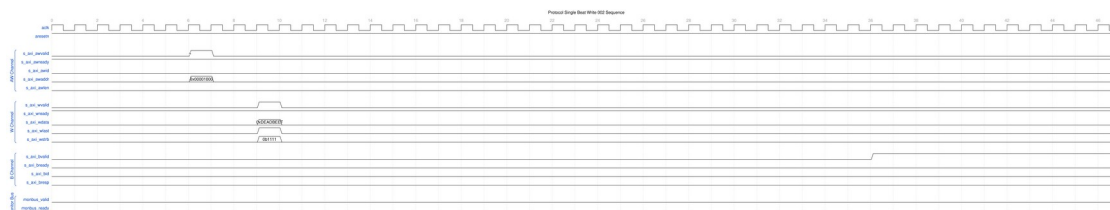

Single Beat Write Slave Alt

WaveJSON: [single_beat_write_002_001.json](#)

Key Observations: - Slave ready signal behavior - AWREADY backpressure effects - WREADY flow control - BVALID generation timing - Slave latency monitoring - Error detection from slave side

27.7 Usage Examples

Every parameter and port below is read from the module declaration.

```
axi4_slave_wr_mon #(
    .SKID_DEPTH_AW      (2),
    .SKID_DEPTH_W       (4),
    .SKID_DEPTH_B       (2),
    .AXI_ID_WIDTH       (8),
    .AXI_ADDR_WIDTH     (32),
    .AXI_DATA_WIDTH     (32),
    .AXI_USER_WIDTH     (1),
    .ACLK_MHZ           (100),
    .USE_MONITOR        (1'b1),
    .N_ADDR_RANGES      (0)
) u_axi4_slave_wr_mon (
    .aclk                (aclk),
    .aresetn             (aresetn),
    .cam_clear           (cam_clear),
    .s_axi_awid          (s_axi_awid),
    .s_axi_awaddr        (s_axi_awaddr),
    .s_axi_awlen         (s_axi_awlen),
    .s_axi_awsz         (s_axi_awsz),
    .s_axi_awburst       (s_axi_awburst),
    .s_axi_awlock        (s_axi_awlock),
    .s_axi_awcache       (s_axi_awcache),
    .s_axi_awprot        (s_axi_awprot),
    .s_axi_awqos         (s_axi_awqos),
    .s_axi_awregion      (s_axi_awregion),
    .s_axi_awuser        (s_axi_awuser),
    .s_axi_awvalid       (s_axi_awvalid),
    .s_axi_awready       (s_axi_awready),
    .s_axi_wdata         (s_axi_wdata),
    .s_axi_wstrb         (s_axi_wstrb),
    .s_axi_wlast         (s_axi_wlast),
    .s_axi_wuser         (s_axi_wuser),
    .s_axi_wvalid        (s_axi_wvalid),
    .s_axi_wready        (s_axi_wready),
    .s_axi_bid           (s_axi_bid),
    .s_axi_bresp         (s_axi_bresp),
    .s_axi_buser         (s_axi_buser),
    .s_axi_bvalid        (s_axi_bvalid),
    .s_axi_bready        (s_axi_bready),
    .fub_axi_awid        (fub_axi_awid),
    .fub_axi_awaddr      (fub_axi_awaddr),
    .fub_axi_awlen       (fub_axi_awlen),
    .fub_axi_awsz        (fub_axi_awsz),
    .fub_axi_awburst     (fub_axi_awburst),
```

```

.fub_axi_awlock      (fub_axi_awlock),
.fub_axi_awcache     (fub_axi_awcache),
.fub_axi_awprot      (fub_axi_awprot),
.fub_axi_awqos       (fub_axi_awqos),
.fub_axi_awregion    (fub_axi_awregion),
.fub_axi_awuser      (fub_axi_awuser),
.fub_axi_awvalid     (fub_axi_awvalid),
.fub_axi_awready     (fub_axi_awready),
.fub_axi_wdata       (fub_axi_wdata),
.fub_axi_wstrb       (fub_axi_wstrb),
.fub_axi_wlast       (fub_axi_wlast),
.fub_axi_wuser       (fub_axi_wuser),
.fub_axi_wvalid      (fub_axi_wvalid),
.fub_axi_wready      (fub_axi_wready),
.fub_axi_bid         (fub_axi_bid),
.fub_axi_bresp       (fub_axi_bresp),
.fub_axi_buser       (fub_axi_buser),
.fub_axi_bvalid      (fub_axi_bvalid),
.fub_axi_bready      (fub_axi_bready),
.cfg_monitor_enable  (cfg_monitor_enable),
.cfg_error_enable    (cfg_error_enable),
.cfg_timeout_enable  (cfg_timeout_enable),
.cfg_perf_enable     (cfg_perf_enable),
.cfg_compl_enable    (cfg_compl_enable),
.cfg_threshold_enable (cfg_threshold_enable),
.cfg_debug_enable    (cfg_debug_enable),
.cfg_timeout_cycles  (cfg_timeout_cycles),
.cfg_freq_sel        (cfg_freq_sel),
.cfg_latency_threshold (cfg_latency_threshold),
.cfg_axi_pkt_mask    (cfg_axi_pkt_mask),
.cfg_axi_err_select  (cfg_axi_err_select),
.cfg_axi_error_mask  (cfg_axi_error_mask),
.cfg_axi_timeout_mask (cfg_axi_timeout_mask),
.cfg_axi_compl_mask  (cfg_axi_compl_mask),
.cfg_axi_thresh_mask (cfg_axi_thresh_mask),
.cfg_axi_perf_mask   (cfg_axi_perf_mask),
.cfg_axi_addr_mask   (cfg_axi_addr_mask),
.cfg_axi_debug_mask  (cfg_axi_debug_mask),
.cfg_addr_check_enable (cfg_addr_check_enable),
.cfg_addr_range_enable (cfg_addr_range_enable),
.cfg_addr_range_low  (cfg_addr_range_low),
.cfg_addr_range_high (cfg_addr_range_high),
.cfg_id_filter_enable (cfg_id_filter_enable),
.cfg_id_match_base   (cfg_id_match_base),
.cfg_id_match_count  (cfg_id_match_count),
.cfg_addr_filter_enable (cfg_addr_filter_enable),
.cfg_addr_filter_low  (cfg_addr_filter_low),
.cfg_addr_filter_high (cfg_addr_filter_high),

```



```

.cfg_start_event_sel    (cfg_start_event_sel),
.cfg_end_event_sel      (cfg_end_event_sel),
.cfg_start_trigger      (cfg_start_trigger),
.cfg_end_trigger        (cfg_end_trigger),
.cfg_window_force_close (cfg_window_force_close),
.i_mon_time             (i_mon_time),
.monbus_valid           (monbus_valid),
.monbus_ready           (monbus_ready),
.monbus_packet          (monbus_packet),
.monbus_timestamp       (monbus_timestamp),
.busy                   (busy),
.active_transactions    (active_transactions),
.error_count            (error_count),
.transaction_count      (transaction_count),
.debug_block_ready      (debug_block_ready),
.window_active          (window_active),
.window_cycles          (window_cycles),
.perf_prod_cycles       (perf_prod_cycles),
.perf_bp_cycles         (perf_bp_cycles),
.perf_starv_cycles      (perf_starv_cycles),
.perf_idle_cycles       (perf_idle_cycles),
.perf_beat_count        (perf_beat_count),
.perf_byte_count        (perf_byte_count),
.perf_burst_count       (perf_burst_count),
.cfg_conflict_error     (cfg_conflict_error)
);

```

27.8 Design Notes

27.8.1 Configuration Strategies

27.8.1.1 Strategy 1: Functional Verification (Recommended)

Goal: Catch slave-side write errors

// Enable configuration

```

.cfg_monitor_enable    (1'b1),
.cfg_error_enable      (1'b1),      // Detect SLVERR/DECERR from
backend
.cfg_timeout_enable    (1'b1),      // Detect backend timeouts
.cfg_perf_enable       (1'b0),      // Disable (reduces traffic)

```

// Filtering - pass error and timeout only

```

.cfg_axi_pkt_mask      (16'hFFF6), // Drop all but ERROR, TIMEOUT
.cfg_axi_error_mask    (16'h0000), // Pass all errors
.cfg_axi_timeout_mask  (16'h0000), // Pass all timeouts
.cfg_axi_compl_mask    (16'hFFFF), // Drop completions
.cfg_axi_perf_mask     (16'hFFFF), // Drop performance

```

```
// Timeouts
.cfg_timeout_cycles      (16'd15),    // 15 microseconds per phase:
allow backend write latency
.cfg_latency_threshold   (32'd1000)
```

27.8.1.2 Strategy 2: Performance Analysis

Goal: Analyze slave write performance

```
// Enable configuration
.cfg_monitor_enable      (1'b1),
.cfg_error_enable        (1'b1),
.cfg_timeout_enable      (1'b0),
.cfg_perf_enable         (1'b1),    // Enable performance metrics

// Filtering - pass error and performance only
.cfg_axi_pkt_mask        (16'hFFEE), // Drop all but ERROR, PERF (set
bit = drop)
.cfg_axi_error_mask      (16'h0000), // Pass all errors
.cfg_axi_perf_mask       (16'h0000), // Pass all performance
.cfg_axi_compl_mask      (16'hFFFF), // Drop completions
```

27.8.2 Slave-Side Monitoring

Key Differences from Master Monitors: - Monitors from slave perspective (interconnect to backend) - Tracks backend write response latency - Detects backend timeout scenarios - Default UNIT_ID=2, AGENT_ID=21 (distinguishes from master)

Slave Write Sequence: 1. AW channel: Master write address arrives at slave 2. Monitor captures: Address, ID, burst parameters 3. AW forwarded to backend (memory/logic) 4. W channel: Master sends data beats 5. Monitor tracks: Write beat count, WLAST 6. B channel: Backend returns write response 7. Monitor tracks: Response latency, BRESP 8. B forwarded back to master via interconnect

Common Slave Errors Detected: - **Backend timeout:** AW accepted but B never returned - **Write data timeout:** AW accepted but W never completed - **SLVERR:** Slave error (access violation, parity error, write protection) - **DECERR:** Decode error (shouldn't occur at slave, but detected) - (Burst-length mismatch is NOT detected – completion logic only) - **ID corruption:** BID doesn't match tracked AWID - (WSTRB violations are NOT detected – no strobe reaches the monitor)

27.8.3 Performance Considerations

Backend Latency Monitoring: - Tracks AW-to-B response latency - Includes W channel completion time - Configurable timeout threshold - Separate from master-side latency

Typical Timeout Values: - SRAM backend: 100-500 cycles - DDR controller: 1000-5000 cycles - Flash/EEPROM: 10000+ cycles (write operations) - PCIe/external: 10000+ cycles

Write-Specific Timing: - AW-W ordering flexible in AXI4 - Backend may wait for WLAST before responding - B response latency includes W channel completion

27.8.4 Buffer Depth Guidelines

Same as [axi4_slave_wr](#): - **SKID_DEPTH_AW**: 2 (default) - handles interconnect backpressure - **SKID_DEPTH_W**: 4 (default) - buffers burst write data - **SKID_DEPTH_B**: 2 (default) - write responses are single-beat - Increase for high-latency backends or large bursts

27.8.5 Write Transaction Characteristics

Burst Write Monitoring: - Monitors AW channel for address capture - Tracks W channel beats until WLAST - Correlates B channel response with AWID - Completes write data on WLAST or the expected count – no burst-length mismatch event exists - (WSTRB is NOT checked – no strobe signal reaches the monitor)

Performance Impact: - Write bursts more efficient than single writes - Backend may buffer/pipeline write data - A B response before W completion is flagged as a protocol error (EVT_PROTOCOL) – the monitor does not model response reordering - Monitor packets generated per transaction, not per beat

27.9 Related Modules

27.9.1 Companion Monitors

- [axi4_master_rd_mon](#) - AXI4 master read with monitoring
- [axi4_master_wr_mon](#) - AXI4 master write with monitoring
- [axi4_slave_rd_mon](#) - AXI4 slave read with monitoring

27.9.2 Base Modules

- [axi4_slave_wr](#) - Functional AXI4 slave write (without monitoring)
- [axi_monitor_filtered](#) - Monitoring engine with filtering (monitor/)

27.9.3 Used Components

- [gaxi_skid_buffer](#) - Elastic buffering
 - [axi_monitor_base](#) - Core monitoring logic (monitor/)
 - [axi_monitor_trans_mgr](#) - Transaction tracking (monitor/)
-

27.10 Testing

The unit testbench lives at `val/amba/test_axi4_slave_wr_mon.py`, built on the shared AXI4 test framework in `bin/TBClasses/components/axi4/`.

27.11 References

27.11.1 Specifications

- ARM IHI 0022E: AMBA AXI Protocol Specification (AXI4)
- Monitor Bus Packet Format: [monitor_package_spec.md](#)

27.11.2 Source Code

- RTL: `rtl/amba/axi4/axi4_slave_wr_mon.sv`

27.11.3 Documentation

- Configuration Guide: [AXI Monitor Base](#)
 - Architecture: [rtl-amba Overview](#)
 - AXI4 Index: [README.md](#)
-

Last Updated: 2026-07-18

27.12 Navigation

- [<- Back to AXI4 Index](#)
- [<- Back to rtl-amba Index](#)
- [<- Back to Main Documentation Index](#)

28 AXI4 Slave Write Monitor (Clock-Gated)

Module: `axi4_slave_wr_mon_cg.sv` **Base Module:** [axi4_slave_wr_mon](#) **Location:** `rtl/amba/axi4/` (protocol monitors live with their protocol; only the monitor CORE pieces are in `rtl/amba/monitor/`) **Status:** Production Ready

28.1 Overview

This is the **clock-gated variant** of [axi4_slave_wr_mon](#). The base page owns the functional story; this page only covers what changes when the whole monitor sits behind a clock gate.

For complete clock-gating documentation, usage examples, and configuration guidelines, see the [Clock-Gated Variants Guide](#).

The `axi4_slave_wr_mon_cg` module adds power optimization to `axi4_slave_wr_mon` through activity-based clock gating:

- **Same Functionality:** 100% equivalent to base module
- **Power Savings:** traffic-dependent; unmeasured in this repo – treat any percentage as a placeholder until characterized
- **Configurable at runtime:** `cfg_cg_enable` / `cfg_cg_idle_count` (one gate, no domains)
- **Zero Overhead When Disabled:** `cfg_cg_enable=0` bypasses the gate at runtime

28.2 Parameters

MOST [axi4_slave_wr_mon](#) parameters pass through. As of 2026-09-01 only `ACTIVE_TRANS_THRESHOLD` is NOT forwarded, and that one is harmless: its inner default is `MAX_TRANSACTIONS/2`, computed from the `MAX_TRANSACTIONS` this wrapper DOES forward.

An earlier version of this page listed nine more as unforwarded, which was accurate when written. `ACLK_MHZ`, `CFI_MIN_FREQ_MHZ`, `CFI_MAX_FREQ_MHZ`, `USE_WDATA_ORDER_Q`, `NUM_BANKS` and `ADDR_RANGE_IS_ERROR` were threaded through every `_cg` wrapper on 2026-09-01, and `ID_FILTER_ENABLE` / `ID_MATCH_BASE` / `ID_MATCH_COUNT` the day before. Until then a clock-gated build could not state its clock frequency, so the 1 us timer tick was pinned to the 100 MHz default and every microsecond-denominated timeout was miscalibrated on any other clock – silently.

Parameter	Default	Description
<code>CG_IDLE_COUNT_WIDTH</code>	4	Width of the idle countdown, sizing <code>cfg_cg_idle_count</code>
<code>USE_MONITOR</code>	1	Synthesis-time monitor enable (forwarded to inner monitor).
<code>N_ADDR_RANGES</code>	0	Number of address-range comparators (forwarded to

Parameter	Default	Description
ADDR_FILTER_ENABLE	0	base module). Synthesises the address-range report filter. The parameter only decides whether the logic EXISTS – a build that sets it and leaves <code>cfg_addr_filter_enable</code> low filters nothing and looks broken.
ID_FILTER_ENABLE	0	Synthesises the ID report filter (see <code>cfg_id_*</code> for the runtime override).
ID_MATCH_BASE	0	First ID this instance owns.
ID_MATCH_COUNT	0	How many IDs; 0 means ALL, so a zeroed register block does not silently filter everything away.
ADD_PIPELINE_STAGE	0	Insert a register stage for timing closure. Costs a cycle of latency. (Add register stage for timing closure)
ENABLE_FILTERING	1	Enable packet filtering: two active drop levels (packet type, then event code). Level 2 is reserved and routes nothing.
SKID_DEPTH_AW	2	Skid-buffer depth on the AW channel. Legal range 2..8 inclusive; odd depths are legal.
SKID_DEPTH_B	2	Skid-buffer depth on the B channel. Legal range 2..8 inclusive; odd depths are legal.
SKID_DEPTH_W	4	Skid-buffer depth on the W

Parameter	Default	Description
AGENT_ID	16'h0015	channel. Legal range 2..8 inclusive; odd depths are legal. Agent identifier emitted in the agent_id field of every monitor packet. Pairs with UNIT_ID to identify the packet source. (16-bit Agent ID for monitor packets)
UNIT_ID	8'h02	Unit identifier emitted in the unit_id field of every monitor packet. Give each monitored interface a distinct value or the packets cannot be told apart at the collector. (8-bit Unit ID for monitor packets)

Gating is controlled by RUNTIME inputs `cfg_cg_enable / cfg_cg_idle_count` with status outputs `cg_gating / cg_idle`; ONE `amba_clock_gate_ctrl` gates the entire inner module. (The `ENABLE_CLOCK_GATING / CG_IDLE_CYCLES / CG_GATE_*` interface this page once documented never existed.)

Base-module ports are forwarded EXCEPT `debug_block_ready`, which this wrapper ties off (use the base module for the backpressure tap) – including the full performance-monitoring interface (see [Performance Monitoring](#) below). The six `ENABLE_*_LOGIC` synthesis-cone parameters (`ENABLE_ERROR_LOGIC`, `ENABLE_TIMEOUT_LOGIC`, `ENABLE_COMPL_LOGIC`, `ENABLE_THRESHOLD_LOGIC`, `ENABLE_PERF_LOGIC`, `ENABLE_DEBUG_LOGIC`) and the `cfg_compl_enable / cfg_threshold_enable / cfg_debug_enable` control enables are also passed straight through.

28.2.1 Filter configuration (forwarded)

These reach the inner monitor through this wrapper; before 2026-09-01 they did not.

Port	Direction	Width	Description
<code>cfg_addr_filter_enable</code>	Input	1	High: suppress packets for transactions outside the window. Low: inert, whatever

Port	Direction	Width	Description
cfg_addr_filter_low	Input	ADDR_WIDTH H	ADDR_FILTER_ENABLE says Window base, inclusive
cfg_addr_filter_high	Input	ADDR_WIDTH H	Window limit, inclusive
cfg_id_filter_enable	Input	1	High: use the runtime window below instead of the ID_MATCH_* parameters
cfg_id_match_base	Input	ID_WIDTH	First ID to accept
cfg_id_match_count	Input	ID_WIDTH+1	How many; 0 means ALL

Neither filter un-filters entries already admitted to the transaction table, which is what makes changing them at runtime safe.

28.2.2 Derived Parameters (do not override)

These are declared as parameter so the elaborator can compute them, not so callers can set them. Each defaults to an expression over the parameters above; overriding one desynchronises it from its source and the design fails to elaborate or silently mis-sizes a bus. Set the parameters they are derived FROM and leave these alone.

Derived parameter	Default expression
AXI_WSTRB_WIDTH	AXI_DATA_WIDTH / 8
DW	AXI_DATA_WIDTH
IW	AXI_ID_WIDTH
SW	AXI_WSTRB_WIDTH
UW	AXI_USER_WIDTH

28.3 Ports

Port	Dir	Width	Description
aclk	In	1	
aresetn	In	1	
cam_clear	In	1	sync clear of the

Port	Dir	Width	Description
			monitor trans CAM
s_axi_awid	In	[IW-1:0]	
s_axi_awaddr	In	[AW-1:0]	
s_axi_awlen	In	[7:0]	
s_axi_awsz	In	[2:0]	
s_axi_awburst	In	[1:0]	
s_axi_awlock	In	1	
s_axi_awcache	In	[3:0]	
s_axi_awprot	In	[2:0]	
s_axi_awqos	In	[3:0]	
s_axi_awregion	In	[3:0]	
s_axi_awuser	In	[UW-1:0]	
s_axi_awvalid	In	1	
s_axi_awready	Out	1	
s_axi_wdata	In	[DW-1:0]	
s_axi_wstrb	In	[SW-1:0]	
s_axi_wlast	In	1	
s_axi_wuser	In	[UW-1:0]	
s_axi_wvalid	In	1	
s_axi_wready	Out	1	
s_axi_bid	Out	[IW-1:0]	
s_axi_bresp	Out	[1:0]	
s_axi_buser	Out	[UW-1:0]	
s_axi_bvalid	Out	1	
s_axi_bready	In	1	
fub_axi_awid	Out	[IW-1:0]	
fub_axi_awaddr	Out	[AW-1:0]	
fub_axi_awlen	Out	[7:0]	
fub_axi_awsz	Out	[2:0]	

Port	Dir	Width	Description
fub_axi_awburst	Out	[1:0]	
fub_axi_awlock	Out	1	
fub_axi_awcache	Out	[3:0]	
fub_axi_awprot	Out	[2:0]	
fub_axi_awqos	Out	[3:0]	
fub_axi_awregion	Out	[3:0]	
fub_axi_awuser	Out	[UW-1:0]	
fub_axi_awvalid	Out	1	
fub_axi_awready	In	1	
fub_axi_wdata	Out	[DW-1:0]	
fub_axi_wstrb	Out	[SW-1:0]	
fub_axi_wlast	Out	1	
fub_axi_wuser	Out	[UW-1:0]	
fub_axi_wvalid	Out	1	
fub_axi_wready	In	1	
fub_axi_bid	In	[IW-1:0]	
fub_axi_bresp	In	[1:0]	
fub_axi_buser	In	[UW-1:0]	
fub_axi_bvalid	In	1	
fub_axi_bready	Out	1	
cfg_monitor_enable	In	1	Enable monitoring
cfg_error_enable	In	1	Enable error detection
cfg_timeout_enable	In	1	Enable timeout detection
cfg_perf_enable	In	1	Enable performance monitoring
cfg_compl_enable	In	1	Enable completion

Port	Dir	Width	Description
			packets
cfg_threshold_enable	In	1	Enable threshold packets
cfg_debug_enable	In	1	Enable debug packets
cfg_timeout_cycles	In	[15:0]	Timeout threshold in MICROSECONDS (1 us tick), despite the name
cfg_freq_sel	In	[3:0]	counter_freq_invariant LUT index
cfg_latency_threshold	In	[31:0]	Latency threshold for alerts
cfg_axi_pkt_mask	In	[15:0]	Drop mask for packet types
cfg_axi_err_select	In	[15:0]	Error select for packet types (for future routing)
cfg_axi_error_mask	In	[15:0]	Individual error event mask
cfg_axi_timeout_mask	In	[15:0]	Individual timeout event mask
cfg_axi_compl_mask	In	[15:0]	Individual completion event mask
cfg_axi_thresh_mask	In	[15:0]	Individual threshold event mask
cfg_axi_perf_mask	In	[15:0]	Individual performance event mask
cfg_axi_addr_mask	In	[15:0]	Individual

Port	Dir	Width	Description
k			address match event mask
cfg_axi_debug_mask	In	[15:0]	Individual debug event mask
cfg_cg_enable	In	1	Enable clock gating
cfg_cg_idle_count	In	[CG_IDLE_COUNT_W IDTH-1:0]	Idle cycles before gating
cfg_addr_check_enable	In	1	
cfg_addr_range_enable	In	[(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1)-1:0]	
cfg_addr_range_low	In	[(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1)-1:0]	
cfg_addr_range_high	In	[(N_ADDR_RANGES > 0 ? N_ADDR_RANGES : 1)-1:0]	
cfg_addr_filter_enable	In	1	
cfg_addr_filter_low	In	[AW-1:0]	
cfg_addr_filter_high	In	[AW-1:0]	
cfg_id_filter_enable	In	1	
cfg_id_match_base	In	[IW-1:0]	
cfg_id_match_count	In	[IW:0]	
i_mon_time	In	1	
monbus_valid	Out	1	Monitor bus valid
monbus_ready	In	1	Monitor bus ready
monbus_packet	Out	1	Monitor packet

Port	Dir	Width	Description
			(128-bit)
monbus_timestamp	Out	1	Side-band sampled time
busy	Out	1	
active_transactions	Out	[7:0]	Number of active transactions
error_count	Out	[15:0]	Total error count
transaction_count	Out	[31:0]	Total transaction count
cg_gating	Out	1	Gated clock is stopped
cg_idle	Out	1	No activity observed
cfg_conflict_error	Out	1	Configuration conflict detected
cfg_start_event_sel	In	[2:0]	
cfg_end_event_sel	In	[2:0]	
cfg_start_trigger	In	1	
cfg_end_trigger	In	1	
cfg_window_force_close	In	1	
window_active	Out	1	
window_cycles	Out	[31:0]	
perf_prod_cycles	Out	[31:0]	
perf_bp_cycles	Out	[31:0]	
perf_starv_cycles	Out	[31:0]	
perf_idle_cycles	Out	[31:0]	
perf_beat_count	Out	[31:0]	
perf_byte_count	Out	[63:0]	
perf_burst_count	Out	[31:0]	

28.4 Functional Description

28.4.1 Performance Monitoring

The clock-gated wrapper exposes the full perfmon interface of the base module and **forwards every port unchanged** to the inner `axi4_slave_wr_mon`. The measurement-window state machine, the four W-channel utilization buckets (productive / back-pressure / starvation / idle), and the beat/byte/burst throughput counters behave exactly as documented in the base module – see [Performance Monitoring in axi4_slave_wr_mon](#) for the full narrative and per-bit semantics.

Forwarded perfmon ports (identical width and direction to the base module):

- **Inputs:** `cfg_perf_enable`, `cfg_start_event_sel` (3), `cfg_end_event_sel` (3), `cfg_start_trigger`, `cfg_end_trigger`, `cfg_window_force_close`
- **Outputs:** `window_active`, `window_cycles` (32), `perf_prod_cycles` (32), `perf_bp_cycles` (32), `perf_starv_cycles` (32), `perf_idle_cycles` (32), `perf_beat_count` (32), `perf_byte_count` (64), `perf_burst_count` (32)

The `perf_burst_count` output tracks AW (write address) handshakes. **WARNING – gating vs window accounting:** an open measurement window is NOT a wake term, and the entire inner monitor (window state machine and counters included) runs on the gated clock. If the bus idles past `cfg_cg_idle_count` with a window open, the counters FREEZE while wall-clock time passes, and trigger pulses arriving while gated are DROPPED. For exact wall-clock windows or idle-bus triggering, hold `cfg_cg_enable` low around the measurement, or use the base module.

28.5 Timing Characteristics

Skid parameter	Default depth
SKID_DEPTH_AW	2 entries
SKID_DEPTH_W	4 entries
SKID_DEPTH_B	2 entries

Each channel traverses one `gaxi_skid_buffer`, which registers both `rd_valid` and its storage. The **1-cycle input-to-output latency therefore applies on every transfer, including the unstalled case** – there is no combinational bypass. Depth buys backpressure absorption, not throughput; full rate is sustained once the pipeline is primed. Legal range is 2..8 inclusive, odd values included.

Clocking: `aclk`, reset `aresetn` (active-low asynchronous).

No synthesis numbers are quoted here. Frequency and area depend on the target device and the parameters you elaborate with; run your own build.

28.6 Usage Examples

```
axi4_slave_wr_mon_cg #(
    // Base module parameters (see axi4_slave_wr_mon.md)
    .AXI_ID_WIDTH(8),
    .AXI_ADDR_WIDTH(32),
    .AXI_DATA_WIDTH(64),

    .CG_IDLE_COUNT_WIDTH(4)
) u_cg (
    .aclk(clk),
    .aresetn(rst_n),
    .cfg_cg_enable(1'b1),
    .cfg_cg_idle_count(4'd8),
    .cg_gating(), .cg_idle(),
    // ... all other ports same as axi4_slave_wr_mon (except
    debug_block_ready)
);
```

28.7 Design Notes

A peer's READY must never enter the activity term. A consumer that parks its response-ready high while idle is behaving correctly; folding that signal into `user_valid` pins this block permanently awake and defeats gating entirely – silently, because function is unaffected. Ten wrappers in this repository shipped that way and nothing failed until someone measured. `val/amba/test_cg_peer_ready.py` parks the peer READY high, holds every VALID low, and requires `cg_gating`. Canonical rule: `vault/handbook/design/clock-gating-activity-terms.md`.

cfg_cg_enable is not a kill switch. It arms gating and reaches `amba_clock_gate_ctrl` only; the datapath and any monitor enables are forwarded untouched. With it low the clock free-runs and this module behaves exactly like its base.

Gating latency. The clock stops `cfg_cg_idle_count + 2` cycles after the last bus activity – the idle counter, plus one for the `r_wakeup` flop. Size the idle count against your traffic's inter-burst gap: too small and the block wakes constantly, too large and it never gates.

Cost. Five flops: `r_wakeup` plus `r_idle_counter` at `IDLE_CNTR_WIDTH`, scaling as $1 + \text{CG_IDLE_COUNT_WIDTH}$. The ICG itself is a latch or `BUFGCE`, not fabric flops.

28.8 Related Modules

- **Base Module Functionality:** [axi4_slave_wr_mon.md](#)
 - **Clock Gating Guide:** [clock_gated_variants.md](#)
 - **Detailed CG Examples:**
 - [axi4_master_rd_mon_cg.md](#) (AXI4 monitor)
 - [axil4_master_rd_mon_cg.md](#) (AXIL4 monitor)
 - [apb4_slave_cg.md](#) (APB interface)
-

28.9 Testing

`val/amba/test_axi4_slave_wr_mon_cg.py` exercises this module. It collects 3 parameter cases at the default `REG_LEVEL`.

```
source env_python
pytest val/amba/test_axi4_slave_wr_mon_cg.py -v
```

28.10 Navigation

- [<- Back to AXI4 Index](#)
- [<- Back to rtl-amba Index](#)
- [<- Back to Main Documentation Index](#)

29 AXI4 Slave Write with Lite Monitor

Module: `axi4_slave_wr_monlite.sv` **Location:** `rtl/amba/axi4/` **Status:** Production Ready (amba/monitor-lite TASK-001, 2026-09-26)

29.1 Overview

`axi4_slave_wr_monlite` is `axi4_slave_wr` with `axi_monitor_lite` watching its slave-side write channels. It is the lite-monitor sibling of `axi4_slave_wr_mon`: same core, same taps, same 128-bit `monitor_packet_t` on the same monbus with the same `UNIT_ID/AGENT_ID`, so the monbus arbiter, the AXI-Lite group, the tally and the host tooling cannot tell the two apart. The difference is what it costs and what it can be asked for: about a fifth of the monitor LUTs (677

against 3,249 per read monitor in the same bridge fixture, see [axi_monitor_lite](#)), and only the four packet classes the lite emits: error, timeout, completion and active-count threshold.

29.1.1 What is not here

Compared with `axi4_slave_wr_mon`: no performance window or counters, no debug packets, no address-range checker, no ID or address filters, no per-event masks, no latency threshold, and no `block_ready`. The lite never stalls the port: an event it cannot deliver is dropped and counted (`dropped_count`, reported as an `EVENT_DROPPED` packet), and a command that finds no free table entry is counted (`refused_count`) and left untracked, so its beats report as orphans.

29.1.2 Key Features

- Every `axi4_slave_wr` parameter and port, declared verbatim and passed through by name
 - `axi_monitor_lite` on the s_-side taps; `USE_MONITOR=0` omits it and ties its outputs
 - Nine config inputs: the enables, the microsecond timeout, the tick LUT index and the packet-type mask
 - Five status outputs, two of them (`dropped_count`, `refused_count`) unique to the lite
-

29.2 Parameters

29.2.1 Monitor Parameters

Parameter	Type	Default	Description
<code>USE_MONITOR</code>	bit	<code>1'b1</code>	0 = omit the monitor, tie its outputs
<code>UNIT_ID</code>	logic [7:0]	<code>8'h02</code>	Unit id in every packet
<code>AGENT_ID</code>	logic [15:0]	<code>16'h0015</code>	Agent id in every packet
<code>MAX_TRANSACTIONS</code>	int	8	table entries; a command finding none is counted, not tracked
<code>ACTIVE_TRANS_THR ESHOLD</code>	int	$\frac{\text{MAX_TRANSACTIONS}}{2}$	Table occupancy

Parameter	Type	Default	Description
OUT_DEPTH	int	4	that fires a threshold packet (rising edge) monbus output queue, a power of two
ACLK_MHZ	int	100	Clock in MHz; keeps the 1 us tick exact
CFI_MIN_FREQ_MHZ	int	ACLK_MHZ	Frequency-invariant tick LUT lower bound (cfg_freq_sel indexes it)
CFI_MAX_FREQ_MHZ	int	ACLK_MHZ	Frequency-invariant tick LUT upper bound

29.2.2 Core Parameters (passed through to axi4_slave_wr)

Parameter	Type	Default	Description
N_ADDR_RANGES	int	0	address-range checker windows; 0 = not built
ADDR_RANGE_IS_ERROR	logic [(N_ADDR_RANGE S > 0 ? N_ADDR_RANGES : 1)-1:0]	'0	per range: 1 = miss is an error, 0 = hit is a match
SKID_DEPTH_AW	int	2	as on axi4_slave_wr
SKID_DEPTH_W	int	4	as on axi4_slave_wr
SKID_DEPTH_B	int	2	as on axi4_slave_wr
AXI_ID_WIDTH	int	8	as on

Parameter	Type	Default	Description
AXI_ADDR_WIDTH	int	32	axi4_slave_wr as on axi4_slave_wr
AXI_DATA_WIDTH	int	32	as on axi4_slave_wr
AXI_USER_WIDTH	int	1	as on axi4_slave_wr
AXI_WSTRB_WIDTH	int	AXI_DATA_WIDTH / 8	as on axi4_slave_wr
AW	int	AXI_ADDR_WIDTH	as on axi4_slave_wr
DW	int	AXI_DATA_WIDTH	as on axi4_slave_wr
IW	int	AXI_ID_WIDTH	as on axi4_slave_wr
SW	int	AXI_WSTRB_WIDTH	as on axi4_slave_wr
UW	int	AXI_USER_WIDTH	as on axi4_slave_wr
AWSize	int	IW+AW+8+3+2+1+4+3+4+4+UW	as on axi4_slave_wr
WSize	int	DW+SW+1+UW	as on axi4_slave_wr
BSize	int	IW+2+UW	as on axi4_slave_wr

29.3 Ports

29.3.1 Monitor Control, Bus and Status

Port	Direction	Type	Description
cam_clear	input	logic	sync clear of the monitor's table (named as on the _mon wrapper: pin-compatible)

Port	Direction	Type	Description
cfg_monitor_enable	input	logic	0 = monitor inert, table held clear
cfg_error_enable	input	logic	
cfg_timeout_enable	input	logic	
cfg_compl_enable	input	logic	
cfg_threshold_enable	input	logic	
cfg_timeout_cycles	input	logic [15:0]	MICROSECONDS of no progress; 0 = never
cfg_freq_sel	input	logic [3:0]	counter_freq_invariant LUT index
cfg_axi_pkt_mask	input	logic [15:0]	drop mask by packet type
i_mon_time	input	monitor_common_pkg::monbus_times_tamp_t	
monbus_valid	output	logic	
monbus_ready	input	logic	
monbus_packet	output	monitor_common_pkg::monitor_packet_t	
monbus_timestamp	output	monitor_common_pkg::monbus_times_tamp_t	
active_transactions	output	logic [7:0]	entries in the table
error_count	output	logic [15:0]	error + timeout packets emitted
transaction_count	output	logic [31:0]	completion packets emitted
dropped_count	output	logic [15:0]	events lost to monbus backpressure since the last

Port	Direction	Type	Description
refused_count	output	logic [15:0]	report commands that found no free table entry

29.3.2 Core Ports (as on axi4_slave_wr)

Port	Direction	Type	Description
aclk	input	logic	
aresetn	input	logic	
s_axi_awid	input	logic [IW-1:0]	
s_axi_awaddr	input	logic [AW-1:0]	
s_axi_awlen	input	logic [7:0]	
s_axi_awsz	input	logic [2:0]	
s_axi_awburst	input	logic [1:0]	
s_axi_awlock	input	logic	
s_axi_awcache	input	logic [3:0]	
s_axi_awprot	input	logic [2:0]	
s_axi_awqos	input	logic [3:0]	
s_axi_awregion	input	logic [3:0]	
s_axi_awuser	input	logic [UW-1:0]	
s_axi_awvalid	input	logic	
s_axi_awready	output	logic	
s_axi_wdata	input	logic [DW-1:0]	
s_axi_wstrb	input	logic [SW-1:0]	
s_axi_wlast	input	logic	
s_axi_wuser	input	logic [UW-1:0]	
s_axi_wvalid	input	logic	
s_axi_wready	output	logic	
s_axi_bid	output	logic [IW-1:0]	
s_axi_bresp	output	logic [1:0]	
s_axi_buser	output	logic [UW-1:0]	

Port	Direction	Type	Description
s_axi_bvalid	output	logic	
s_axi_bready	input	logic	
fub_axi_awid	output	logic [IW-1:0]	
fub_axi_awaddr	output	logic [AW-1:0]	
fub_axi_awlen	output	logic [7:0]	
fub_axi_awsz	output	logic [2:0]	
fub_axi_awburst	output	logic [1:0]	
fub_axi_awlock	output	logic	
fub_axi_awcache	output	logic [3:0]	
fub_axi_awprot	output	logic [2:0]	
fub_axi_awqos	output	logic [3:0]	
fub_axi_awregion	output	logic [3:0]	
fub_axi_awuser	output	logic [UW-1:0]	
fub_axi_awvalid	output	logic	
fub_axi_awready	input	logic	
fub_axi_wdata	output	logic [DW-1:0]	
fub_axi_wstrb	output	logic [SW-1:0]	
fub_axi_wlast	output	logic	
fub_axi_wuser	output	logic [UW-1:0]	
fub_axi_wvalid	output	logic	
fub_axi_wready	input	logic	
fub_axi_bid	input	logic [IW-1:0]	
fub_axi_bresp	input	logic [1:0]	
fub_axi_buser	input	logic [UW-1:0]	
fub_axi_bvalid	input	logic	
fub_axi_bready	output	logic	
busy	output	logic	
cfg_latency_thre shold	input	logic [31:0]	completion latency (cycles) above this -> Threshold/LATEN

Port	Direction	Type	Description
			CY
cfg_addr_check_enable	input	logic	
cfg_addr_match_enable	input	logic	hit in a match range -> AddrMatch packet
cfg_addr_range_enable	input	logic [(N_ADDR_RANGES > 0) ? N_ADDR_RANGES : 1]-1:0]	
cfg_addr_range_low	input	logic [(N_ADDR_RANGES > 0) ? N_ADDR_RANGES : 1]-1:0][AW-1:0]	
cfg_addr_range_high	input	logic [(N_ADDR_RANGES > 0) ? N_ADDR_RANGES : 1]-1:0][AW-1:0]	

29.4 Functional Description

The core is instantiated untouched; unlike `axi4_slave_wr_mon` there is no gating of the command handshake, because the lite has no admission stall. The monitor taps the s_-side command, data and response channels through three valids gated by `cfg_monitor_enable`, which also holds the table clear while low. `cfg_timeout_cycles` is a microsecond count of no progress on an entry, passed at full width; 0 means never. The active-count threshold is the parameter `ACTIVE_TRANS_THRESHOLD`, as on the `_mon` wrapper.

The lite's own behaviour – per-ID linked-list attribution, stamps instead of counters, the registered event stage, the 4-entry output queue and drop-and-count – is on the [axi_monitor_lite](#) page.

29.5 Timing Characteristics

The datapath timing is `axi4_slave_wr`'s. The monitor adds no gating to any handshake and no path into the datapath; its own paths are two short cycles (attribution, then packet formatting) and met 10 ns on an Artix-7 100T -1 with margin inside `bridge_1x2_rd_lite_mon`.

29.6 Usage Examples

```
axi4_slave_wr_monlite #(
    .N_ADDR_RANGES      (0),
    .ADDR_RANGE_IS_ERROR ('0'),
    .SKID_DEPTH_AW       (2),
    .SKID_DEPTH_W         (4),
    .UNIT_ID              (8'h02),
    .AGENT_ID             (16'h0014),
    .MAX_TRANSACTIONS     (8)
) u_axi4_slave_wr_monlite (
    .aclk                 (aclk),
    .aresetn              (aresetn),
    // ... the axi4_slave_wr ports, by name ...
    .cam_clear            (1'b0),
    .cfg_monitor_enable   (1'b1),
    .cfg_error_enable     (1'b1),
    .cfg_timeout_enable   (1'b1),
    .cfg_compl_enable     (1'b0),
    .cfg_threshold_enable (1'b0),
    .cfg_timeout_cycles   (16'd1000),
    .cfg_freq_sel         (4'd0),
    .cfg_axi_pkt_mask     (16'h0000),
    .i_mon_time           (mon_time),
    .monbus_valid          (monbus_valid),
    .monbus_ready          (monbus_ready),
    .monbus_packet         (monbus_packet),
    .monbus_timestamp      (monbus_timestamp),
    .active_transactions   (),
    .error_count           (),
    .transaction_count     (),
    .dropped_count         (dropped_count),
    .refused_count         (refused_count)
);
```

In a generated bridge, `mon_preset = "lite"` selects this wrapper for every monitored port.

29.7 Design Notes

- `cam_clear` keeps the `_mon` wrapper's name so the two are pin-compatible on the monitor side; the lite has a table, not a CAM.

- MAX_TRANSACTIONS defaults to 8 here against 16 on axi4_slave_wr_mon: size it to the port's real outstanding depth, since refused commands surface as orphans.
 - Consumers that relied on block_ready to bound the table get drop-and-count instead; the count is always reported, the identity of the lost events is not.
-

29.8 Related Modules

- axi4_slave_wr_mon – the full-monitor sibling
 - axi4_slave_wr – the core this wraps
 - [axi_monitor_lite](#) – the monitor itself
-

29.9 Testing

val/amba/monitor-lite/test_axi4_slave_wr_monlite.py exercises this module: the same TB and scenarios as val/amba/test_axi4_slave_wr_mon.py, with the DUT swapped.

```
source env_python
make -C val/amba/monitor-lite run-axi4_slave_wr_monlite-gate
```

Last Updated: 2026-09-26

29.10 Navigation

- [← Back to Monitor Index](#)
- [← Back to rtl-amba Index](#)
- [← Back to Main Documentation Index](#)

30 AXI4 Slave Write Stub

Module: axi4_slave_wr_stub.sv **Location:** rtl/amba/axi4/stubs/ **Status:** Production Ready

30.1 Overview

The AXI4 Slave Write Stub gives you a simplified packed-data interface on the receiving end of AXI4 write transactions. Skid buffers pack and unpack the AW (write address), W (write data), and B (write response) channels into simple packet interfaces, which makes it a natural fit for testbenches and integration scenarios where you want a slave without the protocol ceremony.

30.1.1 Key Features

- Packed packet interface for AW, W, and B channels
- Configurable skid buffer depths for each channel
- Full AXI4 write transaction support
- Burst, ID, strobe, user signal support
- Parameterized data widths

30.2 Parameters

Parameter	Type	Default	Description
SKID_DEPTH_AW	int	2	AW channel skid buffer depth in entries (2..8 inclusive, any integer)
SKID_DEPTH_W	int	4	W channel skid buffer depth in entries (2..8 inclusive, any integer)
SKID_DEPTH_B	int	2	B channel skid buffer depth in entries (2..8 inclusive, any integer)
AXI_ID_WIDTH	int	8	AXI transaction ID width
AXI_ADDR_WIDTH	int	32	AXI address bus width
AXI_DATA_WIDTH	int	32	AXI data bus width
AXI_USER_WIDTH	int	1	AXI user signal width
AXI_WSTRB_WIDTH	int	AXI_DATA_WIDTH/8	Write strobe width
AW	int	AXI_ADDR_WIDTH	Short alias for address width
DW	int	AXI_DATA_WIDTH	Short alias for data width

Parameter	Type	Default	Description
IW	int	AXI_ID_WIDTH	Short alias for ID width
SW	int	AXI_WSTRB_WIDTH	Short alias for strobe width
UW	int	AXI_USER_WIDTH	Short alias for user width
AWSize	int	$IW + AW + 8 + 3 + 2 + 1 + 4 + 3 + 4 + 4 + UW$	AW packet size (calculated)
WSize	int	$DW + SW + 1 + UW$	W packet size (calculated)
BSize	int	$IW + 2 + UW$	B packet size (calculated)

30.3 Ports

30.3.1 Clock and Reset

Port	Direction	Width	Description
aclk	Input	1	AXI clock
aresetn	Input	1	AXI reset (active low)

30.3.2 AXI4 Write Address Channel (AW)

Port	Direction	Width	Description
s_axi_awid	Input	IW	Write address ID
s_axi_awaddr	Input	AW	Write address
s_axi_awlen	Input	8	Burst length
s_axi_awsz	Input	3	Burst size
s_axi_awburst	Input	2	Burst type
s_axi_awlock	Input	1	Lock type
s_axi_awcache	Input	4	Cache type
s_axi_awprot	Input	3	Protection type
s_axi_awqos	Input	4	Quality of service

Port	Direction	Width	Description
s_axi_awregion	Input	4	Region identifier
s_axi_awuser	Input	UW	User signal
s_axi_awvalid	Input	1	Write address valid
s_axi_awready	Output	1	Write address ready

30.3.3 AXI4 Write Data Channel (W)

Port	Direction	Width	Description
s_axi_wdata	Input	DW	Write data
s_axi_wstrb	Input	SW	Write strobes
s_axi_wlast	Input	1	Write last
s_axi_wuser	Input	UW	User signal
s_axi_wvalid	Input	1	Write data valid
s_axi_wready	Output	1	Write data ready

30.3.4 AXI4 Write Response Channel (B)

Port	Direction	Width	Description
s_axi_bid	Output	IW	Response ID
s_axi_bresp	Output	2	Write response
s_axi_buser	Output	UW	User signal
s_axi_bvalid	Output	1	Write response valid
s_axi_bready	Input	1	Write response ready

30.3.5 AW Packet Interface

Port	Direction	Width	Description
fub_axi_awvalid	Output	1	AW packet valid

Port	Direction	Width	Description
fub_axi_awready	Input	1	Ready to accept AW packet
fub_axi_awcount	Output	4	AW buffer occupancy
fub_axi_awpkt	Output	AWSize	Packed AW packet data

30.3.6 W Packet Interface

Port	Direction	Width	Description
fub_axi_wvalid	Output	1	W packet valid
fub_axi_wready	Input	1	Ready to accept W packet
fub_axi_wpkt	Output	WSize	Packed W packet data

30.3.7 B Packet Interface

Port	Direction	Width	Description
fub_axi_bvalid	Input	1	B packet valid
fub_axi_bready	Output	1	Ready to accept B packet
fub_axi_bpkt	Input	BSize	Packed B packet data

30.4 Functional Description

30.4.1 Architecture

One skid buffer per channel, packets in and out the other side – that’s the whole trick:


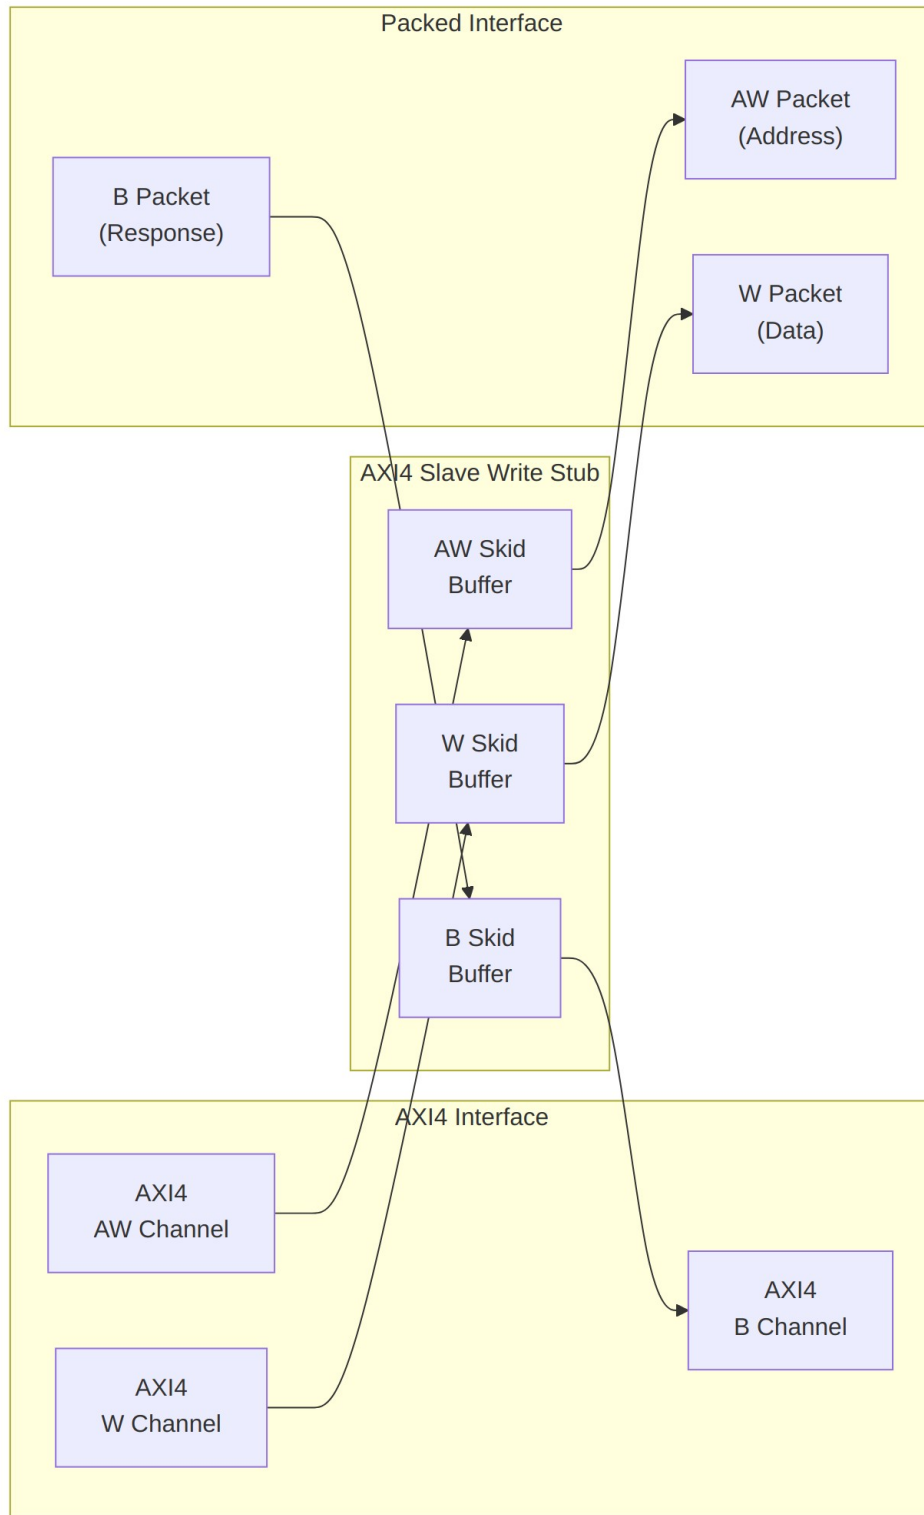


Diagram 29

30.4.2 Packet Formats




AW Packet Structure (Write Address)

Bit Positions:

```
fub_axi_aw_pkt = {awid, awaddr, awlen, awsize, awburst, awlock, awcache, awprot, awqos, awregion, awuser}
```

Width = IW + AW + 8 + 3 + 2 + 1 + 4 + 3 + 4 + 4 + UW

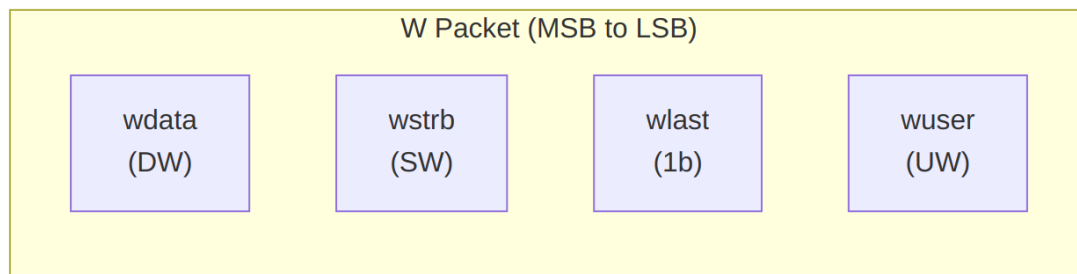


W Packet Structure (Write Data)

Bit Positions:

```
fub_axi_w_pkt = {wdata, wstrb, wlast, wuser}
```

Width = DW + SW + 1 + UW

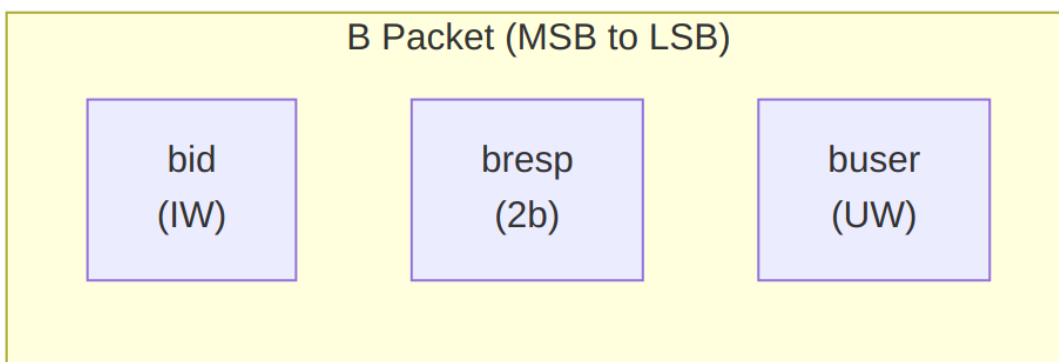


B Packet Structure (Write Response)

Bit Positions:

fub_axi_b_pkt = {bid, bresp, buser}

Width = IW + 2 + UW

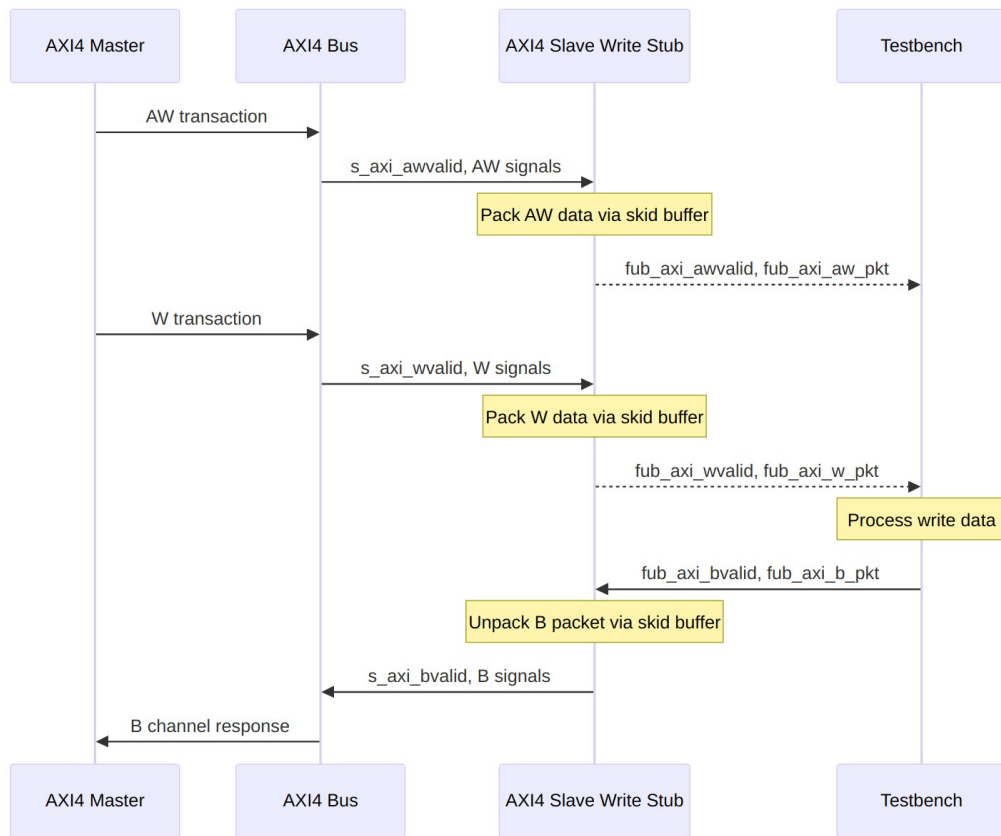

Transaction Flow

30.5 Timing Characteristics

Timing diagram pending. The signals and sequence this scenario exercises:

- aclk
- AXI AW signals (s_axi_awvalid, s_axi_awaddr, s_axi_awlen, etc.)
- fub_axi_awvalid, fub_axi_awready, fub_axi_aw_pkt
- AXI W signals (s_axi_wvalid, s_axi_wdata, s_axi_wstrb, s_axi_wlast, etc.)
- fub_axi_wvalid, fub_axi_wready, fub_axi_w_pkt
- fub_axi_bvalid, fub_axi_bready, fub_axi_b_pkt

- AXI B signals (s_axi_bvalid, s_axi_bid, s_axi_bresp, etc.)
 - Packet-to-AXI timing relationship with skid buffer operation
-

30.6 Usage Examples

Same pattern as the combined stub: instantiate, parse packets MSB-first, and drive responses back as packed words. The localparams have to match your instance widths.

```
axi4_slave_wr_stub #(
    .SKID_DEPTH_AW    (2),
    .SKID_DEPTH_W     (4),
    .SKID_DEPTH_B     (2),
    .AXI_ID_WIDTH     (8),
    .AXI_ADDR_WIDTH   (32),
    .AXI_DATA_WIDTH   (64),
    .AXI_USER_WIDTH   (4)
) u_axi4_slave_wr_stub (
    .aclk              (axi_clk),
    .aresetn           (axi_rst_n),

    // AXI4 slave write interface
    .s_axi_awid        (s_axi_awid),
    .s_axi_awaddr      (s_axi_awaddr),
    .s_axi_awlen       (s_axi_awlen),
    .s_axi_awsz        (s_axi_awsz),
    .s_axi_awburst     (s_axi_awburst),
    .s_axi_awlock      (s_axi_awlock),
    .s_axi_awcache     (s_axi_awcache),
    .s_axi_awprot      (s_axi_awprot),
    .s_axi_awqos       (s_axi_awqos),
    .s_axi_awregion    (s_axi_awregion),
    .s_axi_awuser      (s_axi_awuser),
    .s_axi_awvalid     (s_axi_awvalid),
    .s_axi_awready     (s_axi_awready),

    .s_axi_wdata       (s_axi_wdata),
    .s_axi_wstrb       (s_axi_wstrb),
    .s_axi_wlast       (s_axi_wlast),
    .s_axi_wuser       (s_axi_wuser),
    .s_axi_wvalid      (s_axi_wvalid),
    .s_axi_wready      (s_axi_wready),

    .s_axi_bid         (s_axi_bid),
    .s_axi_bresp       (s_axi_bresp),
    .s_axi_buser       (s_axi_buser),
```

```

        .s_axi_bvalid      (s_axi_bvalid),
        .s_axi_bready     (s_axi_bready),

        // Packed AW interface
        .fub_axi_awvalid  (tb_aw_valid),
        .fub_axi_awready  (tb_aw_ready),
        .fub_axi_aw_count (tb_aw_count),
        .fub_axi_aw_pkt   (tb_aw_pkt),

        // Packed W interface
        .fub_axi_wvalid   (tb_w_valid),
        .fub_axi_wready   (tb_w_ready),
        .fub_axi_w_pkt    (tb_w_pkt),

        // Packed B interface
        .fub_axi_bvalid   (tb_b_valid),
        .fub_axi_bready   (tb_b_ready),
        .fub_axi_b_pkt    (tb_b_pkt)
    );

    // Parse AW packet
    localparam int ASize = 8+32+8+3+2+1+4+3+4+4+4; // match your
    instance widths
    wire [7:0]  aw_id      = tb_aw_pkt[ASize-1:ASize-8];
    wire [31:0] aw_addr    = tb_aw_pkt[ASize-9:ASize-40];
    wire [7:0]  aw_len     = tb_aw_pkt[ASize-41:ASize-48];
    wire [2:0]  aw_size    = tb_aw_pkt[ASize-49:ASize-51];
    wire [1:0]  aw_burst   = tb_aw_pkt[ASize-52:ASize-53];
    // ... additional fields as needed

    // Parse W packet
    localparam int WSize = 64+8+1+4; // match your instance widths
    wire [63:0] w_data     = tb_w_pkt[WSize-1:WSize-64];
    wire [7:0]  w_strb     = tb_w_pkt[WSize-65:WSize-72];
    wire        w_last     = tb_w_pkt[WSize-73];
    wire [3:0]  w_user     = tb_w_pkt[3:0];

    // Build B packet (OKAY response)
    localparam BSize = 8 + 2 + 4; // Calculate size
    assign tb_b_pkt = {
        aw_id,      // bid (match request ID)
        2'b00,      // bresp (OKAY)
        4'h0        // buser
    };

```

30.7 Design Notes

30.7.1 Skid Buffer Operation

The stub uses `gaxi_skid_buffer` modules to: - Decouple timing between AXI bus and testbench - Provide configurable buffering depth per channel - Handle backpressure gracefully - Support burst transactions without stalling

Recommended Depths: - **AW Channel:** 2-4 (address transactions) - **W Channel:** 4-8 (data beats for bursts) - **B Channel:** 2-4 (responses)

30.7.2 Channel Independence

The AW, W, and B channels are independent: - AW and W arrive in any order from master - Stub handles proper AXI timing - B responses generated asynchronously by testbench

30.7.3 Packet Packing Order

AW, W, and B packets are packed MSB-to-LSB following AXI signal order: - Simplifies testbench packet parsing - Matches common concatenation order - Efficient for burst transaction handling

30.7.4 Internal Architecture

The stub instantiates three `gaxi_skid_buffer` modules: - **AW Skid Buffer:** Packs AXI AW channel to AW packets - **W Skid Buffer:** Packs AXI W channel to W packets - **B Skid Buffer:** Unpacks B packets to AXI B channel

All AXI protocol handling is done by the skid buffers and upstream modules.

30.8 Related Modules

- [AXI4 Slave Write](#) - Full AXI4 slave write module (if wrapping one)
 - [AXI4 Slave Read Stub](#) - Corresponding read stub
 - [AXI4 Slave Stub](#) - Combined read/write stub
 - [AXI4 Master Write Stub](#) - Master-side write stub
-

30.9 Testing

No dedicated testbench, and none is expected. This is a stub: a tie-off shell that presents the interface and drives inert values, so there is no behaviour to verify beyond elaboration. make verilator lint it as its own top on every run, which is the coverage that applies.

Treat any behaviour described on this page as unverified by simulation.

30.10 **Navigation**

- [<- Back to AXI4 Index](#)
- [<- Back to rtl-amba Index](#)
- [<- Back to Main Documentation Index](#)