


MEC/KMEC

Drum End Endosure-Panel Closure And Stitch Screw Details

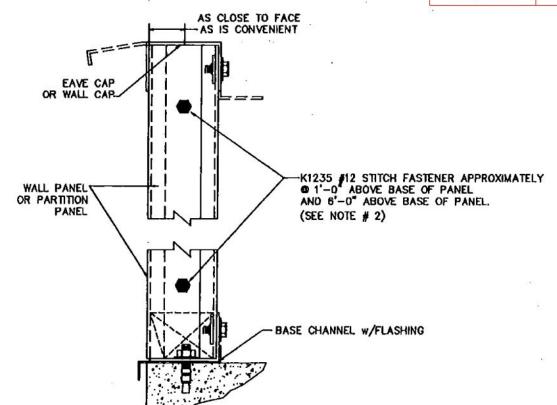

08-Aug-2016

NOTE #11

K1235 STITCH FASTENERS ARE INSTALLED IN ALL WALL AND PARTITION PANELS. DO NOT INSTALL UNTIL BUILDING IS SQUARE AND PLUMB.

NOTE #2:

ON BUILDINGS WITH AN EAVE HEIGHT OF MORE THAN 14'-0" IT IS NECESSARY TO INSTALL (1) ADDITIONAL STITCH FASTENER APPROXIMATELY AT, 12'-0" ABOVE BASE.

| BY |
|---------|
| RAP |
| CBP |
| BOHCK J |
| BAS |
| |
| |
| |

03-07-05

DRAWN BY RAP SCALE NTS

ORDER NO. REVISION

DWG. NO.

WALL-1

NOTE

K2017 PANEL CLOSURES ARE INSTALLED AT THE BOTTOM OF ALL FLUTED EXTERIOR WALL PANELS AND TOP AND BOTTOM OF ALL FLUSH EXTERIOR WALL PANELS AND FLUSH INTERIOR PARTITION PANELS. PANEL CLOSURES ARE TO BE INSTALLED AFTER BUILDING HAS BEEN SQUARED AND PLUMBED. PANEL CLOSURES ARE ALSO INSTALLED AT TOP AND BOTTOM OF ALL WALL OPENINGS.

NOTE

(PERTAINING TO MINI-WAREHOUSE BUILDINGS ONLY)

PANEL CLOSURES ARE USED ONLY ON EXTERIOR FLUTED WALL PANELS. PANEL CLOSURES ARE NOT INSTALLED ON INTERIOR FLUSH PARTITION PANELS.

