VOGT POWER INTERNATIONAL


Released, Work May Proceed

Bell, Milton

Aug-20-2016

MEC/KMEC

Drum End Enclosure-Door Weather Stripping Details

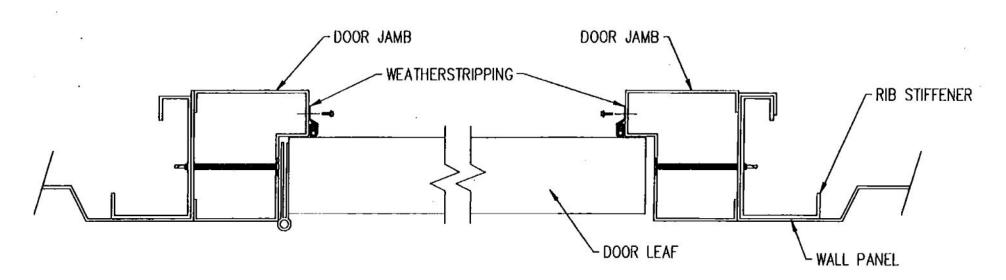

## DOOR WEATHERSTRIPPING DETAIL

## WEATHERSTRIPPING INSTALLATION

STEP 1. CUT WEATHERSTRIPPING TO LENGTH AS REQUIRED.

STEP 2. CUT AROUND ANY DOOR BOLTS OR PLATES AS NEEDED.

STEP 3. ATTACH WITH STANDARD SELF DRILLING SCREWS PROVIDED USING PRE-DRILLED HOLES IN WEATHERSTRIPPING AS TEMPLATE.

## NOTE:

INSTALLATION AT DOOR HEADER (NOT SHOWN) IS THE SAME AS SHOWN ON JAMBS.

VOGT POWER INTERNATIONAL V17494-BEXD-5096-02 08-Aug-2016



REVISIONS	BY
07-22-11	RAP
09-28-11	TLC
200	
A	



LK DOOR WEATHERSTREPPING
NSTALLATION FOR 3" DOOR
FRAME ONLY

DATE 03-28-11
DRAWN BY RAP
SCALE N.T.B.

ORDER NO.

WD3-WS