VOGT POWER INTERNATIONAL
Released, Work May Proceed


Aug-20-2016

Bell, Milton

MEC/KMEC

Drum End Enclosure-Door Weather Stripping Details



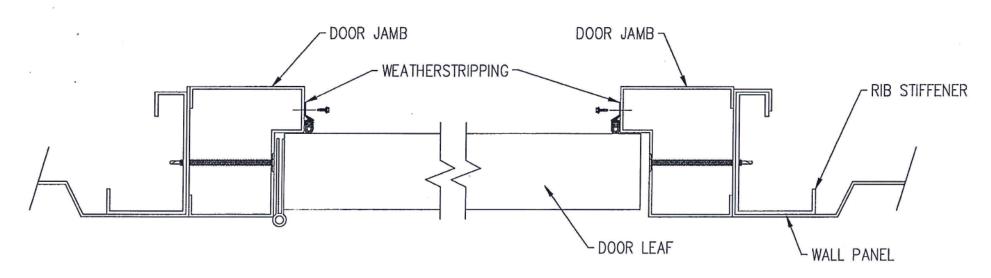

DOOR WEATHERSTRIPPING DETAIL

WEATHERSTRIPPING INSTALLATION

STEP 1. CUT WEATHERSTRIPPING TO LENGTH AS REQUIRED.

STEP 2. CUT AROUND ANY DOOR BOLTS OR PLATES AS NEEDED.

STEP 3. ATTACH WITH STANDARD SELF DRILLING SCREWS PROVIDED USING PRE-DRILLED HOLES IN WEATHERSTRIPPING AS TEMPLATE.

NOTE:

INSTALLATION AT DOOR HEADER (NOT SHOWN) IS THE SAME AS SHOWN ON JAMBS.

VOGT POWER INTERNATIONAL V17494-BEXD-5062-02 06-Aug-2016



WD3-WS