


PVC x PE Assembly for Push-Joint Valves

For 6" & 8"

Restraint Assembly

Items to be assembled:

- (1) Back up Ring
- (1) Grip Ring w/ Clamp Bolts & Nuts.
- (2) Restraint Rods & (4) Nuts
- (1) Push-Joint Valve.

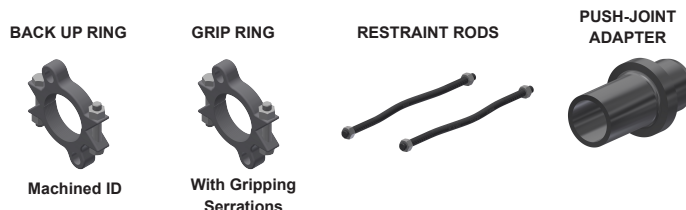

Step 1: Load Back Up Ring on Push Joint (PJ) Adapter as shown and fuse the PJ Adapter to PE pipe with beveled end facing out as shown.

Step 2: After lubricating with PVC pipe lube Push PJ valve on to beveled end of PJ Adapter.

Step 3: Install PVC pipe according to convention.

Step 4: Clamp Grip Ring on PVC pipe with the rings flush against valve bells with restraint holes oriented as required (as shown in diagram). Tighten grip ring clamp bolts to 100 ft-lbs. of torque.

Step 5: Insert restraint rods through receiving holes in Back Up Rings and cinch up assembly firmly with nuts.

Step 6: Tighten restraint rod nuts evenly side to side firmly with a wrench.

CAUTION:

If grip ring is not installed flush against valve bell, the thrust force from valve closure may cause the valve to force itself over end of pipe resulting in loss of seal and a leak.

