



- SHOP BLOG
- LEARN
- VIDEOS SIGN IN
- CLOSE MENU


0 Items



- SHOP
- BLOG LEARN FORUMS VIDEOS

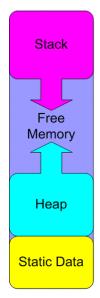

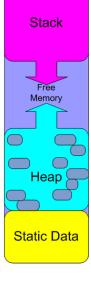

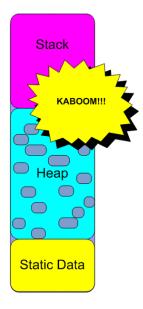

Normal SRAM Operation

Fragmented Heap

Stack Crash!

Memories of an **Arduino**

How to get the most from your Arduino Memory

- You know you have a memory problem when...
 Memory Architectures
 Arduino Memories

- Arduno Memories
 Arduno Memory
 Comparision
 Measuring Memory Usage
- Measuring Memory Usage
 Large Memory Consumers
 Solving Memory Problems
 Optimizing Program
 Memory
 Optimizing SRAM
 Using EEPROM
- Single Page Download PDF

Contributors

Bill Earl Feedback? Corrections? LEARN ARDUINO

Optimizing SRAM

SRAM is the most precious memory commodity on the Arduino. Although SRAM shortages are probably the most common memory problems on the Arduino. They are also the hardest to diagnose. If your program is failing in an otherwise inexplicable fashion, the chances are good you have crashed the stack due to a SRAM shortage.

There are a number of things that you can do to reduce SRAM usage. These are just a few guidelines to get you started:

Remove Unused Variables

If you are not sure whether a variable is being used or not, comment it out. If the sketch still compiles, get rid of it!

F() Those Strings!

(Park the char* in Harvard PROGMEM)

Literal strings are repeat memory offenders. First they take up space in the program image in Flash, then they are copied to SRAM at startup as static variables. This is a horrible waste of SRAM since we will never be writing to them.

Paul Stoffregen of PJRC and Teensyduino fame developed the F() macro as a super-simple solution to this problem. The F() macro tells the compiler to keep your strings in PROGMEM. All you have to do is to enclose the literal string in the F() macro.

For example, replacing this:

1. Serial.println("Sram sram sram. Lovely sram! Wonderful sram! Sram sra-a-a-a-a-a-a sram sra-a-a-a-a-a sram. Lovely sram! Lovely sram! Lovely sram! Lovely sram! Lovely sram! Lovely sram! Sram sram sram sram sram!"):

Copy Code

1. Serial.println(F("Sram sram sram sram. Lovely sram! Wonderful sram! Sram sra-a-a-a-a-a sram sra-a-a-a-am sram. Lovely sram! Lovely sram! Lovely sram! Lovely sram! Lovely sram! Lovely sram! Sram sram sram sram sram sram!")); Will save you 180 bytes of wonderful SRAM!

Reserve() your strings

The Arduino string library allows you to reserve buffer space for a string with the reserve() function. The idea is you can prevent String from fragmenting the heap by using reserve(num) to pre-allocate memory for a String that grows.

With the memory already allocated, String doesn't need to call realloc() if the string grows in length. In most usages, lots of other little String objects are used temporarily as you perform these operations, forcing the new string allocation to a new area of the heap and leaving a big hole where the previous one was (memory fragmentation). Usually all you need to do is use reserve() on any long-lived String objects that you know will be increasing in length as you process text.

You can do better with C strings, but if you just follow these guidelines for String objects, they work nearly as efficiently and using them is so much easier.

Move constant data to PROGMEM.

Data items declared as PROGMEM do not get copied to SRAM at startup. They are a little less convenient to work with, but they can save significant amounts of SRAM. The basic Arduino reference for PROGMEM is here. And there is a more detailed tutorial on the subject here.

Reduce Buffer Sizes

Buffer and Array Allocations: If you allocate a buffer, make sure it is no bigger than it needs to be.

Also be aware that some libraries allocate buffers behind the scenes that may be candidates for trimming as well

Another buffer hidden deeply in the system is the 64 byte serial receive buffer. If your sketch is not receiving a lot of high-speed serial data, you can probably cut this buffer size in half - or maybe even less

The Serial buffer size is defined in HardwareSerial.cpp. This file can be found in your Arduino install directory:

....\Arduino-1.x.x\hardware\arduino\cores\arduino\HardwareSerial.cpp

Look for the line

#define SERIAL_BUFFER_SIZE 64

And change it to 32 or less


Reduce Oversized Variables

Don't use a float when an int will do. Don't use an int when a byte will do. Try to use the smallest data type capable of holding the information.

Data Types	Size in	Can contain:
	Bytes	
boolean	1	true (1) or false (0)
		ASCII character or signed value
char	1	between -128 and 127
unsigned char, byte,		ASCII character or unsigned value
uint8_t	1	between 0 and 255
		signed value between -32,768 and
int, short	2	32,767
unsigned int, word,		
uint16_t	2	unsigned value between 0 and 65,535
		signed value between -2,147,483,648
long	4	and 2,147,483,647
unsigned long,		unsigned value between 0 and
uint32_t	4	4,294,967,295
		floating point value between -
		3.4028235E+38 and 3.4028235E+38
		(Note that double is the same as a
float, double	4	float on this platform.)

Think Globally. Allocate Locally.

Let's have another look at how SRAM is used (and abused):

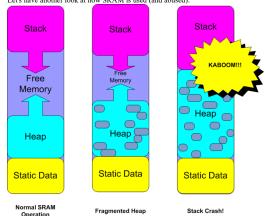

Global & Static Variables

Global and Static variables are the first things loaded into SRAM. They push the start of the heap upward toward the stack and they will occupy this space for all

Dynamic Allocations

Dynamically allocated objects and data cause the heap to grow toward the stack. Unlike Global and Static variables, these variables can be de-allocated to free up space. But this does not necessarily cause the heap to shrink! If there is other dynamic data above it in the heap, the top of the heap will not move. When the heap is full of holes like swiss cheese we call it a "fragmented heap".

Local Variables

Every function call creates a stack frame that makes the stack grow toward the heap. Each stack frame will contain:

- All parameters passed to the function
 All local variables declared in the function.

This data is usable within the function, but the space is 100% reclaimed when the function exits!

The Takeaway?

- Avoid dynamic heap allocations These can quickly fragment the limited heap-space.
 Prefer local to global allocation Stack variables only exist while they are being used. If you have variables that only are used in a small section of your code, consider making that code into a function and declaring the variables local to the function.

OPTIMIZING PROGRAM MEMORY USING EEPROM
Last updated on 2016-04-17 at 06.36.31 PM Published on 2013-08-02 at 10.19.49 AM



Arduino Uno R3 (Atmega328 - assembled) \$24.95 <u>Add To Cart</u>


DC Boarduino (Arduino compatible) Kit (w/ATmega328) \$17.50 Add To Cart




Arduino Mega 2560 R3 (Atmega2560 - assembled) \$45.95 Add To Cart



Arduino Mega R3 Android Accessory Development Kit (ADK) Board \$84.95 Add To Cart

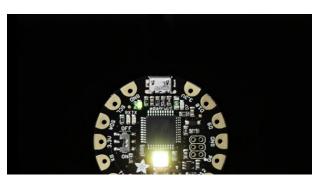

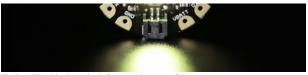


FLORA - Wearable electronic platform: Arduino-compatible \$19.95 OUT OF STOCK (NOTIFY ME)



Arduino Leonardo ATmega32u4 without headers \$22.50 OUT OF STOCK (NOTIFY ME)



Teensy (ATmega32u4 USB dev board) 2.0 \$15.95 Add To Cart

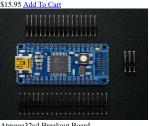

Atmega32u4 Breakout Board \$19.90 Add To Cart



Arduino Micro with Headers - 5V 16MHz - (ATmega32u4 - assembled) \$24.95 Add To Cart



Arduino Uno Ethernet \$65.00 <u>OUT OF STOCK (NOTIFY ME)</u> <u>ADD ALL TO CART</u>

RELATED GUIDES

Metal Inlay Capacitive Touch Buttons

Make pretty things you can touch and make bleepy noises by Todd Treece



Learn how to grind up aluminum foil into a fine metal powder for use as capacitive touch buttons.

WiFi Controlled Mobile Robo

Control your robot via WiFi using Arduino & the CC3000 WiFi chip

25/6/2016



Ever wanted to control your mobile robot remotely from your computer or your smartphone? Now it is possible using Arduino and the CC3000 WiFi chip. In this guide you'll learn how to install the required components on a robot, and how to set the software environment so you can control the robot right from your browser FEATURED

Deep sea stitching with FLORA



Make this simple circuit with a single glowing lure on a menacing embroidered angler fish and dress up your shorts for summer! 2.8" TFT Touchscreen

320x240 pixels in 16 bit color with a touchscreen by lady ada



Add some jazz & pizazz to your project with a color touchscreen LCD. This TFT display is big (2.8" diagonal) bright (4 white-LED backlight) and colorful (16-bit 262,000 different shades)! 240x320 pixels with individual pixel control, this has way more resolution than a black and white 128x64 display. As a bonus, this display has a resistive touchscreen attached to it already, so you can detect finger presses anywhere on the screen. Learn how to use this LCD with an Arduino.

OUT OF STOCK NOTIFICATION

YOUR NAME YOUR EMAIL

NOTIFY ME

- CONTACT SUPPORT
- DISTRIBUTORS EDUCATORS
- JOBS

- FAQ SHIPPING & RETURNS TERMS OF SERVICE PRIVACY & LEGAL
- ABOUT US

ENGINEERED IN NYC Adafruit ®





