LOC/DME I-FWA	APP CRS	Rwy ldg	8001
109.9	321°	TDZE	800
Chan 36		Apt Elev	815

ILS or LOC RWY 32
FORT WAYNE INTL (FWA)

DME required for LOC only. DME or RADAR required for procedure entry.

ASR

For inop ALS, increase S-ILS 32 Cat E visibility to RVR 4000, S-LOC 32 Cat E visibility to RVR 6000. Use I-FWA DME when on the localizer course.
RVR 1800 authorized with use of FD or AP or HUD to DA.

MALSR

MISSED APPROACH: Climb to 3000 then left turn on FWA VORTAC R-285 to TELEY INT/FWA 17.5 DME and hold.

ATIS	FORT WAYNE APP CON	FORT WAYNE TOWER	GND CON	CLNC DEL
121.25 360.825	127.2 284.6	119.1 269.325	121.9 348.6	124.75

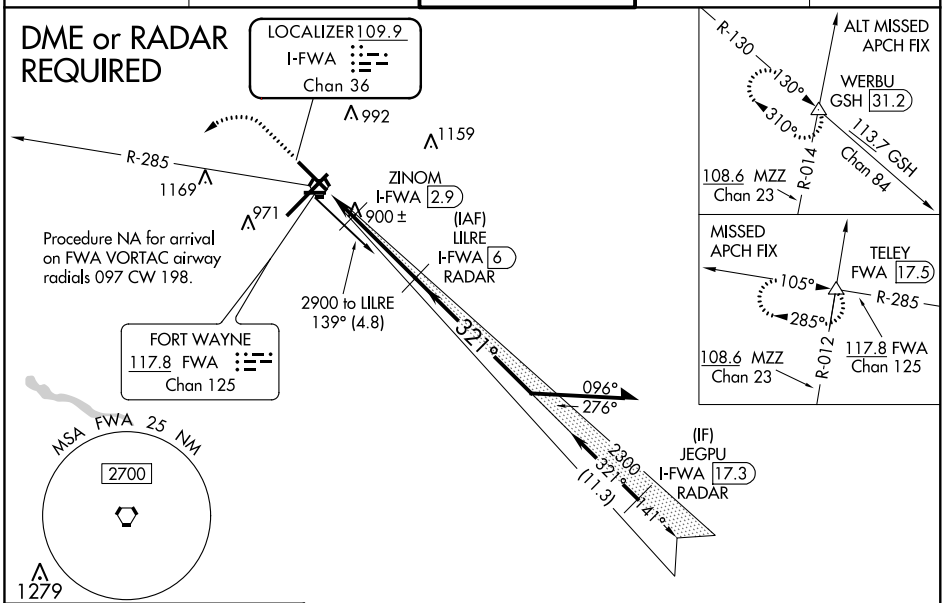

Cat E Procedure Turn NA.

ELEV	815	D	TDZE	800

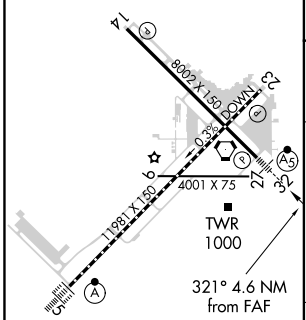

TDZ/CL Rwy 5
REIL Rwys 14 and 23
HIRL Rwys 5-23 and 14-32

FAF to MAP 4.6 NM					
Knots	60	90	120	150	180
Min:Sec	4:36	3:04	2:18	1:50	1:32

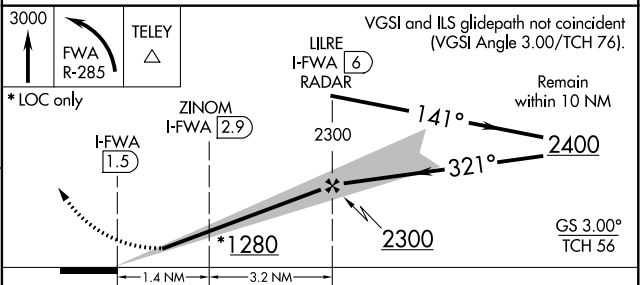

CATEGORY	A	B	C	D	E
S-ILS 32	#1000/24 200 (200-½)				
S-LOC 32	1160/24 360 (400-½)		1160/40 360 (400-¾)		
C CIRCLING	1300-1 485 (500-1)		1420-1¾ 605 (700-1¾)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)

EC-2, 27 JAN 2022 to 24 FEB 2022
EC-2, 27 JAN 2022 to 24 FEB 2022