


Sulfides Formation (P₀ = 101325 Pa)

Equilibrium values
at 1000 °C

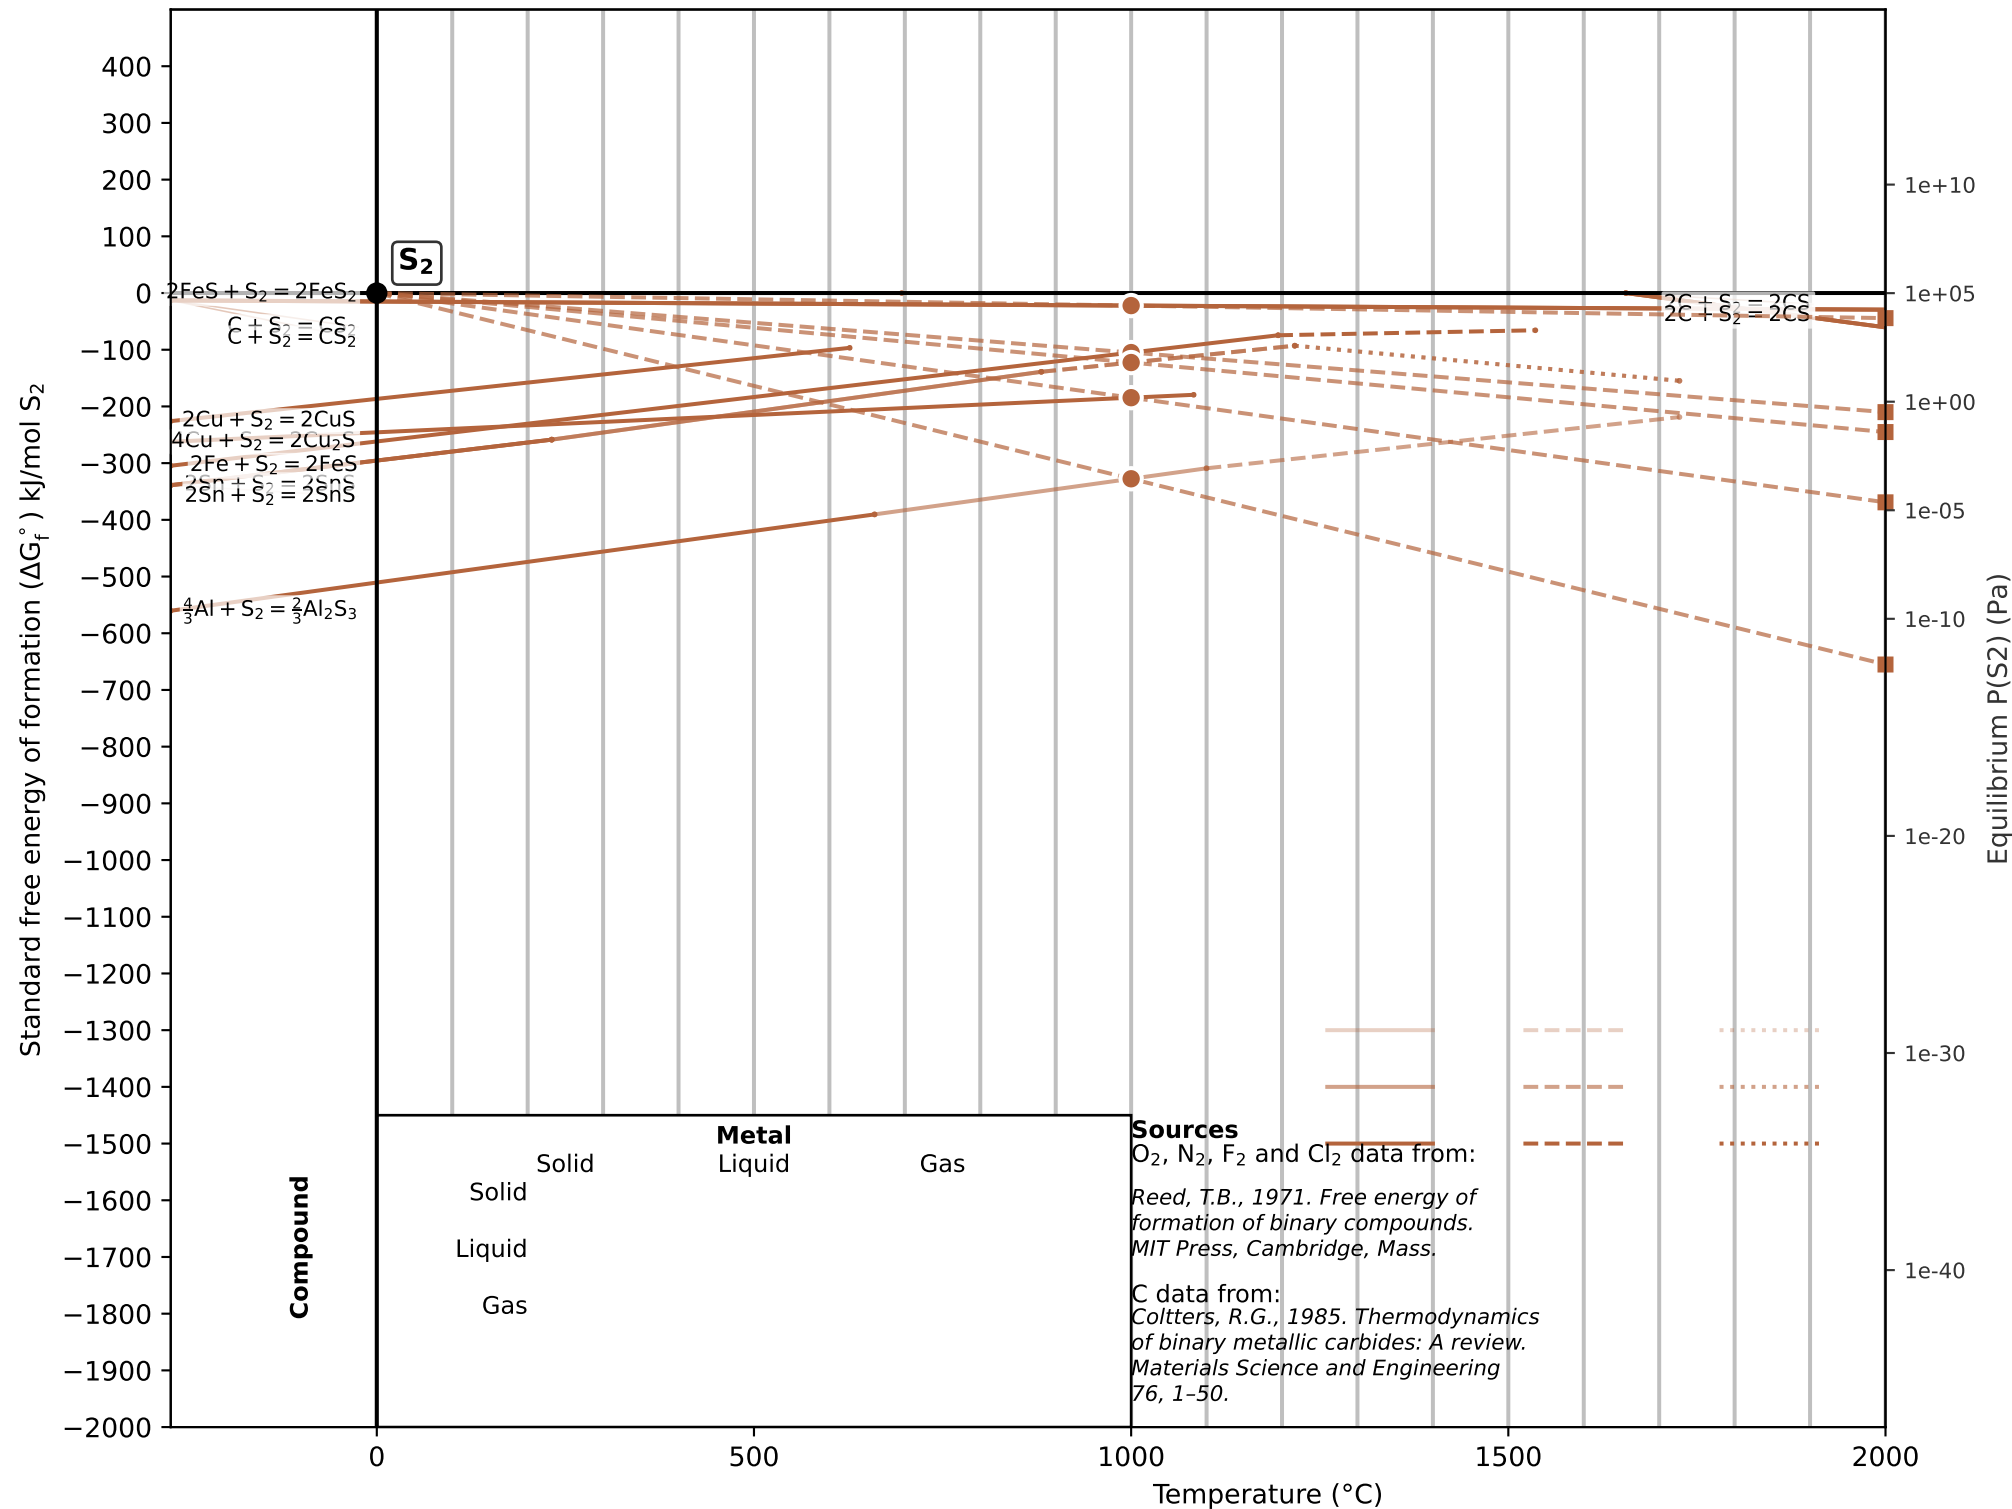

Element	ΔG° (kJ/mol)	P(S2) (Pa)
AL	-327.6	7.84e-13
FE	-105.0	0.3
SN	-122.6	0.0
CU	-184.6	2.32e-05
C	-22.1	7072.7