


Sulfides Formation (P₀ = 101325 Pa)

Equilibrium values
at 1000 °C

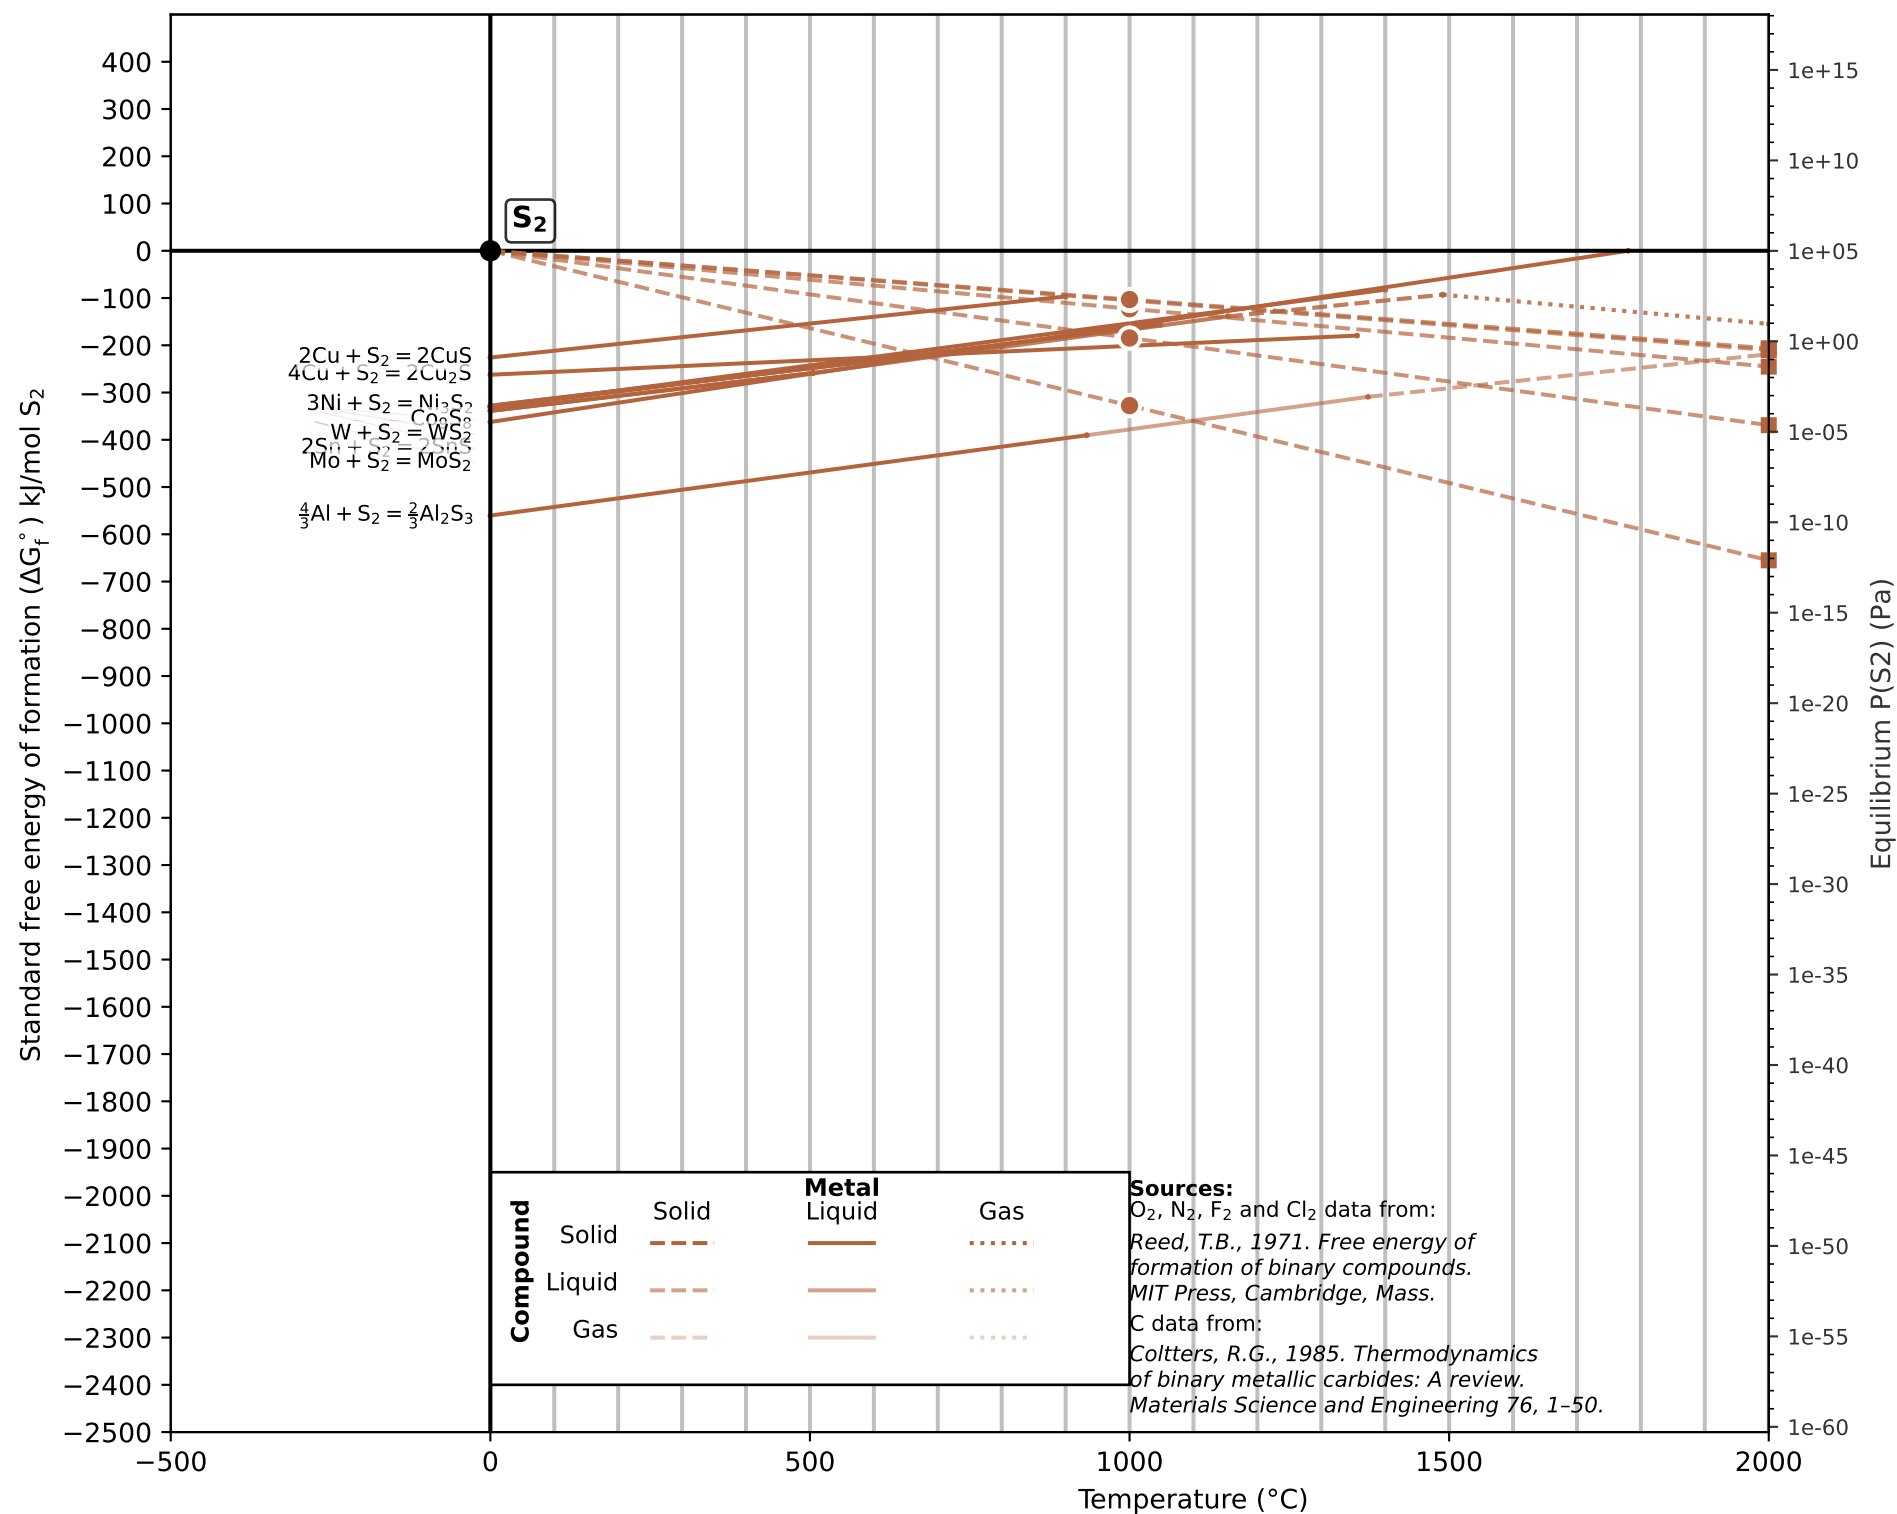

Element	ΔG° (kJ/mol)	P(S2) (Pa)
AL	-327.6	7.84e-13
SN	-122.6	0.0
CU	-184.6	2.32e-05
W	-105.0	0.3
MO	-103.2	0.4