

# Pic O S



Version 3.3 September, 2010

# **Table of contents**

<u>1</u>	Introduction.	<u></u> 2
	Finite State Machines	
	2.1 Hello World.	
	2.2 Basic types.	
	2.3 FSM syntax	
	2.4 Local variables	
	2.5 Process execution and CPU scheduling.	11
	2.6 Events	
	2.7 External blocking	
	2.8 Example: a complete praxis.	
3	System organization and structure.	22
	3.1 Logical view of the system.	
	3.2 Package content.	
	3.3 Board description.	
	3.4 Critical limits.	
	3.5 Software co-requisites.	27
	3.6 Quick start	
	eCOG1	28
	MSP430	28
4	Essential operations provided by the kernel.	29
	The UART.	
	5.1 The direct device concept.	37
	5.2 The io interface to the UART	39
6	Memory allocation.	
	Power conservation tools.	
8	The watchdog.	<u></u> 44
9	Selected library functions.	44



v 3.3 3 of 47

### 1 Introduction

PicOS is a small-footprint operating system for organizing multiple activities of embedded *reactive* applications (praxes) executed on a small CPU with limited resources. It provides a flavor of multitasking (implementable within very small RAM) as well as simple, orthogonal, and expressive tools for event-driven I/O and inter-process communication.

So far, PicOS has been implemented on two CPU architectures: eCOG1 of Cyan Technologies<sup>1</sup> and the MSP430 CPU series of Texas Instruments.<sup>2</sup>

In comparison with TinyOS<sup>3</sup>, PicOS has the following advantages:

- All of the program dynamics available to the programmer is captured by PicOS's threads (finite state machines) rather than interrupt service routines (or callbacks). As all threads share the same (global) stack, PicOS's stack has absolutely no tendency to run away.
- 2. PicOS is incomparably more flexible with memory. Dynamic memory allocation (even within devices with less than 1K or RAM) is its essential feature.

This document is accompanied by other documents describing various hardware-specific features of the system and optional software components. In the sequel, those documents will be referenced by the names of their files, which can be found in the PicOS documentation directory or one of its subdirectories (see Figure 2). We will be skipping the file name suffix, which can be one of *ogd* (for the Open Office version), *doc* (for the MS Word version), or *pdf* (for the PDF version). For example, PicOS's Virtual NETwork Interface (VNETI) is described in a separate document referred to as *VNETI*. File *VNETI.pdf* can be found in subdirectory *Docs* of *PICOS*, while the corresponding source file is *Docs/VNETI/VNETI.odg*.

An important component of the complete PicOS platform is VUEE (or VUE²) – the Virtual Underlay Execution Engine, which is also described separately. VUE² makes it possible to execute PicOS praxes in a virtual, multi-node, wireless environment.

#### 2 Finite State Machines

The primary problem with implementing classical multitasking on microcontrollers with limited RAM is minimizing the amount of fixed memory resources that must be allocated to every process. The most critical example of such a resource is the stack space: under normal circumstances, every task must receive a separate and continuous chunk of memory usable as its private stack. Even if the stack size per task is drastically limited, it still remains a significant component of the total amount of memory resources needed to describe and sustain a single task. With the 2K words of on-chip memory available on the eCOG1, or 2KB of RAM on MSP430F148, this problem makes it very difficult to implement classical multitasking involving any non-trivial number of processes. This is because the stack space is practically wasted from the viewpoint of the application: it is merely a working storage needed to build the high-level structure of the program, and it steals the scarce resource from where it is truly needed, i.e., for building the proper (global) data structures.

<sup>&</sup>lt;sup>4</sup> There are two related documents: *PiComp* (to be found in the *Docs* subdirectory of *PICOS*) and *VUE\_Doc* (which comes with the VUEE package).



<sup>&</sup>lt;sup>1</sup> See <u>www.cyantechnology.com</u>.

<sup>&</sup>lt;sup>2</sup> See <a href="http://www.ti.com/">http://www.ti.com/</a>.

<sup>&</sup>lt;sup>3</sup> See <a href="http://docs.tinyos.net/">http://docs.tinyos.net/</a>.

v 3.3 4 of 47

PicOS solves this problem by adopting a non-classical flavor of multitasking. The different *tasks* share the same global stack and act as co-routines with multiple entry points and implicit control transfer. A task looks like a finite state machine (FSM) that changes its states in response to events. The CPU is multiplexed among the multiple tasks, but only at state boundaries. This simplifies (to the point of practically eliminating them) all synchronization problems within the application, while still providing a reasonable degree of concurrency and responsiveness. By enforcing the FSM appearance of a task, PicOS stimulates its clarity and self-documentation, which is especially useful and natural for reactive applications, i.e., ones that are not CPU bound, but perform finely-grained operations in response to possibly complicated configurations of events.

PicOS inherits its programming paradigm from SMURPH (also called SIDE), which is a specification and simulation environment for reactive systems (mostly telecommunication systems). The fact that PicOS is closely related to SIDE makes it possible to emulate PicOS programs in a realistic virtual environment created in SIDE. This brings us VUE<sup>2</sup> (Virtual Underlay Emulation Engine), which is a SIDE-based emulator for wireless praxes programmed in PicOS.

# 2.1 Hello World

Here is a complete "hello word" program. It writes a short message to the UART and then quits:

The program consists of a single function-like construct which we call a *finite state machine*, or an FSM for short. FSMs are sometimes called *processes* (also *threads* or *strands*) because, like processes, they can be started (run) and terminated (killed). A single FSM (viewed as a piece of code) can have a number (possibly more than one) of dynamic instances (processes) running at the same time. The root FSM is automatically run by the system (in one instance) immediately after reset. It plays a role analogous to function *main* in a straightforward C program.

The language of PicOS is C with a few added keywords and constructs. A program in PicOS is preprocessed into C by a Tcl script named PiComp. The same script (invoked with different arguments) precompiles PicOS praxes into VUE<sup>2</sup> models.

An FSM definition begins with the keyword fsm followed by a name, which must be unique within the entire program (note that a program may comprise several C files). Sometimes the FSM name is followed by an argument, like in this example:

```
fsm output (const char *msg) {
    state WRITE_MSG:
        ser_out (WRITE_MSG, "I am ready!!\r\n");
    state WAIT_FOR_SIGNAL:
        when (getcpid (), WAKE_UP);
        release;
```



v 3.3 5 of 47

Such an argument, if present, must declare a single variable of a simple type (e.g., an integer or a pointer) which refers to some object that the FSM is expected to handle. This is the so-called data attribute of the FSM. Using the process analogy, we would say that that object represents the private data of the FSM, so we can have multiple FSMs running the same code while operating on different data. Here is a sample root FSM that references the one above:

```
sint out1, out2;
fsm root {
      state START:
            out1 = runfsm output ("message 1");
            out2 = runfsm output ("message 2");
      state DELAY:
            delay (1024, SIGNAL1);
            release;
      state SIGNAL1:
            trigger (out1);
            delay (1024, SIGNAL2);
            release;
      state SIGNAL2:
            trigger (out2);
            proceed DELAY;
}
```

The two FSMs together (with the addition of some standard headers) constitute a complete program. The root FSM starts by creating two instances of the output FSM, passing each of them a slightly different string to handle. Each of the two copies will say "I am ready!!" upon activation and then wait for a signal (equal to its respective numerical process ID). Having received such a signal, the FSM will output its assigned string preceded by the number of seconds elapsed since the startup (i.e., system reset), and wait for another signal. The root FSM will be delivering those signals at one second intervals, every other signal being addressed to the other instance of the output FSM. In consequence, you will see this sequence of lines on the UART:

```
I am ready!!
I am ready!!
Time 1: message 1
Time 2: message 2
Time 3: message 1
Time 4: message 2
```

appearing at 1 second intervals.

Before we go into details, let us try to get some quick intuitions to back the programming constructs illustrated in the above examples. The code of an FSM is organized into a number of *states* representing points where the FSM can be entered (activated). Those states receive symbolic names that can be referenced by some operations. For example, the when statement (in the output FSM) accepts two arguments: the first one



v 3.3 6 of 47

describes an event, the second indicates the state to be assumed by the FSM when the event occurs.

Once an FSM has been activated (its code entered at a particular state) it will remain active (holding on to the CPU) until it gets into a situation when it has to wait for something to happen. For one illustration, consider the call to <code>ser\_out</code> (in the <code>output</code> FSM). This is a library function implementing the operation of writing a piece of text to the UART. Such an operation may block (e.g., if it has to wait for the completion of a previous activity on the UART), or it may succeed (and simply pass through), if the output data can be accepted right away. The latter case is uninteresting: the function will just return. Should the operation block, the FSM will be forced to exit, i.e., release the CPU with the intention of regaining it later when it makes sense to try the blocked operation again. When that happens, the FSM will be resumed in the state specified as the first argument of <code>ser\_out</code>. This will have the effect of re-executing (re-attempting) the previously blocked operation. In the meantime, i.e., while the output FSM is waiting for an opportunity to send its data to the UART, the system is free to assign the CPU to another FSM.

One important thing to remember is that all situations when an FSM may block (waiting for some event or condition) must involve a state. This is because an FSM can only resume its execution at a state boundary (regardless of the reason why it lost the CPU in its last turn). Some operations (library functions or system calls) implement the blocking internally. An FSM can also block explicitly by issuing one or more wait requests and then releasing the CPU directly. This is, for example, what the output FSM does after executing when (in state WAIT FOR SIGNAL), which is one representative of a wait request. Note that when itself doesn't block: it only declares a waking condition (event). In particular, you can issue several wait requests (declaring alternative waking events) before releasing the CPU (via operation release). Another example of a wait request is delay (in the root FSM), which sets up a timer to wake up the FSM after the prescribed number of clock ticks. Also note that, unless it does something special, an FSM will freely fall through the state boundaries. For example, if ser out in state WRITE MSG (in the output FSM) doesn't block (returns), the FSM will find itself executing when in the next state (WAIT FOR SIGNAL). Operation proceed provides for a direct switchover to the indicated state without having to wait for any events.

## 2.2 Basic types

The essential collection of PicOS-specific types, functions, macros and constants is defined in file *sysio.h*, which must be included by any PicOS praxis. In addition to the standard types provided by C, PicOS defines the following basic types:

word	intended as the preferred (word-sized) container for collections of bits and unsigned integers (equivalent to unsigned int)		
sint	intended as the basic signed integer type (equivalent to int)		
lword	for storing 32-bit long unsigned values (equivalent to unsigned long)		
lint	for storing 32-bit long signed integer values (equivalent to long)		
address	representing a generic pointer, which in PicOS is a pointer to a word; thus, address is equivalent to word*5		



v 3.3 7 of 47

byte equivalent to unsigned char and intended for representing raw

bytes

bool equivalent to byte and intended for storing Boolean values

Boolean same as bool

**fsmcode** this is a function pointer type referring to FSM functions

One of the reasons for introducing aliases for some of the simple standard types is the need to maintain a general portability of the praxis source code, and most importantly its VUE²-compliance, i.e., direct acceptance by the VUE² compiler and the emulator. This is not required for a target (microcontroller) platform; however, to make sure that your praxis is VUE²-compliant, you should never use types like int or unsigned int directly.

The following symbolic constants (defined in *sysio.h*) describe the ranges of the respective arithmetic objects:

```
#define MAX INT
                           ((int)0x7fff)
#define MAX_UINT
                           ((word)0xffff)
#define MAX WORD
                          MAX UINT
#define MIN INT
                          ((int)0x8000)
#define MIN UINT
                           ((word)0)
#define MIN WORD
                          MIN UINT
#define MAX LONG
                          ((long)0x7fffffffL)
                          ((long)0x8000000L)
#define MIN LONG
                          ((lword)0xfffffffL)
#define MAX ULONG
#define MAX LWORD
                          MAX ULONG
#define MIN ULONG
                          ((lword)0)
#define MIN LWORD
                          MIN ULONG
```

Below we list a few symbolic names assigned to some special constants (see sysio.h):

```
#define
             NULL
#define
             NONE.
                           ((word)(-1))
#define
             LNONE
                           ((lword)(0xffffffff))
#define
             LWNONE
                           LNONE
#define
             SNONE
                           ((sint)(-1))
#define
             WNONE
                           NONE
#define
             BNONE
                           0xff
#define
                           NONE
             ERROR
#define
             BLOCKED
                           ((word)(-2))
#define
             NO
                           ((Boolean)0)
#define
             YES
                           ((Boolean)1)
```

The most important of them are **NULL**, **WNONE**, **NO**, and **YES**.

# 2.3 FSM syntax

One confusing aspect of the informal terminology in section 2.1 was the lack of distinction between the description (code) of an FSM and its dynamic (running) incarnation. From now on, when we say "FSM" we shall mean the static (textual) definition of an FSM (i.e., a piece of code beginning with the fsm keyword). Whenever it

<sup>&</sup>lt;sup>5</sup> This "feature" is a legacy of the first implementation of PicOS for the eCOG1 of Cyan Technologies. Pointers to bytes (or void pointers) on the eCOG1 were special, clumsy, cumbersome, and inefficient.



v 3.3 8 of 47

is relevant to the discussion, an FSM that specifies a data argument (like the output FSM from page 4) will be referred to as a "strand FSM" – in contrast to a "thread FSM" (i.e., one that declares no private data). A dynamic instance of an FSM will be called a process (the general case), or a thread or strand (if we want to differentiate between the two FSM types).

Processes are identifiable by integer numbers (type sint), called process identifiers (or PIDs), assigned (by the system) at the moment of their creation (this is the value returned by runfsm) – see page 5). A process is created explicitly (by another process) and can be terminated either by itself or by another process. One process, described by the root FSM, is created and started automatically by the system after reset. This means that every praxis must define a root FSM, which is responsible for creating all other user processes. Some processes needed by system (e.g., belonging to device drivers), may be started internally before the root process.

An FSM header has one of the following forms:

```
fsm fsm_name {
fsm fsm_name (simple_type_name variable) {
fsm fsm_name (simple_type_name) {
fsm fsm name () {
```

with the last variant being strictly equivalent to the first. The first and last variants define a thread FSM, while the middle two variants define a strand FSM (i.e., one that operates on a private data object).

The name of an FSM (<code>fsm\_name</code>) can be any legitimate (and unique) C identifier. FSM names are always global within the scope of the entire praxis (across all C files), i.e., you cannot have a <code>static</code> FSM.

With the second variant, the specified variable becomes visible to the FSM body in the same way that a function argument is visible to the function body. Its declared type must be simple enough to fit a "machine word" understood as something capable of storing a pointer or an integer. Thus, it can be, e.g., an integer type, a character, or a pointer, but it cannot be a structure. The easy formal rule is that the variable must allow itself to be cast to the PicOS word type (see page 6). Array types are illegal (because they cannot be used in casts), e.g.,

```
fsm foobar (word A []) {
```

will not work, although the equivalent:

```
fsm foobar (word *A) {
```

will.

If the variable name is missing (variant 3), it defaults to data. This is a legacy feature, which will probably be eliminated at some point.

The name of an FSM can be referenced by some operations. One such operation is **runfsm** (see page 5) which creates and runs a process. For that, the name must be visible in the current scope, pretty much in the same way that a C function must be visible at a point of reference. If the actual FSM is defined elsewhere, e.g., in a different file, or further down in the present file, it can be declared (announced) before usage in a way similar to announcing regular functions, e.g.,



v 3.3 9 of 47

```
fsm output (const char*);
```

You can list multiple headers per announcement separated with commas, e.g.,

```
fsm output (const char*), monitor;
```

announces two FSMs, the second one being a thread. An empty pair of parentheses is the same as their absence, e.g., the above announcement is equivalent to:

```
fsm output (const char*), monitor ();
```

The general layout of an FSM definition is this:

```
header {
      optional local declarations
      list of states
}
```

where the *header* has one of the four forms listed above. This resembles the layout of a function, except for the requirement that the body (executable statements) be organized into a sequence of states, i.e.,

```
state state_name1:
    list of statements
state state_name2:
    list of statements
```

where the state names are C identifiers unique within the function scope of the FSM. The organization of the list of states is subject to the same rules as for the list of cases of a switch statement (except that there is no default). As a legacy feature, the keyword state can be replaced with entry (the meaning is exactly the same).

The first state on the list is also the one to be entered automatically when the FSM's process is created and run for the first time (by runfsm). It is possible to explicitly declare any state as the initial one by putting the keyword initial in front of it, like in this FSM:

```
fsm toggle {
    state TOGGLE_LEDS:
        leds (0, 1); leds (1, 0);
        delay (2048, INVERT);
        release;
    state INVERT:
        leds (0, 0); leds (1, 1);
    initial state WAIT_FOR_TIMER:
        delay (2048, TOGGLE_LEDS);
}
```

When started, the FSM's process will find itself in state walt\_for\_timer. Note that there is no need to execute release at the end of that state, as there is no more code underneath. Also note that the delay statement in state walt\_for\_timer will be executed as a continuation of the code at state invert (state boundaries are fall through by default).



v 3.3 10 of 47

The maximum number of states that a single FSM may define is 4096. The state symbols are equivalent to unsigned integer constants: they can be saved, e.g., in word-type variables, and those variables can be used instead of the symbols as arguments of all functions that expect state identifiers. This doesn't apply to proceed or sameas (page 15) whose arguments must be state symbols (as appearing at state statements). These operations are not functions, however. The initial state is always number zero. It is an error to explicitly declare more than one state as initial.

#### 2.4 Local variables

An FSM is is treated by the system as a function that gets called on every activation of the FSM's process, with some hidden argument identifying the state to be assumed for that activation. Similarly, when the FSM's process gives up the CPU, the function simply returns (to the system). This means that there is no stack context expected to survive across the different activations of the same process. This is good news as it allows PicOS to run all its processes on the same single and global stack. However, this also means that any variables whose contents are supposed to survive state transitions cannot be allocated on the stack.

For this reason, any variable declared after an FSM header and before the first state is treated as if its declaration were preceded with static. This means that the variable is allocated in global RAM, but only visible to this particular FSM. We call such variables shared, because they are in fact shared by all the instances (processes) of the FSM.

For illustration, consider this variant of the toggle FSM from section 2.3 in which we reduce the number of states by storing some state information in a variable:

```
fsm toggle {
    byte on = 1;
    state TOGGLE_LEDS:
        leds (0, on); leds (1, 1 - on);
        on = 1 - on;
    initial state WAIT_FOR_TIMER:
        delay (2048, TOGGLE_LEDS);
}
```

Note that if the on variable were treated as automatic (and allocated on the stack, as for a regular C function) the FSM wouldn't work. First of all, the variable would not retain its previous setting at state transitions (e.g., at subsequent activations of the process at state TOGGLE\_LEDS), because its stack location would be overwritten by other processes running in between; second, the variable would be reset to 1 at every activation (because of the initializer).

Note that the interpretation of the on variable is basically the same as if the variable were global, while being visible only to this particular FSM. But still, a single copy of such a variable is effectively shared by all processes of the FSM, which is not always desirable. Quite often, as in the above case, it only makes sense as long as there's no more than one instance (process) of the FSM at any given time. For toggle, this assumption is probably natural, considering that the FSM operates on specific LEDs. If the variable is to be truly local, i.e., associated with exactly one process, and non-volatile at the same time, it should be put into the process's private data structure (and the FSM should become a strand), e.g.,



v 3.3 11 of 47

```
typedef struct {
     byte on;
} toggle_data_t;
...
fsm toggle (toggle_data_t *td) {
     state TOGGLE_LEDS:
        leds (0, td->on); leds (1, 1 - td->on);
        td->on = 1 - td->on;
     initial state WAIT_FOR_TIMER:
        delay (2048, TOGGLE_LEDS);
}
```

In a simple case, like the one at hand, this may look overly complicated. Note that the structure must be allocated and initialized before the strand is created, e.g.,

This may seem a lot of effort. Note, however, that a realistic FSM requiring a truly private data item is likely to need more than just a single byte. Also, there exist simple and effective hacks that can be applied in trivial cases like the one above (see page 33).

Automatic local variables can still be declared within an FSM, but only in state blocks, as illustrated in the root process above (variable  $\mathfrak p$ ). Such variables, by the very nature of their declarations, are only valid within the confines of the single state and must be reinitialized upon each activation at that state.

For a strand FSM, the data variable has the status of a local variable that at every activation of the strand is set to the same value that was specified at the strand's creation (as an argument of runfsm, e.g., see page 5). The FSM can reset this variable, but the new value will only hold for as long as the strand retains control of the CPU. There is a way to make the change permanent in those rare cases when this is truly needed (see page 33).

#### 2.5 Process execution and CPU scheduling

When activated, a process typically issues a number of *wait requests* identifying the conditions (events) to resume it in the future and associating states with those events. Several events may be awaited by a single process at the same time. For example, consider this FSM fragment:

```
state WAIT_FOR_DATA:
    when (DATA_READY_EVENT, GET_IT);
    when (QUIT_EVENT, STOP_IT);
    delay (4096, HEART_BEAT);
    release;
```

. . .



v 3.3 12 of 47

In this state, the FSM issues three wait requests before releasing the CPU: two for some "named" events and one for the timer. Having executed release, the process will become dormant until:

- 1. the DATA\_READY\_EVENT event occurs (is triggered), in which case the process will be activated in state GET IT, or
- 2. the QUIT\_EVENT event is triggered, in which case the process will be activated in state STOP IT, or
- 3. the timer goes off (4 seconds later)

whichever of the three conditions materializes first. Thus, the multiple wait requests aggregate as an *alternative* of waking conditions. Note that the process can issue them in any order (which is immaterial) possibly interspersing the requisite statements with other operations. All those wait requests only become relevant when the process loses the CPU (executes release). Then they will describe the process's continuation, i.e., the dynamic state transition function of the FSM (which is driven by events).

When a process is activated, its list of wait requests is initialized to "empty" (regardless of what the process was waiting for before getting into its present state). Thus, upon every activation, the process specifies its waking conditions from scratch.

Some system functions hide the operation of blocking the invoking process by performing release internally; however, they cannot completely hide the operation of unblocking (activating) the process when the awaited condition is met. This is because activation always involves a state; thus, a function that may potentially block must accept a state argument (e.g., see the call to ser\_out on page 4).

Activities of multiple processes are coordinated by the CPU scheduler. Formally, the scheduler is non-preemptible, which means that a process receiving the CPU can only loose it by its own action and on its own will. That happens when the process executes release. Note that release can be executed by a function, e.g., a library function (so it need not be plainly visible).

The scheduler is extremely simple, but it works fine for the kind of reactive processes you will find in a PicOS praxis. Such processes are dormant most of the time and only become active (usually for a very short time) when activated by events.

The dynamic pool of processes known to the system is described by a collection of fixed-size data structures known as PCBs (for Process Control Blocks). The system offers two options for the organization of that collection (see MAX\_TASKS on page 26). With the "static" option (MAX\_TASKS > 0), there is a fixed array of PCB slots which are initially all marked as empty. With the "linked" option, the PCBs are linked into a dynamic list. In both cases, the composite structure is called the PCB table (or PCBT), even though the name doesn't fit it too well in the second case.

One important attribute of a PCB is the *status word*, which indicates whether the process is *waiting* for an event or *ready* (i.e., willing to use the CPU). In the latter case, the status word also identifies the state in which the process should be run. When a waiting process receives one of its awaited events, its status changes to *ready*. Note that this does not automatically cause the process to receive the CPU. First of all, multiple processes may become ready at the same time (e.g., they may have been waiting for the same event), while the CPU can only be assigned to one process at a time. Second,



v 3.3 13 of 47

the scheduler is non-preemptible, which means that a process becoming ready while some other process is running (which may happen by some action of the running process, e.g., via trigger) will have to wait until the running process is done with the CPU.

Whenever the CPU becomes available and the system suspects that a process may be ready, it will execute a turn of the scheduler loop. The loop scans through the PCBT looking for the first PCB whose status is *ready*. If such a PCB is found, the process described by it is given the CPU. This consists in invoking the process's FSM function at the state prescribed by its activation event. If no ready process is found, the scheduler parks the CPU on a HALT instruction awaiting a system event (an interrupt). A system event causing a process to change its status from *waiting* to *ready* unparks the CPU, which simply means that the CPU scheduler will execute another turn of its loop.

Note that hardware interrupts (which are normally invisible to the application programmer) can occur asynchronously with process activities; however, the process activities are in fact synchronous. If two or more processes are activated (made ready) simultaneously (e.g., by the same event), the order in which they will be run is determined by the ordering of their PCBs in the PCBT, which is always scanned in the same way. The ordering of processes (their PCBs) in the PCBT tends to correlate with their creation order.

With the static option, when a new process is created, the system grabs the first free slot from the PCBT and stores there the PCB of the new process. When a process terminates, its PCB slot is released, i.e., marked as empty. For example, if you create two processes, say A and B, A first and B second, with no processes terminating in between, the PCB of B will follow that of A. This means that A will have a higher priority: in all circumstances when A and B are both ready, A will be the first to run. Note however, that processes may terminate vacating their PCB slots which may be subsequently recycled for new processes. Thus, there is no guarantee that a process A created before process B will receive a higher priority. This will not be the case, e.g., if after the creation of A and before the creation of B some process preceding A terminates (its higher priority slot will be then re-used for B).

With the linked option, the list of PCBs does not include unused slots. When a new process is created, the system dynamically allocates memory for the new PCB by calling umalloc (see page 42). This memory is freed (the PCB removed from the list) when the process is killed. There are two sub-options regarding the ordering of PCBs in the list (see page 26): the PCB of a new process can be added either at the tail of the list or at the front. In the first case, process priorities strictly decrease with the creation order; in the second, they strictly increase.

This may all sound messy, but is pretty much irrelevant in all sane circumstances. <sup>6</sup> If the praxis is truly reactive (and processes never engage in extensive calculations) their priorities are unimportant and can be assumed to be random. Thus, it is fair to say that when two processes are activated at the same time, the order of their actual execution is nondeterministic (especially if we don't know or don't care about their creation order). On the other hand, if you have an important and permanent process (one that lives for as long as the praxis itself) and you think that its priority matters, make sure to create it first (or last, if you have a linked PCBT of the second kind). Note that the root process is always the first created process of the praxis. Also note that it can be terminated: there is no absolute need to keep it around, if it is in the way.

<sup>&</sup>lt;sup>6</sup> It would be easy to introduce explicit priority schemes to PicOS's scheduler. Such exercises have been made, and they have all proved basically useless and wasteful.



v 3.3 14 of 47

A freshly created process always starts *ready* (to be run in its initial state).

One consequence (we shouldn't hesitate to say "advantage") of the synchronous operation of FSM processes in PicOS is the lack of inter-process synchronization problems. All the statements that an activated process executes in its current state are carried out with mutual exclusion with respect to all other processes. Note that this only applies to processes: interrupts (kernel activities) still have to synchronize with processes, but this doesn't concern the application programmer (and doesn't even concern the processes as such).

Consider now the operation proceed (e.g., see page 5), which provides for a direct transition to the indicated state. To completely understand its behavior, you need to know about scheduling. Although the operation may connote with goto, you should realize that it does involve the CPU scheduler. This means that its is possible for another process to grab the CPU during the transition. The operation performs an equivalent of release (i.e., a return to the scheduler) with the same process being immediately ready to run in the new state. If there is a higher priority ready process, it will be run before the current process gets to executing statements in the new state. Thus, it is not impossible for another process to intervene (run through one of its states) during the transition. This behavior is usually quite intended and even desirable, as it tends to improve the overall responsiveness of the praxis. For illustration consider this code fragment:

```
state MORE_TO_DO:

if (dt->flag == FG_FINE)

trigger (SOME_EVENT);

proceed TRY_AGAIN;
```

Suppose that the if condition evaluates to true (YES) and the FSM executes trigger. The event is then likely to render some other process ready. If the priority of that process happens to be higher than that of the current one, it will be run before the current process gets to executing statements in state TRY\_AGAIN. The transition is non-trivial and it allows the current process to interleave with others, thus breaking the mutual exclusion (of which you should be aware).

There may exist situations where you would prefer to use an actual goto (which is obviously legal). Here is a convincing (if somewhat artificial) example:

```
fsm one {
    state WAIT:
        when (EVENT1, GOTIT);
        release;
    state GOTIT:
        ...
        trigger (EVENT2);
        proceed WAIT;
}

fsm two {
    state WAIT:
        when (EVENT2, GOTIT);
        release;
    state GOTIT:
    ...
```



v 3.3 15 of 47

```
trigger (EVENT1);
proceed WAIT;
```

}

The two FSMs want to play a (symmetric) ping-pong game with signals (events) whereby one triggers an event awaited by two, which does something in response and replies by triggering an event awaited by one, and so on. Suppose that one receives the signal and wakes up in state GOTIT. Then it triggers EVENT2 and proceeds back to WAIT to await two's response. Suppose that the priority of two is higher and whatever additional actions it performs in state GOTIT (having received the signal from one) involve no blocking. Then, owing to the fact that proceed (at one) causes the CPU to be reassigned to two (which has just become ready), two will trigger EVENT1 before one gets to executing when. Consequently, the event will be missed by one. This is because a triggered event must be awaited (when must have been issued for it already) before it can be received (events are not queued). This kind of nondeterminism is probably not what the programmer had in mind. The problem will be avoided if proceed (in both FSMs) is replaced with goto. As gotos (and labels) may appear irritating to purists, PicOS offers a camouflaged goto to a state. Here is the relevant fragment of one rewritten:

```
state GOTIT:
...
trigger (EVENT2);
sameas WAIT;
```

The keyword sameas (instead of proceed) means that you want to execute the same code as at the indicated state, i.e., as if the code was replicated substituting for the sameas statement.

Note that the above example is artificial and meaningless unless the dotted parts (following the state GOTIT) contain some non-trivial operations (and more states) that (at least in some circumstances) do block. If this is not the case, the FSMs will lock into an infinite loop. Then, of course, there is an easy way to rewrite the FSMs in a way that eliminates the problem without using sameas (and even makes the code a bit shorter):

As we shall see in section 2.6, a process's reaction to an event is usually programmed quite differently, in a way that eliminates the kind of race inherent in the above example. Consequently, you practically never need sameas, and if you think you need it, then probably something is wrong with your design.

# 2.6 Events

Even though many wait & block scenarios (involving wait requests followed by release) are buried inside the standard functions (and thus are not directly visible to the programmer), the three basic operations needed to implement *all* such scenarios, i.e., delay, when, and release, can be (and often are) invoked by the program



v 3.3 16 of 47

directly. With delay, a process can set up a timer for a given number of ticks of the internal clock. One such tick corresponds to 1/1024 of a second, which interval is often referred to as the "PicOS millisecond", or just "millisecond", if the context is clear. For example, this FSM:

```
fsm blinker {
    state TURN_ON:
        leds (0, 1);
        delay (512, OFF);
        release;
    state TURN_OFF:
        leds (0, 0);
        delay (768, ON);
}
```

turns LED 0 on and off in 1.25-second cycles with the LED going on for 500 (true) milliseconds and then going off for 725 milliseconds.

A process can issue multiple delay requests at a single activation, but only the last of them is going to matter. The maximum value of a delay interval is 65535 (the first argument is of type word), i.e., 64 seconds minus one tick.

Operation when makes it possible to wait for "named" events which in fact are represented by word-sized integer numbers. The first argument of when can be of any type that is formally cast-able to word, in particular, it can be a pointer. As a rule, it is recommended to use addresses (pointers) for event identifiers. Typically, such identifiers naturally couple with data structures (objects) related to those events and are thus automatically unique. Note that the PicOS kernel, device drivers, and some library functions use the same event signaling mechanism as your FSMs. By consistently following the recommendation you will make sure that your events do not accidentally coincide with internal events.<sup>7</sup>

Let us try to program a variant of the above led-toggling FSM making it possible to control the blinking from another process. Here is something that one might arrive at via a straightforward extension of the above example:

```
fsm blinker {
    state TURN_ON:
        leds (0, 1);
        delay (512, TURN_OFF);
        when (LED_OFF_EVENT, IDLE);
        release;
    state TURN_OFF:
        leds (0, 0);
        delay (768, TURN_ON);
        when (LED_OFF_EVENT, IDLE);
        release;
    initial state IDLE:
        leds (0, 0);
        when (LED_ON_EVENT, TURN_ON);
}
```

<sup>&</sup>lt;sup>7</sup> Such a coincidence, even if it happens, need not be disastrous (or even detrimental) to the praxis (see below).



v 3.3 17 of 47

The idea is to have two signals that a controlling FSM would send to blinker in order to switch it on and off. One extra state, IDLE, is the (initial) off state.

Although likely to do its job in a sane situation, the above FSM illustrates how you should not program such scenarios. The solution suffers from the uncomfortable moments of uncertainty when the process transits among its states (something we already witnessed in the example on page 14). For example, consider the situation when the process has executed release in state TURN OFF awaiting both the timer event and LED OFF EVENT. Suppose that the timer goes off. At that moment the process becomes ready to use the CPU; however, it is not impossible that another process (with a higher priority) also becomes ready at the same time. Depending on the complete picture, this may be in fact impossible, possible but extremely unlikely, or even not so unlikely. For example, the other process may also be waiting for the timer (using delay) and may specify the same interval. As the formal activation of a process waiting for the timer (its status change) occurs at a tick of the system clock, all processes with the same target tick will be activated exactly at the same time. If something like that happens, and the other process is the controlling process for blinker, and it decides to trigger LED OFF EVENT in its current state, that event will be lost, i.e., will not be responded to by blinker.

A standard and foolproof way to program blinker, as well as many other scenarios fitting the same pattern, is to have a clear indication of the status (in some global variable) and only use the signals to perceive the changes in that status, e.g.,

```
Boolean led_is_on = NO;
...
fsm blinker {
    state CHECK_IT:
        if (led_is_on) {
            leds (0, 1);
            delay (512, OFF_PERIOD);
    } else
            leds (0, 0);
    when (LED_EVENT, CHECK_IT);
    release;
    state OFF_PERIOD:
    leds (0, 0);
    delay (768, CHECK_IT);
    when (LED_EVENT, CHECK_IT);
}
```

Then, the operation of switching the blinking on and off can be encapsulated into a function:

```
void blink (Boolean on) {
    led_is_on = on;
    trigger (LED_EVENT);
}
```

Depending on your taste, the second when (at state OFF\_PERIOD) is optional. In the situation when the blinking is switched off and then quickly on while the process is still waiting on the 2-second delay, that statement will cause the LED to be lit immediately.

Note that the new interpretation of the when event is not to tell blinker what to do, but rather to bring to its attention the fact that the LED status may have changed (and it is



v 3.3 18 of 47

that status that tells the process what to do). This is the most natural and recommended way to treat all named events. Note that the presence of the status variable also resolves the problem which address to use for the event identifier: clearly, the address of the status variable, i.e., you may want to put this statement:

```
#define LED EVENT (&led is on)
```

somewhere in front of the FSM definition.

As one more leg of this exercise, let us turn **blinker** into a parametrized (strand) FSM capable of controlling any LED, e.g., in this way:

```
typedef struct {
     byte led, state;
} led status t;
fsm blinker (led status t *1stat) {
      state CHECK IT:
            if (lstat->state) {
                  leds (lstat->led, 1);
                  delay (512, OFF PERIOD);
                  leds (lstat->led, 0);
            when (1stat, CHECK IT);
            release;
      state OFF PERIOD:
            leds (lstat->led, 0);
            delay (768, CHECK IT);
            when (1stat, CHECK IT);
}
void blink (led status t *lstat, Boolean on) {
      lstat->state = on;
      trigger (lstat);
}
```

This time we do not shy from using addresses (pointers) directly as event identifiers (for when as well as for trigger).

In those rare cases when you want to pass signals between processes, and there is no obvious data structure whose address can be used as the event identifier, you can use the process ID, i.e., the value returned by runfsm. Although formally process IDs are integers (of type sint), they are in fact addresses of the respective PCBs (cast to sint). Thus, for as long as the praxis consistently obeys the principle of associating addresses with all events, process IDs directly provide unique event identifiers.

If you need an event to be passed to a cohort of processes running the same code (FSM), a natural choice is the address of the FSM function, which you can simply refer to via the FSM name, e.g.,

```
fsm my_fsm {
...
}
...
trigger (my_fsm);
```



v 3.3 19 of 47

. . .

When a process terminates (in whatever way), the two events, i.e., the process ID event + the FSM code event, are triggered automatically by the system (see page 30). There is no harm if nobody is waiting for them. An event that is not expected (there's no pending when for it) is simply ignored with no consequences whatsoever.

Note that overloading events (i.e., using the same event number for several different purposes) is generally OK, as long as the events are interpreted in the recommended way, i.e., as indications of a (possible) status change, with the actual status stored in a variable and verified upon activation. This way, a spurious event will cause no problem: the process will effectively ignore it having found that the status hasn't really changed. The same way, accidental conflicts in event identifiers may bring about some unnecessary process activations, but they will not result in a misbehavior of your praxis.

# 2.7 External blocking

Blocking can be implemented externally, i.e., in a (regular) function invoked by an FSM. Here is an example:

```
void run_more (word st, word n, word param) {
    if (crunning (some_fsm) >= n) {
        when (some_fsm, st);
        release;
    }
    runfsm some_fsm (param);
}
```

This function creates a new instance (strand) of <code>some\_fsm</code> (passing it <code>param</code> as the data attribute) if the total number of its instances already running is less than <code>n</code>. Otherwise, the process invoking <code>run\_more</code> will block until at least one of the already running instances of <code>some\_fsm</code> terminates (in which case the invoking process may want to re-execute <code>run\_more</code>). Thus, the function accepts a state argument. Here is its sample usage:

```
fsm run_more_caller {
    word k;
    ...
    state RUN_SOME_MORE:
        run_more (RUN_SOME_MORE, 4, k);
    ...
}
```

Note that whatever statements may follow the call to run\_more, they will only be executed if the function returns. Thus, if the process wants to wait for some other events while it remains blocked by run\_more (e.g., a timeout), it must issue the respective requests before calling run more, e.g.,

```
state RUN_SOME_MORE:
    delay (4096, GET_LOST);
    run_more (RUN_SOME_MORE, 4, k);
```

But then, if run\_more doesn't block, the timer will be set anyway, which may not be what the programmer has ordered. One way out may be to reset the timer to some large



v 3.3 20 of 47

interval (note that each delay cancels the previous timer setting), but it probably doesn't strike you as an elegant solution. The proper solution is to invoke unwait, e.g.,

```
state RUN_SOME_MORE:
delay (4096, GET_LOST);
run_more (RUN_SOME_MORE, 4, k);
unwait ();
```

which cancels all wait requests (when as well as delay) issued so far in the present activation.

One natural and generic behavior of a blocking function is to try something and either succeed (and return) or find that the goal cannot be accomplished right away. In the latter case, the function will issue a wait request for some event, whose occurrence will be interpreted as a new opportunity to try again, and execute release. Thus, when the invoking process is activated in the specified state, it should re-execute the function. An alternative behavior is possible where the activation of the invoking process in the specified state means that the goal has been accomplished (there is no need to re-try anything). A function subscribing to this kind of behavior will return immediately having issued a wait request for some event indicating the completion of its operation. The system functions delay and when are the most prominent exemplifications of that behavior. By convention, functions falling into the first class accept the state as the first argument, while the other ones expect it at the end of the argument list.

# 2.8 Example: a complete praxis

Now we shall turn the blinker FSM from section 2.4 into a complete praxis. First, we notice that the FSM can be simplified by storing a bit<sup>8</sup> more information in the state attribute of the structure. In the following variant, the values of lstat->state are interpreted this way:

```
0
      the LED is off solid
      the LED is in the "off" phase while blinking
1
      the LED is in the "on" phase
fsm blinker (led status t *lstat) {
      state CHECK STATUS:
             if (lstat->state < 2) {</pre>
                    leds (lstat->led, 0);
                    if (lstat->state) {
                           lstat->state = 2;
                           delay (512, CHECK STATUS);
                    }
             } else {
                    leds (lstat->led, 1);
                    lstat->state = 1;
                    delay (768, CHECK STATUS);
             when (lstat, CHECK STATUS);
}
```



<sup>8 1/2</sup> of a bit to be exact.

v 3.3 21 of 47

This new version of blinker only has one state. This modification calls for the following revision of the accompanying function:

```
void blink (led_status_t *lstat, Boolean on) {
    lstat->state = on ? 2 : 0;
    trigger (lstat);
}
```

To turn the example into a complete praxis that can be compiled and loaded into a board (or executed as a VUE<sup>2</sup> model) we need a root FSM. Here is one:

```
fsm root {
      shared led status t *my led;
      state START:
            ser out (START,
                  "Commands:\r\n"
                  " on\r\n"
                   " off\r\n"
            );
            my led = (led status t*)
                  umalloc (sizeof (led_status_t));
            my led \rightarrow led = 1;
            blink (my led, NO);
            runfsm blinker (my led);
      state INPUT:
            char cmd [4];
            ser in (INPUT, cmd, 4);
            if (cmd [1] == 'n')
                  blink (my led, YES);
            else if (cmd [1] == 'f')
                  blink (my led, NO);
            else
                  proceed BAD INPUT;
      state OKMSG:
            ser out (OKMSG, "OK\r\n");
            proceed INPUT;
      state BAD INPUT:
            ser out (BAD INPUT, "Illegal command\r\n");
            proceed INPUT;
}
```

The process starts in state **START** where it writes to the UART a message presenting two simple commands: "on" and "off." Then it allocates memory for the LED data structure and sets the LED number to 1. Next it calls blink to turn the LED initially off (the standard symbolic constant **NO** is equivalent to 0, i.e., false — see page 7). Note that the first event triggered by **blink** will be ignored as nobody is expecting it yet (the **blinker** process gets created by **root** after the call to **blink**).

In state INPUT the process tries to read from the UART (function ser\_in) a line returning up to four initial characters of that line in array cmd. The second character of the read sequence is used to tell which command it is; then a pertinent call to blink is issued.

Note that the cmd array (passed as the second argument to ser\_in) is state-local (i.e., allocated on the stack). In order to use a local array in this context we have to know that



v 3.3 22 of 47

ser\_in handles it safely and, for example, does not cause it to be filled with data off-line (while the process is blocked). Indeed, this is how the function works: the data are only stored in the array, if a complete line is immediately available in its internal buffer. We say that this (return) argument of ser\_in is blocking-safe. Clearly, it makes sense to try to make all arguments of potentially blocking functions blocking-safe, if only possible.

# 3 System organization and structure

The complete PicOS platform consists of three components: PICOS, SIDE, and VUEE, which come as three separate packages. Only PICOS is needed for preparing programs for target (real) microcontroller devices. SIDE and VUEE together provide a virtual execution environment for PicOS praxes making it possible to develop them in complete isolation from the mundane aspects of real target hardware.

The procedure for setting up the platform is described in a separate document (*Installation*). Here we only focus on one component of the platform, i.e., the PICOS package.

# 3.1 Logical view of the system

PicOS can talk to several I/O devices, e.g., the UART (possibly more than one) and RF modules. Usually, an RF module (and, in many cases, also the UART) is interfaced to the praxis via VNETI (see the *VNETI* document), which brings in an orthogonal, simple, and powerful collection of tools for describing possibly complex I/O sessions (protocols) involving packets exchanged by the node with the various devices. The functionality of VNETI is extensible via *plugins*. This way, e.g., networking in PicOS is inherently layerless. Figure 1 shows the logical organization and interactions among the various system components.

A PicOS praxis is always intended for a specific *board*. The system includes an extensible set of board descriptions (for each of the two generic CPU types) specifying details like I/O pin configurations, RF module interface, UART parameters, etc., which depend on the layout of a particular board. New board descriptions can be created relatively easily by cloning and modifying the existing board description sets.

# 3.2 Package content

Figure 2 shows the (somewhat simplified) layout of directories of the PICOS package. Files whose names begin with *RTAGS* (located at level zero) contain the history of modifications along with the tags identifying the respective versions of the system in the GIT repository. The main-level directories store the following components:

### Apps

This is a repository for praxes, with each praxis occupying one sub-directory. Some directories in *Apps*, like *TESTS*, *VUEE*, may themselves contain application directories. At least one file is required to describe an application: *app.cc* containing the main part of the praxis program. The optional *options.sys* file may override some system parameters associated with the board for which the praxis is intended.



v 3.3 23 of 47

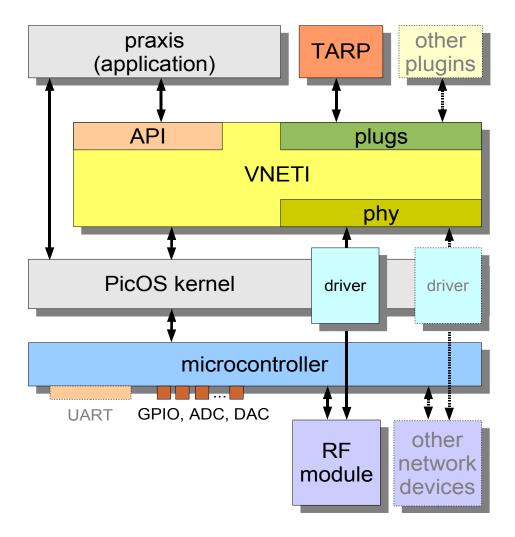


Figure 1. System structure.

# PicOS

This directory contains the source code of the system kernel, library modules, all device drivers, and the VNETI module. In addition to C files containing various architecture-independent components of the system, the directory includes several subdirectories:

kernel containing the architecture-independent kernel code, including the CPU scheduler in a separate file

eCOG containing the components pertinent to the eCOG1 CPU (including architecture-specific parts of device drivers)

MSP430 containing the components pertaining to the MSP430 CPU (including architecture-specific parts of device drivers)

*Libs* containing library modules partitioned into several subdirectories:

Lib accommodating various utility libraries, e.g., implementing formatted I/O, as well as machine-independent device drivers

LibComms accommodating the essential networking code, including the



v 3.3 24 of 47

TARP plugin for wireless ad-hoc connectivity

**LibOEP** 

LibXRS the protocol suite of the so-called External Reliable Scheme for reliable exchange of data over UART and wireless links

the Object Exchange Protocol suite, i.e., tools for reliably

transmitting large objects over low-bandwidth unreliable links

LibLCDG tools for creating menus and hierarchies of displayable

objects on tiny graphic LCDs, e.g., Nokia N6100

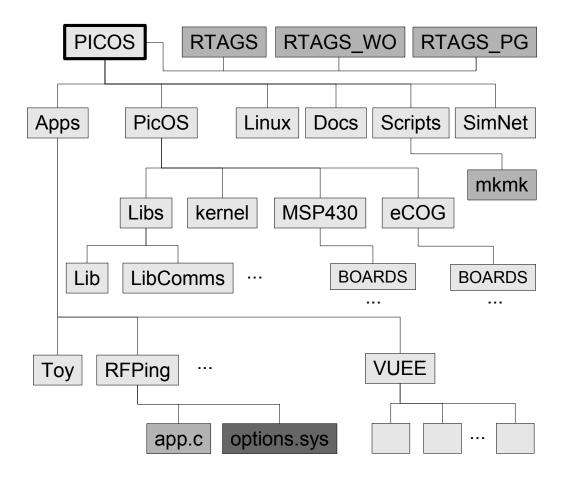


Figure 2. PicOS directory tree.

Each of the two CPU-specific directories, *MSP430* and *eCOG*, contains, among other things, a subdirectory called *BOARDS*, which in turn contains board specifications. Each specification is stored in a subdirectory of *BOARDS* whose name is interpreted as the board identifier. This identifier must be specified as an argument of *mkmk* (page FIXME) when the target downloadable praxis image is compiled.

## Linux

This (legacy) directory contains simple programs developed under Linux for testing the Ethernet and serial interfaces of Cyan's eCOG1 board.



v 3.3 25 of 47

#### SimNets

This (legacy) directory contains the simulator project (in MS Studio) providing for virtual execution of PicOS praxes on the eCOG1 emulator.

#### Docs

Documentation directory.

# Scripts

A few scripts mostly in Tcl. The most important of them are:

*mkmk* PicOS precompiler generating SDK projects and makefiles for PicOS praxes (described in *mkmk*)

picomp PicOS compiler transforming source files using PicOS syntax into straightforward C files; also used to transform PicOS praxes into VUE<sup>2</sup> models (described in *PiComp*)

piter a powerful cross-platform terminal emulator compatible with PicOS-specific UART communication modes (described in *Serial*)

The directory also includes file *UTILS.zip*, containing a packaged set of some handy tools, including the free variant of FET loader from Elprotronic<sup>9</sup> and a Windows terminal emulator.

# 3.3 Board description

A board description (in a subdirectory of *BOARDS*) consists of a number of files whose exact population depends on the configuration of system components. For example, if a radio module is interfaced to the system, the subdirectory will contain a file named board\_rf.h specifying the pin interface to the module. One file that is always present there is board\_options.sys; it defines a set of symbolic constants selecting various system components and options. The full list of those options together with their default values is listed in file options.h in directory PicOS. The praxis may select additional options (not mentioned in board\_options.sys) or override some of the options set in board\_options.sys. This is rare and usually concerns only some "soft" options (e.g., debugging). It would make no sense for the praxis prepared for a specific board to redefine the board's hardware (in such a case, a new board definition would be provided instead). From now on, when we use the term "system option" or "system parameter," we shall mean a member of the set of system configuration options collectively determined by board\_options.sys in the respective board configuration directory and the optional options.sys file in the praxis directory.

# 3.4 Critical limits

PicOS recompiles for every praxis. This makes better sense (than having a precompiled library of object modules) because:

1. The system is small, so its recompilation costs little time.

<sup>&</sup>lt;sup>9</sup> See: <a href="http://www.elprotronic.com/">http://www.elprotronic.com/</a>.



v 3.3 26 of 47

2. The system can be better configured to the specific requirements of the praxis. For example, in can be parametrized by compilation constants settable from the praxis's files.

Generally, the data structures used by the kernel are simple and trade off flexibility for size. This way the memory overhead on allocating them and keeping track of them is low, which makes it possible to do truly complicated things in very little RAM. The flexibility is accomplished by recompilation (re-parametrizing the system) for different praxis needs.

Most of the system configuration options (those of a general nature) are listed in file options.h in PicOS as #define constants together with rudimentary explanations. These three constants determine important limits of which the praxis should be aware:

This constant determines the organization of PCBT (see page 12). If greater than zero, it selects the static variant (i.e., a preallocated fixed array of PCB slots) of the size (in slots) equal to the symbol's value. In such a case, it can be interpreted as the limit on the number of processes simultaneously present in the system.

If MAX\_TASKS is zero (the default), the PCBT is linked. This means that the maximum number of processes that can coexist in the system is determined solely by the (momentary) availability of heap space (see section 6). The PCB of a newly created process is allocated by invoking umalloc (page 42) and appended at the end of the list, which means that earlier created processes (consistently) receive a higher priority.

If MAX\_TASKS is negative (its exact value doesn't matter), the PCBT is linked (as for MAX\_TASKS == 0), but new PCBs are inserted in front of the queue. This way, the last-created process receives the highest priority.

The maximum number of different events that a single process can await simultaneously, excluding the timer (delay) event.

This parameter determines the PCB size (in bytes) according to this formula:

where F is 4 for MSP430 and 6 for eCOG1, and L is 0, if MAX\_TASKS > 0, and 2 otherwise (it covers the size of the single pointer needed to implement a linked list of PCBs).

If  $\mathtt{MAX\_TASKS} > 0$ , the default PCB size for MSP430 is 20 bytes. You have to multiply this number by  $\mathtt{MAX\_TASKS}$  to obtain the amount of RAM set aside for the PCBT. With the dynamic option ( $\mathtt{MAX\_TASKS} \le 0$ ), a single PCB takes 22 bytes and there is no explicit limit on the number of processes.

The amount of RAM set aside for the stack (in bytes). This parameter cannot be reset for eCOG1, at least not this way (changing it requires editing the file *cstartup.asm* in PicOS/eCOG).



v 3.3 27 of 47

It is possible for the praxis to monitor the stack size and diagnose its overflow. <sup>10</sup> Here is one more parameter that can be used to this end:

This is a Boolean value with nonzero selecting the stack guard option, where the system (heuristically) monitors the stack against overflows. The stack is pre-filled with words of a certain pattern, which allows the system to:

- 1. determine the maximum usage of the stack so far
- raise an alarm (and possibly reset the CPU) when the last location of the stack has been touched

With STACK\_GUARD != 0, the system function stackfree (see page 42) returns the minimum number of free stack locations observed so far (in words).

# 3.5 Software co-requisites

The following software (available for free) is required to compile, load, and debug PicOS praxes under Windows. The mspgcc MSP430 development toolkit<sup>11</sup> can also be used under UNIX (Linux); however, the eCOG1 compilation platform, which requires CyanIDE from Cyan technologies, only works under Windows. In the sequel, we restrict ourselves to Windows.

# Cygwin (see <a href="http://www.cygwin.com/">http://www.cygwin.com/</a>)

Strictly speaking, the Cygwin environment is not absolutely required for eCOG1 development, although it is very useful. For example, the *mkmk* script generating project files for CyanIDE requires Tcl, which is immediately available under Cygwin.

# CyanIDE Version 1.2 or later (see <a href="http://www.cyantechnology.com">http://www.cyantechnology.com</a>)

This is the official development platform for eCOG1 applications. It is not required for MSP430.

#### mpsgcc (see http://mspgcc.sourceforge.net)

This is the GNU development environment for MSP430 (not needed for eCOG1). It requires Cygwin as a prerequisite.

File *UTILS.zip* in *PICOS/Scripts* contains the Lite FET-Pro430 JTag loader from Elprotronic (see http://www.elprotronic.com) and a terminal emulator. The terminal emulator requires no installation, but the FET loader must be installed. Terminal is a convenient and powerful terminal emulator for interfacing UARTs to the PC. This software is also available from the Internet.

Please read the documentation that comes with CyanIDE and/or mspgcc. The rest of this document assumes that you are familiar with the technical details involved in interfacing a microcontroller board to the PC and debugging a program. The mspgcc environment is based on standard GNU tools, including gcc (as the compiler) and gdb (as the loader/debugger).

<sup>&</sup>lt;sup>11</sup> A separate document, *Installation*, describes in detail the procedure of setting up the PicOS platform for MSP430 both under Windows and Unix (Linux).



<sup>&</sup>lt;sup>10</sup> Believe it or not, but there has not been a single (noted) case of stack overflow in the entire history of our software development with PicOS.

v 3.3 28 of 47

#### 3.6 Quick start

While the PICOS package can be used independently, the recommended way of setting it up (as explained in the *Installation* document) is to integrate it with VUE<sup>2</sup> (and SMURPH/SIDE, which is a prerequisite for VUE<sup>2</sup>). The simplest way to do it is to unpack the three components into the same directory (e.g., located within your home directory under Cygwin), then move (*cd*) to *PICOS*, and execute:

# ./deploy

This will precompile the essential modules of SMURPH/SIDE, create a few links, and copy the requisite scripts and programs to your *bin* directory.

Directory *Apps/VUEE/INTRO* contains three subdirectories: **HELLO\_WORD**, **OUTPUT**, and **LEDS** with the sample programs discussed in sections 2.1 and 2.8. You can compile and execute them on practically any type of board, as long as it is equipped with a UART.

#### eCOG1

This part has been removed for the following reasons:

- The old eCOG1 evaluation board is now obsolete. We do not have an alternative board that could be used as a basis for discussion.
- CYAN's SDK will not compile praxes using the new programming constructs. Such praxes can still be compiled through *make*, however, I have nothing to load them with, nothing to load them into, and no way to verify them on real hardware.

#### MSP430

Connect the JTag interface of your MSP430 board<sup>12</sup> to the PC via a parallel cable. See *Installation* for instructions regarding other programmers. Also, make sure that the UART is connected to the PC, and a terminal emulator is attached to the corresponding COM port. Set the parameters of the port to 9600 bps, 8 bits, no flow control.

Move *mkmk* from *PICOS/Scripts* to a place where you keep private executables under Cygwin. Alternatively, include *PICOS/Scripts* in your PATH. If you have installed the complete set (PICOS, VUEE, SIDE), and executed *deploy*, there is no need to do this.

Open a Cygwin window and move to *Apps/VUEE/INTRO/LEDS*. This directory contains the praxis discussed in section 2.8. You can also try the praxes from the other subdirectories of *Apps/VUEE/INTRO*.

Execute *mkmk WARSAW* in that directory (assuming that your node is EMSPCC11). This will create a *Makefile*.

Execute *make*. This should compile the program creating two loadable files (two different formats of the same loadable image): *Image* and *Image.a43*. The first file is in ELF format and can be loaded using the tools that came with mspgcc (msp430-gdb or msp430-jtag). *Image.a43* is in the so-called Intel HEX format and can be loaded with MspFet or FET-Pro430-lite. Start the loader, then click *Erase Flash* to remove any previous program from the board. Click *Open* and browse to *Image.a43*. Then click *Program/Write Flash* to load the file into the microcontroller. Finally, click *Reset*.

<sup>&</sup>lt;sup>12</sup> For example, our EMSPCC11 mote.



v 3.3 29 of 47

If everything has worked as needed, you will see some output on the terminal. Try the two commands "on" and "off."

# 4 Essential operations provided by the kernel

Below, we list the essential operations that the system makes available to its processes, in no particular order (or, perhaps, in the loose order of their relevance).

Note that there are three types of operations:

- 1. C functions as well as macros mapping into straightforward function calls (marked with **F** on the right). For such an operation, we list the function header specifying the argument types as well as the type of the return value.
- 2. Function-like macros that cast (possibly some of) their arguments. These operations are marked with **M**. While retaining the function syntax, such a macro accepts arguments of flexible types. For such an argument, we will put the + sign in front of the argument type, meaning that whatever you specify as the actual argument must be cast-able to the listed type.
- 3. Operations not following the function syntax (marked with o). The arguments (and the result) of such an operation are described individually in each case.

This operation creates a new process and returns its identifier (PID) of type sint. This means that the construct can occur on the right hand side of an assignment (and also in an expression) even though it doesn't look like a function call.  $fsm_name$  is the name of an FSM function that must have been defined or declared (announced) earlier (section 2.3). The variant with parentheses and argument is used to create a strand (section 2.3). In such a case, the argument must be of a simple type, i.e., something that can be cast to word. Note, however, that the argument type is not checked for agreement with the data type specified with the FSM definition.

The only reason why runfsm may fail is the lack of memory for the process's PCB. With the static variant of PCBT (see pages 12 and 26), the memory set aside for the PCBT is determined by the value of MAX\_TASKS. With the linked option, runfsm will fail if umalloc for the PCB returns NULL (see page 42).

When the process executing runfsm finds that it has failed, it may want to wait for an opportunity to try again. Whenever a process is terminated (and a PCB slot becomes free) the system will trigger a pool-0 memory event, <sup>13</sup> which can be awaited with waitmem (see page 42), also using this alias:

F

where st is the state where the process wants to be resumed when a PCB slot becomes free.

<sup>&</sup>lt;sup>13</sup> With the linked option for PCBT, this event is triggered automatically by the memory allocator when the PCB of the terminated process is freed; with the static option, the event is forced, even though no heap memory is being released.



#### void kill (sint pid)

F

This function kills the indicated process removing it from the system and freeing its PCB. As a special case, kill(0) kills the current (invoking) process and is exactly equivalent to:

finish

Note that neither finish, nor kill (0) ever returns.

Killing/finishing a process triggers two events: the first one is numerically equal to the PID of the terminated process, the second is equal to the address of its FSM function. For example, to wait for the termination of any process running a specific FSM, you should issue when specifying the FSM function pointer as the first argument. There exist two aliases for such occasions:

```
void join (sint pid, word st)
void joinall (fsmcode fsm, st)
F
```

which both translate<sup>14</sup> into:

```
when (pid/fsm, st)
```

The purpose of join is to wait for the termination of a single process (identified by a PID), while joinall will wait for the termination of any process running the code of the specified FSM.

```
void killall (fsmcode fsm)
```

This function kills all process instances running the specified FSM function. It is OK if the operation finds no such process (it will then do nothing). The effect is exactly as if kill were executed in turn for every such process.

```
sint running (fsmcode fsm) F
sint crunning (fsmcode fsm) F
```

If an instance of a process running the specified FSM function is present in the system, **running** returns the PID of one (any) such an instance. <sup>15</sup> Otherwise, the function returns zero. The second function (**crunning**) returns the number of processes that run the specified FSM (see page 19 for an illustration).

If the argument is **NULL**, then **running** will return the PID of the current process (the one that has invoked the function), and **crunning** will count the number of unused PCB slots in the PCBT, i.e., the maximum number of processes that can still be created.<sup>16</sup> There exist two aliases for such calls:

sint getcpid ()	for	running (NULL)
sint ptleft ()	for	crunning (NULL)

<sup>&</sup>lt;sup>14</sup> For VUE<sup>2</sup>-compliance, you should use those aliases when waiting for process termination events, rather than the explicit when variant.

<sup>&</sup>lt;sup>16</sup> This only works with the static variant of PCBT. For a linked implementation, the function will always return 0 when called with a NULL argument.



Olsonet Communications

F

<sup>&</sup>lt;sup>15</sup> In fact, this is the highest-priority process among them (see section 2.5).

#### fsmcode getcode (sint pid)

Returns a pointer to the FSM function executed by the indicated process (and can be viewed as an inverse of running). If pid is zero, the pointer to the current process's FSM function is returned. This may make sense when the operation is issued from a function external to the process's FSM code.

void when (+word ev, word st)

М

F

Issues a wait request for the indicated event (ev). When the event is triggered, the process will be resumed in the specified state (st). Although st is formally 16 bits long, its value is truncated to the least significant 12 bits. A state number must be between 0 and 4095 inclusively. For compatibility with older versions of PicOS, this operation is also available as wait, i.e., when (e, s) is equivalent to wait (e, s). The usage of wait is discouraged because it conflicts with VUE<sup>2</sup>.

Note that the first argument of when can be anything cast-able to word.

void trigger (+word ev)

М

Triggers the indicated event (that can be awaited by when).

For the purpose of when and trigger, events are identified by 16-bit word-type numbers (with different values treated as different events). Certain internal or special-purpose events can be awaited (implicitly) via some other operations (e.g., join, waitmem). As we postulated in section 2.6, the praxis should use addresses as event identifiers (all events used by the kernel and library modules follow this postulate). There is no need to cast such values (to word) when putting them as arguments of when or trigger.

Triggered signals are never queued: if no process is waiting for a triggered event, the trigger operation is completely void. On the other hand, if there are multiple processes awaiting for the same event delivered by trigger, all of them will be awakened simultaneously.

void ptrigger (sint pid, +word ev)

М

This operation acts exactly like trigger (see above), except that the event is only presented to the indicated process. If there is only one process interested in receiving the event and its PID is known, ptrigger is a bit more efficient than trigger. The pid argument must be a valid process ID and, in particular, it cannot be zero.

release 0

This parameter-less operation leaves the current process, i.e., forces the completion of the current state. When executed from within the process's FSM function, it can be replaced by return (although doing so is not recommended from the viewpoint of possible future extensions). Note that release can be executed from a function called from the FSM, in which case it will exit the process rather than return from the function.



# void delay (word timeout, word st)

This operation issues a timer wait request, i.e., sets up an alarm clock to go off after the specified number of *PicOS milliseconds*. <sup>17</sup> When that happens, the process will be activated in the indicated state. At most one alarm clock per process can be set up at any time. If a process issues multiple delay requests before releasing the CPU, only the last of them becomes effective. A delay request is interpreted in a way similar to a when request and can naturally coexist with other (simultaneous) wait requests.

v 3.3

#### word dleft (sint pid)

F

F

This function returns the residual number of PicOS milliseconds for which the indicated process will continue to sleep on a delay timer (see above), i.e., remaining until the timer goes off (assuming that no other event wakes the process up in the meantime). If the process is not waiting on a delay timer, or pid does not identify an existing process, the function returns MAX UINT. The case pid == 0 is interpreted as an inquiry about the current process. In such a case, it will return the setting of the last delay issued by the process in its present state, or MAX UINT, if the process has not issued a delay request in its current activation.

#### lword seconds (void)

F

This function returns the number of true seconds elapsed since the system was started.

#### proceed st

0

This operation unconditionally transits to the indicated state st. The transition is different from a goto in that it involves the CPU scheduler (as explained in section 2.5). For example, if the current process executing proceed has triggered events waking up other processes, those other processes are given a chance to preempt the current process.

0 sameas st

This operation unconditionally transits to the indicated state st in a manner similar to a goto. The effect is exactly as if the FSM executed goto to a label declared before the first statement of the specified state.

Note that both proceed and sameas require a symbolic state identifier, which must appear at one of the state statements of the FSM. This is in contrast to functions expecting a state identifier, which treat the state argument as a number. Such a number can be stored in a variable (or even calculated) and passed from that variable (or from an expression).

Consequently, you can only execute proceed/sameas from an FSM function (you cannot do that from a function that has been invoked from the FSM). While sameas is truly impossible in such a context, proceed can be emulated as:

delay (0, st); release;

<sup>&</sup>lt;sup>17</sup> One PicOS millisecond equals 1/1024 of a second.



Olsonet Communications

v 3.3 33 of 47

To make it absolutely foolproof (and make sure that no event requested earlier by the process will interfere with the transition), you may precede delay with:

```
void unwait () F
```

which operation revokes all wait requests (when, delay, including their aliases) issued by the process in its present activation so far.

```
call fsm_name (data, st) O call fsm name (st) O
```

This operation creates a process from the indicated FSM and suspends the caller until the new process terminates. Then, the invoking process will be resumed in the specified state (st). It is formally equivalent to this sequence:

```
{
    sint pid;
    pid = runfsm fsm_name (data);
    if (pid != 0) {
        join (pid, st);
        release;
    }
}
```

with the (data) part absent in the second variant. Thus, the operation does not return, unless the process could not be created (because of the lack of memory for a PCB slot).

Here is a sample sequence to issue the call reliably, i.e., to persist until the called process has been in fact created:

```
state CALL_IT:
    call my_fsm (my_data, CALL_DONE);
    npwait (CALL_IT);
    release;
state CALL_DONE:
```

# void savedata (data)

М

The data attribute (see pages 5 and 8) associated with the current process (strand) is set to the specified value. Normally, the data attribute available to the strand is not expected to change during the process's lifetime. Even though the process can formally change the data attribute (which appears to it as a local variable), the change is undone after every state transition, because whenever the process is activated, the attribute is re-loaded from its original value stored in the PCB. With <code>savedata</code>, the process can reset the hard copy of the data attribute in the PCB. Note that this does not change the current value of the attribute variable perceived by the process.

For illustration, consider the toggle FSM from section 2.4. Its second version stores the on/off status of the LED in a trivial structure pointed to by the process's data attribute. With savedata, the status flag can be stored directly in the data attribute, e.g.,



v 3.3 34 of 47

F

```
fsm toggle (byte on) {
    state TOGGLE_LEDS:
        leds (0, on); leds (1, on = 1 - on);
        savedata (on);
    initial state WAIT_FOR_TIMER:
        delay (2048, TOGGLE_LEDS);
}
```

Note that this solution eliminates the memory fragmentation incurred by the dynamically allocated data structure from the original version. The data attribute of a strand is turned into a dynamic non-volatile memory location.

```
void utimer add (word *utm)
```

This operation declares a countdown timer. The first argument points to a word variable which will be added to the global pool of countdown timers. As soon as its contents are set to a nonzero value (with utimer\_set - see below), the word will be decremented towards 0 at millisecond intervals. The maximum size of the utimer pool is 4 entries (and an attempt to create more than 4 simultaneous utimers will trigger a system error).

```
void utimer set (word utm, word val) M
```

This operation sets the utimer variable utm to value val. Note that the first argument is a direct variable name (not a pointer). The operation is implemented as a macro.

A utimer operates in the background independently of the activities of the process that has set it up. In contrast to a delay timer, it doesn't trigger any events, but offers a running readout that a process can consult while performing other operations. For illustration, suppose that a certain FSM responds to two types of conditions/events: one of them to be handled immediately upon occurrence and the other debounced at some intervals (i.e., its too close repetitive occurrences should be ignored). Here is a skeletal layout of such an FSM:

<sup>&</sup>lt;sup>18</sup> Measured in PicOS milliseconds, i.e., 1/1024 s.



v 3.3 35 of 47

Note: If spare SDRAM<sup>19</sup> is used by the praxis, countdown timers cannot be located in (malloc'ed) SDRAM. This is because the operations of moving data to/from spare SDRAM temporarily re-map memory, which happens asynchronously with the timer interrupts that affect the counter. Consequently, a timer allocated in SDRAM could corrupt spare SDRAM storage during move operations.

```
void utimer delete (word *utm)
```

F

This operation removes a utimer previously registered with utimer\_add. The argument should point to a word variable. If the specified timer is not registered, the operation will trigger a system error.

```
void udelay (word del)
```

F

This is a CPU-spin delay loop that takes approximately del microseconds. Not recommended in serious operations, but handy in tests and during initialization.

```
void mdelay (word del)
```

F

This is another CPU-spin delay loop that takes approximately del milliseconds.

Note that tying up the CPU in a process – for the mere purpose of implementing a delay – is seldom a good idea.

```
sint strlen (const char*)

void strcpy (char *dest, const char *src)

void strcat (char *dest, const char *src)

void strncpy (char *dest, const char *src, sint count)

void strncat (char *dest, const char *src, sint count)

F
```

These are the standard operations on strings. They behave almost like the corresponding functions from UNIX except that the copy/cat functions return no values. Here are two more differences:

- strncpy stops on a NULL byte, if encountered in the source string before
  the count runs out, and it also inserts the NULL byte at the end of the
  copied string (so that count + 1 bytes of the output string are overwritten);
- 2. **strncat** inserts the source string after count characters of the destination (overwriting the tail).

These functions operate like their UNIX equivalents: memcpy copies count (non-overlapping) bytes from src to dest, while memset sets count bytes starting from dest to val. Note that the operations are macros with flexible arguments. This alias:

```
void bzero (+char *dest, sint count)
```

M

is equivalent to:

<sup>&</sup>lt;sup>19</sup> This applies exclusively to eCOG1.



v 3.3 36 of 47

memset (dest, 0, count)

### void diag (const char\*, ...)

F

This function is intended for debugging. It writes a line of text directly to UART A (the first UART, in case there's more than one) bypassing the UART driver and interrupts. When the function returns, the line has been written, i.e., the operation is completely synchronous. The specified string is interpreted as a simplified print-like format with the following sequences considered special:

- %d the next word-sized argument of diag is fetched and encoded as a signed integer number
- %u the next word-sized argument is fetched and encoded as an unsigned integer number
- %x the next word-sized argument is fetched and encoded as a 4-digit hexadecimal number
- **%s** the next **char\***-sized argument is fetched and interpreted as a pointer to a character string to be inserted at this position

#### void leds (+sint which, +sint how)

М

This operation is used to switch on/off the LEDs available on the board. Generally, the number of LEDs is board-specific (some boards may have no LEDs at all). If present and available, the LEDs are numbered from 0 up to the total number of LEDs – 1. The first argument of **leds** is the LED number and the second specifies the action, which can be:

- 0 the LED is turned off
- the LED is turned on
- the LED is put into a blinking mode

The last option is only available if auto-blinking LEDs are enabled (by setting LEDS\_BLINKING to 1 among system options).

#### void fastblink (bool on)

If auto-blinking LEDs are enabled, this function changes the blink rate to fast (if the argument is **YES**) or slow (if the argument is **NO**). The default rate is slow at approximately 2 blinks per second, while the fast rate is about 8 blinks per second.

# void leds\_all (+sint how)

М

This operation is the same as leds applied to all LEDs at the same time.

#### void reset (void)

F

The microcontroller is unconditionally reset and the system is restarted. The function never returns.

#### void halt (void)

F

The microcontroller is stopped. The function never returns.





v 3.3 37 of 47

void syserror (sint code, const char \*msg)

М

The function aborts the system presenting the specified error code. If the DIAG\_MESSAGES system option is set to a value greater than 1 (which means that debug messages are verbose), the specified message (msg) will be written to the UART. Otherwise, (DIAG\_MESSAGES is less than 2) the message is ignored (the message string is not compiled in and uses no memory).

void sysassert (+bool cond, const char \*msg)

М

If  $\mathtt{DIAG\_MESSAGES}$  is greater than 1, this macro tests the condition specified as the first argument, and if the condition fails, executes  $\mathtt{syserror}$  (EASSERT,  $\mathtt{msg}$ ). EASSERT is defined as 10. $^{20}$  If  $\mathtt{DIAG}$  MESSAGES is less than 2, the macro is void.

word rnd (void)

F

This function returns an unsigned word-sized integer random number between 0 and 65,537. It is only available if the RANDOM NUMBER GENERATOR system option is greater than zero. Two versions of the random number generator are available. When RANDOM NUMBER GENERATOR is 1, the simpler (crude) version is selected, whose quality may be substandard from the viewpoint of its theoretical properties, which, however, should be more than adequate for typical applications (e.g., RF randomized backoff for channel acquisition). With RANDOM NUMBER GENERATOR set to 2, the more advanced version is selected, which produces statistically better results at the cost of increased processing time and the overhead of 2 extra bytes of RAM.

Note that even the quality of the simpler version can be drastically enhanced with the addition of "external entropy" to the seed. When the ENTROPY\_COLLECTION option is set to 1, the system will attempt to collect true randomness from some events (like RF reception parameters and timing) and store it in the lword variable entropy. This variable is global and directly usable by the praxis. It also automatically affects the generation of random numbers, which then become truly random (as opposed to being merely pseudo-random).

lword lrnd (void)

F

This function returns <code>lword</code>-size random numbers between 0 and 42949667295. It also works when <code>RANDOM\_NUMBER\_GENERATOR</code> is 1, with the result produced by concatenating two consecutive values returned by <code>rnd</code>.

# 5 The UART

The UART interface described in this section is on the edge of being considered a legacy feature. There exist alternatives, described in a separate document (*Serial*), which are recommended for all new praxes.

#### 5.1 The direct device concept

The first production-level incarnation of PicOS assumed two types of I/O devices:

<sup>&</sup>lt;sup>20</sup> The full list of errors generated by the system can be found in sysio.h.



v 3.3 38 of 47

- 1. Devices accessed through the PHY interface of VNETI (see the *VNETI* document) with the intention of providing a network-like, packetized, buffered, view from the praxis.
- 2. Devices accessed in a more direct fashion and visible by the praxis via traditional read/write operations. This interface is referred to as io.

Over time, the need for the io interface has practically disappeared, except for the UART. Even for the UART, its VNETI (PHY) interface (described in *Serial*) is more flexible and (arguably) no more complex than the io interface. However, as the cost of keeping the io interface around is low, there is no compelling need to eliminate it, especially that:

- 1. Old praxes use it heavily.
- 2. It is arguably more convenient for quick hacks, tests, and debugging. Or, perhaps, it only seems so because of our personal addictions.

In general terms, the io interface (to any device) assumes that devices are identified with integer numbers starting from zero. All I/O operations with such a device are performed via this function:

```
sint io (sint state, sint device, sint op, char *buf, sint len)
```

In the history of PicOS, there have been exactly three devices interfaced this way: the UART, the LCD from the old eCOG1 evaluation board by Cyan Technologies, and the ETHERNET chip from the same board. Considering that 1) the eCOG1 evaluation board is obsolete, 2) the LCD interface was unnecessarily clumsy and cumbersome, 3) the ETHERNET interface was considered temporary (to be replaced with a VNETI PHY), it appears that the UART has been the only serious subscriber to the io interface.

The five arguments of io stand, respectively, for the blocked state identifier, the device number, the operation, the buffer pointer, and the buffer length. Generally speaking, the function attempts to perform the indicated i/o operation, with the parameters described by buf and len, on the device. Depending on the circumstances, the operation may succeed immediately (without blocking) or not. For READ/WRITE, the operation is considered successful if at least some (initial) bytes in the buffer have been transferred to/from the device. In such a case, io returns the number of processed bytes. Otherwise, the device is considered busy and the function does not return. The issuing process is blocked awaiting an (internal) event that will be triggered when the device becomes available. When that happens, the process will be restarted in the state indicated by the first argument of io. The same idea applies to CONTROL operations, if it is possible for them to block. If an io operation cannot possibly block (for example, UART CONTROL requests never block) the first argument of io is irrelevant.

The way io awaits a status change on the device fits the general idea of (possibly multiple) wait requests issued by the process. Thus, if the process simultaneously awaits another event, and that event occurs earlier than the status change on the i/o device, the process will be restarted by that event. This implies one possible way of issuing a non-blocking i/o request without spawning another process. Consider the following code fragment:

```
state SOME_STATE:
    delay (0, WOULDBLOCK);
```



v 3.3 39 of 47

```
ptr += io (SOME_STATE, UART_A, WRITE, ptr, len);
...
state WOULDBLOCK:
...
```

Despite the fact that io issues an internal wait request and puts the process to sleep, the process also awaits a zero-duration timer delay, which event will be triggered immediately. Thus, if io decides to block, the process will transit to state **WOULDBLOCK**.

A simpler way to accomplish a similar result is to use **wnone** as the state argument of io. In such a case, the function will never block, returning 0 when the device is busy. For operations other than **READ/WRITE**, any nonzero value returned by io should be viewed as an indication of success. A blocking **READ/WRITE** operation may legitimately return 0 when it is *void*. What that means generally depends on the device, but one standard case of a legitimate void **READ/WRITE** request is one specifying zero buffer length, i.e., zero bytes to transfer.

As a significant number of io requests tend to use **NONE** for the **state** argument, the system defines this macro:

```
ion (int device, int op, char *buf, int len)
```

as a shortcut for such occasions.

#### 5.2 The io interface to the UART

Up to two UARTs can be configured into the system and made available as devices number 0 (symbolic constant UART\_A, or simply UART) and 1 (UART\_B). READ reads the prescribed number of bytes from the UART, possibly blocking if not a single byte is immediately available for reception, and returning the number of read bytes, which can be less than the specified length. Similarly, WRITE attempts to send the indicated number of bytes to the device, possibly blocking if not a single byte can be immediately written, and returning the actual number of bytes that have been sent to the UART. Besides READ and WRITE, the praxis can issue this (never-blocking) CONTROL operation to change the UART's baud rate:<sup>21</sup>

```
ion (uart, CONTROL, (char*)&rate, UART CNTRL RATE)
```

The "buffer" argument should point to a 16-bit word (i.e., the type of rate should be word) storing the desired rate divided by 100 (i.e., 384 corresponds to 38400 bps). The assortment of legitimate rates depends on the crystal configured with the CPU. For an MSP430 using the standard low-power watch crystal at 32768 Hz, the available rates are: 1200, 2400, 4800 and 9600. With a high-speed crystal, these additional rates become available: 14400, 19200, 28800, 38400, 76800, 115200. An attempt to set the rate to a value not on this list will trigger a system error.

Typically, UART parameters are set by system configuration options and there is no need to change them from the praxis. Here is the list of system options affecting the operation of UART together with their default values:

<sup>&</sup>lt;sup>21</sup> At present, the UART rate on eCOG1 cannot be changed (it is "hardwired" at 9600 bps). Thus, this fragment applies to MSP430 only. In the latter case, the possibility to dynamically modify the UART rate from the praxis is a system configuration option: #define UART RATE SETTABLE 1.



v 3.3 40 of 47

Possible values: 0 = no UART present in the system, 1 = UART\_A only, 2 = two UARTs, i.e., UART A + UART B.

#define UART\_RATE

9600

Bit rate of the UART. If two UARTs are present, the rate is the same for both of them. However, if **UART\_RATE\_SETTABLE** is 1, the rate can be set individually for each UART from the praxis.

#define UART RATE SETTABLE

0

If set to 1 (strictly speaking any nonzero value), the UART rate can be set from the praxis via io CONTROL (see above). If zero, the UART rate is fixed by UART\_RATE. In the former case, UART RATE only specifies the initial rate.

#define UART INPUT BUFFER LENGTH 0

Sets the buffer length for UART input. With the setting of 0 or 1, there is no internal buffer, which means that input characters are directly delivered into the user-specified buffer (the parameter of io). This may cause problems at high rates and/or if the praxis process reading characters from the UART is not very attentive (if it tends to lag with io requests, characters may be lost). With UART\_INPUT\_BUFFER\_LENGTH > 1, the characters are first read into the internal buffer, which acts as a damping storage for data bursts. Of course, the buffer occupies memory, so it shouldn't be used unless needed. It is generally not needed for keyboard input.

#define UART\_TCV

0

If nonzero, this implies that the UART is handled by VNETI, i.e., it does not appear as a regular device but as a PHY (see *Serial*). This requires **UART\_DRIVER** to be 0.

# 6 Memory allocation

PicOS is equipped with a simple and effective malloc-alike memory allocator, which makes it possible to organize the dynamically available RAM (known as the heap) into a number of disjoint and non-interfering allocation pools. With SDRAM<sup>22</sup> present in the system, the heap is located entirely in SDRAM. Otherwise, it uses whatever on-chip RAM remains available after accommodating all static variables. Note that constants (declared with the const keyword of C) are allocated in code and take no RAM space.

Multiple memory pools are enabled by default. In tight memory scenarios, it may make sense to disable them by setting

#define MALLOC SINGLEPOOL

1

among the system options.<sup>23</sup> If multiple pools are disabled, all memory acquisition functions described below take memory from the same global pool.

The praxis declares the partitioning of the available heap memory into pools with the following statement:

 $<sup>^{23}</sup>$  The single-pool option is in fact much more popular these days. Multiple memory pools are (at present) incompatible with VUE<sup>2</sup>.



<sup>&</sup>lt;sup>22</sup> On eCOG1. This feature is described in a separate document.

v 3.3 41 of 47

```
heapmem \{p0, p1, ..., pn-1\};
```

which is declarative and should appear in the data section of the program. This statement is not needed (and if present is void) when multiple memory pools are disabled. The specified integer values p0, p1, ..., pn-1 must be all strictly positive and they should add to 100. Their number n determines the number of memory pools, with each pool receiving the specified percentage of available memory. Pool 0 is intended as the primary storage used by the praxis. If VNETI is configured into the system, pool 1 covers the packet storage of VNETI (and is not used for anything else). More pools can be defined by the praxis, but the praxis should never use pool 1 if VNETI is present.

PicOS provides the following two basic functions to carry out memory allocation/deallocation for the praxis:

```
address malloc (int pool, word size)
void free (int pool, address ptr)
```

with the first argument identifying the pool (starting from zero) and the second argument specifying the minimum size of the requested chunk of memory in bytes (not in words). The allocated chunk always consists of an even number of bytes necessarily aligned at a word boundary. Its size may be bigger than requested. If malloc cannot fulfill the request, it returns NULL. A chunk allocated from a given pool must be returned to the same pool.

Function free accepts **NULL** as the second argument, in which case the operation is void.

If multiple pools are disabled, the above functions are compiled without the first argument, i.e.,

```
address malloc (word size)
void free (address ptr)
```

If the praxis consistently uses umalloc (see below) instead of malloc, if can make itself independent of the pooling issues.

The following operation:

```
word actsize (word *chunk)
```

returns the actual size of a chunk allocated by malloc.

Normally, the memory block allocated by malloc is word-aligned. Some praxes (using long integers, for example) may require such a block to be always aligned at a long-word boundary (a multiple of four bytes). This can be enforced with the following system configuration option:

```
#define MALLOC ALIGN4 1
```

The following macros (defined in *sysio.h*) are recommended for allocating/deallocating memory from the praxis (at least in those straightforward cases when a single memory pool per praxis is sufficient):



v 3.3 42 of 47

```
#define umalloc(s) malloc ([0, ]s)
#define ufree(p) free ([0, ]p)
```

The first argument of malloc is only present if MALLOC SINGLE POOL is 0.

If a malloc request is denied, i.e., the function returns NULL, the requesting process may want to suspend itself awaiting a memory release event. The following function can be used for this purpose:

```
void waitmem ([int pool, ]word state)
```

Its first argument identifies the memory pool (as for malloc, it is absent if multiple pools are disabled), and the second one specifies the state where the process wants to be resumed when some memory is returned to the pool. The following macro provides a shortcut for the standard "user" pool:

```
#define umwait(s) waitmem ([0, ]s)
```

If PicOS has been configured with **MALLOC\_STATS** set to 1, the following two additional functions become available:

```
word memfree ([int pool, ]address faults)
word maxfree ([int pool, ]address nchunks)
```

where the first argument (in both cases and if applicable) identifies a memory pool. The first function returns the total amount of memory (in words) available for allocation. If the second argument of memfree is not NULL, it is interpreted as the address at which the function will store the accumulated number of allocation failures, i.e., situations where malloc (for the indicated pool) has returned NULL because no memory was available. Note that although memory may appear to be available (based on the value returned by memfree), malloc may still fail for a much smaller requested amount, because the available memory happens to be fragmented. The second function returns the maximum size (in words) of a single memory chunk available for allocation. If nchunks is not NULL, the function will store at the indicated location the total number of chunks (which can be viewed as a measure of fragmentation).

If PicOS has been configured with MALLOC\_SAFE != 0, it will perform some rudimentary consistency tests aimed at catching multiple deallocations of the same block, or allocations of blocks not on the free list. This comes at the cost of a slightly increased processing time.

If the system has been configured with **STACK\_GUARD** != 0 (see page 27), this function becomes available to the praxis:

```
word stackfree (void)
```

which returns the number of unused stack locations (in words), i.e., the number of stack words that have never been touched by the praxis so far. While, strictly speaking, this function is not part of the memory allocator, it is rather strongly related to memory issues, so it belongs in the same set.



v 3.3 43 of 47

### 7 Power conservation tools

As of version 3.0, most of the mess related to power conservation from the previous versions has been eliminated, at least for MSP430. The necessary prerequisite for access to deep power saving modes is that the primary crystal attached to the CPU be a low-speed (watch) crystal at 32768 Hz. The high-speed-crystal option (when HIGH\_CRYSTAL\_RATE is 1) makes it difficult to do any non-trivial power savings at all; thus, this requirement isn't really a limitation.

For MSP430, if the primary crystal is in fact low-speed, the situation is very straightforward. PicOS is then compiled (by default) with the so-called **TRIPLE\_CLOCK** option, which provides for an efficient implementation of system clocks. The praxis has access to the following operations:

void powerdown (void)
void powerup (void)

These functions switch the system between the full-power and low-power modes. By default, and also after powerup, the system operates in the full-power mode. A call to powerdown selects the deepest sleep state during the periods of CPU inactivity that still makes it possible for the CPU to wake up on events. For MSP430, powerdown selects the LPM3 sleep state, where practically all the CPU components are switched off except for the basic clock (ACLK) driven by the primary crystal. If there is a secondary crystal (XTL2) connected to the chip, that crystal is disabled. External interrupts (e.g., from the RF module) are allowed to occur; however, the wakeup time (and transition to full readiness) may be slower with respect to the normal powerup mode (in which the sleep state is the most shallow).

While in the **powerdown** mode, the praxis can basically function in the same way as in **powerup**, except that the event (including timer) wakeup time may be slightly increased. All system clocks will function normally.

If the primary CPU crystal is high-speed, TRIPLE\_CLOCK is forced off and then powerdown will bring little reduction in power consumption, although it still selects the LPM3 mode for inactive CPU. In that case, the implementation of system clocks is also less efficient.

As a legacy option (and the only option available on eCOG1 at the moment), TRIPLE\_CLOCK can be disabled at compilation (also when the primary crystal is low-speed). If TRIPLE\_CLOCK is 0 and the primary crystal is low-speed, then two more operations become available to the praxis:

void clockdown (void) void clockup (void)

These functions change the rate of clock interrupts, i.e., the frequency of internal clock ticks. By default (and after clockup), the clock runs 1024 times per second. This allows the system to measure time with the granularity of slightly below 1 millisecond, and this is also the resolution of delay intervals. After clockdown, the clock slows down to 1 tick per second. Time measurement (in seconds) is still accurate, and delay operations work, except that they are rounded to the much coarser grain of 1 second.



v 3.3 44 of 47

Note that, although clockdown and clockup are formally available in all circumstances, they are only non-void when 1) the primary CPU crystal is low-speed (at 32768 Hz), and 2) the TRIPLE\_CLOCK option has been explicitly disabled at compilation. In all the remaining circumstances, the operations expand into empty statements.

Also note that clockdown (when the operation is not void) is automatically forced by powerdown (and clockup is forced by powerup). This is to make sure that when the CPU operates in low-power mode (and significant power savings are in fact possible), the clock is also slowed down to make sure that the CPU does not have to respond to too many events per time unit. This is the consequence of the different implementation of system clocks (with TRIPLE\_CLOCK disabled), which requires constant interrupts from the timer (normally occurring every millisecond).

This (legacy) mode of operation is messy and discouraged. One more legacy function available in that mode (and also discouraged) is:

```
void freeze (word nsec)
```

This operation freezes (hibernates) the system, with all devices disabled (and at the absolutely minimum expense of power) for the prescribed number of seconds. The function does not return until the specified number of seconds has elapsed. When it returns, the system continues as if the hibernation period has been completely removed from its lifetime. In particular, the second clock is not advanced during the hibernation period.

The freeze operation is only available if the **GLACIER** system option is set to 1 (in addition to **TRIPLE\_CLOCK** having been set to 0).

Note that normally, when **TRIPLE\_CLOCK** is 1, there is no more need for **freeze**. Executing long delays (page 32) or holds (page 47), with no activities in the praxis, amounts to the same thing (except that the seconds clock is advanced normally).

# 8 The watchdog

On MSP430, the praxis has access to simple watchdog operations listed below:

```
void watchdog_start ();
void watchdog_stop ()
void watchdog clear ();
```

Normally (by default) the watchdog is disabled. Once the watchdog is started (after invoking watchdog\_start) and until it is stopped (with watchdog\_stop), the praxis will have to make sure to call watchdog\_clear at least once every second. If it fails to do so, the device will automatically reset.

# 9 Selected library functions

In addition to the functions built into the kernel, some useful operations are available in the library (directory *PICOS/Libs/Lib*). They can be referenced after including the respective header files (.h). Note that the library directory is automatically searched for praxis includes. Here we only mention a few of those functions. Refer to other documents in *PICOS/Docs* for more information.

```
char *form (char *buf, const char *fmt, ...)
```



v 3.3 45 of 47

Requires form.h. This function uses the specified format string (fmt) to interpret its remaining arguments and encode them into the buffer buf. If buf is NULL, the buffer will be allocated dynamically. In both cases, its pointer is returned via the function value. The set of special codes within the format includes:

```
%d (signed integer)
%u (unsigned integer)
%x (hex 16-bit word)
%s (string)
%c (character)
```

Additionally, if the system option CODE\_LONG\_INTS is set to 1, 'd', 'u', and 'x' can be preceded by '1' to indicate a long (32-bit) operand. No field size indicators are possible.

```
int scan (const char *buf, const char *fmt, ...)
```

Requires form.h. The function scans the string in buf according to the specified format and assigns extracted values to the remaining arguments (which should be pointers to the properly-sized objects and whose expected number is determined by the number of special fields in the format). The special fields are interpreted as follows:

- %d locate the next (possibly signed) integer in the source string
- %u locate the next unsigned integer
- %x locate the next hexadecimal number
- \*s extract the next string starting from the first non-white-space character and terminating on the first white space or comma, swallowing the comma if it occurs
- %c extract the next character.

The "current" pointer to the source string is updated after each extraction. If the CODE\_LONG\_INTS option is set, the 'l' (for long) prefix is applicable to the numerical descriptors, e.g., '%ld'. The function returns the number of items that have been located and decoded from the input string.

```
bool isdigit (char c)
bool isspace (char c)
bool isxdigit (char c)
char hexcode (char c)
```

These are macros defined in *form.h*. The first three are Boolean operators, with isspace returning 1 on any white space character (blank, NL, CR, tab) and 0 on any other byte. The last macro, hexcode, returns the numerical code of a hexadecimal digit.

The following five functions (with names starting with "ser\_") are only applicable if the UART(s) has/have been configured in the io mode (see section 5.2).



v 3.3 46 of 47

```
int ser select (int port)
```

This function requires *ser.h.* It selects the UART to which the input/output operations <code>ser\_out</code>, <code>ser\_outf</code>, <code>ser\_in</code> and <code>ser\_inf</code> (described below) will be applied. By default, this is UART A. The argument can be 0 for UART A or 1 for UART B. The function returns the previous UART selection (0 or 1). When only one UART is configured into the system, the function has no effect.

```
int ser out (word state, const char *msg)
```

Requires *ser.h*. The function writes the specified message to the currently selected UART. Normally, it starts a helper process to send the message asynchronously and returns immediately with the value of zero. To avoid resource problems, the helper process spawned by <code>ser\_out</code> can only exist in at most one copy (and can only handle one outstanding request). Thus, if the process is already running (still servicing a previous request) when the function is called, the new request cannot be accepted immediately. In such a case, the function marks the current process to be awakened in the specified state as soon as the helper process terminates (i.e., the previous request is completed), and leaves the current process (executes release).

If the first byte of the message is nonzero, it is assumed to be an ASCII string terminated with a **NULL** byte. Otherwise, the message is interpreted as a binary string with the second byte specifying its length. Additionally, the message ends with byte 0x04 viewed as a sentinel. The length passed in the second byte refers to the proper message excluding the three extra bytes; thus, the complete string of bytes looks like this:

```
[0x00][length] ... length bytes ... [0x04]
```

and its total length is 1ength + 3.

```
int ser outf (word state, const char *fmt, ...)
```

Requires *ser.h.* Acts exactly as **ser\_out**, except that there is no binary mode, and the ASCII message may include arguments that will be encoded according to the specified format (as for **form**).

```
int ser in (word state, char *buf, int len)
```

Requires *ser.h.* The function reads a line from the UART and stores it in the specified buffer. The last argument limits the length of the line. Regardless of its value, the line length is hard-limited to 63 characters. If the line is not immediately available, and *state* is not **NONE**, the function blocks the caller, which will be restarted in the indicated state when it makes sense to retry the operation.

If the first character of a new line is nonzero, the line is assumed to be an ASCII string terminated by LF or CR, whichever character comes first. The terminating character is not stored. A sequence of characters with ASCII codes less than 0x20 (space) occurring at the beginning of a line is ignored. Note that this way lines can be terminated with LF, CR, LF+CR, CR+LF, and multiple consecutive end-of-line sequences are treated as one. If the line starts with a zero byte, it is assumed to be



v 3.3 47 of 47

in binary, with the second byte specifying its length, and an extra 0x04 byte appended at the end (see ser out).

The function can only return when the request has been processed. Then it returns the number of characters stored in the buffer (not counting the **NULL** byte).

```
int ser_inf (word state, const char *fmt, ...)
```

Requires *ser.h.* This function performs a formatted read and is a combination of *ser\_in* (no binary mode) and *scan*. It returns the number of items that have been located and extracted from the input line.

```
void encrypt (word *buf, int length, const lword *key)
void decrypt (word *buf, int length, const lword *key)
```

Require *encrypt.h.* The first function encrypts the contents of **buf**, **length** words long using the key pointed to by the last argument. The encryption algorithm is TEA. The key is exactly 4 long words (128 bits). When the encrypted buffer is presented to **decrypt** with same key, it will be decrypted to the original plaintext.

```
void hold (word state, lword sec)
```

Requires *hold.h*. The function implements a long delay until the node's seconds clock (the value returned by **seconds** () – see page 32) reaches the specified value. The argument must be global, i.e., its value has to survive the process's state transitions, as the function may retry at the indicated state before returning (when the specified second has been reached). Here is an illustration how the function should be called:

```
fsm some_fsm {
    lword del;
    ...
    state INIT_HOLD:
        del = 3600 + seconds ();
        ...
    state HOLD_ME:
        hold (HOLD_ME, del);
        ... the delay has elapsed ...
}
```

Note that the function returns when the delay has elapsed. Otherwise, it uses the state argument to set up internal alarm clocks (operation delay) and monitor the advancement of waiting time.

