Hacettepe University — Computer Engineering
CMP 720 EMBEDDED SYSTEMS DESIGN

Spring 2026 — Mini In-Class Project Series Part 5

Lab 5: Automated Testing & Validation

SafePulse — Embedded Patient Monitoring System

Week 6: Evaluation, Validation & Testing

Duration:	1 – 1.5 hours
Tools Required:	Renode, Robot Framework (`renode-test`), terminal, Week 2 spec
Deliverable:	Test suite mapping to Week 2 requirements, all tests passing
Prerequisites:	Completed Lab 4 (Week 5) — working Zephyr RTOS firmware

1 Overview: Closing the V-Model

This is the final lab in the SafePulse series. You will write **automated tests** that validate your firmware against the requirements you specified in Week 2. This closes the V-model: specifications on the left, implementation in the middle, and verification on the right.

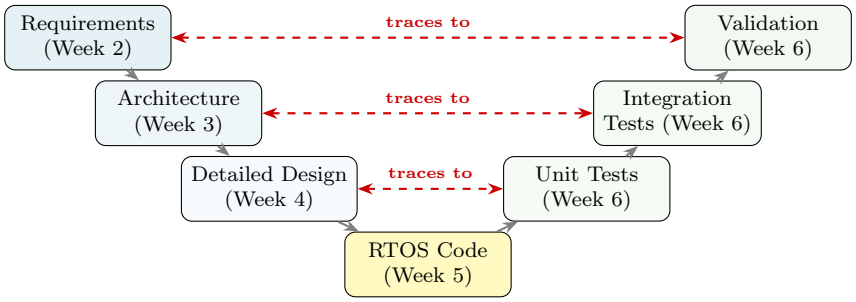

> **Why test in simulation?** Renode's Robot Framework integration lets you inject exact sensor values, control virtual time precisely, and observe GPIO state—things that are difficult or impossible on physical hardware. Every test is deterministic and reproducible: no flaky sensor noise, no timing jitter, no "works on my board" problems.

1.1 Learning Objectives

1. Write automated tests using Robot Framework that map directly to Week 2 requirements.
2. Use Renode's test infrastructure to inject sensor values and observe system behavior.
3. Test edge cases and boundary conditions (exact thresholds, fault injection).
4. Understand the relationship between requirements traceability and test coverage.
5. Reason about what *cannot* be tested in simulation vs. physical hardware.

2 Robot Framework + Renode Primer

Robot Framework is a keyword-driven test automation framework. Renode integrates with it via `renode-test`, providing keywords for controlling the simulation. For more details, see the official Renode testing documentation: renode.readthedocs.io/en/latest/introduction/testing.html. Simple example of how to use Renode together with Robot Framework to emulate and test firmware on a host PC without the target hardware: github.com/prdktntwcklr/renode-example.

2.1 Key Renode Test Keywords

Keyword	What It Does
`Execute Command`	Run a Renode monitor command (e.g., write to memory, read registers)
`Start Emulation`	Begin the simulation
`Create Terminal Tester`	Attach to a UART to watch output
`Wait For Line On Uart`	Block until a specific string appears on UART
`Reset Emulation`	Reset the entire emulation state (used between tests)

Caution: `emulation RunFor "N"` (advance virtual time by N seconds) can **only** be used when emulation is **not** running. Once you call `Start Emulation`, use `Wait For Line On Uart` with timeouts to let virtual time advance naturally.

2.2 Test File Structure

Listing 1: Robot Framework test structure for Renode

```
*** Settings ***
# The RENODEKEYWORDS variable (initialized by the renode-test script)
# contains the path to the renode-keywords.robot script
# responsible for setting up the connection with Renode.

Resource        ${RENODEKEYWORDS}
Library         String
Library         Collections
Suite Setup     Setup
Suite Teardown  Teardown
Test Setup      SafePulse Test Setup
Test Teardown   Test Teardown

*** Variables ***
${UART}         sysbus.usart2

*** Keywords ***
SafePulse Test Setup
    Reset Emulation
    Execute Command             mach create "SafePulse"
    Execute Command             machine LoadPlatformDescription @platforms/boards/
        stm32f4_discovery.repl
    Execute Command             machine LoadPlatformDescriptionFromString "vitalsSensor:
         Mocks.DummyI2CSlave @ i2c1 0x55"
    Execute Command             sysbus.cpu PerformanceInMips 168
    Execute Command             sysbus LoadELF @${CURDIR}/build/zephyr/zephyr.elf
    Execute Command             include @${CURDIR}/vitals_sensor.py
    Execute Command             logLevel -1 sysbus.usart2

Set Sensor Values
```

```
    [Documentation]             Inject specific values into the sensor model.
    [Arguments]                 ${hr}    ${spo2}    ${temp_int}    ${temp_frac}
    Execute Command             python "sensor_state['heart_rate'] = ${hr}"
    Execute Command             python "sensor_state['spo2'] = ${spo2}"
    Execute Command             python "sensor_state['temp_int'] = ${temp_int}"
    Execute Command             python "sensor_state['temp_frac'] = ${temp_frac}"

Enable Scenario
    [Documentation]             Enable the built-in deterioration scenario
    Execute Command             python "sensor_state['scenario_active'] = True"
    Execute Command             python "sensor_state['scenario_tick'] = 0"

*** Test Cases ***
# ============================================================
# TEST 1: System Boot and Sensor Detection
# Requirement: FR-07 (startup self-test)
# ============================================================
System Should Boot Successfully
    [Documentation]     Verify startup banner and sensor detection
    ${tester}=          Create Terminal Tester    ${UART}
    Set Sensor Values   72    97    36    8
    Start Emulation

    Wait For Line On Uart       SafePulse v0.5          testerId=${tester}
    Wait For Line On Uart       Sensor detected         testerId=${tester}
```

Critical naming rules:

1. **Never** name your custom keywords `Setup`, `Teardown`, `Test Teardown`, or `Create Terminal Tester`—these names are used by Renode's built-in keywords from `renode-keywords.robot`. Shadowing them causes infinite recursion or missing functionality.
2. Use `Test Setup` (not `Suite Setup`) for machine configuration so each test gets a fresh environment via `Reset Emulation`.
3. Sensor values are injected by modifying the Python `sensor_state` dictionary directly—**not** via `sysbus WriteByte`.

3 Requirements Traceability Matrix

Before writing tests, map your Week 2 requirements to test cases. Complete the matrix:

Req ID	Requirement	Test Case	Status
FR-01	Sample vitals every 200 ms	Test 2: Periodic Sampling (indirect)	
FR-02	Alarm within 100 ms when SpO2 $<$ 90%	Test 3: Critical Alarm	
FR-03	Log readings via UART at 1 Hz	Test 2: Periodic Sampling	
FR-04	Deactivate alarm on recovery	Test 5: Alarm Recovery	
FR-05	WARNING state for SpO2 90–94%	Test 4: Warning State	
FR-07	Startup self-test banner	Test 1: Boot Test	
NFR-01	*Alarm latency $\leq$ 100 ms*	*Test 3 (timing)*	

Fill in the Status column as you complete each test: PASS, FAIL, or SKIP.

4 Implementation Tasks

The provided `safepulse_tests.robot` skeleton contains 6 test cases. Tests 1–2 are complete. You must complete Tests 3–6.

4.1 Test 1: System Boot (Provided)

Purpose: Verify the firmware boots cleanly and confirms sensor presence on UART. This test is complete—verify it passes by running:

```
$ renode-test safepulse_tests.robot
```

4.2 Test 2: Periodic Vital Signs Reporting (Provided)

Test 2 verifies FR-01 and FR-03. We create a terminal tester with `defaultPauseEmulation=true`, set known sensor values, and start the emulation. The tester automatically pauses the instant a UART line matches the vitals regex pattern; we capture that line, resume emulation with a second `Start Emulation`, and capture the next matching line.

Because the Zephyr firmware prefixes every log line with a `k_uptime` timestamp in the format `[NNNN ms]`, we can extract the timestamps from both captured lines with a regular expression and verify that their difference falls within the expected 1000 ± 200 ms window (1 Hz logging in `NORMAL` state).

4.3 Test 3: Critical SpO2 Alarm (FR-02, NFR-01)

This is the most important test—it verifies the safety-critical alarm. Inject normal values first, let the system boot and stabilize, then inject a critical SpO2 value and verify the alarm fires.

Listing 2: TODO 1: Test 3: Critical SpO2 Alarm

```
# ============================================================
# TEST 3: Critical SpO2 Alarm
# Validates: FR-02, NFR-01
#
# TODO:
#       a) Start with normal values, wait for a log line to
#          confirm the system has processed the new sensor
#          values.
#       b) Pre-condition: alarm GPIO must be LOW in normal state
#       c) Inject critical SpO2
#       d) advance 500ms of virtual time (enough for one
#          200ms sensor cycle + processing, with a margin)
#       e) Assert: the GPIO alarm pin must now be HIGH
# ============================================================
Should Trigger Alarm On Critical SpO2
    [Documentation]     Verify alarm fires when SpO2 drops below 90%
    # TODO: Write this test

    Fail    Not implemented yet
```

4.4 Test 4: Warning State (FR-05)

Verify the system enters WARNING when SpO2 is in the 90–94% range.

Listing 3: TODO 2: Test 4: Warning State

```
# ============================================================
# TEST 4: Warning State Detection
# Validates: FR-05
#
# TODO: Set SpO2 to a warning-level value (90-94) and verify
#       "WARNING" appears on UART.
# ============================================================
Should Enter Warning State On Low SpO2
    [Documentation]     Verify WARNING state when SpO2 is 90-94%
    # TODO: Write this test

    Fail    Not implemented yet
```

4.5 Test 5: Alarm Recovery (FR-04)

Verify the alarm clears when vitals return to normal. This test has two phases: trigger the alarm, then inject recovery values.

Listing 4: TODO 3: Test 5: Alarm Recovery

```
# ============================================================
# TEST 5: Alarm Recovery (CHALLENGE)
# Validates: FR-04
#
# TODO: Start with critical values, wait for CRITICAL,
#       then inject normal values and wait for NORMAL.
# ============================================================
Should Clear Alarm On Recovery
    [Documentation]     Verify alarm clears when vitals return to normal
    # TODO: Write this test

    Fail    Not implemented yet
```

4.6 Test 6: Boundary Condition (Write From Scratch)

Write a complete test that validates the behavior at the exact SpO2 = 90% boundary. Refer to your Week 2 state machine design: does SpO2 = 90% trigger CRITICAL or WARNING? Your test should verify *your* design decision.

Listing 5: TODO 4: Test 6: Boundary Condition

```
# ============================================================
# TEST 6: Edge Case - SpO2 at Exact Threshold
# Validates: Boundary behavior at SpO2 = 90%
#
# TODO: SpO2 = 90 should be WARNING (code uses < 90 for CRITICAL).
#       SpO2 = 89 should trigger CRITICAL. Test both.
# ============================================================
Should Handle SpO2 At Threshold Boundary
```

```
[Documentation]     Test behavior at exact SpO2 = 90% boundary
# TODO: Write this test

Fail    Not implemented yet
```

5 Bonus Tests (If Time Permits)

If you finish early, write tests for these additional scenarios:

Test 7: High Temperature Alert. Set SpO2 normal (97%) but temperature critical (40.5°C). Verify CRITICAL state triggers from temperature alone.

Test 8: Full Deterioration Scenario. Enable the built-in scenario and verify the complete sequence: NORMAL → CRITICAL → WARNING → NORMAL. Note that recovery passes through WARNING before reaching NORMAL.

6 Reflection Questions

Q1: Look at your requirements traceability matrix. Are there any requirements from Week 2 that are **not** covered by your test suite? Could they be tested in simulation, or do they require physical hardware?

[Your answer]

Q2: Your tests use `Wait For Line On Uart` with a timeout. What does it mean if a test passes with 0.5 s to spare vs. 4.9 s to spare (out of 5 s timeout)? Does a "pass" always mean the system is working correctly?

[Your answer]

Q3: If you were to ship SafePulse as a real medical device under IEC 62304, what additional testing would be required beyond what you did today?

[Your answer]

7 Series Wrap-Up

Congratulations—you have completed the full SafePulse development lifecycle:

Week	Phase	What You Built
2	Specification	Requirements table, state machine, block diagram
3	Platform Bring-Up	UART, GPIO, first Renode simulation
4	Driver & Timing	Timer ISR, sensor driver, 100 ms alarm deadline
5	RTOS Migration	Multi-task Zephyr system, priority inversion experiment
6	Validation	Automated test suite mapped to Week 2 requirements

The professional takeaway: You experienced—in miniature—the complete development process for a safety-critical embedded system: specify before you code, design before you implement, test against your specification, and understand that scheduling and priority decisions are not "just software"—they are safety decisions with life-or-death consequences.