
03 Clean and prepare the blue base

USE THESE PARTS

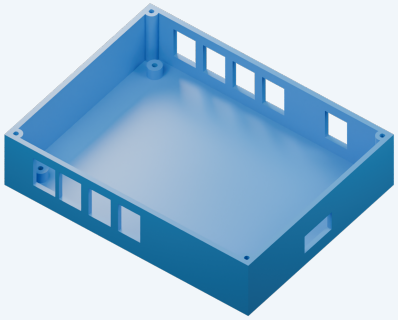


1 × base

Remove supports and strings. Try the empty lid; it must seat without screws pulling it flat.

A: four PCB posts. B: four lid towers. Tap their pilots only after the coupon passes.

CHECK

Pilots clear. Floor and lid flat.

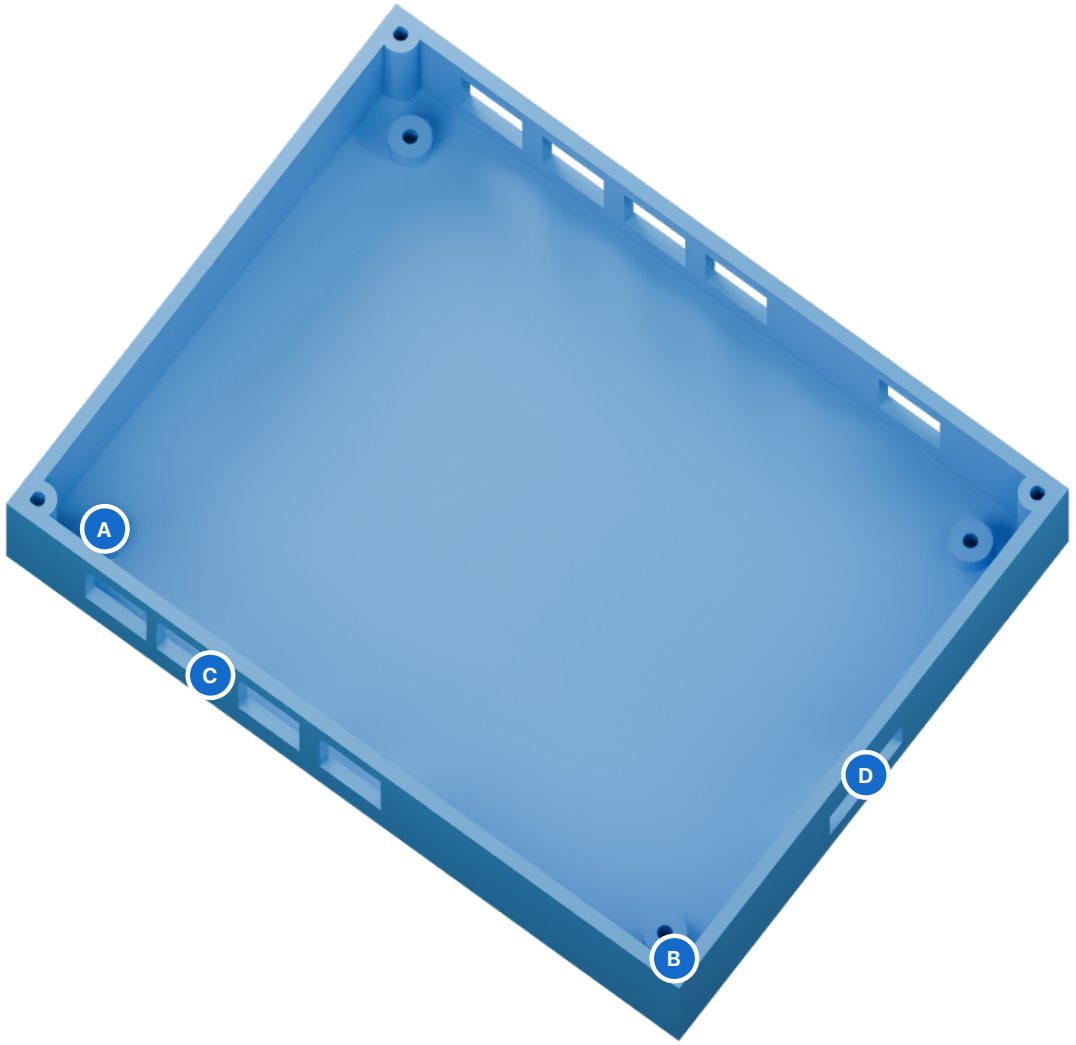

C: DI wire openings D: USB service opening