07 Attach the orange blank to the lid

ADD THESE PARTS

1 × lid + 1 × blank



2 ×
M2.5 × 8




2 ×
M2.5 washer



2 ×
M2.5 nut

Screw → blank → lid → washer → nut.

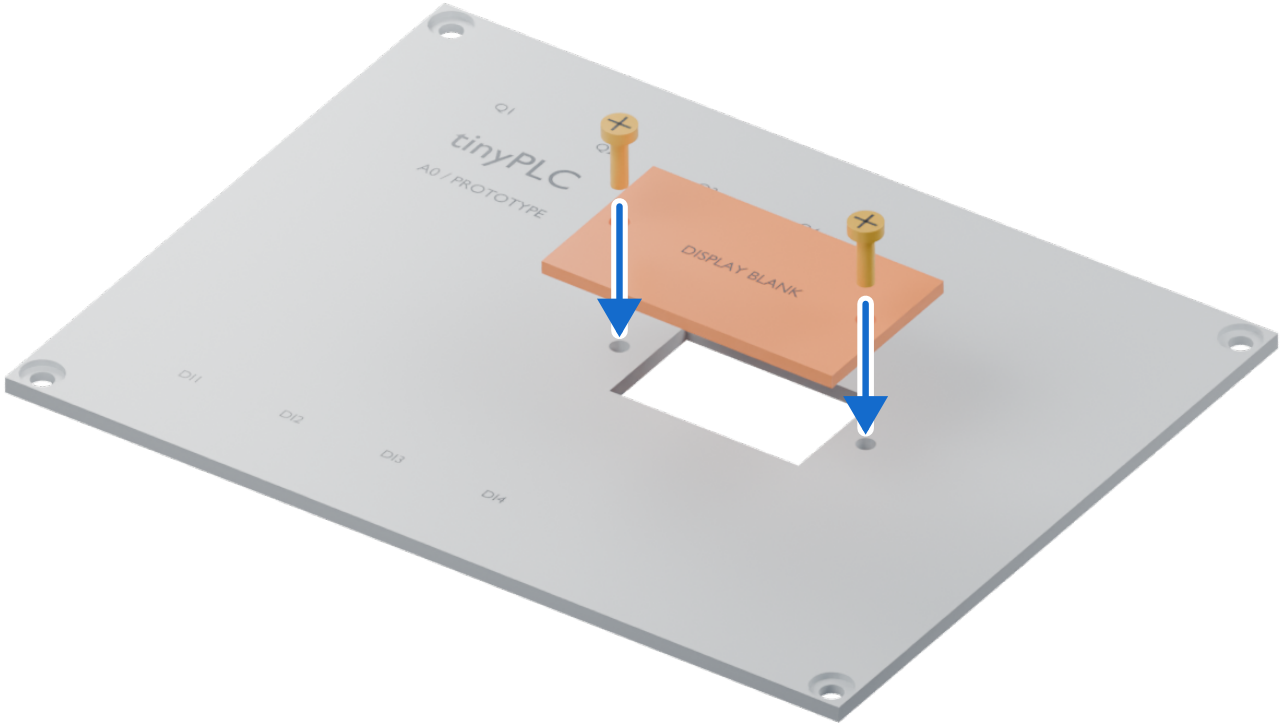

CHECK
Blank covers the entire opening.

Washers and nuts go underneath: see the detail on the next page.