09 Inspect the open assembly and wiring

CHECK BEFORE CLOSING

A All 4 board screws seated.


B DI1–DI4 at the front.

C Q1–Q4 at the rear.

D 24 V supply connector.

E USB service opening.

Use schematic pin numbers for polarity, never this picture alone.

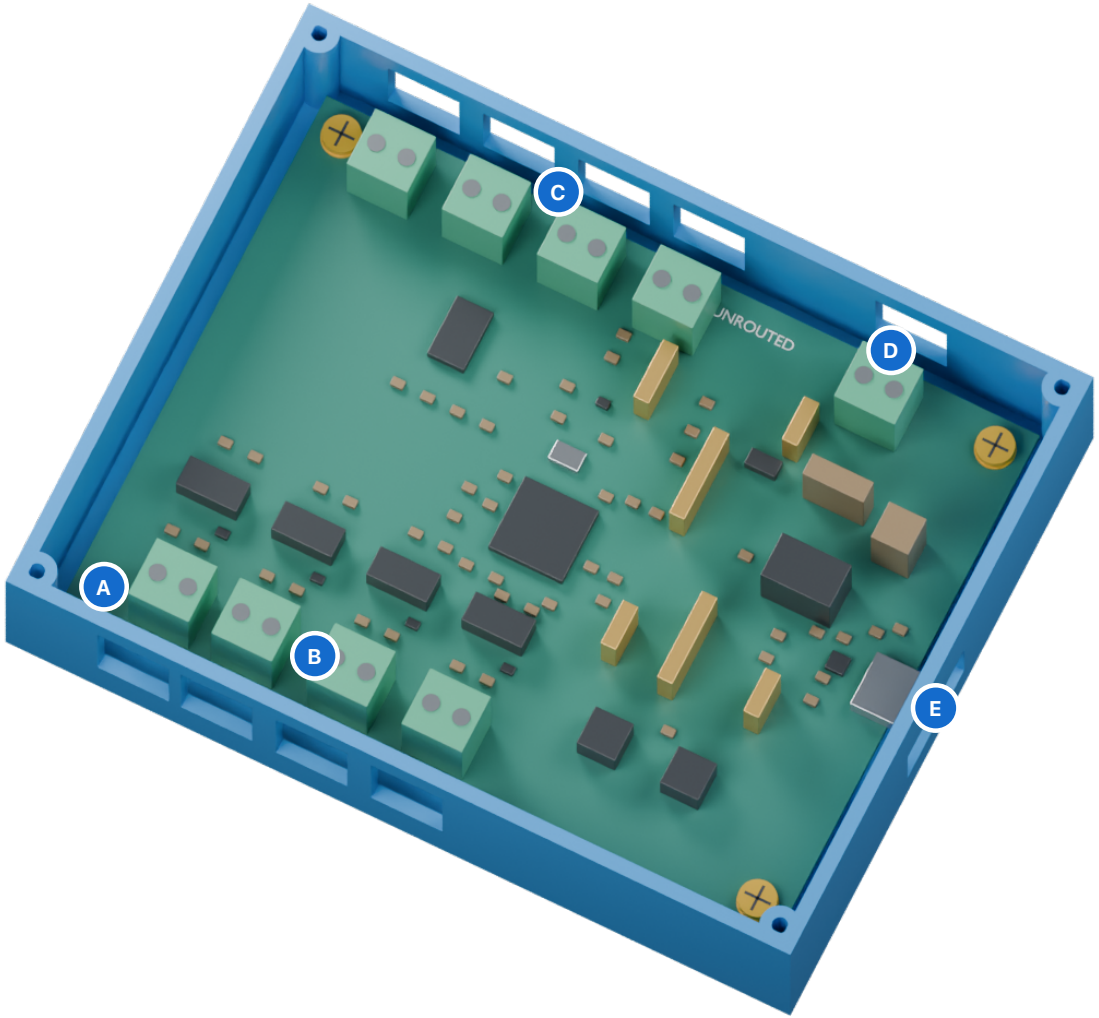

CHECK

No loose hardware or clipped leads.