11 Fit the four lid screws

ADD THESE PARTS




4 ×

M3 × 8

Start all four screws by hand. Seat them lightly in the illustrated order: 1 → 2 → 3 → 4.

Heads must fit the counterbores. Stop if a screw bottoms out or the plastic starts to distort.

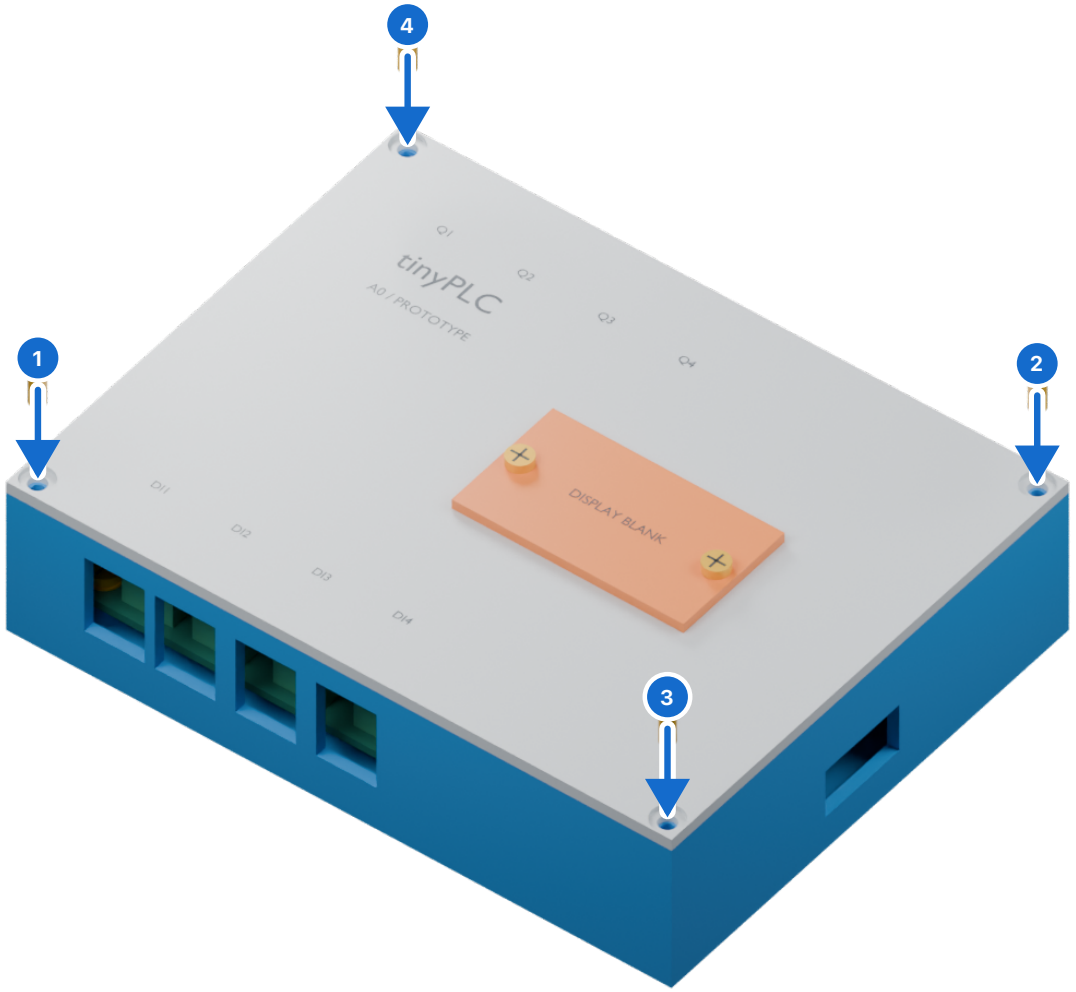

CHECK

Even seam; no forced lid bending.