
07 Mount the OLED beneath the lid.

PARTS / TOOLS

1 Adafruit 326 QT. 4 × M2 × 6 screws + washers.

Glass faces the lid window. Posts touch the module PCB, not the glass. Screws enter from the module rear. Check the received board revision and narrow glass clearance.

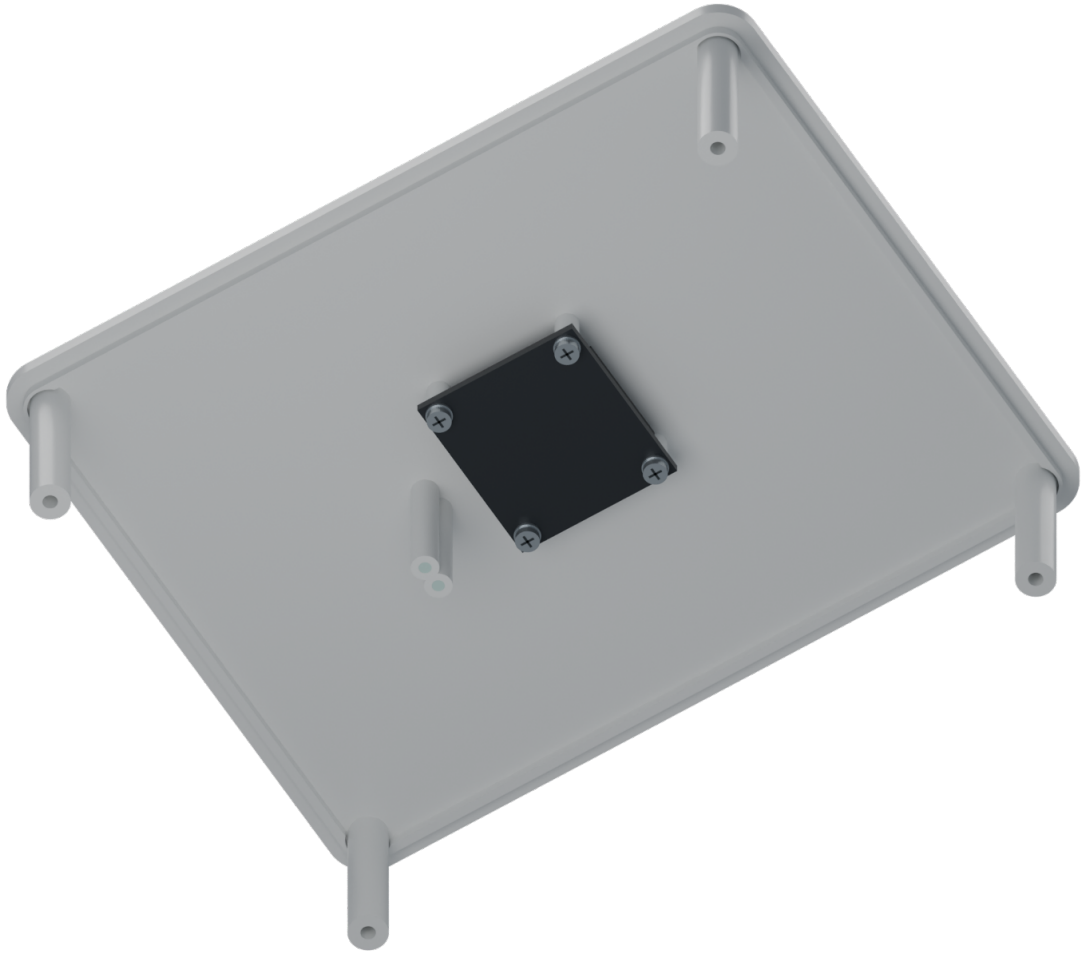

CHECK / No glass/flex clamping; module flat, lens aligned and screws retained.