


- <Note>**
1. When equipping CRT, do not let two leads to PCB-SW caught in SIDE-FRAME-L/R. Do not let the ROT coil lead caught in the spacer of the frame.
 2. When equipping CRT, fix with nuts with the CRT surface tilted down. Then, tighten firstly two top corners and secondly two bottom corners with nuts. Also, do not fix CRT with nuts with the CRT unstable.
 3. When equipping FRONT-PANEL, do not let the leads of ASSY PCB-MAIN in the CRT and FRONT-PANEL.
 4. When equipping FRONT-PANEL, fix firstly top corners and secondly bottom corners with screws.

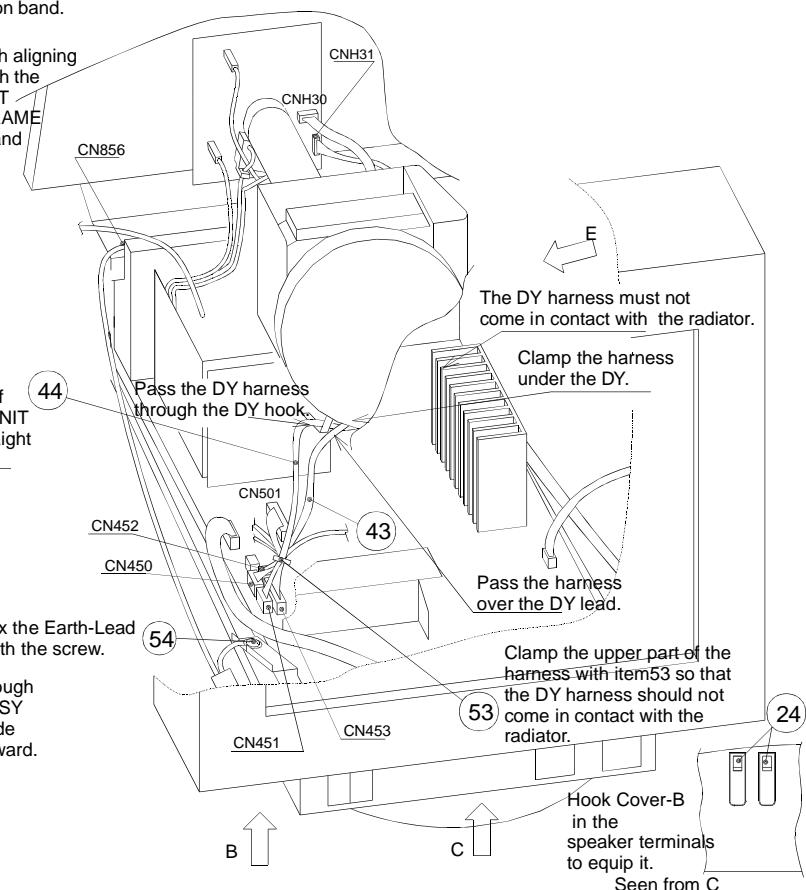

CONFIDENTIAL

T966 (MA-21D5) ASSY SET CHASSIS Drawing