AVR Microcontroller

Microprocessor Course

Chapter 9

AVR TIMER PROGRAMMING IN

ASSEMBLY AND C

Bahman 1397 (ver 1.2)

Many applications need to count an event or generate time delays. So, there are counter registers in microcontrollers for this purpose.

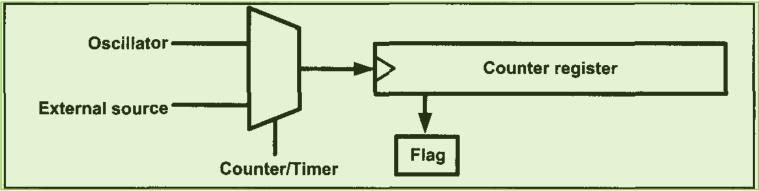


Figure 9-1. A General View of Counters and Timers in Microcontrollers

In the microcontrollers, there is a flag for each of the counters. The flag is set when the counter overflows, and it is cleared by software.

HOW TO GENERATE DELAYS

So, one way to generate a time delay is to clear the counter at the start time and wait until the counter reaches a certain number.

The second method to generate a time delay is to load the counter register and wait until the counter overflows and the flag is set.

The AVR has one to six timers depending on the family member. They are referred to as Timers 0, 1, 2, 3, 4 and 5. They can be used as timers to generate a time delay or as counters to count events happening outside the microcontroller.

Counter/Timer

In the AVR some of the timers/counters are 8-bit and some are 16-bit.

In ATmega32, there are three timers: Timer0, Timer1, and Timer2.

Timer0 and Timer2 are 8-bit, while Timer1 is 16-bit.

Internal Clock

Timer: If we use the internal clock source, then the frequency of the crystal oscillator is fed into the timer. Therefore, it is used for time delay generation and consequently is called a timer.

External Clock

Counter: By choosing the external clock option, we feed pulses through one of the AVR's pins. This is called a counter.

9.1 PROGRAMMING TIMERS 0,1 AND 2

Basic registers of timers

For each of the timers, there is a TCNTn (timer/counter) register. The TCNTn register is a counter. Upon reset, the TCNTn contains zero.

Each timer has a TOVn (Timer Overflow) flag, as well. When a timer overflows, its TOVn flag will be set.

Each timer also has the TCCRn (timer/counter control register) register - for setting modes of operation.

Each timer also has an OCRn (Output Compare Register) register. The content of the OCRn is compared with the content of the TCNTn. When they are equal the OCFn (Output Compare Flag) flag will be set. mashhoun@iust.ac.ir fran Univ of Science & Tech

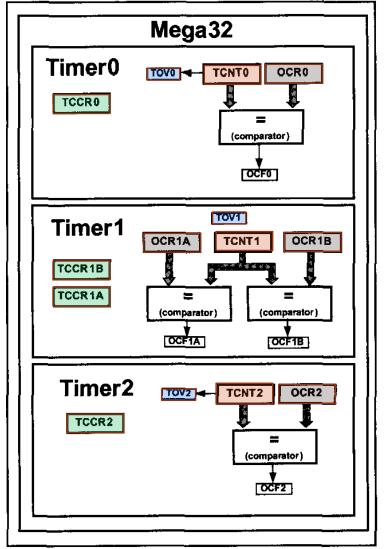



Figure 9-2. Timers in ATmega32

The timer registers are located in the I/O register memory.


Therefore, you can read or write from timer registers using IN and OUT instructions, like the other I/O registers. For example, the following instructions load TCNT0 with 25:

```
LDI R20,25 ;R20 = 25
OUT TCNT0,R20 ;TCNT0 = R20
```


The internal structure of the ATmega32 timer0 is shown in followingFigure.

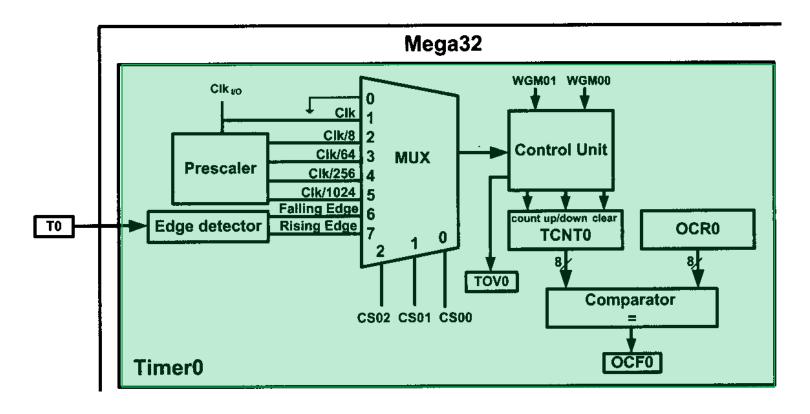

The internal structure of the ATmega32 timer1 is shown in Figure 9-3.

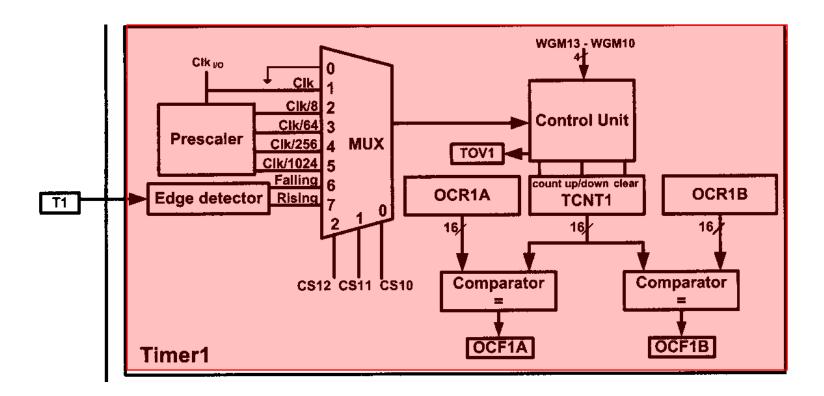

The internal structure of the ATmega32 timer2 is shown in Figure 9-3.

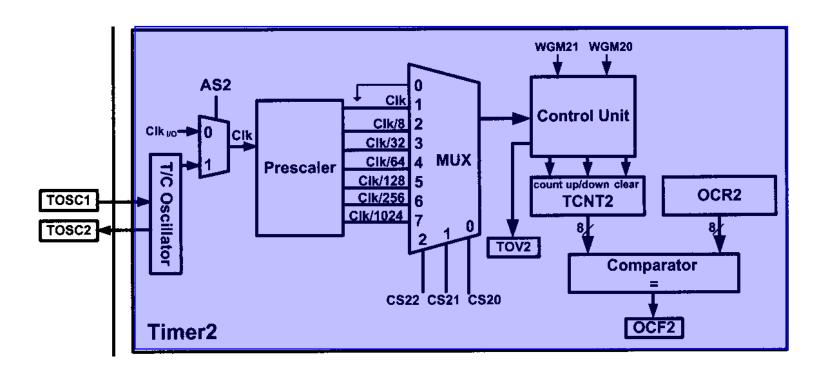

9.1 PROGRAMMING TIMERS 0,1 AND 2

TCCR0 (Timer/Counter Control Register)

| | _ | | | | | · · · · · · · · · · · · · · · · · · · | | | | |
|--|--------------|---------|---------|-------------|------------|---------------------------------------|-------------|------------|---------|--|
| Bit | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | | |
| | FOC0 | WGM00 | COM01 | COM00 | WGM01 | CS02 | CS01 | CS00 | | |
| Read/Write Initial Value | W | RW 0 | RW 0 | W O | RW 0 | RW 0 | RW 0 | RW 0 | | |
| FOC0 | D7 | | | | | | | h can be u | sed | |
| while generating a wave. Writing 1 to it causes the wave | | | | | | | | | | |
| generator to act as if a compare match had occurred. | | | | | | | | | | |
| WGM00, WGM01 | | | | | | | | | | |
| D6 D3 Timer0 mode selector bits | | | | | | | | | | |
| 0 0 Normal | | | | | | | | | | |
| 0 1 CTC (Clear Timer on Compare Match) | | | | | | | | | | |
| 2 0 PWM, phase correct | | | | | | | | | | |
| 1 1 Fast PWM | | | | | | | | | | |
| | | | | | | | | | | |
| COM01:00 D5 D4 Compare Output Mode: | | | | | | | | | | |
| | | | These | bits contro | ol the way | veform ge | enerator (s | see Chapte | er 15). | |
| | | | | | | | | _ | | |

9.1 PROGRAMMING TIMERS 0,1 AND 2

TCCR0 (Timer/Counter Control Register) register

| CS02:00 | D2 | D1 | D0 | Timer0 clock selector |
|---------|----|----|----|---|
| | 0 | 0 | 0 | No clock source (Timer/Counter stopped) |
| | 0 | 0 | 1 | clk (No Prescaling) |
| | 0 | 1 | 0 | clk / 8 |
| | 0 | 1 | 1 | clk / 64 |
| | 1 | 0 | 0 | clk / 256 |
| | 1 | 0 | 1 | clk / 1024 |
| | 1 | 1 | 0 | External clock source on T0 pin. Clock on falling edge. |
| | 1 | 1 | 1 | External clock source on T0 pin. Clock on rising edge. |

Figure 9-5. TCCR0 (Timer/Counter Control Register) Register

9.1 PROGRAMMING TIMERS 0,1 AND 2

Table 40 shows the COM01:0 bit functionality when the WGM01:0 bits are set to fast PWM mode.

Table 40. Compare Output Mode, Fast PWM Mode(1)

| COM01 | COM00 | Description |
|-------|-------|---|
| 0 | 0 | Normal port operation, OC0 disconnected. |
| 0 | 1 | Reserved |
| 1 | 0 | Clear OC0 on compare match, set OC0 at BOTTOM, (nin-inverting mode) |
| 1 | 1 | Set OC0 on compare match, clear OC0 at BOTTOM, (inverting mode) |

Table 41 shows the COM01:0 bit functionality when the WGM01:0 bits are set to phase correct PWM mode.

Table 41. Compare Output Mode, Phase Correct PWM Mode⁽¹⁾

| COM01 | COM00 | Description |
|-------|-------|--|
| 0 | 0 | Normal port operation, OC0 disconnected. |
| 0 | 1 | Reserved |
| 1 | 0 | Clear OC0 on compare match when up-counting. Set OC0 on compare match when downcounting. |
| 1 | 1 | Set OC0 on compare match when up-counting. Clear OC0 on compare match when downcounting. |

9.1 PROGRAMMING TIMERS 0,1 AND 2

TIFR (Timer/counter Interrupt Flag Register) register

The TIFR register contains the flags of different timers.

| Bit | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | | | |
|----------------------------------|--|----------------------|-----------|----------|------------|----------|----------|----------|--|--|--|
| ĺ | OCF2 | TOV2 | ICF1 | OCF1A | OCF1B | TOV1 | OCF0 | TOV0 | | | |
| Read/Write Initial Value | R/W 0 | R/W 0 | R/W 0 | R/W 0 | R/W 0 | R/W 0 | R/W 0 | R/W 0 | | | |
| TOV0 D0 Timer0 overflow flag bit | | | | | | | | | | | |
| | 0 = Timer0 did not overflow. | | | | | | | | | | |
| | 1 = Timer0 has overflowed (going from \$FF to \$00). | | | | | | | | | | |
| OCF0 | D1 | Time | r0 output | compare | flag bit | | | | | | |
| | 0 = compare match did not occur. | | | | | | | | | | |
| 1 = compare match occurred. | | | | | | | | | | | |
| TOV1 | D2 Timer1 overflow flag bit | | | | | | | | | | |
| OCF1B | D3 Timer1 output compare B match flag | | | | | | | | | | |
| OCF1A | D4 Timer1 output compare A match flag | | | | | | | | | | |
| ICF1 | D5 Input Capture flag | | | | | | | | | | |
| TOV2 | D6 | Timer2 overflow flag | | | | | | | | | |
| OCF2 | D7 | | | compare: | match flas | <u>y</u> | | | | | |

9.1 PROGRAMMING TIMERS 0,1 AND 2

TOV0 (Timer0 Overflow)

when the timer rolls over from \$FF to 00, the TOV0 flag is set to 1 and it remains set until the software clears it.

The strange thing about this flag is that in order to clear it we need to write 1 to it.

```
LDI R20,0x01
OUT TIFR,R20 ;TIFR = 0b00000001
```

Normal mode

In this mode, the content of the timer/counter increments with each clock. It counts up until it reaches its max of 0xFF. When it rolls over from 0xFF to 0x00, it sets high a flag bit called TOV0 (Timer Overflow). This timer flag can be monitored.

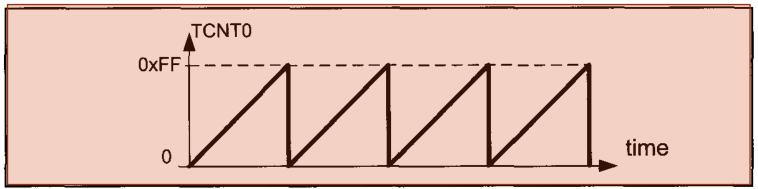


Figure 9-7. Timer/Counter 0 Normal Mode

9.1 PROGRAMMING TIMERS 0,1 AND 2

Steps to program Timer0 in Normal mode

To generate a time delay using Timer0 in Normal mode, the following steps are taken:

- 1. Load the TCNT0 register with the initial count value.
- Load the value into the TCCR0 register, indicating which mode (8-bit or 16-bit) is to be used and the prescaler option. When you select the clock source, the timer/counter starts to count, and each tick causes the content of the timer/counter to increment by 1.
- Keep monitoring the timer overflow flag (TOV0) to see if it is raised. Get out of the loop when TOV0 becomes high.
- 4. Stop the timer by disconnecting the clock source, using the following instructions:

```
LDI R20,0x00
OUT TCCR0,R20 ;timer stopped, mode=Normal
```

- 5. Clear the TOV0 flag for the next round.
- 6. Go back to Step 1 to load TCNTO again.

9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-3

In the following program, we are creating a square wave of 50% duty cycle (with equal portions high and low) on the PORTB.5 bit. Timer0 is used to generate the time delay. Analyze the program.

```
.INCLUDE "M32DEF.INC"
                                           ; set up stack
      . MACRO
              INITSTACK
                     R20, HIGH (RAMEND)
              LDI
 4
                      SPH,R20
              OUT
              LDT
                   R20, LOW (RAMEND)
                      SPL,R20
              OUT
      . ENDMACRO
              INITSTACK
                      R16,1<<5
                                       ;R16 = 0x20 (0010 0000 for PB5)
              LDI
10
              SBI
                      DDRB,5
                                       ; PB5 as an output
11
                      R17,0
              LDI
12
                     PORTB, R17
                                       :clear PORTB
              OUT
13
     BEGIN: RCALL
                                       ; call timer delay
                      DELAY
                                       ;toggle D5 of R17 by Ex-Oring with 1
14
              EOR
                      R17, R16
15
                      PORTB, R17
                                       toggle PB5
              TUO
16
              RJMP
                      BEGIN
```

9.1 PROGRAMMING TIMERS 0,1 AND 2

```
18
                                    -TimeO delay
                                        :R20 = OxF2
19
     DELAY:
                      R20,0xF2
              LDI
                      TCNTO, R20
                                        ; load timer
20
              OUT
21
                      R20,0x01
              LDI
22
                      TCCR0,R20
                                        ;TimerO, Normal mode, int clk, no prescaler
              OUT
23
                      R20, TIFR
     AGAIN:
                                        :read TIFR
              IN
                                        ; if TOVO is set skip next instruction
24
              SBRS
                      R20, TOVO
25
              RJMP
                      AGAIN
26
                      R20,0x0
              LDI
27
                      TCCR0,R20
                                        ;stop Timer()
              OUT
                      R20, (1<<TOV0)
28
              LDI
29
                                        ; clear TOVO flag by writing a 1 to TIER
                      TIFR,R20
              OUT
30
              RET
```


Solution:

In the above program notice the following steps:

- 1. 0xF2 is loaded into TCNT0.
- 2. TCCR0 is loaded and Timer0 is started.

Solution:

- 3. Timer0 counts up with the passing of each clock, which is provided by the crystal oscillator. As the timer counts up, it goes through the states of F3, F4, F5, F6, F7, F8, F9, FA, FB, and so on until it reaches 0xFF. One more clock rolls it to 0, raising the Timer0 flag (TOV0 = 1). At that point, the "SBRS R20, TOV0" instruction bypasses the "RJMP AGAIN" instruction.
- 4. Timer0 is stopped.
- 5. The TOVO flag is cleared.

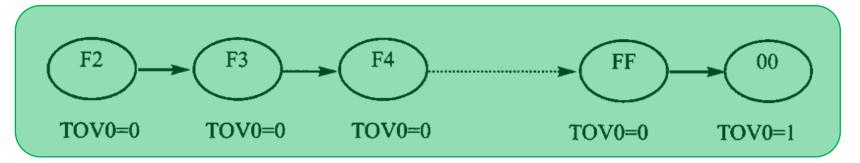

9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-4

In Example 9-3, calculate the amount of time delay generated by the timer. Assume that XTAL = 8 MHz.

Solution:

We have 8 MHz as the timer frequency. As a result, each clock has a period of $T = 1/8 \text{ MHz} = 0.125 \text{ }\mu\text{s}.$

In other words, Timer0 counts up each 0.125 its resulting in delay = number of counts x 0.125 μ s.

The number of counts for the rollover is 0xFF-0xF2=0x0D (13 decimal). However, we add one to 13 because of the extra clock needed when it rolls over from FF to 0 and raises the TOV0 flag. This gives $14 \times 0.125 = 1.75 \,\mu s$ for half the pulse.

9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-5

In Example 9-3, calculate the frequency of the square wave generated on pin PORTB.5. Assume that XTAL — 8 MHz.

Solution:

To get a more accurate timing, we need to add clock cycles due to the instructions.

| 2 | | | | | | CYCLES |
|---------|--------|-------|--|--|---|--------|
| 3 | | LDI | R16,0x20 | | | |
| 4 | | SBI | DDRB,5 | | | |
| 3 4 5 6 | | LDI | R17,0 | | | |
| | | OUT | PORTB, R17 | | | |
| 7 | BEGIN: | RCALL | DELAY | | | 3 |
| 8 | | EOR | R17, R16 | | | 1 |
| 9 | | OUT | PORTB, R17 | | | 1 |
| 10 | | RJMP | BEGIN | | | 2 |
| 11 | | | | | | |
| 12 | DELAY: | LDI | R20,0xF2 | | | 1 |
| 13 | | OUT | TCNTO, R20 | | | 1 |
| 14 | | LDI | R20,0x01 | | | 1 |
| 15 | | OUT | TCCRO, R20 | | | 1 |
| 16 | AGAIN: | IN | R20, TIFR | | | 1 |
| 17 | | SERS | R20,0 | | 1 | 12 |
| 18 | | RJMP | AGAIN | | | 2 |
| 19 | | LDI | R20,0x0 | | | 1 |
| 20 | | OUT | TCCRO, R20 | | | 1 |
| 21 | | LDI | R20,0x01 | | | 1 |
| 22 | | OUT | TIFR,R20 | | | 1 |
| 23 | | RET | LONG TO STATE OF THE STATE OF T | | | 4 |

 $T = 2 \times (14 + 24) \times 0.125 \mu s = 9.5 \mu s \text{ and } F = 1 / T = 105.263 \text{ kHz}.$

9.1 PROGRAMMING TIMERS 0,1 AND 2

(a) in hex

(FF - XX + 1) \times 0.125 μ s where XX is the TCNT0, initial value. Notice that XX value is in hex.

(b) in decimal

Convert XX value of the TCNTO register to decimal to get a NNN decimal number, then (256 - NNN) \times 0.125 μs

Figure 9-8. Timer Delay Calculation for XTAL = 8 MHz with No Prescaler

9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-6

Find the delay generated by Timer0 in the following code, using both of the methods of Figure 9-8. Do not include the overhead due to instructions. (XTAL = 8 MHz)

```
.INCLUDE "M32DEF.INC"
               INITSTACK
                                             ;add its definition from Example 9-3
                       R16,0x20
 3
               LDI
               SBI
                       DDRB, 5
                                             ; PB5 as an output
 5
                       R17,0
               LDI
                       PORTB, R17
 6
               OUT
      BEGIN: RCALL
                       DELAY
 8
               EOR
                       R17, R16
                                             ;toggle D5 of R17
                                             :toggle PB5
 9
               OUT
                       PORTS, R17
10
               RJMP
                        BEGIN
11
12
      DELAY:
              LDI
                       R20,0x003E
13
               OUT
                       TCNTO, R20
                                             :load timer°
14
               LDI
                       R20,0x01
                       TCCRO, R20
                                             ;TimerO, Normal mode, int clk, no prescaler
15
               OUT
                       R20, TIFR
16
      AGAIN:
               IN
                                             :read TIFR
17
               SBRS
                       R20, TOVO
                                             ; if TOVO is set skip next instruction
18
               RJMP
                       AGAIN
                       R20,0x00
19
               LDI
20
                       TCCRO, R20
                                             ;stop Timer°
               OUT
21
               LDI
                       R20, (1<<TOV0)
                                             :R20 = 0x01
22
               OUT
                       TIFR, R20
                                             ; clear TOVO flag
23
               RET
```

24

9.1 PROGRAMMING TIMERS 0,1 AND 2

Solution:

- (a) (FF 3E + 1) = 0xC2 = 194 in decimal and $194 \times 0.125 \mu s = 24.25 \mu s$.
- Because TCNT0 = 0x3E = 62 (in decimal) we have 256 62 = 194. This means that the timer counts from 0x3E to 0xFF. This plus rolling over to 0 goes through a total of 194 clock cycles, where each clock is $0.125~\mu s$ in duration. Therefore, we have $194~x~0.125~\mu s = 24.25~\mu s$ as the width of the pulse.

9.1 PROGRAMMING TIMERS 0,1 AND 2

Finding values to be loaded into the timer

Assuming that we know the amount of timer delay we need, the question is how to find the values needed for the TCNT0 register. To calculate the values to be loaded into the TCNT0 registers, we can use the following steps:

- 1. Calculate the period of the timer clock using the following formula: Tclock = 1/FTimer
 - where FTimer is the frequency of the clock used for the timer. For example, in no prescaler mode, Ftimer=FOscillator. Tclock gives the period at which the timer increments.
- 2. Divide the desired time delay by Tclock. This says how many clocks we need.
- 3. Perform 256 n, where n is the decimal value we got in Step 2.
- 4. Convert the result of Step 3 to hex, where xx is the initial hex value to be loaded into the timer's register.
- 5. Set TCNT0 = xx.

9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-7

Assuming that XTAL = 8 MHz, write a program to generate a square wave with a period of 12.5 μ s on pin PORTB.3.

Solution:

For a square wave with $T=12.5~\mu s$ we must have a time delay of 6.25 μs . Because XTAL = 8 MHz, the counter counts up every 0.125 μs . This means that we need 6.25 μs / 0.125 us = 50 clocks. 256 - 50 = 206 = 0xCE. Therefore, we have TCNT0 = 0xCE.

9.1 PROGRAMMING TIMERS 0,1 AND 2

```
.INCLUDE "M32DEF.INC"
               INITSTACK
                                             ;add its definition from Example 9-3
 3
               LDI
                       R16,0x08
               SBI
                        DDRB, 3
                                             ; PB3 as an output
 5
               LDI
                       R17,0
 6
               OUT
                        PORTB, R17
      BEGIN: RCALL
                        DELAY
 8
               EOR
                       R17, R16
                                             ;toggle D3 of R17
 9
                                             ;toggle PB3
               OUT
                        PORTB, R17
10
               RJMP
                        BEGIN
11
                      -----TimerO Delay
12
      DELAY:
               LDI
                       R20, 0xCE
13
               OUT
                       TCNTO, R20
14
               LDI
                       R20,0x01
15
               OUT
                       TCCRO, R20
16
                       R20, TIFR
      AGAIN:
               IN
17
                       R20, TOVO
               SBRS
18
               RJMP.
                       AGAIN
19
                       R20,0x00
               LDI
                       TCCRO, R20
20
               OUT
21
                       R20, (1<<TOV0)
               LDI
22
                       TIFR, R20
               OUT
                                             :clear
23
               RET
```

9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-8

Assuming that XTAL = 8 MHz, modify the program in Example 9-7 to generate a square wave of 16 kHz frequency on pin PORTB.3.

Solution:

Look at the following steps.

- (a) $T = 1 / F = 1 / 16 \text{ kHz} = 62.5 \mu \text{s}$ the period of the square wave.
- (b) 1/2 of it for the high and low portions of the pulse is $31.25 \mu s$.
- (c) $31.25 \,\mu\text{s} / 0.125 \,\mu\text{s} = 250 \,\text{and} \, 256 250 = 6$, which in hex is 0x06.
- (d) TCNT0 = 0x06.

9.1 PROGRAMMING TIMERS 0,1 AND 2

Using the Windows calculator to find TCNT0

The calculator in Windows is a handy tool to find the TCNT0 value. Assume that we would like to find the TCNT0 value for a time delay that uses 135 clocks of $0.125~\mu s$. The following steps show the calculation:

- 1. Bring up the scientific calculator in MS Windows and select decimal.
- 2. Enter 135.
- 3. Select hex. This converts 135 to hex, which is 0x87.
- 4. Select +/- to give -135 decimal (0x79).
- 5. The lowest two digits (79) of this hex value are for TCNT0. We ignore all the Fs on the left because our number is 8-bit data.


9.1 PROGRAMMING TIMERS 0,1 AND 2

Prescaler and generating a large time delay

As we have seen in the examples so far, the size of the time delay depends on two factors,

- (a) the crystal frequency, and
- (b) the timer's 8-bit register.

Both of these factors are beyond the control of the AVR programmer.

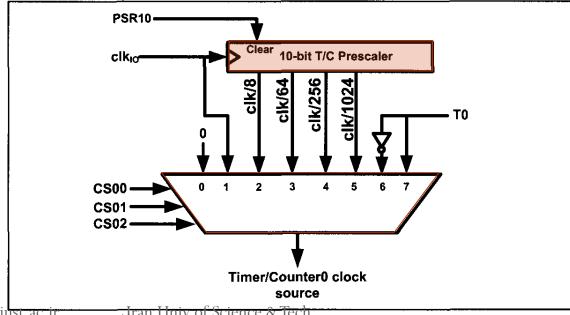

mashhoun@iust ac iigure 9-9. Timer/Counter 0 Prescaler

9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-9

Modify TCNT0 in Example 9-7 to get the largest time delay possible. Find the delay in ms. In your calculation, exclude the overhead due to the instructions in the loop.

Solution:

To get the largest delay we make TCNT0 zero. This will count up from 00 to 0xFF and then roll over to zero.

Making TCNT0 zero means that the timer will count from 00 to 0xFF, and then will roll over to raise the TCNT0 flag. As a result, it goes through a total of 256 states. Therefore, we have delay = (256 - 0) x 0.125 μs = 32 μs . That gives us the smallest frequency of 1 / (2 x 32 μs) - 1 / (64 μs) = 15.625 kHz.

9.1 PROGRAMMING TIMERS 0,1 AND 2

```
.INCLUDE "M32DEF.INC"
 2
                                       ;add its definition from Example 9-3
              INITSTACK
 3
               LDI
                      R16,0x08
 4
                      DDRB, 3
               SBI
                                       :PB3 as an output
 5
                      R17,0
              LDI
                      PORTB, RI7
              OUT
      BEGIN: RCALL
                       DELAY
 8
                      R17, R16
                                       ;toggle D3 of RI7
              EOR
                      PORTB, R17
                                       ;toggle PB3
 9
              OUT
10
              RJMP.
                       BEGIN
11
                         ---- TimerO DELAY
12
                      R20,0x00
13
      DELAY:
              LDI
              OUT
                      TCNTO, R20
                                       :load TimerO with zero
14
                      R20,0x01
15
               LDI
                      TCCRO, R20
                                       ;TimerO, Normal mode, int cik, no prescaler
16
              OUT
17
                      R20, TIFR
                                       :read TIFR
      AGAIN:
              IN
                      R20, TOVO
                                       ;if TOVO is set skip next instruction
18
              SERS
19
              RJMP
                       AGAIN
20
              LDI
                      R20,0x00
              OUT
                      TCCRO, R20
                                        ;stop Timer0
21
              LDI
                      R20, (1<<TOV0)
22
                      TIFR, R20
                                       ;clear TOVO flag
23
              OUT
24
              RET
```

We saw in Example 9-9 that the largest time delay is achieved by making TCNT0 zero. What if that is not enough?

We can use the prescaler option in the TCCR0 register to increase the delay by reducing the period. The prescaler option of TCCR allows us to divide the instruction clock by a factor of 8 to 1024 as was shown in Figure 9-5. The prescaler of Timer/Counter0 is shown in Figure 9-9.

Example 9-10


Find the timer's clock frequency and its period for various AVR-based systems, with the following crystal frequencies. Assume that a prescaler of 1:64 is used.

(a) 8 MHz

(b) 16 MHz

(c) 10 MHz

Solution:

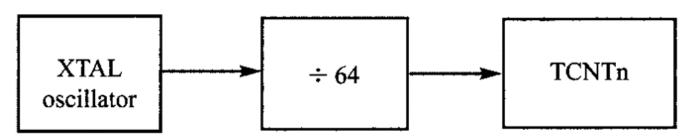

- (a) $1/64\times8$ MHz=125 kHz due to 1:64 prescaler and T=1/125 kHz= 8 μ s
- (b) $1/64 \times 16 \text{ MHz} = 250 \text{ kHz}$ due to prescaler and $T = 1/250 \text{ kHz} = 4 \mu \text{s}$
- (c) $1/64\times10 \text{ MHz}=156.2 \text{ kHz}$ due to prescaler and $T=1/156 \text{ kHz}=6.4 \text{ }\mu\text{s}$

9.1 PROGRAMMING TIMERS 0,1 AND 2


Example 9-11

Find the value for TCCR0 if we want to program Timer0 in Normal mode with a prescaler of 64 using internal clock for the clock source.

Solution:

From Figure 9-5 we have TCCR0 = 0000 0011; XTAL clock source, prescaler of 64.

From Figure 9-5 we have TCCR0 = 0000 0011; XTAL clock source, prescaler of 64.



9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-12

Examine the following program and find the time delay in seconds. Exclude the over-head due to the instructions in the loop. Assume XTAL = 8 MHz.

```
.INCLUDE "M32DEF.INC"
                                        ;add its definition from Example 9-3
               INITSTACK
                       R16,0x08
               LDI
               SBI
                       DDRB, 3
                                        ; PB3 as an output
                       R17,0
               LDI
               OUT
                       PORTB, R17
      BEGIN:
              RCALL
                       DELAY
                       R17, R16
               EOR
                                        toggle D3 of R17
                       PORTB, R17
               OUT
                                        :toggle PB3
10
               RJMP
                       BEGIN
```

9.1 PROGRAMMING TIMERS 0,1 AND 2

```
----- TimerO Delay
11
12
                      R20,0x10
      DELAY:
              LDI
              OUT
                      TCNTO, R20
                                       ;load TimerO
13
14
              LDI
                      R20,0x03
15
                      TCCRO, R20
                                      ;TimerO, Normal mode, int clk, prescaler 64
              OUT
16
      AGAIN:
                      R20, TIFR
                                       :read TIFR
              IN
17
                      R20, TOVO
                                       ; if TOVO is set skip next instruction
              SBRS
18
              RJMP
                      AGAIN
                      R20,0x0
19
              LDI
20
              OUT
                      TCCRO, R20
                                       ;stop TimerO
21
                    R20,1<<TOV0
              LDI
                      TIFR, R20
                                      ; clear TOVO flag RET
22
              OUT
23
              ret
```

Solution:

TCNT0 = 0x10 = 16 in decimal and 256 - 16 = 240.

Now $240 \times 64 \times 0.125 \ \mu s = 1920 \ \mu s$,

AVR TIMER PROGRAMMING IN ASSEMBLY 9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-13

Assume XTAL = 8 MHz.

- (a) Find the clock period fed into Timer0 if a prescaler option of 1024 is chosen.
- (b) Show what is the largest time delay we can get using this prescaler option and Timer0.

Solution:

- a) $8MHz\times1/1024=7812.5 Hz$ due to 1:1024 prescaler and T = 1/7812.5 Hz = 128 ms = 0.128 s
- b) To get the largest delay, we make TCNT0 zero. Making TCNT0 zero means that the timer will count from 00 to 0xFF, and then roll over to raise the TOV0 flag. As a result, it goes through a total of 256 states. Therefore, we have $delay=(256-0)\times128~\mu s=32,768~\mu s=0.032768~seconds.$

9.1 PROGRAMMING TIMERS 0,1 AND 2


Example 9-14

Assuming XTAL = 8 MHz, write a program to generate a square wave of 125 Hz frequency on pin PORTB.3. Use Timer0, Normal mode, with prescaler = 256.

Solution:

Look at the following steps:

- (a) T = 1 / 125 Hz = 8 ms, the period of the square wave.
- (b) 1/2 of it for the high and low portions of the pulse = 4 ms
- (c) (4 ms / 0.125 gs) / 256 = 125 and 256 125 = 131 in decimal, and in hex it is 0x83.
- (d) TCNT0 = 83 (hex)



9.1 PROGRAMMING TIMERS 0,1 AND 2

```
.INCLUDE "M32DEF.INC"
               .MACRO INITSTACK
                                                ;set up stack
 3
                      R20, HIGH (RAMEND)
               LDI
                       SPH, R20
              OUT
 5
               LDI
                      R20, LOW (RAMEND)
 6
              OUT
                       SPL,R20
               . ENDMACRO
 8
 9
              INITSTACK
                       R16,0x08
10
              LDI
                       DDRB, 3
11
               SBI
                                                ; PB3 as an output
12
               LDI
                       R17,0
13
      BEGIN: OUT
                      PORTS, R17
                                                ; PORTB = R17
              CALL DELAY
14
                       R17, R16
15
              EOR
                                                ;toggle D3 of R17
16
              RJMP.
                       BEGIN
                                     ----- TimerO Delay
17
18
      DELAY: LDI
                       R20,0x83
                       TCNTO, R20
                                                ;load Timer0
19
              OUT
                       R20,0x04
20
              LDI
                       TCCRO, R20
21
              OUT
                                                ;TimerO, Normal mode, int clk, prescaler 256
22
                       R20, TIFR
                                                ; read TIFR
      AGAIN:
              IN
23
                       R20, TOVO
                                                ;if TOVO is set skip next instruction
              SBRS
24
              RJMP
                       AGAIN
25
                       R20,0x0
              LDI
26
              OUT
                       TCCRO, R20
                                                ;stop Timer0
27
                       R20,1<<TOV0
              LDI
28
                       TIFR, R20
              OUT
                                                ; clear TOVO flag
29
              RET
```

9.1 PROGRAMMING TIMERS 0,1 AND 2

Assemblers and negative values

Because the timer is in 8-bit mode, we can let the assembler calculate the value for TCNT0. For example, in the "**LDI R20**, **-100**" instruction, the assembler will calculate the -100 = 9C and make R20 = 9C in hex. This makes our job easier. See Examples 9-15 and 9-16.

Example 9-15

Find the value (in hex) loaded into TCNT0 for each of the following cases.

(C) LDI R25, -12 OUT TCNTO, R25

Solution:

You can use the Windows scientific calculator to verify the results provided by the assembler. In the Windows calculator, select decimal and enter 200. Then select hex, then +1- to get the negative value. The following is what we get.

| Decimal | 2's complement (TCNT0 value |
|---------|-----------------------------|
| -200 | 0x38 |
| -60 | 0xC4 |
| -12 | 0xF4 |

9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-16

Find

- (a) the frequency of the square wave generated in the following code, and
- (b) the duty cycle of this wave.Assume XTAL = 8 MHz.

```
.INCLUDE "M32DEF.INC"
               LDI
                        R16, HIGH (RAMEND)
 3
               OUT
                        SPH, R16
               LDI
                        R16, LOW (RAMEND)
               OUT
                        SPL,R16
                                                   ;initialize stack pointer
               LDI
                        R16,0x20
                        DDRB, 5
               SBI
                                                   ; PB5 as an output
               LDI
                        R18,-150
 9
      BEGIN:
               SBI
                        PORTB, 5
                                                   :PB5 = 1
                        TCNTO, R18
10
               OUT
                                                   ;load TimerO byte
11
               CALL
                        DELAY
12
               OUT
                        TCNTO, R18
                                                   ;reload TimerO byte
13
               CALL
                        DELAY
14
                        PORTB, 5
                                                   ;PB5 = 0
               CBI
15
                        TCNTO, R18
                                                   ;reload TimerO byte
               OUT
16
               CALL
                        DELAY
17
               RJMP
                        BEGIN
18
                       ----- Delay Using Timer0
19
       DELAY:
               LDI
                        R20,0x01
20
                        TCCRO, R20 ; start TimerO, Normal mode, int clk, no prescaler
               OUT
                        R20, TIFR
21
      AGAIN:
                                              ; read TIFR
               IN
                        R20, TOVO
22
               SBRS
                                              ;monitor TOVO flag and skip if high
23
               RJMP.
                        AGAIN
24
               LDI
                        R20,0x0
25
               OUT
                        TCCRO, R20
                                              ;stop Timer0
26
                        R20,1<<TOV0
               LDI
27
                        TIFR, R20
               OUT
                                              ; clear TOVO flag bit
28
               RET
```

9.1 PROGRAMMING TIMERS 0,1 AND 2


Solution:

For the TCNT0 value in 8-bit mode, the conversion is done by the assembler as long as we enter a negative number. This also makes the calculation easy. Because we are using 150 clocks, we have

time for the DELAY subroutine = $150 \times 0.125 \,\mu s = 18.75 \,\mu s$.

The high portion of the pulse is twice the size of the low portion (66% duty cycle).

Therefore, we have: $T = high portion + low portion = 2 \times 18.75 \ \mu s + 18.75 \ 1\mu s = 56.25 \ \mu s \ and frequency = 1 / 56.25 \ \mu s = 17.777 \ kHz.$

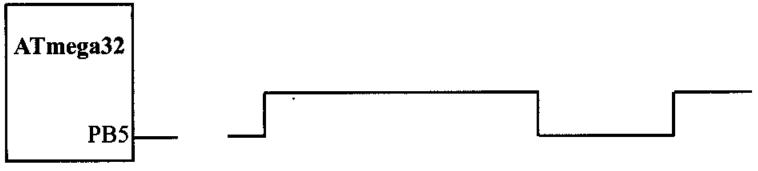

AVR TIMER PROGRAMMING IN ASSEMBLY 9.1 PROGRAMMING TIMERS 0,1 AND 2

CTC mode programming (Clear Timer 0 on compare match)

The OCR0 register is used with CTC mode. As with the Normal mode, in the CTC mode, the timer is incremented with a clock. But it counts up until the content of the TCNT0 register becomes equal to the content of OCR0 (compare match occurs); then, the timer will be cleared and the OCF0 flag will be set when the next clock occurs. The OCF0 flag is located in the TIFR register.

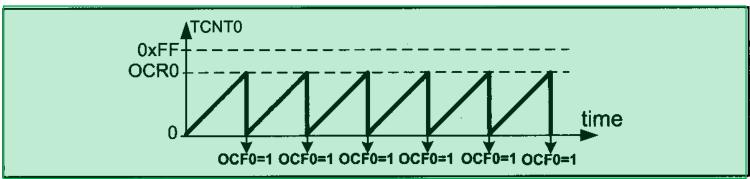


Figure 9-10. Timer/Counter 0 CTC Mode

9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-17

In the following program, we are creating a square wave of 50% duty cycle (with equal portions high and low) on the PORTB.5 bit. Timer0 is used to generate the time delay. **Analyze the program**.

```
.INCLUDE "M32DEF.INC"
        INITSTACK
                                 ;add its definition from Example 9-3
                R16,0x20
        LDI
        SBI
                DDRB, 5
                                 ; PB3 as an output
        LDI
                R17,0
BEGIN:
        OUT
                PORTB, R17
                                 ; PORTB = R17
        RCALL
                DELAY
                R17, R16
        EOR
                                 ;toggle D3 of R17
                BEGIN
        RJMP
```

9.1 PROGRAMMING TIMERS 0,1 AND 2

```
.INCLUDE "M32DEF.INC"
                                    ;add its definition from Example 9-3
             INITSTACK
 3
             LDI
                     R16,0x20
             SBI
                    DDRB, 5
                                    ; PB3 as an output
             LDI
                    R17,0
             OUT PORTB, R17
     BEGIN:
                                    ; PORTB = R17
             RCALL
                    DELAY
                    R17, R16
             EOR
                                    ;toggle D3 of R17
 9
                     BEGIN
             RJMP
10
             ;-----TimerO Delay
11
                    R20.0
      DELAY:
             LDI
12
             OUT
                    TCNTO, R20
13
             LDI
                    R20,9
14
             OUT
                    OCRO, R20
                                    :load OCRO
15
             LDI
                    R20,0x09
16
             OUT
                     TCCRO, R20 ; TimerO, CTC mode, int clk
17
     AGAIN:
             IN
                     R20, TIFR
                                   :read TIFR
18
             SBRS
                     R20,OCFO
                                   ;if OCFO is set skip next inst
19
             RJMP
                     AGAIN
20
             LDI
                    R20,0x0
21
             OUT
                    TCCRO, R20
                                   ;stop Timer0
22
             LDI
                    R20,1<<OCF0
                    TIFR, R20
23
             OUT
                                   ;clear OCFO flag
24
             RET
```

9.1 PROGRAMMING TIMERS 0,1 AND 2

Solution:

In the above program notice the following steps:

- 1. 9 is loaded into OCR0.
- 2. TCCR0 is loaded and Timer0 is started.
- Timer0 counts up with the passing of each clock, which is provided by the crystal oscillator. As the timer counts up, it goes through the states of 00, 01, 02, 03, and so on until it reaches 9. One more clock rolls it to 0, raising the Timer0 compare match flag (OCF0 = 1). At that point, the "SBRS R20,OCF0" instruction bypasses the "RJMP AGAIN" instruction.
- 4. Timer0 is stopped.
- 5. The OCF0 flag is cleared.

9.1 PROGRAMMING TIMERS 0,1 AND 2


Example 9-18

Find the delay generated by Timer0 in Example 9-17. Do not include the overhead due to instructions. (XTAL = 8 MHz)

Solution:

OCR0 is loaded with 9 and TCNT0 is cleared; Thus, after 9 clocks **255** TCNT0 becomes equal to OCR0. On **ocr0** the next clock, the OCF0 flag is set and the reset occurs. That means the TCNT0 is cleared after 9 + 1 = 10 clocks. Because XTAL = 8 MHz, the counter counts up every 0.125 μ s. Therefore, we have

 $10 \times 0.125 \,\mu s = 1.25 \,\mu s$.

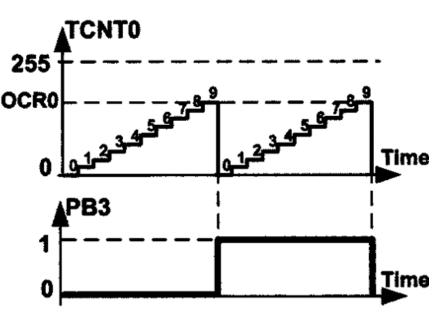

9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-19


Find the delay generated by Timer0 in the following program. Do not include the overhead due to instructions. (XTAL = 8 MHz)

```
.INCLUDE "M32DEF.INCU
               INITSTACK
                                        ;add its definition from Example 9-3
 2
 3
                       R16,0x08
               LDI
 4
                       DDRB, 3
               SBI
                                        ; PB3 as an output
               LDI
                       R17,0
               LDI
                   R20,89
               OUT
                     OCRO, R20
                                        :load Timer0
                      R20,0x0B
 8
              LDI
      BEGIN:
               OUT
                       TCCRO, R20
                                        ;TimerO, CTC mode, prescaler=64
 9
10
      AGAIN:
                       R20, TIFR
                                        ; read TIFR
               IN
11
               SBRS
                       R20, OCFO
12
               RJMP
                       AGAIN
13
               LDI
                       R20,0x0
               OUT
                       TCCRO, R20
14
                                        ;stop Timer0
15
               LDI
                       R20,1<<OCF0
                       TIFR, R20
16
               OUT
                                        ;clear OCFO flag
17
                       R17, R16
                                        ;toggle D3 of R17
               EOR
18
               OUT
                       PORTB, R17
                                        ;toggle PB3
19
               RJMP
                       BEGIN
```

9.1 PROGRAMMING TIMERS 0,1 AND 2

Due to prescaler = 64 each timer clock lasts $64 \times 0.125~\mu s = 8\mu s$. OCR0 is loaded with 89; thus, after 90 clocks OCF0 is set.

Therefore we have $90 \times 8 \mu s = 720 \mu s$.

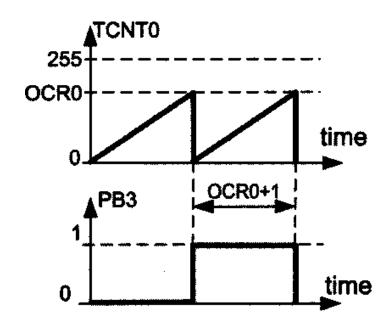

9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-20

Assuming XTAL = 8 MHz, write a program to generate a delay of 25.6 ms. Use Timer0, CTC mode, with prescaler = 1024.

Solution:

Due to prescaler = 1024 each timer clock lasts 1024 x 0.125 μs = 1280. Thus, in order to generate a delay of 25.6 ms we should wait 25.6 ms / 128 μs = 200 clocks. Therefore the OCR0 register should be loaded with 200 - 1 = 199.

```
DELAY:
               LDI
                        R20,0
 2
                        TCNTO, R20
               OUT
                        R20,199
               LDI
               OUT
                        OCRO, R20
                                                  ;load OCRO
 5
                        R20,0x0D
               LDI
 6
                        TCCRO, R20
                                                  ;TimerO, CTC mode, prescaler = 1024
               OUT
      AGAIN:
                        R20, TIFR
                                                  :read TIFR
               IN
                        R20,0CF0
                                                  ;if OCFO is set skip next inst.
               SBRS
               RJMP
                        AGAIN
10
               LDI
                        R20,0x0
11
                       TCCRO, R20
                                                  ;stop Timer0
               OUT
12
               LDI
                       R20,1<<OCF0
13
               OUT
                       TIFR, R20
                                                  ;clear OCFO flag
14
               RET
```

AVR TIMER PROGRAMMING IN ASSEMBLY 9.1 PROGRAMMING TIMERS 0,1 AND 2

Notice that the comparator checks for equality; thus, if we load the OCR0 register with a value that is smaller than TCNT0's value, the counter will miss the compare match and will count up until it reaches the maximum value of \$FF and rolls over.

This causes a big delay and is not desirable in many cases.


9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-22

In the following program, how long does it take for the PB3 to become one? Do not include the overhead due to instructions. (XTAL = 8 MHz)

```
.INCLUDE "M32DEF.INCU
               SBI
                                         ; PB3 as an output
                       DDRB, 3
               CBI
                       PORTB, 3
                                         :PB3 = 0
               LDT
                       R20,89
               OUT
                       OCRO, R20
               LDI
                       R20,95
               OUT
                       TCNTO, R20
                       R20,0x09
      BEG1N:
               LDI
                                         ;TimerO, CTC mode, prescaler=1
               OUT
                       TCCRO, R20
10
               IN
                       R20, TIFR
                                         ; read TIFR
      again:
11
               SBRS
                       R20, OCFO
12
               RJMP.
                       AGAIN
13
               LDI
                       R20,0x0
14
               OUT
                       TCCRO, R20
                                         ;stop Timer0
15
               LDI
                       R20,1<<OCF0
16
                       TIFR, R20
                                         ; clear OCFO flag
               OUT
17
                       R17, R16
               EOR
                                         ;toggle D3 of R17
18
               OUT
                       PORTB, R17
                                         ;toggle PB3
19
               RJMP
                       BEGIN
```

9.1 PROGRAMMING TIMERS 0,1 AND 2

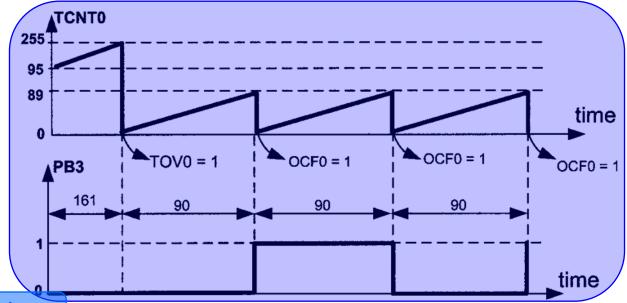

Solution:

Since the value of TCNT0 (95) is bigger than the content of OCR0 (89), the timer counts up until it gets to \$FF and rolls over to zero. The TOV0 flag will be set as a result of the overflow. Then, the timer counts up until it becomes equal to 89 and compare match occurs. Thus, the first compare match occurs after 161 + 90 = 251 clocks, which means after 251×0.125 µs = 31.375 µs. The next compare matches occur after 90 clocks, which means after 90×0.125 µs = 11.25 µs.

AVR TIMER PROGRAMMING IN ASSEMBLY 9.1 PROGRAMMING TIMERS 0,1 AND 2

Timer2 programming

Timer 2 is an 8-bit timer. Therefore it works the same way as Time 0. But there are two differences between Timer 0 and Timer 2:

- Timer 2 can be used as a real time counter. To do so, we should connect a crystal of 32.768 kHz to the TOSCl and TOSC2 pins of AVR and set the AS2 bit. See Figure 9-12.
- In Timer0, when CS02-CS00 have values 110 or 111, Timer0 counts the external events. But in Timer2, the multiplexer selects between the different scales of the clock. In other words, the same values of the CS bits can have different meanings for Timer0 and Timer2. Compare Figure 9-11 with Figure 9-5 and examine Examples 9-23 through 9-25.

9.1 PROGRAMMING TIMERS 0,1 AND 2

Timer2 programming

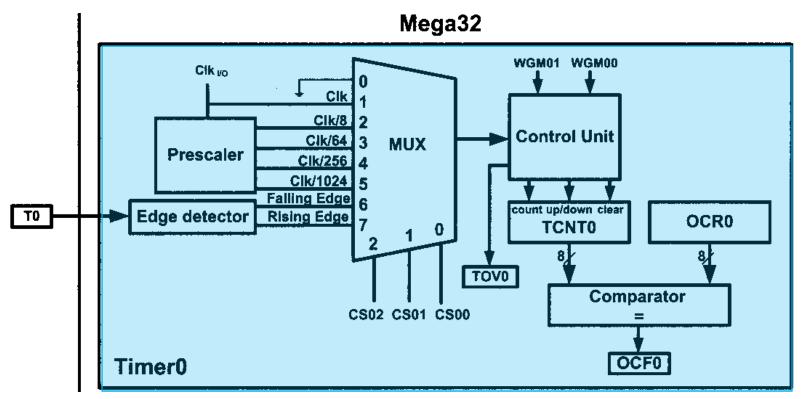


Figure 9-13 Atmega32 Timer

9.1 PROGRAMMING TIMERS 0,1 AND 2

Timer2 programming

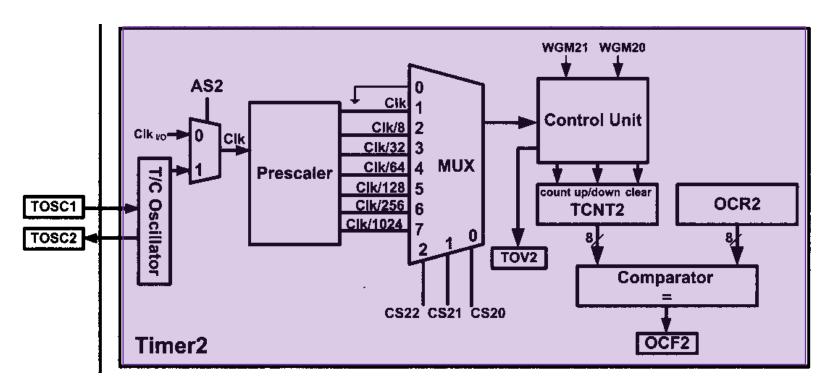


Figure 9-13 Atmega32 Timer

9.1 PROGRAMMING TIMERS 0,1 AND 2

| Bit | 7 | 6 | 5 | 4 | 3 | 2 | 1 | O . |
|-----------------------------|------------|----------|------------|-------------------------|-----------------------------------|-------------|-------------|-------------|
| | FOC2 | WGM20 | COM21 | COM20 | WGM21 | CS22 | CS21 | CS20 |
| Read/Write Initial Value | W | RW 0 | RW 0 | RW 0 | RW 0 | RW 0 | RW 0 | RW 0 |
| FOC2 | D 7 | while | generatii | ng a wave | write-only Writing ompare m | 1 to it car | ises the w | ave |
| WGM20, | WGM2 | _ | ator to ac | i as II a C | ompare m | aten nau | occurred. | |
| ,, 01.120, | D6 | D3 | | Timer2 | mode sele | ctor bits | | |
| | 0 | 0 | | Normal | | | | |
| | 0 | 1 | | CTC (C | lear Time | on Com | pare Mate | ch) |
| | 1 | 0 | | PWM, 1 | phase corre | ect | | |
| | 1 | 1 | | Fast PW | /M | | | |
| COM21:2 | 20 D5 | D4 | _ | are Outpu bits contr | | eform ge | enerator (s | see Chapter |
| CS22:20 | D2 D | l D0 Tin | ner2 clock | | | | | |
| | 0 0 | 0 | | | (Timer/C | ounter st | opped) | |
| | 0 0 | 1 | , | o Prescal: | ing) | | | |
| | 0 1 | 0 | clk / 8 | | | | | |
| | 0 1 | 1 | clk / 3 | _ | | | | |
| | 1 0 | 0 | clk / 6 | | | | | |
| | 1 0 | 1 | clk / 1 | | | | | |
| | 1 1 | 0 | clk / 2 | | | | | |
| | 1 1 | 1 | ¢lk / 1 | 024 | | | | |

Figure 9-11. TCCR2 (Timer/Counter Control Register) Register


AVR TIMER PROGRAMMING IN ASSEMBLY 9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-23

Find the value for TCCR2 if we want to program Timer2 in normal mode with a prescaler of 64 using internal clock for the clock source.

Solution:

From Figure 9-11 we have TCCR2 = 0000 0100; XTAL clock source, prescaler of 64.



Compare the answer with Example 9-11.

9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-24

Using a prescaler of 64, write a program to generate a delay of 1920 µs. Assume XTAL 8 MHz.

Solution:

```
Timer clock = 8 \text{ MHz}/64 = 125 \text{ kHz} \Rightarrow \text{Timer Period} = 1 / 125 \text{ kHz} = 8 \text{ }\mu\text{s} \Rightarrow \text{Timer Value} = 1920 \text{ }\mu\text{s} / 8 \text{ }\mu\text{s} = 240
```

```
----- Timer2 Delay
                                   ;R20 = 0x10
     DELAY: LDI R20,-240
             OUT
                                    :load Timer2
                     TCNT2, R20
             LDI
                     R20,0x04
5
                     TCCR2, R20
                               ;Timer2, Normal mode, int clk, prescaler 64
             OUT
6
     AGAIN:
                     R20, TIFR
             IN
                                   :read TIFR
                     R20, T0V2
             SBRS
                                    ;if TOV2 is set skip next instruction
8
             RJMP
                     AGAIN
                     R20,0x0
             LDI
10
             OUT
                     TCCR2, R20
                                    ;stop Timer2
                     R20, 1<<TOV2
11
             LDI
12
                     TIFR, R20
                                    ;clear TOV2 flag
             OUT
13
             RET
```

Compare the above program with the DELAY subroutine in Example 9-12.

There are two differences between the two programs:

1-The register names are different. TCNT2 instead of TCNT0

mashhou 20 The values of TCCRn are different for the same prescaler.

9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-25

Using CTC mode, write a program to generate a delay of 8 ms. Assume XTAL = 8 MHz

Solution:

As XTAL = 8 MHz, the different outputs of the prescaler are as follows:

| Prescaler | Timer Clock | Timer Period | Timer Value |
|-----------|-------------------------|---|--|
| None | 8 MHz | $1/8 \text{ MHz} = 0.125 \mu\text{s}$ | 8ms/0.125μs=64k |
| 8 | 8 MHz/8 = 1 MHz | 1/1 MHz = 1 μs | $8 \text{ ms} / 1 \mu \text{s} = 8000$ |
| 32 | 8 MHz/32 = 250 kHz | $1/250 \text{ kHz} = 41.1 \mu\text{s}$ | $8 \text{ ms} / 4 \mu \text{s} = 2000$ |
| 64 | 8 MHz/64 = 125 kHz | $1/125 \text{ kHz} = 8 \mu \text{s}$ | $8 \text{ ms} / 8 \mu \text{s} = 1000$ |
| 128 | 8 MHz/128 = 62.5 kHz | 1/62.5 kHz = 16 μs | $8 \text{ ms} / 16 \mu \text{s} = 500$ |
| 256 | 8 MHz/256 = 31.25 kHz | 1/31.25 kHz = 32 μs | $8 \text{ ms} / 32 \mu \text{s} = 250$ |
| 1024 | 8 MHz/1024 = 7.8125 kHz | 1/7.8125 kHz= 128 μs | $8 \text{ ms} / 128 \mu\text{s} = 62.5$ |

From the above calculation we can only use options Prescaler = 256 or Prescaler = 1024. We should use the option Prescaler = 256 since we cannot use a decimal point. To wait 250 clocks we should load OCR2 with 250 - 1 = 249.

9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-25 (Cont.)

| TCCR2 = | 0 | 0 | 0 | 0 | 1 | 1 | 1 | 0 |
|---------|------|-------|-------|-------|-------|------|------|------|
| | FOC2 | WGM20 | COM21 | COM20 | WGM21 | CS22 | CS21 | CS20 |

```
----- Timer2 Delay
      DELAY:
              LDI
                      R20,0
              OUT
                      TCNT2, R20
                                           :TCNT2 = 0
                      R20,249
              LDI
 5
                                           ; OCR2 = 249
              OUT
                      OCR2,R20
 6
              LDI
                      R20,0x0E
              OUT
                      TCCR2, R20
                                           :Timer2,CTC mode,prescaler = 256
                                           :read TIFR
 8
      AGAIN:
              IN
                      R20, TIFR
 9
              SBRS
                      R20,0CF2
                                           ; if OCF2 is set skip next inst.
              RJMP
                      AGAIN
10
11
              LDI
                      R20,0x0
12
              OUT
                      TCCR2, R20
                                           ;stop Timer2
13
              LDI
                      R20,1<<0CF2
14
              OUT
                      TIFR, R20
                                           ; clear OCF2 flag
              RET
```

9.1 PROGRAMMING TIMERS 0,1 AND 2

Timer1 programming

Timer1 has the prescaler options of 1:1, 1:8, 1:64, 1:256, and 1:1024.

There are two registers in Timer1: OCR1A and OCR1B.

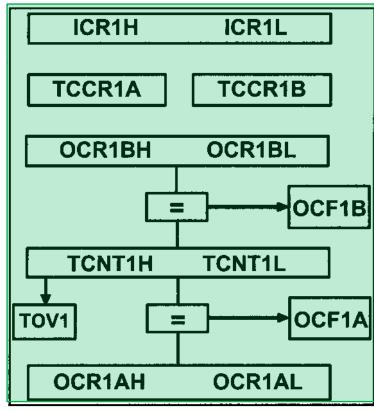


Figure 9-14. Simplified Diagram of Timer1

AVR TIMER PROGRAMMING IN ASSEMBLY 9.1 PROGRAMMING TIMERS 0,1 AND 2

Timer/Counter 16-bit

As Timer1 is a 16-bit timer, the OCR registers are 16-bit registers as well and they are made of two 8-bit registers. For example, OCR1A is made of OCR1AH (OCR1A high byte) and OCR1AL (OCR1A low byte).

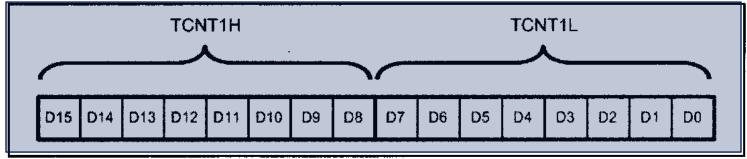


Figure 9-15. Timer1 High and Low Registers

AVR TIMER PROGRAMMING IN ASSEMBLY 9.1 PROGRAMMING TIMERS 0,1 AND 2

Input Capture Register

There is also an auxiliary register named ICR1, which is used in operations such as capturing. ICR1 is a 16-bit register made of ICR1H and ICR1L.

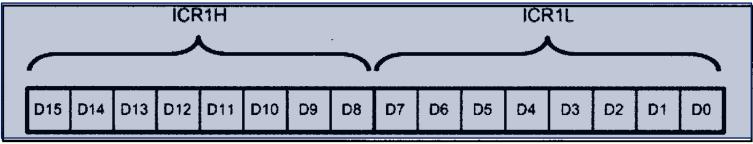


Figure 9-19. Input Capture Register (ICR) for Timer1

9.1 PROGRAMMING TIMERS 0,1 AND 2

TCCR1A Control Register

| Bit | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|-----------------------------|----------|-----------------|--------|---------------------|-----------|-----------|----------|----------|
| | COM1A1 | COM1A0 CC | MIBI | COM1B0 | FOC1A | FOCIB | WGM11 | WGM10 |
| Read/Write Initial Value | R/W 0 | R/W 0 | R 0 | R/W 0 | R/W 0 | R/W 0 | R/W 0 | R/W 0 |
| COM1A | l:COM1/ | A0 D7 D6 | * | pare Outpu | | | el A | |
| COM1B1 | l:COM1I | 30 D5 D4 | - | pare Outpu | | | el B | |
| FOC1A | | D3 | | Output Cussed in Se | - | | el A | |
| FOC1B | | D2 | | Output Cussed in S | - | | el B | |
| WGM11: | 10 | D1 D0 | Time | r1 mode (| discussed | in Figure | : 9-18) | |

Figure 9-17. TCCR1A (Timer 1 Control) Register

9.1 PROGRAMMING TIMERS 0,1 AND 2

TCCR1B Control Register – Figure 9-18

| Bit | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | |
|-----------------------------|-----------------|-------------|---|----------|----------|----------|----------|----------|--------|
| | ICNC1 | ICES1 | - | WGM13 | WGM12 | CS12 | CS11 | CS10 | TCCR1B |
| Read/Write Initial Value | R/W 0 | R/W 0 | R 0 | R/W 0 | R/W 0 | R/W 0 | R/W 0 | R/W 0 | |
| ICNC1 | | D7 | D7 Input Capture Noise Canceler 0 = Input Capture is disabled. 1 = Input Capture is enabled. | | | | | | |
| ICES1 | | D6 | D6 Input Capture Edge Select 0 = Capture on the falling (negative) edge 1 = Capture on the rising (positive) edge | | | | | | |
| WGM13: | WGM12 | D5 D4 D3 | Not used 3 Timer1 mode | | | | | | |

9.1 PROGRAMMING TIMERS 0,1 AND 2

TCCR1B Control Register – Figure 9-18

| Mode | WGM13 | WGM12 | WGM11 | WGM10 | Timer/Counter Mode of Operation | Тор | Update of OCR1x | TOV1 Flag Set on |
|------|-------|-------|-------|-------|----------------------------------|--------|-----------------|---------------------|
| 0 | 0 | 0 | 0 | 0 | Normal | 0xFFFF | Immediate | |
| 1 | 0 | 0 | 0 | 1 | PWM, Phase Correct, 8-bit | 0x00FF | TOP | воттом |
| 2 | 0 | 0 | 1 | 0 | PWM, Phase Correct, 9-bit | 0x01FF | TOP | BOTTOM |
| 3 | 0 | 0 | 1 | 1 | PWM, Phase Correct, 10-bit | 0x03FF | TOP | BOTTOM |
| 4 | 0 | 1 | 0 | 0 | CTC | OCR1A | Immediate | MAX |
| 5 | 0 | 1 | 0 | 1 | Fast PWM, 8-bit | 0x00FF | TOP | TOP |
| 6 | 0 | 1 | 1 | 0 | Fast PWM, 9-bit | 0x01FF | TOP | TOP |
| 7 | 0 | 1 | 1 | 1 | Fast PWM, 10-bit | 0x03FF | TOP | TOP |
| 8 | 1 | 0 | 0 | 0 | PWM, Phase and Frequency Correct | ICR1 | BOTTOM | ВОТТОМ |
| 9 | 1 | 0 | 0 | 1 | PWM, Phase and Frequency Correct | OCR1A | воттом | ВОТТОМ |
| 10 | 1 | 0 | 1 | 0 | PWM, Phase Correct | ICR1 | TOP | BOTTOM |
| 11 | 1 | 0 | 1 | 1 | PWM, Phase Correct | OCR1A | TOP | BOTTOM |
| 12 | 1 | 1 | 0 | 0 | CTC | ICR1 | Immediate | MAX |
| 13 | 1 | 1 | 0 | 1 | Reserved | - | - | - |
| 14 | 1 | 1 | 1 | 0 | Fast PWM | ICR1 | TOP | TOP |
| 15 | 1 | 1 | 1 | 1 | Fast PWM | OCR1A | TOP | TOP |

9.1 PROGRAMMING TIMERS 0,1 AND 2

TCCR1B Control Register – Figure 9-18

| CS12:CS10 | D2D1D0 | Timer1 clock selector |
|-----------|--------|---|
| | 0 0 0 | No clock source (Timer/Counter stopped) |
| | 0 0 1 | clk (no prescaling) |
| | 0 1 0 | clk / 8 |
| | 0 1 1 | clk / 64 |
| | 1 0 0 | clk / 256 |
| | 1 0 1 | clk / 1024 |
| | 1 1 0 | External clock source on T1 pin. Clock on falling edge. |
| | 1 1 1 | External clock source on T1 pin. Clock on rising edge. |

Figure 9-18. TCCR1B (Timer 1 Control) Register

9.1 PROGRAMMING TIMERS 0,1 AND 2

Timer1 operation modes

Normal mode (WGM13:10 = 0000)

In this mode, the timer counts up until it reaches \$FFFF and then it rolls over from \$FFFF to 0000. When the timer rolls over, the TOV1 flag will be set.

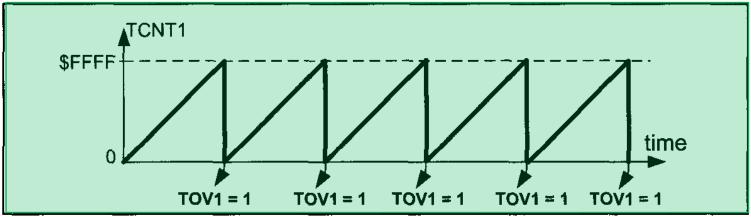


Figure 9-20. TOV in Normal and Fast PWM

9.1 PROGRAMMING TIMERS 0,1 AND 2

CTC mode (WGM13:10 = 0100)

In mode 4, the timer counts up until the content of the TCNT1 register becomes equal to the content of OCR1A (compare match occurs); then, the timer will be cleared when the next clock occurs. The OCF1A flag will be set as a result of the compare match as well.

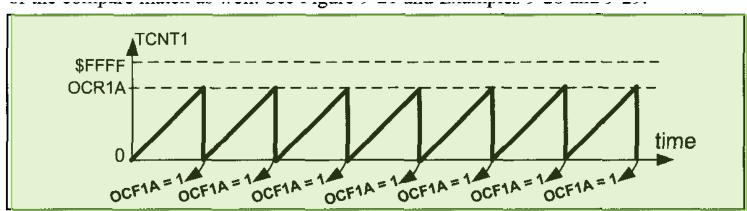


Figure 9-21. OCF1A in CTC Mode

AVR TIMER PROGRAMMING IN ASSEMBLY 9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-26

Find the values for TCCR1A and TCCR1B if we want to program Timer1 in mode 0 (Normal), with no prescaler. Use AVR's crystal oscillator for the clock source.

Solution:

$$TCCR1A = 0000\ 0000$$
 $WGM11 = 0$, $WGM10 = 0$

TCCRIB =
$$0000\ 0001$$
 WGM13 = 0, WGM12 = 0, oscillator clock source, no

prescaler

9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-27

Find the frequency of the square wave generated by the following program if XTAL=8MHz. In your calculation do not include the overhead due to instructions in the loop.

```
.INCLUDE "M32DEF.INC"
 2
               INITSTACK
                                            ;add its definition from Example 9-3
               LDI
                       R16,0x20
               SBI
                       DDRB, 5
                                            ; PB5 as an output
               LDI
                       R17,0
                       PORTB, R17
 6
               OUT
                                            PB5 = 0
      BEGIN: RCALL
                       DELAY
 8
              EOR
                       R17, R16
                                            :toggle D5 of R17
9
                                            ;toggle PB5
               OUT
                       PORTB, R17
10
               RJMP
                       BEGIN
11
                        ----- Timerl delay
12
      DELAY:
                       R20,0xD8
              LDI
13
               OUT
                       TCNT1H, R20
                                            ;TCNT1H = OxD8
14
               LDI
                       R20,0xF0
15
               OUT
                       TCNT1L, R20
                                            ; TCNT1L = OxF0
16
               LDI
                       R20,0x00
17
               OUT
                       TCCR1A, R20
                                            :WGM11:10 = 00
18
               LDT
                       R20,0x01
19
                                            ;WGM13:12 = 00, Normal mode, prescaler = 1
               OUT
                       TCCR1B, R20
20
      AGAIN:
              IN
                       R20, TIFR
                                            ; read TIFR
21
               SBRS
                       R20, TOV1
                                            ; if TOV1 is set skip next instruction
22
              RJMP
                       AGAIN
23
               LDI
                       R20,0x00
24
               OUT
                       TCCR1B, R20
                                            ;stop Timerl
25
               LDI
                       R20,0x04
                                            ;clear TOV1 flag RE
26
               OUT
                       TIFR, R20
              RET
```

9.1 PROGRAMMING TIMERS 0,1 AND 2

Solution:

WGM13:10 = 0000 = 0x00, so Timer1 is working in mode 0, which is Normal mode, and the top is 0xFFFF. FFFF + 1 - D8F0 = 0x2710 = 10,000 clocks, which means that it takes 10,000 clocks. As XTAL = 8 MHz each clock lasts $1/(8M) = 0.125 \mu s$ and delay = 10,000 \times 0.125 μs = 1250 μs = 1.25 ms and frequency = 1 / (1.25 ms x 2) = 400 Hz. In this calculation, the overhead due to all the instructions in the loop is not included.

Notice that instead of using hex numbers we can use HIGH and LOW directives:

LDI R20, HIGH (65535-10000)

OUT TCNT1H, R20

LDI R20, LOW (65535-10000)

OUT TCNT1L, R20

Or we can simply write it as follows:

LDI R20, HIGH (-10000)

OUT TCNT1H, R20

LDI R20, LOW(-10000)

OUT TCNT1L, R20

9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-28

Find the values for TCCR1A and TCCR1B if we want to program Timer1 in mode 4 (CTC, Top = OCR1A), no prescaler. Use AVR's crystal oscillator for the clock source.

Solution:

$$TCCR1A = 0000\ 0000$$
 $WGM11 = 0$, $WGM10 = 0$

$$TCCR1B = 0000\ 1001$$
 WGM13 = 0, WGM12 = 1, oscillator clock

source, no prescaler

9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-29

Find the frequency of the square wave generated by the following program if XTAL = 8 MHz. do not include the overhead due to instructions in the loop.

```
.INCLUDE "M32DEF.INC"
               SBI
                       DDRB, 5
                                            ; PB5 as an output
                       PORTB, 5
      BEGIN:
               SBI
                                             ;PB5 = 1
               RCALL
                       DELAY
                       PORTB, 5
               CBI
                                             :PBS = 0
               RCALL
                       DELAY
               RJMP
                       BEGIN
                                     ----- Timerl delay
 9
      DELAY:
               LDI
                       R20,0x00
10
               OUT
                       TCNT1H, R20
11
                       TCNT1L, R20
               OUT
                                                 TCNT1 = 0
12
               LDI
                       R20,0
13
                       OCR1AH, R20
               OUT
14
                       R20,159
               LDI
15
                       OCRIAL, R20
                                                 :OCRIA = 159 = Ox9F
               OUT
16
                       R20,0x0
               LDI
17
               OUT
                       TCCR1A, R20
                                                 ;WGMII:10 = 00
               LDI
                       R20,0x09
18
19
                       TCCR1B, R20
                                                 ;WGM13:12 = 01,CTC mode, prescaler = 1
               OUT
```

9.1 PROGRAMMING TIMERS 0,1 AND 2

| 20 | AGAIN: | IN | R20, TIFR | ;read TIFR |
|----|--------|------|---|--|
| 21 | | SBRS | R20,OCFIA | ;if OCF1A is set skip next instruction |
| 22 | | RJMP | AGAIN | |
| 23 | | LDI | R20,1< <ocf1a< td=""><td></td></ocf1a<> | |
| 24 | | OUT | TIFR,R20 | ;clear OCF1A flag |
| 25 | | LDI | R19,0 | |
| 26 | | OUT | TCCR1B,R19 | ;stop timer |
| 27 | | OUT | TCCR1A, R19 | |
| 28 | | RET | | |

Solution:

WGM13:10 = 0100 = 0x04 therefore, Timer1 is working in mode 4, which is a CTC mode, and max is defined by OCR1A.

$$159 + 1 = 160 \text{ clocks}$$

XTAL = 8 MHz, so each clock lasts $1/(8M) = 0.125 \mu s$.

Delay = 160 x 0.125 μ s = 20 μ s and frequency = 1 / (20 μ s x 2) = 25 kHz.

AVR TIMER PROGRAMMING IN ASSEMBLY9.1 PROGRAMMING TIMERS 0,1 AND 2

Accessing 16-bit registers

The AVR is an 8-bit microcontroller, which means it can manipulate data 8 bits at a time, only. But some Timer1 registers, such as TCNT1, OCR1A, ICR1, and so on, are 16-bit; in this case, the registers are split into two 8-bit registers, and each one is accessed individually. This is fine for most cases. For example, when we want to load the content of SP (stack pointer), we first load one half and then the other half, as shown below:

| LDI | R16,0x12 | |
|-----|----------|---------------|
| OUT | SPL,R16 | |
| LDI | R16,0x34 | |
| OUT | SPH,R16 | ; SP = 0x3412 |

In 16-bit timers, however, we should read/write the entire content of a register at once, otherwise we might have problems.

9.1 PROGRAMMING TIMERS 0,1 AND 2

For example, imagine the following scenario:

The TCNT1 register contains 0x15FF. We read the low byte of TCNT1, which is 0xFF, and store it in R20. At the same time a timer clock occurs, and the content of TCNT1 becomes 0x1600; now we read the high byte of TCNT1, which is now 0x16, and store it in R21. If we look at the value we have read, R21 :R20 = 0x16FF. So, we believe that TCNT1 contains 0x16FF, although it actually contains

0x15FF.

The AVR designers have resolved this issue with an 8-bit register called TEMP, which is used as a buffer.

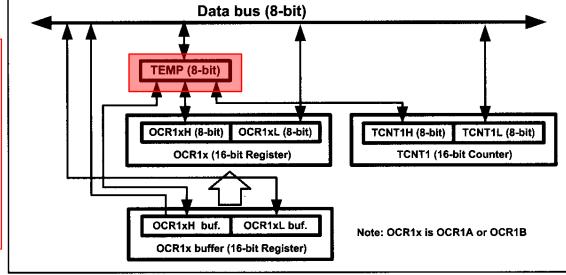


Figure 9-22. Accessing 16-bit Registers through TEMP

9.1 PROGRAMMING TIMERS 0,1 AND 2

For example, consider the following program:

```
LDI R16,0x15
OUT TCNT1H,R16 ;store 0xlb in TEMP of Timerl
LDI R16,0xFF
OUT TCNT1L, R16 ;TCNT1L = R16, TCNT1H = TEMP
```

After the execution of "OUT TCNT1H, R16", the content of R16, 0x15, will be stored in the TEMP register. When the instruction "OUT TCNT1L, R16" is executed, the content of R16, 0xFF, is loaded into TCNT1L, and the content of the TEMP register, 0x15, is loaded into TCNT1H. So, 0x15FF will be loaded into the TCNT1 register at once.

We should first write into the high byte of the 16-bit registers and then write into the lower byte. Otherwise, the program does not work properly.

9.1 PROGRAMMING TIMERS 0,1 AND 2

When we read the low byte of 16-bit registers, the content of the high byte will be copied to the TEMP register. So, the following program reads the content of TCNT1:

```
IN R20,TCNT1L ;R20 = TCNT1L, TEMP = TCNT1H
IN R21,TCNT1H ;R21 = TEMP of Timer1
```

We must pay attention to the order of reading the high and low bytes of the 16bit registers.

9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-30

Assuming XTAL = 8 MHz, write a program that toggles PB5 once per millisecond.

Solution:


XTAL = 8 MHz means that each clock takes 0.125 μ s. Now for 1ms delay, we need 1ms/0.125 μ s = 8000 clocks = 0x1F40 clocks. We initialize the timer so that after 8000 clocks the OCF1A flag is raised, and then we will toggle the PB5.

```
.INCLUDE "M32DEF.INC"
               LDI
                       R16, HIGH (RAMEND)
                       SPH,R16
               OUT
                       R16, LOW (RAMEND)
               LDI
                       SPL,R16
                                                 :initialize the stack
               SBI
                       DDRB, 5
                                                 ; PB5 as an output
      BEGIN: SBI
                       PORTB, 5
                                                 ; PB5 = 1
              RCALL DELAY ims
                       PORTE, 5
                                                 ;PB5 = 0
               CBI
10
              RCALL
                       DELAY 1ms
               RJMP
                       BEGIN
```

9.1 PROGRAMMING TIMERS 0,1 AND 2

```
----- Timer1 Delay
13
      DELAY 1ms:
14
              LDI
                      R20,0x00
15
              OUT
                      TCNT1H.R20
                                               : TEMP = 0
                                               ;TCNT1L = 0, TCNT1H = TEMP
16
              OUT
                      TCNT1L, R20
17
18
              LDI
                      R20,HIGH(8000-1)
19
              OUT
                      OCR1AH, R20
                                               : TEMP = 0x1F
                      R20, LOW (8000-1)
20
              LDI
21
              OUT
                      OCR1AL, R20
                                               ;OCRIAL = 0x3F, OCR1AH = TEMP
                      R20,0x0
22
              LDI
23
              OUT
                      TCCR1A, R20
                                               :WGM11:10 = 00
24
                      R20,0x09
              LDI
                      TCCR1B, R20
                                              ;WGM13:12 = 01, CTC mode, CS = 1
25
              OUT
                      R20, TIFR
26
      AGAIN: IN
                                               ; read TIFR ; if OCF1A is set skip next instruction
                      R20, OCF1A
              SBRS
28
              RJMP
                      AGAIN
                      R20,1<<OCF1A
29
              LDI
                                               ; clear OCF1A flag
30
              OUT
                      TIFR, R20
31
              LDI
                      R19.0
                      TCCR1B, R19
32
              OUT
                                               ;stop timer
33
              OUT
                      TCCR1A, R19
34
              RET
```

9.1 PROGRAMMING TIMERS 0,1 AND 2

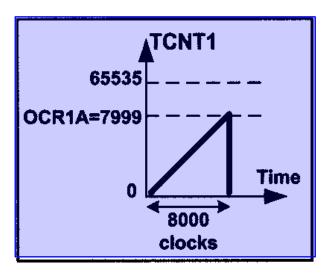

| Bit | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | _ |
|---------------|--------|--------|--------|--------|-------|-------|-------|-------|--------|
| | COM1A1 | COM1A0 | COM1B1 | COM1B0 | FOC1A | FOC1B | WGM11 | WGM10 | TCCR1A |
| Read/Write | R/W | R/W | R/W | R/W | W | W | R/W | R/W | |
| Initial Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | |
| Bit | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | |
| | ICNC1 | ICES1 | - | WGM13 | WGM12 | CS12 | CS11 | CS10 | TCCR1B |
| Read/Write | R/W | R/W | R | R/W | R/W | R/W | R/W | R/W | |
| Initial Value | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | |

9.1 PROGRAMMING TIMERS 0,1 AND 2

Example 9-31

Rewrite Example 9-30 using the TOV1 flag.

Solution:


To wait 1 ms we should load the TCNT1 register so that it rolls over after **8000** = $0 \times 1 = 0 \times 1 =$

```
.INCLUDE "M32DEF.INC"
                       R16, HIGH (RAMEND)
               LDI
                                                      ;initialize stack pointer
               OUT
                        SPH, R16
                       R16, LOW (RAMEND)
               LDI
                       SPL,R16
               OUT
               SBI
                       DDRB, 5
                                                      ; PB5 as an output
                       PORTB, S
 8
                                                      : PB5 = 1
      BEGIN: SBI
                       DELAY 1ms
               RCALL
                        PORTB, 5
10
               CBI
                                                      : PB5 = 0
11
               RCALL
                       DELAY 1ms
12
               RJMP
                        BEGIN
```

9.1 PROGRAMMING TIMERS 0,1 AND 2

```
13
                         ----- Timer1 DELAY
      DELAY 1ms:
14
                                                   :R20 = high byte of 57536
15
              LDI
                      R20, HIGH (65536-8000)
16
              OUT
                      TCNT1H, R20
                                                   :TEMP = 0xE0
17
                      R20, LOW (65536-8000)
              LDI
                                                   :R20 = low byte of 57536
                                                   ;TCNT1L = 0xCl, TCNT1H = TEMP
18
              OUT
                      TCNTIL, R20
                      R20,0x0
19
              LDI
20
                      TCCR1A, R20
              OUT
                                                   ;WGM11:10 = 00
21
              LDI
                      R20,0x1
                      TCCR1B, R20
                                                   ;WGM13:12 = 00, Normal mode, CS = 1
22
              OUT
23
                      R20, TIFR
      AGAIN: IN
                                                   ; read TIFR
                      R20.TOV1
24
              SBRS
                                                   ; if OCF1A is set skip next instruction
25
              RJMP.
                      AGAIN
26
                      R20,1<<TOV1
              LDI
27
              OUT
                      TIFR, R20
                                                   ;clear TOV1 flag
28
              LDI
                      R19,0
29
                      TCCR1B, R19
              OUT
                                                   ;stop timer
30
              OUT
                      TCCR1A, R19
31
              RET
```

9.1 PROGRAMMING TIMERS 0,1 AND 2

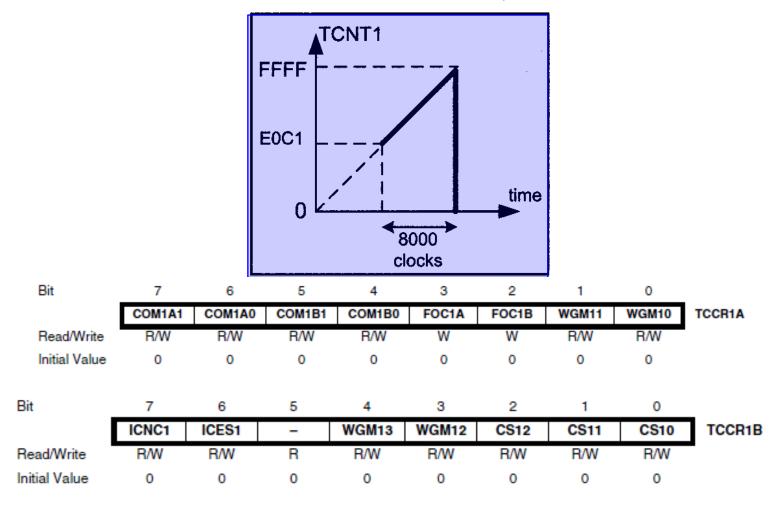

9.1 PROGRAMMING TIMERS 0,1 AND 2

Generating a large time delay using prescaler

Size of time delay depends on

- (a) Crystal frequency
- (b) The timers's 16-bit register

Both of these factors are beyond the control of the AVR programmer. We can use the prescaler option in the TCCR1B register to increase the delay by reducing the period.

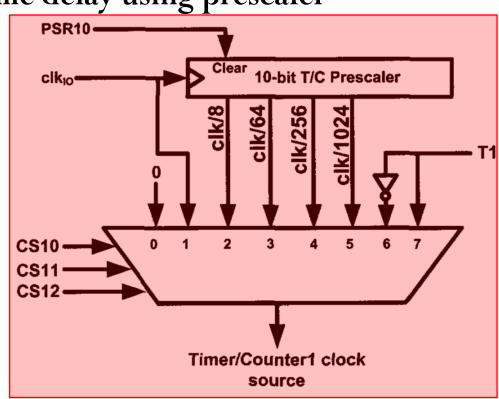


Figure 9-23. Timer/Counter 1 Prescaler


AVR TIMER PROGRAMMING IN ASSEMBLY9.2 COUNTER PROGRAMMING

CS00, CS01, and CS02 bits in the TCCR0 register

When the timer is used as a timer, the AVR's crystal is used as the source of the frequency. When it is used as a counter, however, it is a pulse outside the AVR that increments the TCNTx register.

If CS02:00 is between 1 and 5, the timer gets pulses from the crystal oscillator. In contrast, when CS02:00 is 6 or 7, the timer is used as a counter and gets its pulses from a source outside the AVR chip.

The TCNT0 counter counts up as pulses are fed from pin T0. In ATmega32/ATmegal6, T0 is the alternative function of PORTB.0.

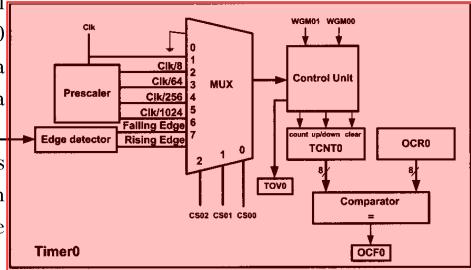

AVR TIMER PROGRAMMING IN ASSEMBLY9.2 COUNTER PROGRAMMING

Example 9-34

Find the value for TCCR0 if we want to program Timer0 as a Normal mode counter. Use an external clock for the clock source and increment on the positive edge.

Solution:

TCCR0 = 0000 0111 Normal, external clock source, no prescaler

In the case of Timer0, when CS02:00 is 6 or 7, pin T0 provides the clock pulse and the counter counts up after each clock pulse coming from that pin. Similarly, for Timer1, when CS12:10 is 6 or 7, the clock pulse coming in from pin T1 (Timer/Counter 1 External Clock input) makes the TCNT1 counter count up.

When CS12:10 is 6, the counter counts up on the negative (falling) edge. When CS12:10 is 7, the counter counts up on the positive (rising) edge. In ATmega32/ATmegal6, T1 is the alternative function of PORTB.1.

9.2 COUNTER PROGRAMMING

Example 9-35

Assuming that a 1Hz clock pulse is fed into pin T0 (PB0), write a program for Counter0 in normal mode to count the pulses on falling edge and display the state of the TCNT0 count on PORTC.

PORTC is connected to 8 LEDs and input T0 (PB0) to 1 Hz pulse.

ATmega32
PORTC
PB0

to LEDs

```
.INCLUDE "M32DEF.INC"
               CBI
                        DDRB, 0
                                                   ;make TO (PBO) input
 3
                        R20, 0xFF
               LDI
                        DDRC, R20
                                                   ;make PORTC output
               OUT
               LDI
                        R20,0x06
                        TCCRO, R20
               OUT
                                                   ; counter, falling edge
      AGAIN:
               IN
                        R20, TCNTO
 9
                        PORTC, R20
               OUT
                                                   : PORTC = TCNTO
10
               IN
                        R16, TIFR
                                                   ;monitor TOVO flag
11
               SBRS
                        R16, TOVO
                                                   ; keep doing if Timer() flag is low
12
               RJMP.
                        AGAIN
13
                        R16,1<<TOV0
               LDI
14
               OUT
                        TIFR, R16
                                                   ; clear TOVO flag
15
               RJMP.
                        AGAIN
                                                   ; keep doing it
```

9.2 COUNTER PROGRAMMING

Example 9-36

Assuming that a 1Hz clock pulse is fed into and input pin T0, use the TOV0 flag to extend Timed to a 16-bit counter and display the counter on 6 LEDs PORTC and PORTD.

```
.INCLUDE "M32DEF.INC"
                LDI
                        R19,0
                                               :R19 = 0
               CBI
                        DDRB. 0
                                               :make TO (PBO)
                LDI
                        R20, 0xFF
               OUT
                        DDRC, R20
                                               :make PORTC output
 6
                        DDRD, R20
               OUT
                                               ;make PORTD output
                LDI
                        R20,0x06
 8
               OUT
                        TCCRO, R20
                                               ; counter, falling edge
 9
      AGAIN:
10
               IN
                        R20, TCNTO
11
               OUT
                         PORTC, R20
                                               : PORTC = TCNTO
12
                        R16, TIFR
               IN
13
                SBRS
                        R16, TOVO
14
               RJMP
                        AGAIN
                                               ; keep doing it
15
                        R16,1<<TOV0
                LDI
                                               ;clear TOVO flag
16
               OUT
                        TIFR, R16
17
                INC
                        R19
                                               :R19 = R19 + 1
18
               OUT
                         PORTD, R19
                                               : PORTD = R19
19
                RJMP
                        AGAIN
                                               ; keep doing it
```

to

LEDs

PORTC and PORTD are connected to 16 LEDs

ATmega32

PORTC

PORTD

PB₀

and input T0 (PB0) to 1 Hz pulse.

T0

ATmega32

PORTC PORTD

9.2 COUNTER PROGRAMMING

Assuming that clock pulses are fed into pin T1 (PB1), write a program for Counter1 in Normal mode to count the pulses on falling edge and display the state of the TCNT1 count on PORTC

and PORTD. PR1 (T1) .INCLUDE "M32DEF.INC" CBI ;make T1 (PB1) input DDRB, 1 LDI R20, 0xFF OUT DDRC, R20 ;make PORTC output OUT DDRD, R20 ;make PORTD output LDI R20,0x0 OUT TCCR1A, R20 LDI R20,0x06 9 OUT TCCR1B, R20 ; counter, falling edge 10 AGAIN: 11 IN R20, TCNT1L ;R20 = TCNT1L, TEMP = TCNTIH PORTC, R20 12 OUT : PORTC = TCNTO 13 IN R20, TCNT1H :R20 = TEMP14 OUT PORTD, R20 ; PORTD = TCNTO 15 IN R16, TIFR 16 SBRS R16, T0V1 17 RJMP AGAIN ; keep doing it 18 LDI R16,1<<TOV1 ; clear TOV1 flag 2023 19 OUT TIFR, R16

:keep doing it.

20

R.TMP

AGATN

AVR TIMER PROGRAMMING IN ASSEMBLY9.2 COUNTER PROGRAMMING


Example 9-38

Assuming that clock pulses are fed into pin T1 (PBI) and a buzzer is connected to pin PORTC.0, write a program for Counter 1 in CTC mode to sound the buzzer every 100 pulses.

Solution:

To sound the buzzer every 100 pulses, we set the OCR1A value to 99 (63 in hex), and then the counter counts up until it reaches OCR1A. Upon compare match, we can sound the buzzer by toggling the PORTC.0 pin.

PC0 is connected to a buzzer and input T1 to a pulse.

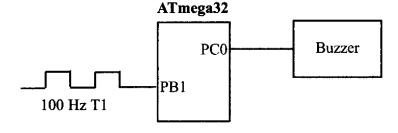

9.2 COUNTER PROGRAMMING

```
.INCLUDE "M32DEF.INC"
 2
                       DDRB, 1
                                                 ;make T1 (PB1) input
               CBI
 3
               SBI
                       DDRC. 0
                                                 ; PCO as an output
               LDI
                       R16,0x1
               LDI
                       R17.0
 6
               LDI
                      R20,0x0
               OUT
                       TCCR1A, R20
                                                ;CTC, counter, falling edge
                       R20,0x0E
 8
               LDI
 9
               OUT
                       TCCR1B, R20
10
               LDI
                       R20.0
      AGAIN:
11
               OUT
                       OCR1AH, R20
                                                 : TEMP = 0
12
                       R20,99
               LDI
13
               OUT
                       OCRIAL, R20
                                                 ;ORC1L = R20, OCR1H = TEMP
14
                       R20, TIFR
      L1:
               IN
                       R20, OCF1A
15
               SBRS
16
               RJMP
                       T.1
                                                 ; keep doing it
17
               LDI
                       R2011<<OCF1A
                                                 ; clear OCF1A flag
18
               OUT
                      TIFR, R20
19
               EOR
                      R17, R16
                                                 ;toggle DO of RI7
20
               OUT
                                                 ;toggle PCO
                       PORTC, R17
21
               RJMP AGAIN
                                                 ; keep doing it
```

AVR TIMER PROGRAMMING IN ASSEMBLY9.3 PROGRAMMING TIMERS IN C

Example 9-39

Write a C program to toggle all the bits of PORTB continuously with some delay. Use Timer0, Normal mode, and no prescaler options to generate the

delay.

```
void TODelay ();
      int main ()
    □{
              DDRB = 0xFF;
                                      //PORTS output port
              while (1)
                  PORTS = 0x55;
                                      //repeat forever
 9
                  TODelay ();
                                      //delay size unknown
10
                  PORTS = 0xAA;
                                      //repeat forever
11
                  TODelay ();
12
13
14
15
     void TODelay ( )
16
    ₽{
17
18
19
              TCNT0 = 0x20;
                                      //load TCNT0
20
              TCCR0 = Ox01;
                                      //TimerO, Normal mode, no prescaler
21
              while ((TIFR&Ox1)=0); //wait for TFO to roll over
              TCCR0 = 0;
23
              TIFR = Ox1;
                                      //clear TFO
```

AVR TIMER PROGRAMMING IN ASSEMBLY9.3 PROGRAMMING TIMERS IN C

Calculating delay length using timers

As we saw in the last two sections, the delay length depends primarily on two factors:

- (a) the crystal frequency, and
- (b) the prescaler factor. A third factor in the delay size is the C compiler because various C compilers generate different hex code sizes, and the amount of overhead due to the instructions varies by compiler.

9.3 PROGRAMMING TIMERS IN C

Example 9-40

Write a C program to toggle only the PORTB.4 bit continuously every 70 μ s. Use Timer0, Normal mode, and 1:8 prescaler to create the delay. Assume XTAL = 8 MHz.

Solution:

$$XTAL = 8MHz \Rightarrow T_{\text{machine cycle}} = 1/8 \text{ MHz}$$

Prescaler = 1:8
$$\Rightarrow$$
 T_{clock} = 8 × 1/8 MHz = 1 μ s

70 μs/1 μs = 70 clocks
$$4 \Rightarrow$$
 1 + 0xFF - 70 = 0x100 — 0x46 = 0xBA = 186

9.3 PROGRAMMING TIMERS IN C

```
#include "avr/io.h"
 2
     void TODelay ( );
     int main ( )
    □{
 6
              DDRB = 0xFF:
                                                  //PORTS output port
 7
              while (1)
 8
 q
                          TODelay();
                                                 //TimerO, Normal mode
                          PORTB = PORTB * 0x10; //toggle PORTB.4
10
11
12
13
     void TODelay ( )
14
    B{
15
16
              TCNT0 = 186:
                                                  //load TCNTO
17
              TCCR0 = 0x02;
                                                  //TimerO, Normal mode, 1:8 prescaler
18
              while ((TIFR&(1<<TOVO))=0);
                                                  //wait for TOVO to roll over
19
              TCCR0 = 0;
20
                                                  //turn off Timer0
21
              T1FR = 0x1;
                                                  //clear TOV0
22
23
```

AVR TIMER PROGRAMMING IN ASSEMBLY9.3 PROGRAMMING TIMERS IN C

Example 9-41

Write a C program to toggle only the PORTB.4 bit continuously every 2 ms. Use Timer1, Normal mode, and no prescaler to create the delay. Assume XTAL = 8 MHz.

Solution:

```
XTAL = 8 MHz \Rightarrow T<sub>machine cycle</sub> = 1/8 MHz = 0.125 μs
Prescaler = 1:1 T<sub>Clock</sub>= 0.125 μs
2 ms/0.125 μs = 16,000 clocks = 0x3E80 clocks
1 + 0xFFFF - 0x3E80 = 0xC180
```

9.3 PROGRAMMING TIMERS IN C

```
#include "avr/io.h"
     void T1Delay ( );
     int main ()
    ∃{
             DDRB = 0xFF;
                                          //PORTE output port
              while (1)
                      PORTB = PORTB ^ (1<<PB4); //toggle PB4
                                                  //delay size unknown
                      T1Delay();
10
11
12
13
    void T1Delay ( )
14
    ■{
15
              TCNT1H = 0xC1;
                                                  //TEMP = 0xC1
16
              TCNTIL = 0x80;
17
              TCCR1A = 0x00:
18
                                                  //Normal mode
19
              TCCR1B = 0x01;
                                                  //Normal mode, no prescaler
20
21
              while ((TIFR&(0x1<<TOV1))=0);
                                               //wait for TOV1 to roll over
22
23
              TCCR1B = 0;
                                                  //clear TOV1
24
              TIFR = 0x1 << TOV1;
25
```

AVR TIMER PROGRAMMING IN ASSEMBLY9.3 PROGRAMMING TIMERS IN C

Example 9-42 (C version of Example 9-32)

Write a C program to toggle only the PORTB.4 bit continuously every second. Use Timer1, Normal mode, and 1:256 prescaler to create the delay. Assume XTAL = 8 MHz.

Solution:

```
XTAL = 8 MHz \Rightarrow T<sub>machine cycle</sub> = 1/8 MHz = 0.125 \mus = T<sub>Clock</sub>
Prescaler 1:256 \Rightarrow T<sub>Clock</sub> = 256 x 0.125 \mus = 32 \mus
1s/32 \mus = 31,250 clocks = 0x7Al2 clocks \Rightarrow 1 + 0xFFFF - 0x7Al2 = 0x85EE
```

9.3 PROGRAMMING TIMERS IN C

```
#include "avr/io.h"
     void TODelay ();
     int main ()
    -{
              DDRB = 0xFF;
                                          //PORTB output port
              while (1)
 8
9
                      PORTB = 0x55;
                                              //repeat forever
10
                                              //delay size unknown
                      TODelay ();
11
                      PORTB = 0xAA;
                                              //repeat forever
12
                      TODelay ();
13
14
15
16
    void TODelav ()
17
    □{
18
              TCNT0 = 0x20;
                                              //load TCNTO
19
              TCCR0 = 0x01;
                                              //TimerO, Normal mode, no prescaler
20
              while ((TIFR&0x1)==0);
                                              //wait for TFO to roll over
21
              TCCR0 = 0;
22
              TIFR = 0x1;
                                              //clear TF0
23
```

AVR TIMER PROGRAMMING IN ASSEMBLY9.3 PROGRAMMING TIMERS IN C

C programming of Timers 0 and 1 as counters

Timers can be used as counters if we provide pulses from outside the chip instead of using the frequency of the crystal oscillator as the clock source. By feeding pulses to the T0 (PB0) and T1 (PB1) pins, we use Timer0 and Timer1 as Counter 0 and Counter 1, respectively.

Example 9-43 (C version of Example 9-36)

Assuming that a 1 Hz clock pulse is fed into pin T0, use the TOV0 flag to extend Timer0 to a 16-bit counter and display the counter on PORTC and PORTD.

PORTC and PORTD are connected to 16 LEDs.

To (PB0) is connected to a

1-Hz external clock.

ATmega32

to LEDs.

1 Hz

PD

PD

LEDs

9.3 PROGRAMMING TIMERS IN C

```
#include "avr/io.h"
 2
 3
      int main ()
 4
    ∃{
                                      //activate pull-up of PBO
              PORTB = 0x01;
 6
              DDRC = OxFF;
                                      //PORTC as output
 7
              DDRD = OxFF;
                                       //PORTD as output
 8
 9
              TCCR0 = 0x06;
                                       //output clock source
10
              TCNT0 = 0x00;
11
12
              while (1)
13
14
                       do
15
16
                               PORTC = TCNT0:
17
                       while ((TIFR&(0x1 << TOV0)) == 0);
                                                       //wait for TOVO to roll over
18
19
                       TIFR = 0x1 << TOV0;
                                                        //clear TOVO
20
                                                        //increment PORTD
                       PORTD ++:
21
```

9.3 PROGRAMMING TIMERS IN C

Example 9-44 (C version of Example 9-37)

Assume that a 1-Hz external clock is being fed into pin T1 (PB1). Write a C program for Counter1 in rising edge mode to count the pulses and display the TCNT1H and TCNT11, registers on PORTD and PORTC, respectively.

```
#include "avr/io.h"
      int main ()
                                                                                      ATmega32
    ∃{
               PORTB = 0x01:
                                            //activate pull-up of
               DDRC = 0xFF;
                                             //PORTC as output
                                                                                                      PC and
 6
               DDRD = 0xFF;
                                             //PORTD as output
                                                                                                      PD to
                                                                                                      LEDs
                                                                                      PB1
                                             //output clock source
               TCCR1A = 0x00:
                                             //output clock source 1 Hz clock
                                                                                  T1
               TCCR1B = 0x06:
10
11
               TCNT1H = 0x00;
                                             //set count to 0
12
               TCNT1L = 0x00;
                                             //set count to 0
13
               while (1)
                                             //repeat forever
14
15
                       do
16
17
                            PORTC = TCNT1L;
18
                            PORTD = TCNT1H;
                                                     //place value on pins
19
20
                       while (TIFRE& (0x1 << TOV1)) == 0);
                                                         //wait for TOV1
21
22
                       T1FR = 0x1 << TOV1;
                                                          //clear TOV1
23
```