Essential Mathematical Methods for Engineers

Lecture 2: Transfer function and system characterisation

Outline

- transfer function, poles and zeros
- transfer function and frequency response
 - frequency response from pole/zero diagram
 - Fourier transform of periodic signals
 - measurement of frequency response
 - Bode plots
 - Fourier and Laplace
- transfer function and impulse response
- time-domain response
 - first order systems
 - second order systems
- rise time and bandwidth

Transfer function and system characterisation

Transfer function, poles and zeros

• for zero initial conditions a linear system can be described by:

$$a_0 y + a_1 \frac{dy}{dt} + \dots + a_n \frac{d^n y}{dt^n} = b_0 x + b_1 \frac{dx}{dt} + \dots + b_m \frac{d^m x}{dt^m}$$

$$a_0 Y(s) + a_1 sY(s) + \dots + a_n s^n Y(s) = b_0 X(s) + b_1 sX(s) + \dots + b_m s^m X(s)$$

$$A(s) Y(s) = B(s) X(s)$$

where A(s) and B(s) are polynomials in s

- therefore $H(s) = \frac{Y(s)}{X(s)} = \frac{B(s)}{A(s)} = \frac{b_0 + b_1 s + \dots + b_m s^m}{a_0 + a_1 s + \dots + a_m s^n}$
- poles correspond to values of s for which H(s) is equal to infinity
- \blacksquare zeros correspond to values of s for which H(s) is equal to zero

Transfer function and system characterisation

.

Transfer function, poles and zeros

Example

A typical transfer function that might be obtained by applying Kirchhoff's laws to a circuit is:


$$H(s) = \frac{s^2 + 2s + 2}{s^2 + 4s + 13}$$

Determine the positions of its poles and zeros.

Transfer function and system characterisation

Transfer function, poles and zeros

A pole/zero diagram illustrating a pair of complex conjugate poles and zeros:

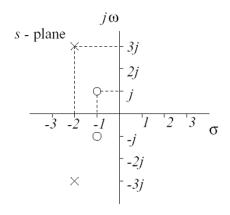


Transfer function and system characterisation

5

Transfer function, poles and zeros

A plot of |H(s)| against s for transfer function $H(s) = 1/(s^2 + 2s + 5)$

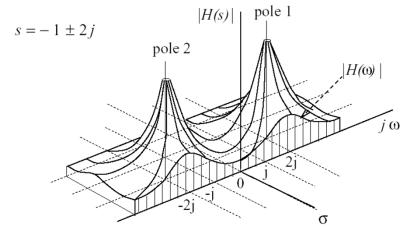

Transfer function and system characterisation


Transfer function and frequency response

the frequency response of a system is defined as:

$$H(\omega) = \frac{F[\text{ output }]}{F[\text{ input }]} = \frac{Y(\omega)}{X(\omega)}$$

- given an input $\exp(j\omega t)$ the output is $H(\omega)\exp(j\omega t)$
- for the simple *RC* circuit the frequency response, or Fourier transfer function is given by:

$$H(\omega) = \frac{1}{1 + j\omega RC}$$

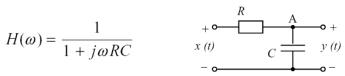


Transfer function and frequency response

note the similarity to the Laplace transform

$$H(s) = \frac{Y(s)}{X(s)} = \frac{1}{(1 + RCs)}$$

$$H(\omega) = \frac{1}{1 + j\omega RC}$$

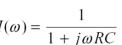



• for $\sigma = 0$ the Laplace and Fourier basis functions are identical:

$$\exp(st) = \exp(\sigma t + j\omega t)$$

$$\exp(st) = \exp(j\omega t)$$

- we can observe $|H(\omega)|$ in the plot of |H(s)| by setting $\sigma = 0$
- Q: what if the poles moved closer to the axis?

Transfer function and frequency response

Example

If the Laplace transfer function of a system is:

$$H(s) = \frac{1}{s+7}$$

what is its frequency response?

Transfer function and system characterisation

9

Transfer function and frequency response

Frequency response from pole/zero diagram

a transfer function with m zeros and n poles

$$H(s) = \frac{A(s - z_1)(s - z_2) \cdots (s - z_m)}{(s - p_1)(s - p_2) \cdots (s - p_n)}$$

• replacing s with $j\omega$

$$H(\omega) = \frac{A(j\omega - z_1)(j\omega - z_2)\cdots(j\omega - z_m)}{(j\omega - p_1)(j\omega - p_2)\cdots(j\omega - p_n)}$$

amplitude response

$$|H(\omega)| = \frac{A|j\omega - z_1||j\omega - z_2| \cdots |j\omega - z_m|}{|j\omega - p_1||j\omega - p_2| \cdots |j\omega - p_n|}$$

phase response

$$\angle H(\omega) = \angle (j\omega - z_1) + \angle (j\omega - z_2) + \cdots + \angle (j\omega - z_m)$$
$$- \angle (j\omega - p_1) - \angle (j\omega - p_2) \cdots - \angle (j\omega - p_n)$$

Transfer function and system characterisation

Transfer function and frequency response Frequency response from pole/zero diagram

- we can thus obtain the amplitude and phase responses for any ω by evaluating the modulus and argument
- it is useful to visualise the term $(j\omega_0 p_1)$
- consider a simple example of a single pole system

$$H(s) = \frac{1}{(s - p_1)}$$

the frequency response is given by

$$H(\omega) = \frac{1}{(j\omega - p_1)}$$


Transfer function and system characterisation

11

Transfer function and frequency response

Frequency response from pole/zero diagram


• evaluating the amplitude and phase response through consideration of $(j\omega_0 - p_1)$ as a vector

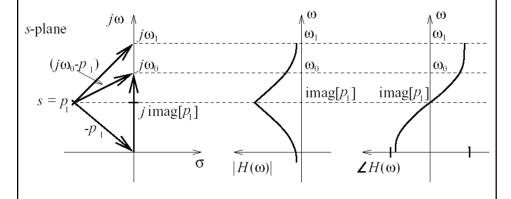

Transfer function and system characterisation

Transfer function and frequency response Frequency response from pole/zero diagram

evaluating the phase response

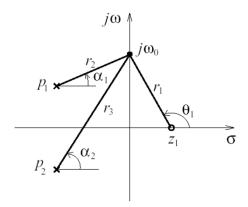

$$|H\left(\omega_{0}\right)| = \frac{r_{1}}{r_{2} r_{3}}$$

$$\mathbf{Z}H\left(\boldsymbol{\omega}_{0}\right)=\boldsymbol{\theta}_{1}-\boldsymbol{\alpha}_{1}-\boldsymbol{\alpha}_{2}$$

Transfer function and system characterisation

1:

Transfer function and frequency response Frequency response from pole/zero diagram


Example

Sketch the amplitude frequency response of each of the following 2 systems:

(a)
$$(s^2 + 9)/(s^2 + 0.6s + 4.09)$$

(b)
$$(s^2 + 0.6s + 4.09)/(s^3 + 0.8s^2 + 9.16s)$$

Transfer function and system characterisation

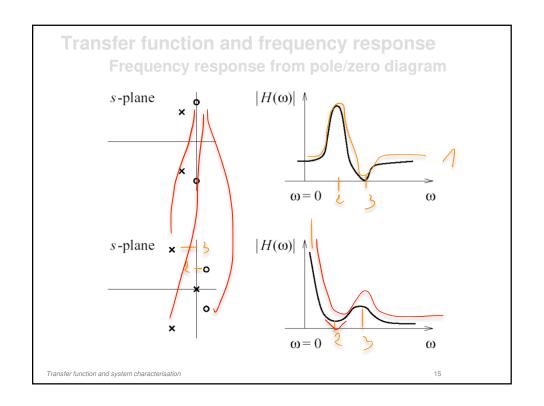


Transfer function and frequency response

Fourier transform of periodic signals

• a cosine wave $x(t) = A \cos(\omega_a t)$

can be represented by $X(\omega) = A\pi [\delta(\omega - \omega_a) + \delta(\omega + \omega_a)]$

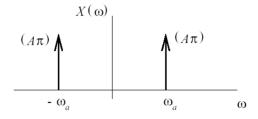

Transfer function and system characterisation

Transfer function and frequency response Fourier transform of periodic signals

as justification consider a signal with Fourier transform

$$X(\omega) = \delta(\omega - \omega_a)$$

its time domain representation is given by

$$x(t) = F^{-1}[X(\omega)]$$

$$= \frac{1}{2\pi} \int_{-\infty}^{\infty} X(\omega) \exp(j\omega t) d\omega = \frac{1}{2\pi} \int_{-\infty}^{\infty} \delta(\omega - \omega_a) \exp(j\omega_a t) d\omega$$

$$= \frac{1}{2\pi} \int_{-\infty}^{\infty} \delta(\omega - \omega_a) \exp(j\omega t) d\omega = \frac{1}{2\pi} \exp(j\omega_a t) \int_{-\infty}^{\infty} \delta(\omega - \omega_a) d\omega$$

$$= \frac{1}{2\pi} \exp(j\omega_a t)$$

thus
$$F[\exp(j\omega_a t)] = 2\pi\delta(\omega - \omega_a)$$

Transfer function and system characterisation

17


Transfer function and frequency response Fourier transform of periodic signals

Example

Determine the Fourier transform of a sine wave $A \sin(\omega_a t)$

Example

Derive an expression for the Fourier transform of the following signal:

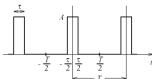

Note the similarity to the example in the previous lecture

This example shows how the Fourier transform of a periodic signal is easily derived from the Fourier series.

Transfer function and system characterisation

Transfer function and frequency response

Measurement of frequency response

- we can't generate $\exp(j\omega t)$ in order to measure $H(\omega)\exp(j\omega t)$ and deduce $H(\omega)$
- however we can generate a cosine or sine wave from the addition of two complex phasors

$$\cos(\omega t) = \frac{\exp(j\omega t) + \exp(-j\omega t)}{2} = \Re[\exp(j\omega t)]$$

- using superposition the response to a cosine wave is
 - $\frac{1}{2} H(\omega) \exp(j\omega t) + \frac{1}{2} H(-\omega) \exp(-j\omega t)$ $= \frac{1}{2} H(\omega) \exp(j\omega t) + \frac{1}{2} H^{*}(\omega) \exp(-j\omega t)$ $= \frac{1}{2} H(\omega) \exp(j\omega t) + \frac{1}{2} (H(\omega) \exp(j\omega t))^{*}$ $= \Re[H(\omega) \exp(j\omega t)]$

Transfer function and system characterisation

19

Transfer function and frequency response

Measurement of frequency response

 but H(ω) is complex and can be expressed in terms of magnitude and phase, thus

$$\Re[|H(\omega)| \exp(j \angle H(\omega)) \exp(j\omega t)]$$

$$= |H(\omega)| \Re[\exp(j \angle H(\omega)) \exp(j\omega t)]$$

$$= |H(\omega)| \Re[\exp(j\omega t + j \angle H(\omega))]$$

$$= |H(\omega)| \cos(\omega t + \angle H(\omega))$$

- the output is a cosine wave of identical frequency but amplified by $|H(\omega)|$ and phase shifted by $\angle H(\omega)$
- the complex frequency response is thus given by:

 $H(\omega) = |H(\omega)| \cos(\angle H(\omega)) + j|H(\omega)| \sin(\angle H(\omega))$

Transfer function and system characterisation

Transfer function and frequency response

Bode plots

- a more powerful graphical technique of frequency response analysis
- with any transfer function H(s) there are four general factors
 - a constant gain, K;
 - poles or zeros at the origin, s;
 - poles or zeros on the real axis terms of the form

$$(s+a) = a\left(\frac{s}{a}+1\right) = \frac{1}{\tau}(\tau s + 1)$$

- complex conjugate poles or zeros, $(s^2 + As + B)$
- the quadratic is usually expressed as

$$(s^2 + As + B) = (s^2 + 2\zeta\omega_0 s + \omega_0^2)$$

where ζ is the damping factor and ω_0 is the natural, undamped frequency

Transfer function and system characterisation

2

Transfer function and frequency response Bode plots

• scaling by ω_0 :

$$(s^2 + As + B) = \omega_0^2 ((s/\omega_0)^2 + 2\zeta(s/\omega_0) + 1)$$

for which the roots are complex if ζ < 1.

considering the transfer function

$$H(s) = \frac{K}{s (\tau s + 1) ((s/\omega_0)^2 + 2\zeta(s/\omega_0) + 1)}$$

for which there is a

- constant gain, K
- pole at the origin
- pole on the real axis at $s = -1/\tau$
- pair of complex poles

Transfer function and system characterisation

Transfer function and frequency response Bode plots

• to obtain the frequency response

$$H(\omega) = \frac{K}{j\omega(j\omega\tau + 1) \left((j\omega/\omega_0)^2 + 2\zeta(j\omega/\omega_0) + 1 \right)}$$

• the logarithmic magnitude:

$$20\log_{10}|H(\omega)| = 20\log_{10}(K) - 20\log_{10}(|j\omega|) - 20\log_{10}(|j\omega\tau + 1|) - 20\log_{10}(|1 + (2\zeta/\omega_0)j\omega + (j\omega/\omega_0)^2|)$$

• the phase:


$$\underline{/}H(\omega) = -90^{\circ} - \tan^{-1}(\omega\tau) - \tan^{-1}\left(\frac{2\zeta\omega_0\omega}{\omega_0^2 - \omega^2}\right)$$

Transfer function and system characterisation

23

Transfer function and frequency response Bode plots


- constant gain term:
 - a gain of $20\log_{10}(K)$ at all frequencies
- pole at origin:
 - gives rise to a $j\omega$ term in denominator
 - gain of $20\log_{10}(|j\omega|)$ a straight line with slope -20 dB/decade
 - 0 dB at 1 rad/s
 - phase shift of -90 $^{\circ}$ due to presence of j

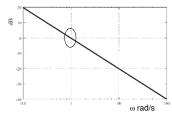


Transfer function and system characterisation

Transfer function and frequency response Bode plots

- pole on real axis:
 - a pole at $s = -1/\tau$ gives rise to the term $j\omega\tau + 1$ in the denominator
 - at the cut-off frequency $\omega = 1/\tau$, the gain is -3 dB
 - above cut-off the gain has a slope of -20 dB/decade
 - phase of -45° at cut-off,
 - ~0° 1 decade below, ~-90° 1 decade above

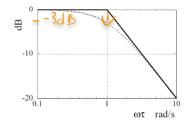

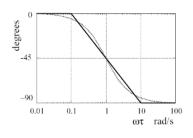



Transfer function and system characterisation

25

Transfer function and frequency response Bode plots

- complex conjugate pair of poles
 - gives rise to the term $((j\omega/\omega_0)^2 + 2\zeta(j\omega/\omega_0) + 1)$ in denominator
 - for $\omega < \omega_0$ the gain is ~0 dB
 - above cut-off the gain has a slope of -40 dB/decade
 - at ω_0 the gain is dependent on ζ
 - phase \sim -90° at ω_0 , \sim 0° 1 decade below, \sim -180° 1 decade above

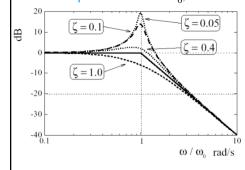

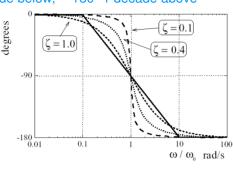

Transfer function and system characterisation


Transfer function and frequency response Bode plots

Example

Sketch the Bode plot of a system with the following transfer function:

$$H(s) = \frac{s + 20}{s + 2000}$$

Transfer function and system characterisation

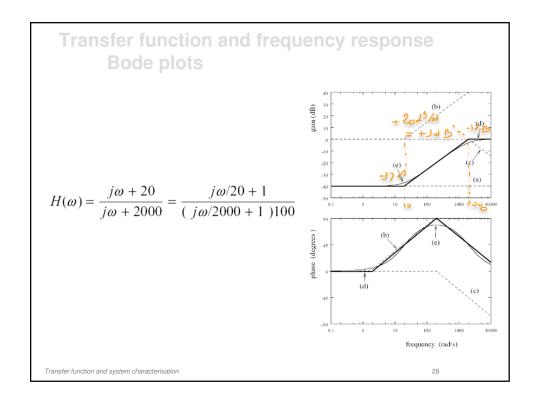

Transfer function and impulse response

for a system with poles at

$$s = p_1 = \sigma_a + j\omega_a$$

$$s = p_2 = \sigma_a - j\omega_a$$

the transfer function is

$$H(s) = \frac{1}{(s - \sigma_a - j\omega_a)_{p_1} (s - \sigma_a + j\omega_a)_{p_2}}$$

taking a partial fraction expansion

$$H(s) = \frac{A_1}{(s - \sigma_a - j\omega_a)_{p_1}} + \frac{A_2}{(s - \sigma_a + j\omega_a)_{p_2}}$$

$$H(s) = \frac{\frac{1}{2j\omega_a}}{\left(s - \sigma_a - j\omega_a\right)_{p_1}} + \frac{\frac{-1}{2j\omega_a}}{\left(s - \sigma_a + j\omega_a\right)_{p_2}}$$

Transfer function and system characterisation

29


Transfer function and impulse response

• the impulse response is

$$h(t) = \left[\frac{1}{2j\omega_a} \exp((\sigma_a + j\omega_a) t) \right]_{p_1} - \left[\frac{1}{2j\omega_a} \exp((\sigma_a - j\omega_a) t) \right]_{p_2}$$
$$= \frac{1}{2j\omega_a} \exp((\sigma_a t)) \left[\exp((j\omega_a t)) - \exp((-j\omega_a t)) \right]$$
$$= \frac{1}{\omega_a} \exp((\sigma_a t)) \underbrace{\sin((\omega_a t))}_{p_2}$$

- σ_a controls the decay rate and ω_a the frequency of oscillation
- there is a strong relation between the impulse response and pole location

Transfer function and system characterisation

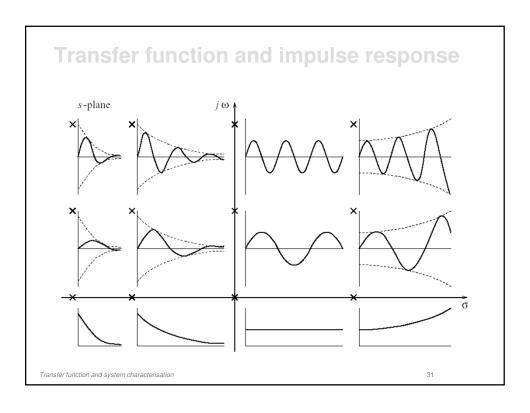

Transfer function and impulse response

- this relationship tells us about the stability of the system
- if a pole has $\sigma > 0$ the output will grow exponentially
 - such a system is said to be unstable
- if a pole has $\sigma < 0$ the response will decay exponentially
 - such a system is said to be stable
- most systems have several poles and zeros

$$H(s) = \frac{A(s-z_1)(s-z_2)\cdots(s-z_m)}{(s-p_1)(s-p_2)\cdots(s-p_n)}$$

Transfer function and system characterisation

Transfer function and impulse response

• the transfer function may be written as

$$H(s) = \frac{A_1}{(s - p_1)} + \frac{A_2}{(s - p_2)} + \dots + \frac{A_n}{(s - p_n)}$$

and taking inverse Laplace transforms

$$h(t) = A_1 e^{p_1 t} + A_2 e^{p_2 t} + \cdots + A_n e^{p_n t} +$$

- the impulse response is the sum of complex phasors such as $e^{p_n t}$
 - these phasors are called the modes of the system
 - all must have σ < 0 for the system to be stable
 - all poles thus lie in the left-half of the s-plane

Transfer function and system characterisation

3

Transfer function and impulse response

Example


Is the transfer function $H(s) = s/(s^2 + 4s + 68)$ stable or unstable? What is the period of oscillation and the time constant of its impulse response?

Transfer function and system characterisation

Time domain response

- time-domain or transient response
- u(t)

- unit step function
- when applied to a system

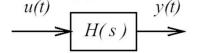

$$Y(s) = H(s) \frac{1}{s} \qquad s \ Y(s) = H(s)$$

$$s Y(s) = H(s)$$

and taking inverse Laplace transforms of both sides

 $L[u(t)] = \frac{1}{s}$

$$\frac{dy}{dt} = h(t)$$


the impulse response is the derivative of the step response

Transfer function and system characterisation

Time domain response

First order systems

a simple first order, RC circuit

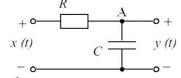

with transfer function

$$H(s) = \frac{1}{(1 + sRC)}$$

thus there is one real pole at s = -1/RC


to obtain the step response:
$$Y(s) = H(s) X(s) = \frac{1}{(1 + sRC)} \frac{1}{s}$$
$$= \frac{1}{s} - \frac{1}{\left(s + \frac{1}{RC}\right)}$$

Time domain response First order systems

taking inverse Laplace transforms

$$y(t) = 1 - \exp\left(-\frac{t}{RC}\right); \quad t \ge 0.$$

• we obtain the response to the step input

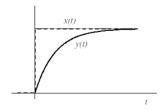

Time domain response

Second order systems

• repeating for an *RLC* circuit

$$Y(s) = \frac{\frac{1}{sC}}{R + sL + \frac{1}{sC}} X(s)$$

therefore

$$H(s) = \frac{1}{s^2 LC + sCR + 1}$$

$$= \frac{\frac{1}{LC}}{s^2 + \frac{R}{L}s + \frac{1}{LC}}$$

Transfer function and system characterisation

normalising to the form

$$H(s) = \frac{\omega_0^2}{s^2 + 2\zeta \omega_0 s + \omega_0^2}$$

we have

$$\omega_0^2 = \frac{1}{LC}$$
 (omega)
$$\zeta = \frac{R}{2\sqrt{\frac{L}{C}}}$$
 (zeta)

the poles of H(s) are

$$s_1 = -\zeta \omega_0 + \omega_0 \sqrt{\zeta^2 - 1}$$


$$s_2 = -\zeta \omega_0 - \omega_0 \sqrt{\zeta^2 - 1}$$


Transfer function and system characterisation

3

Time domain response Second order systems

- three possibilities
 - $-\zeta < 1 \Rightarrow$ two complex roots (underdamped)
 - $-\zeta = 1 =$ two real roots at $s = -\omega_0$ (critically damped)
 - $-\zeta > 1 =$ two real roots (overdamped)

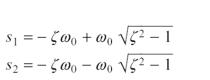

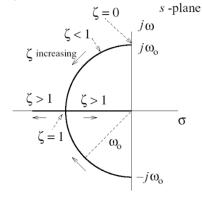

Transfer function and system characterisation

- what happens to the impulse response as ζ changes
- underdamped $(\zeta < 1)$ $p_1, p_2 = -\zeta \omega_0 \pm j\omega_0 \sqrt{1 \zeta^2}$
 - the impulse response is given by

$$h(t) = \frac{\omega_0}{\sqrt{1 - \zeta^2}} e^{-\zeta \omega_0 t} \sin(\sqrt{1 - \zeta^2} \omega_0 t)$$


- regarding the poles
 - the real part determines the time constant associated with the exponential decay
 - the imaginary part determines the frequency of oscillation

Transfer function and system characterisation

4

Time domain response Second order systems

- critically damped (ζ = 1)
 - two identical real poles $p_1 = p_2 = -\omega_0$
 - for real poles there is no oscillation
 - the impulse response is $h(t) = \omega_0 t e^{-\omega_0 t}$

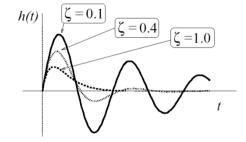

Transfer function and system characterisation

- overdamped $(\zeta > 1)$
 - equivalent to two first order systems with two different real poles

$$p_1, p_2 = -\zeta \omega_0 \pm \omega_0 \sqrt{\zeta^2 - 1}$$

- the impulse response is

$$h(t) = \frac{\omega_0}{\sqrt{\zeta^2 - 1}} e^{-\zeta \omega_0 t} \sinh\left(\sqrt{\zeta^2 - 1} \, \omega_0 t\right)$$

- again there is no oscillation due to real poles

Transfer function and system characterisation

43

Time domain response Second order systems

for the step response

$$Y(s) = H(s) L[u(t)]$$

$$= \frac{\omega_0}{(s^2 + 2\zeta\omega_0 s + \omega_0^2)} \frac{1}{s}$$

and again taking inverse Laplace transforms


$$y(t) = L^{-1}[Y(s)]$$

$$= 1 - \frac{\exp(-\zeta \omega_0 t)}{\sqrt{1 - \zeta^2}} \sin\left(\sqrt{1 - \zeta^2} \omega_0 t + \theta\right)$$

where
$$\theta = \tan^{-1} \left(\frac{\sqrt{1-\zeta^2}}{\zeta} \right)$$

Transfer function and evetem characterisation

- the last result applies to the underdamped case
- for other damping factor values

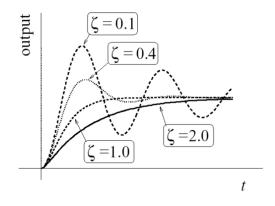

Transfer function and system characterisation

45

Time domain response Second order systems

Example


What is the damping factor and undamped natural frequency of a system with transfer function:

$$H(s) = 7s/(12s^2 + 118.8s + 2700)$$
?

Transfer function and system characterisation

- the rise time measures the speed of response
 - rise time, T_r : time taken to reach 90% of final value, F
 - peak time, T_p : time to first peak, P, for $\zeta < 1$
 - settling time, T_s : time to get to within 2% of F
 - percentage overshoot


$$100 \; \frac{(P-F)}{F}$$

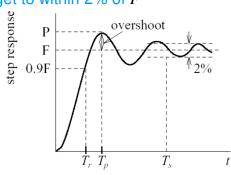

Transfer function and system characterisation

Rise time and bandwidth

• the half power bandwidth ω_B is the interval of frequencies where the gain varies by less than 3 dB

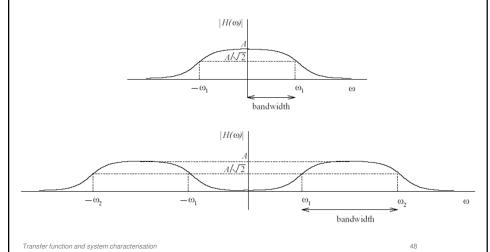

• the step response of a first order system is given by

$$y(t) = 1 - \exp\left(-\frac{t}{RC}\right)$$

• since the final value $F = y(\infty) = 1$, T_r can be found from

$$0.9F = 1 - \exp\left(-\frac{T_r}{RC}\right)$$


• thus $T_r = RC \ln(10)$ s

Transfer function and system characterisation

40

Rise time and bandwidth

• the frequency response for a first order system:

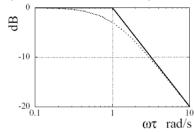

- the bandwidth is $1/\tau = 1/RC$ rad/s for the simple RC circuit
- thus the rise time is the reciprocal of the bandwidth
- a faster response would require more bandwidth


Transfer function and system characterisation

for an underdamped second order system

$$T_p = \frac{\pi}{\omega_0 \sqrt{1 - \zeta^2}} \text{ s}$$

and the percentage overshoot, PO = $100 \exp\left(\frac{-\zeta \pi}{\sqrt{1-\zeta^2}}\right)$

- a typical response:
 - the peak is associated with ω_0 and ω_R the resonant frequency
 - the bandwidth depends on ζ

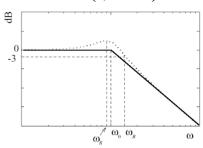

Transfer function and system characterisation

51

Rise time and bandwidth


- two important trade-offs
 - case (i): ζ constant
 - if ω_B is increased then so is ω_0 which reduces T_p and in turn T_r
 - thus the rise time is inversely proportional to bandwidth
 - · a faster response requires more bandwidth
 - case (ii): ω_B constant
 - can be achieved by holding ω_0 constant
 - T_p can be reduced by reducing ζ which would also reduce T_r
 - thus a faster response can be achieved just by reducing ζ
 - greater overshoot in the time domain
 - · higher resonant peak in the frequency domain

Transfer function and system characterisation

Example

A low pass, second order system has a peak time of 2 s and an overshoot of 10%. Estimate its bandwidth.

Transfer function and system characterisation

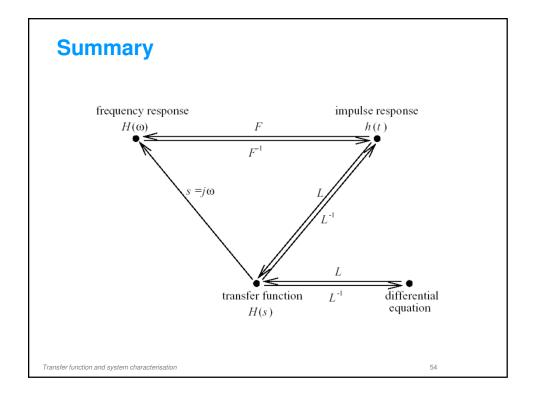

Summary

- you should be able to:
 - calculate the poles and zeros of first and second order systems and plot them in the s-plane;
 - sketch the frequency response of a system from its pole/zero map;
 - draw the Bode plots of first, second and third order systems;
 - sketch the impulse response of first and second order systems from their transfer function;
 - identify if a system is stable or unstable;
 - sketch the step response of first and second order systems from their transfer function;
 - describe how the rise time of a second order system is related to both overshoot and bandwidth.

Transfer function and system characterisation