

Where are the digital circuits used?

Today, almost each electronic device is implemented as a digital circuit.

Examples:

- The central processing unit (CPU): It is a "synchronous sequential" circuit. We will see this type of digital circuits in the second part of this course.
- Memories of computers: We will see flip-flops and latches, which are digital circuits and building blocks of memories.
- Home electronics: TV, control unit of the wash machine, video and audio devices.
- · Cars: ABS, engine control
- · Cell phones





http://akademi.itu.edu.tr/en/buzluca/ http://www.buzluca.info



2011 - 2020 Feza BUZLUCA

1.3

Digital Circuits


Analog - Digital Signals:


In the real world (where we live), many physical quantities (current, voltage, temperature, light intensity, weight of a person etc.) vary within a continuous range.

This kind of signals, which can get any possible value between the limits are called analog signals.

An analog signal has a theoretically infinite resolution.

Binary digital signals, can take at a certain moment only one of two possible values: 0 - 1, high - low, on - off, true-false, open - closed.

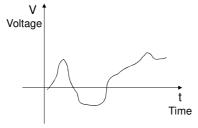



Analog signal (continuous)

One-bit Binary Digital Signal (discrete)

To represent an analog signal more than one bits are necessary (see coding).

http://akademi.itu.edu.tr/en/buzluca/ http://www.buzluca.info

Advantages of Digital Systems:

Because of their advantages, today digital systems are used in many areas instead of the old analog systems.

Examples: Photography, video, audio, automobile engines, telephone systems and so on.

Advantages of Digital Systems:


- Mathematics of digital design (Boolean algebra) is simpler than the mathematics of the analog systems.
- · Digital systems are easier to test and debug.
- Flexibility and programmability. Today, digital systems are implemented in the form of programmable logic devices and computers (embedded system).
 In this way, devices can be re-programmed according to new requirements without changing the hardware.
- Digital data can be stored and processed in computer systems.
- · Digital systems work faster.
- · Digital systems are growing smaller and getting cheaper.
- Digital systems continue to evolve (but improvements are slowing down).
 See the Computer Architecture lecture notes.

http://akademi.itu.edu.tr/en/buzluca/ http://www.buzluca.info



2011 - 2020 Feza BUZLUCA


1.5

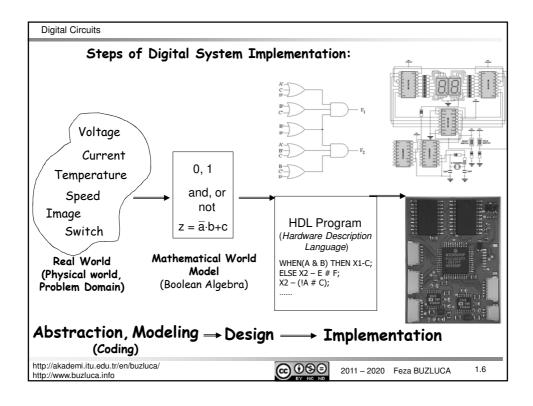

Binary Digital Coding:

As digital systems operate on binary digital signals, they can process only two different values (binary data); ON-OFF, LOW-HIGH, 0-1.

Therefore, physical quantities (voltage, temperature, etc.), and any kind of data (letter, number, color, sound) must be converted to binary numbers (digitally coded) before they can be processed by digital circuits.

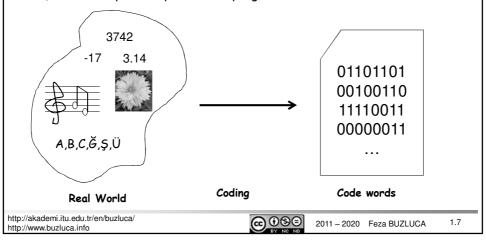

Digital Circuits

Digital Coding (cont'd):

Using n bits (binary digit) 2ⁿ different "things" can be represented.

n bits \rightarrow 2ⁿ different "things"

For example, an 8-bit ($binary\ digit$) binary number can represent 28 (256) different "things".

These can be 256 different colors, 256 symbols, integers between 0 and 255, integers from 1 to 256, or integers between -128 and +127.

 $00000000, 00000001, 00000010, \dots, 111111101, 111111110, 111111111.$

There are different coding systems (methods) for different type of data.

The meaning of a binary value (for example, 10001101) is determined by the system (hardware or software) that process this number.

This value may represent a number, a color, or another type of data.

Especially the coding of numbers is important.

Therefore, in this course we will give some basic information about the coding methods of numbers.

BCD (Binary Coded Decimal) Coding System:

Each decimal number between 0-9 is represented by a four-bit pattern.

Natural BCD:

Number: BCD Code: Number: BCD Code:

0:	0000	5:	0101 _{\(\)}	Commiss
1:	0001	6:	0110	Example:
2:	0010	7:	0111	Number: 805
٦٠	0011	``. Q.	1000	BCD:1000 0000 0101

4: 0100 9: 100

It is a redundant code.

Although with 4 bits 16 different code values can be created, only 10 of them are used.

It is difficult to perform arithmetical operations on BCD numbers.

Therefore today's computer systems do not use the BCD coding to represent the numbers.

http://akademi.itu.edu.tr/en/buzluca/ http://www.buzluca.info



2011 - 2020 Feza BUZLUCA

1.9

Digital Circuits

Positional (weighted) Coding:

Each digit of the number has an associated weight.

Natural Binary Coding: Binary (2) radix (base) is used to represent numbers with positional (weighted) coding.

Example: $11010 = 1.2^4 + 1.2^3 + 0.2^2 + 1.2^1 + 0.2^0 = 26$

The leftmost bit is called the Most Significant Bit - MSB (high-order).

The rightmost bit is called the Least Significant Bit - LSB (low-order).

In today's computers natural binary coding is used to represent numbers.

Hamming distance: The Hamming distance between two n-bit long code word is the number of bit positions in which they are different.

Example: Hamming distance between 011 and 101 is 2.

Richard Wesley Hamming (1915-1998) Mathematician, USA

Adjacent Codes: Between each pair of successive code words Hamming distance is 1 (only one bit changes).

In addition, if the Hamming distance between the first and last code word is 1 then this code is called circular.

http://akademi.itu.edu.tr/en/buzluca/

Example: A circular BCD code (different from the natural BCD!)

Number:	Code:	Number:	Code:
0:	0000 🔨	5:	1110
1:	0001	6:	1010
2:	0011	7:	1000
3:	0010	8:	1100
4:	0110	9:	0100

Gray Code: A binary (base 2), non-redundant and circular (also adjacent) coding system that represents 2^n elements is called as a **Gray code**.

Example: A 2 bit Gray code:

Num.: Code: 0: 00 4 1: 01 2: 11 3: 10 -

The patent of the Gray Code has been taken by physicist Frank Gray in 1953 as he worked in Bell Labs.

http://akademi.itu.edu.tr/en/buzluca/ http://www.buzluca.info



2011 - 2020 Feza BUZLUCA

1.11

Digital Circuits

Representation of Numbers in Digital Systems (and Computers)

In this course we will deal with integers.

Representation of the *floating point* numbers will be showed in the Computer Architecture course (See. http://www.buzluca.info/course.html).

Before coding the numbers we have to decide to work with unsigned or signed numbers.

Because unsigned and signed numbers are encoded and represented differently.

Representation of Unsigned Numbers (Integers):

Unsigned integers are represented in computers by "natural binary weighted (positional) coding".

Example: $215_{10} = (1101\ 0111)_2 = 1.2^7 + 1.2^6 + 0.2^5 + 1.2^4 + 0.2^3 + 1.2^2 + 1.2^1 + 1.2^0$

215/2 = 107 remainder 1 (low-order bit "Least Significant Bit – LSB") last (right-most) bit

107/2 = 53 remainder 1 53/2 = 26 remainder 1

The greatest unsigned integer that can be represented with 8 bits: $26/2 = 13 \text{ remainder } 0 \quad 1111 \quad 1111_2 = 255_{10}$

6/2 = 3 remainder 0 $0000 \ 0000_2 = 0_{10}$ $0000 \ 0000_2 = 0_{10}$

13/2 = 6 remainder 1 The smallest unsigned integer that can be represented with 8 bits:

1/2 = 0 remainder 1 (high-order bit "Most Significant Bit – MSB") first (left-most) bit

http://akademi.itu.edu.tr/en/buzluca/ http://www.buzluca.info



License: https://creativecommons.org/licenses/by-nc-nd/4.0/

Representation of <u>Signed</u> Numbers (Integers):

The (high-order) most significant bit denotes the sign of the number.

- Positive numbers start with a "O".
- · Negative numbers start with a "1".

Positive integers:

Positive integers are represented (like unsigned integers) in computers by "natural binary weighted (positional) coding".

Remember, the positive binary numbers must start with 0.

The range of **positive signed** integers that can be represented with 8 bits:

Between 0000 0000 and 0111 1111 (Decimal: between 0 and +127)

Examples of Positive Numbers:

 $\begin{array}{lll} 8\text{-bit} + 5_{10} & : \mathbf{0}000 \ 0101 \\ 8\text{-bit} + 100_{10} & : \mathbf{0}110 \ 0100 \\ 4\text{-bit} + 5_{10} & : \mathbf{0}101 \\ 4\text{-bit} + 7_{10} & : \mathbf{0}111 \end{array}$

http://akademi.itu.edu.tr/en/buzluca/ http://www.buzluca.info



2011 - 2020 Feza BUZLUCA

1.13

Digital Circuits

Negative integers:

Negative integers are represented by 2's complement system.

In this system, negative integers are represented by the two's complement of the positive number (absolute value).

Getting the 2's complement:

- First invert (1's complement) the number. Change 0 to 1, 1 to 0.
- Then add 1 to the inverted number.

2's complement of $(A) = \overline{A} + 1$ denotes 1's complement of A.

2's complement system makes it easy to add or subtract two numbers without sign and magnitude checks.

Examples of Negative Numbers:

2's complement system (cont'd):

2's complement operation changes the sign of a number.

Applying 2's complement operation to a negative number makes it positive.

2's complement operation:

 $\begin{array}{l} \text{positive} \rightarrow \text{negative} \\ \text{negative} \rightarrow \text{positive} \end{array}$

Example: Converting a negative number to positive:

 $\begin{array}{lll} \text{8-bit} - \textbf{5}_{10} & : \textbf{1}111 \ 1011 \\ \text{1's complement} & : 0000 \ 0100 \\ \text{Add} \ 1 & : \underline{+} \ \underline{1} \\ \text{Result:} + \textbf{5}_{10} & : \textbf{0}000 \ 0101 \\ \end{array}$

http://akademi.itu.edu.tr/en/buzluca/ http://www.buzluca.info



2011 - 2020 Feza BUZLUCA

1.15

Digital Circuits

Signed numbers can be presented on a circular graphic.

4-bit numbers:



The 4 bits long negative integer with the greatest absolute value: 1000 = -8

The 4 bits long negative integer with the smallest absolute value: 1111 = -1

The 8 bits long negative integer with the greatest absolute value: $1000\ 0000 = -128$

The 8 bits long negative integer with the smallest absolute value: $1111 \ 1111 = -1$

http://akademi.itu.edu.tr/en/buzluca/

http://www.buzluca.info



2011 - 2020 Feza BUZLUCA

1.16

Extension (Sign Extension) of Binary Numbers

In digital systems certain number of bits (memory locations) are allocated for binary numbers.

- In some cases it is necessary to write a number to a memory space with more bits than necessary. For example 8-bit number to 16-bit memory.
- Sometimes it is necessary to perform an operation between two numbers with different lengths.

In such cases the short number is extended (word length is increased).

For example; extension from 4 bits to 8 bits or from 8 bits to 16 bits.

Extension operation is different for unsigned and signed numbers.

Unsigned Numbers: The high-order part of the binary number is filled with "O"s.

Example: 4-bit 3_{10} = 0011 8-bit 3_{10} = 0000 0011 Example: 4-bit 9_{10} = 1001 8-bit 9_{10} = 0000 1001

Signed Numbers: The high-order part of the binary number is filled with the value of the sign bit. This operation is called **sign extension**.

Example: 4-bit $+3_{10}$ = 0011 8-bit $+3_{10}$ = 0000 0011 Example: 4-bit -7_{10} = 1111 8-bit -7_{10} = 1111 1111

http://akademi.itu.edu.tr/en/buzluca/ http://www.buzluca.info

http://akademi.itu.edu.tr/en/buzluca/

http://www.buzluca.info

2011 - 2020 Feza BUZLUCA

1.17

Digital Circuits				
Hexadecimal (Base 16) Numbers	Decimal	Binary Hex.		
Binary numbers are necessary, because digital	0	0000 0		
circuits can directly process binary values.	1	0001 1		
But it is difficult for humans to work with the	2	0010 2		
large number of bits for even a relatively small		0011 3		
binary number. (Example: 1110010001011010)		0100 4		
Therefore, for documentation (to write and read		0101 5		
easily) hexadecimal (base 16) numbers are used.	6	0110 6		
Converting from binary to hexadecimal is easy:	7	0111 7		
• Each hex. digit maps to 4 bits. See the table.	8	1000 8		
• Separate the bits of the binary into groups of 4 bits.		1001 9		
• Map each group to a single hexadecimal digit.	10	1010 A		
Example:	11	1011 B		
$01011101_2 = 0101 \ 1101 \ (Binary)$	12	1100 C		
= 5 D (Hexadecimal)	13	1101 D		
Converting to base 10:	14	1110 E		
$5D_{16} = (5 \times 16) + 13 = 93$	15	1111 F		
Result: $01011101_2 = 5D_{16} = 93_{10}$				
To express hexadecimal numbers usually the symbols \$ and h are used. Example: \$5D or 5Dh.				

@ ⊕ ⊕

2011 - 2020 Feza BUZLUCA

License: https://creativecommons.org/licenses/by-nc-nd/4.0/

Addition and Subtraction Operations in Digital Systems

In computers integer arithmetical operations are performed by the $Arithmetic\ Logic\ Unit$ - ALU.

Integer addition and subtraction operations are performed on unsigned and signed numbers in the same way (because of 2's complement representation).

But the interpretation of the result is different for unsigned and signed numbers. Before the operation between the numbers with different lengths sign extension is necessary.

Extension operation is different for unsigned and signed numbers (see 1.13).

Addition: a b Carry Result Unsigned Integers: 0000 0 The result of the addition of two n-bit unsigned numbers can 0 1 0 1 be a (n+1)-bit number. (n+1)th bit is called the **carry**. 10 0 1 Example: Addition of two 8-bit unsigned numbers 0 11 1 11111111 : 255 01110101:/117 Only for Only for 00000001: + 01100011: 99 testing testing 1000000000\256 11011000 : \216 No Carry (Carry=0) (Carry=1)

http://akademi.itu.edu.tr/en/buzluca/ http://www.buzluca.info

2011 – 2020 Feza BUZLUCA

1.19

Digital Circuits

Addition:

Signed Integers:

- The operation is performed as with unsigned numbers, but the result is interpreted differently.
- Adding two's-complement numbers requires no special processing even if the operands have opposite signs.
- If $(n+1)^{th}$ bit arises by adding two n-bit signed numbers, this bit is ignored.

Example: Addition of 8-bit signed numbers



Attention:

While working with n-bit numbers the sign bit is always the most significant bit (counting from right to left) the n^{th} bit, not the $(n+1)^{th}$ one (it is carry bit).

http://akademi.itu.edu.tr/en/buzluca/ http://www.buzluca.info



Overflow (signed integers):

The result of addition of n-bit signed numbers can be too large for the binary system to represent (greater than n bits).

For example, with 8 bits we can represent signed numbers between -128 and +127. If the result is out of this range an **overflow** occurs.

Existence of the overflow after addition can be detected by checking the signs of the operands and the result.

In an addition operation overflow can occur in two cases:

pos. + pos.
$$\rightarrow$$
 neg. and neg. + neg. \rightarrow pos.

Examples:

10000001: Cannot be represented 101111111: Cannot be represented

Both operands are positive. Both operands are negative.

Result is negative. Result is positive. There is an **overflow**. There is an **overflow**. Note: $(n+1)^{th}$ bit is zero. Note: $(n+1)^{th}$ bit is one.

It is ignored. It is ignored.

http://akademi.itu.edu.tr/en/buzluca/ http://www.buzluca.info

⊕ ⊕ ⊕

2011 - 2020 Feza BUZLUCA

1.21

Digital Circuits

Subtraction:

- Computers usually use the method of complements to implement subtraction.
- 2's complement of the second operand is added with the first number.

$$A - B = A + (-B)$$

= $A + 2's$ complement (B)
= $A + \overline{B} + 1$

So, only one addition circuit is sufficient to perform both addition and subtraction.

Like addition, also subtraction operations are performed on unsigned and signed numbers in the same way (because of 2's complement representation). But the interpretation of the result is different for unsigned and signed numbers.

@09≘

```
Digital Circuits
```

Subtraction (cont'd):

Unsigned Integers:

If the result of the subtraction of two n-bit unsigned numbers, performed by 2's complement method, is a (n+1)-bit number, then there is not a borrow and the

If the (n+1)th bit of the result is zero, the first operand is smaller than the second and there is borrow.

Examples: Subtraction of 8-bit unsigned number subtraction

00000101: 5 2's complement 00000101: 5 00000001: 1 + 11111111:-1 **>100000100: 4** Carry=1: No Borrow

0000001: 1 0000001: 1 2's complement - 00000101: 5 + 11111011:-5

> 011111100: Cannot be represented

No Carry: Borrow

http://akademi.itu.edu.tr/en/buzluca/ http://www.buzluca.info

Digital Circuits

http://www.buzluca.info

@ ⊕ ⊕

2011 - 2020 Feza BUZLUCA

1.23

```
License: https://creativecommons.org/licenses/by-nc-nd/4.0/
Subtraction (cont'd):
Signed Integers:
 Subtraction on signed integers is also performed by using 2's complement method.
Carry bit is ignored.
Like in addition also while subtracting signed numbers an overflow can occur.
In subtraction overflow can occur in two cases:
         pos. – neg. \rightarrow neg.
                                    and
                                            neg. – pos. \rightarrow pos.
       Examples: Subtraction of 8-bit signed numbers
  00000101: +5
                                     00000101: +5
- 00001100:+12 2's complement + 11110100:-12
                                     11111001: 2's comp.:00000111:-7
                                   Sign 1, result: negative
  11111101: -3
                                            11111101: -3
                      2's complement
  01111111:+127
                                         + 10000001:-127
                                           101111110: cannot be presented
                                         Sign: 0, result: positive.
   Neg - pos = pos. Overflow.
http://akademi.itu.edu.tr/en/buzluca/
                                          @ ①⑤⑤ 2011 − 2020 Feza BUZLUCA
```

Comparing integers:

Subtraction operation is used to compare integers.

After the operation $\mathbf{R} = \mathbf{A} - \mathbf{B}$, related flags (status bits: carry, overflow) are checked.

Unsigned Integers:

Borrow	Result (R)	Comparison
X (not important)	=0	A=B
NO (carry = 1)	≠0	A>B
YES (carry = 0)	≠0	A <b< td=""></b<>

Signed Integers:

Overflow	Result (R)	Comparison
X (not important)	=0	A=B
NO	Positive, ≠0	A>B
NO	Negative	A <b< td=""></b<>
YES	Positive	A <b< td=""></b<>
YES	Negative	A>B

http://akademi.itu.edu.tr/en/buzluca/ http://www.buzluca.info 2011 - 2020 Feza BUZLUCA

1.25

Digital Circuits

Summary of Carry, Borrow, Overflow

Carry: It can occur in addition of unsigned numbers.

It shows that the result cannot be represented with n bits, and $(n+1)^{th}$ bit is necessary.

Borrow: It can occur in subtraction of unsigned numbers.

It shows that first number is smaller than the second one.

The result cannot be represented with unsigned numbers.

If the result of the subtraction performed by 2's complement method, is a (n+1)-bit number, then there is not a borrow and the result is valid.

Overflow: It can occur in addition and subtraction operations only on \underline{signed} numbers.

It shows that the result cannot be represented with n bits.

Overflow can be detected by checking the signs of operands and the result.

There is an overflow in the following cases:

 $\begin{array}{lll} \text{pos.} + \text{pos.} & \rightarrow \text{neg.} & \text{pos.} - \text{neg.} & \rightarrow \text{neg.} \\ \text{neg.} + \text{neg.} & \rightarrow \text{pos.} & \text{neg.} - \text{pos.} & \rightarrow \text{pos.} \end{array}$